



Narrow Band E OSMAC

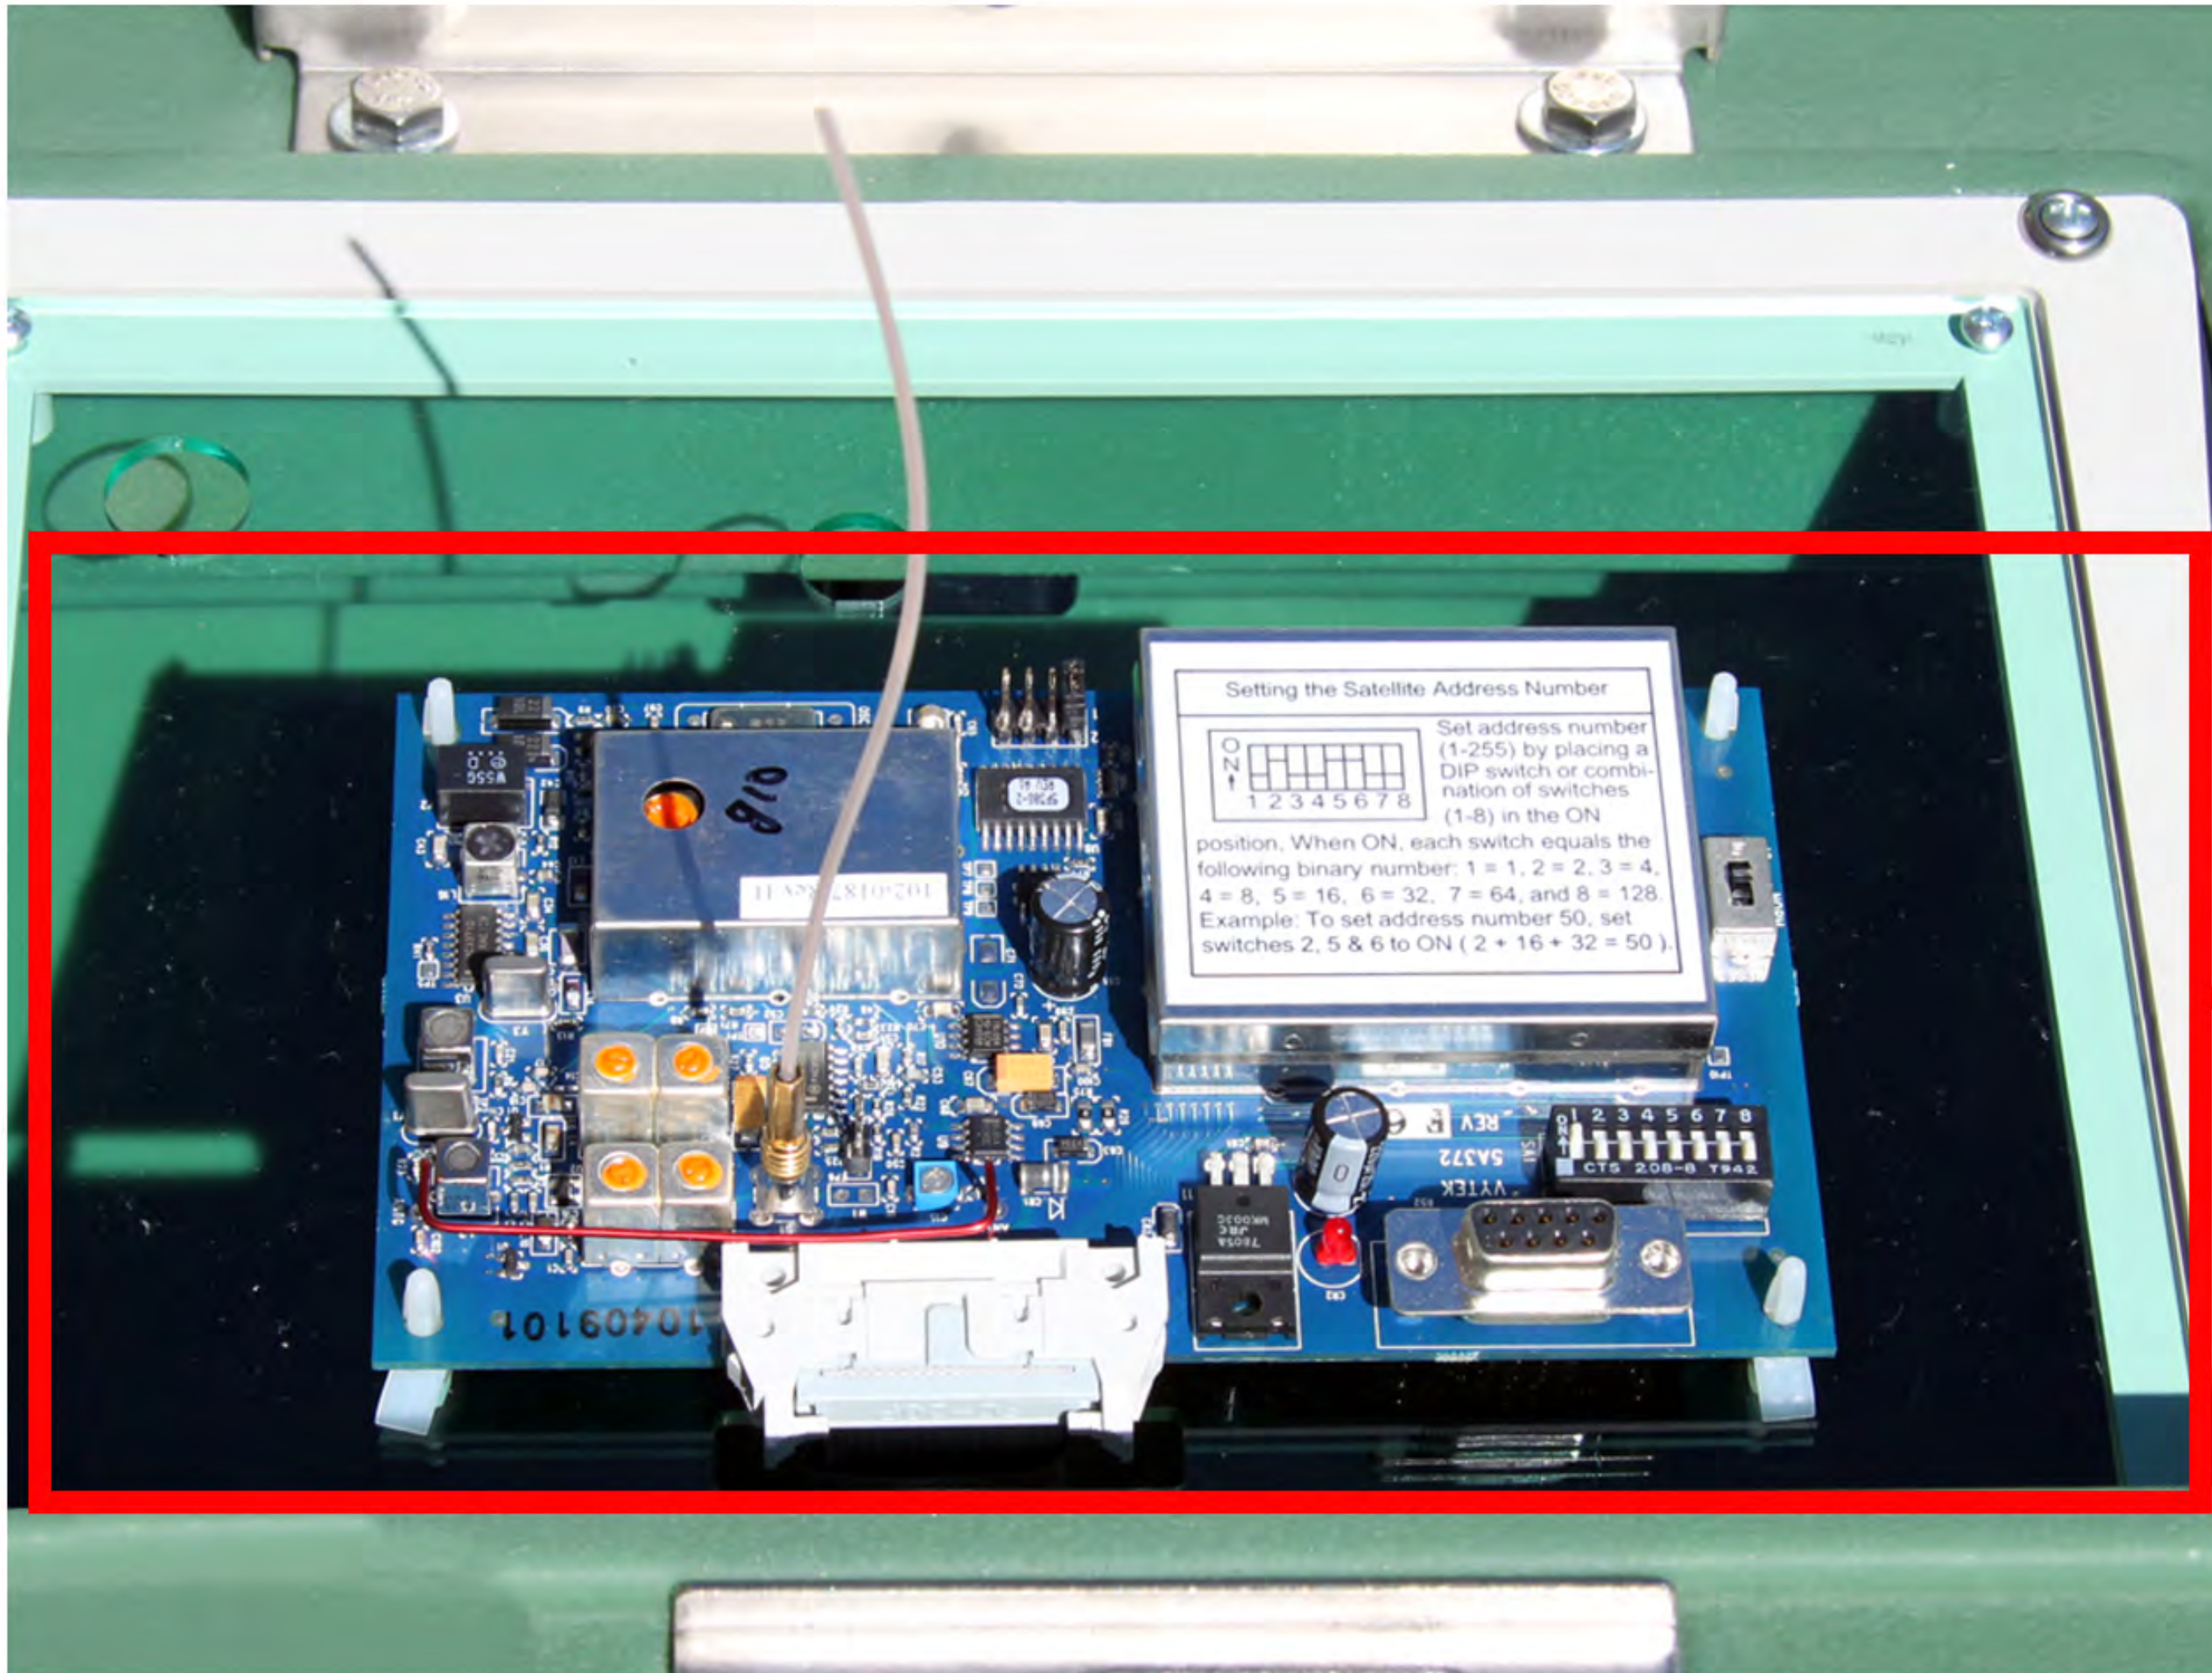

**Narrow Band Decoder
New
102-1202
Board Exchange
R102-0187**

Narrow Band E OSMAC

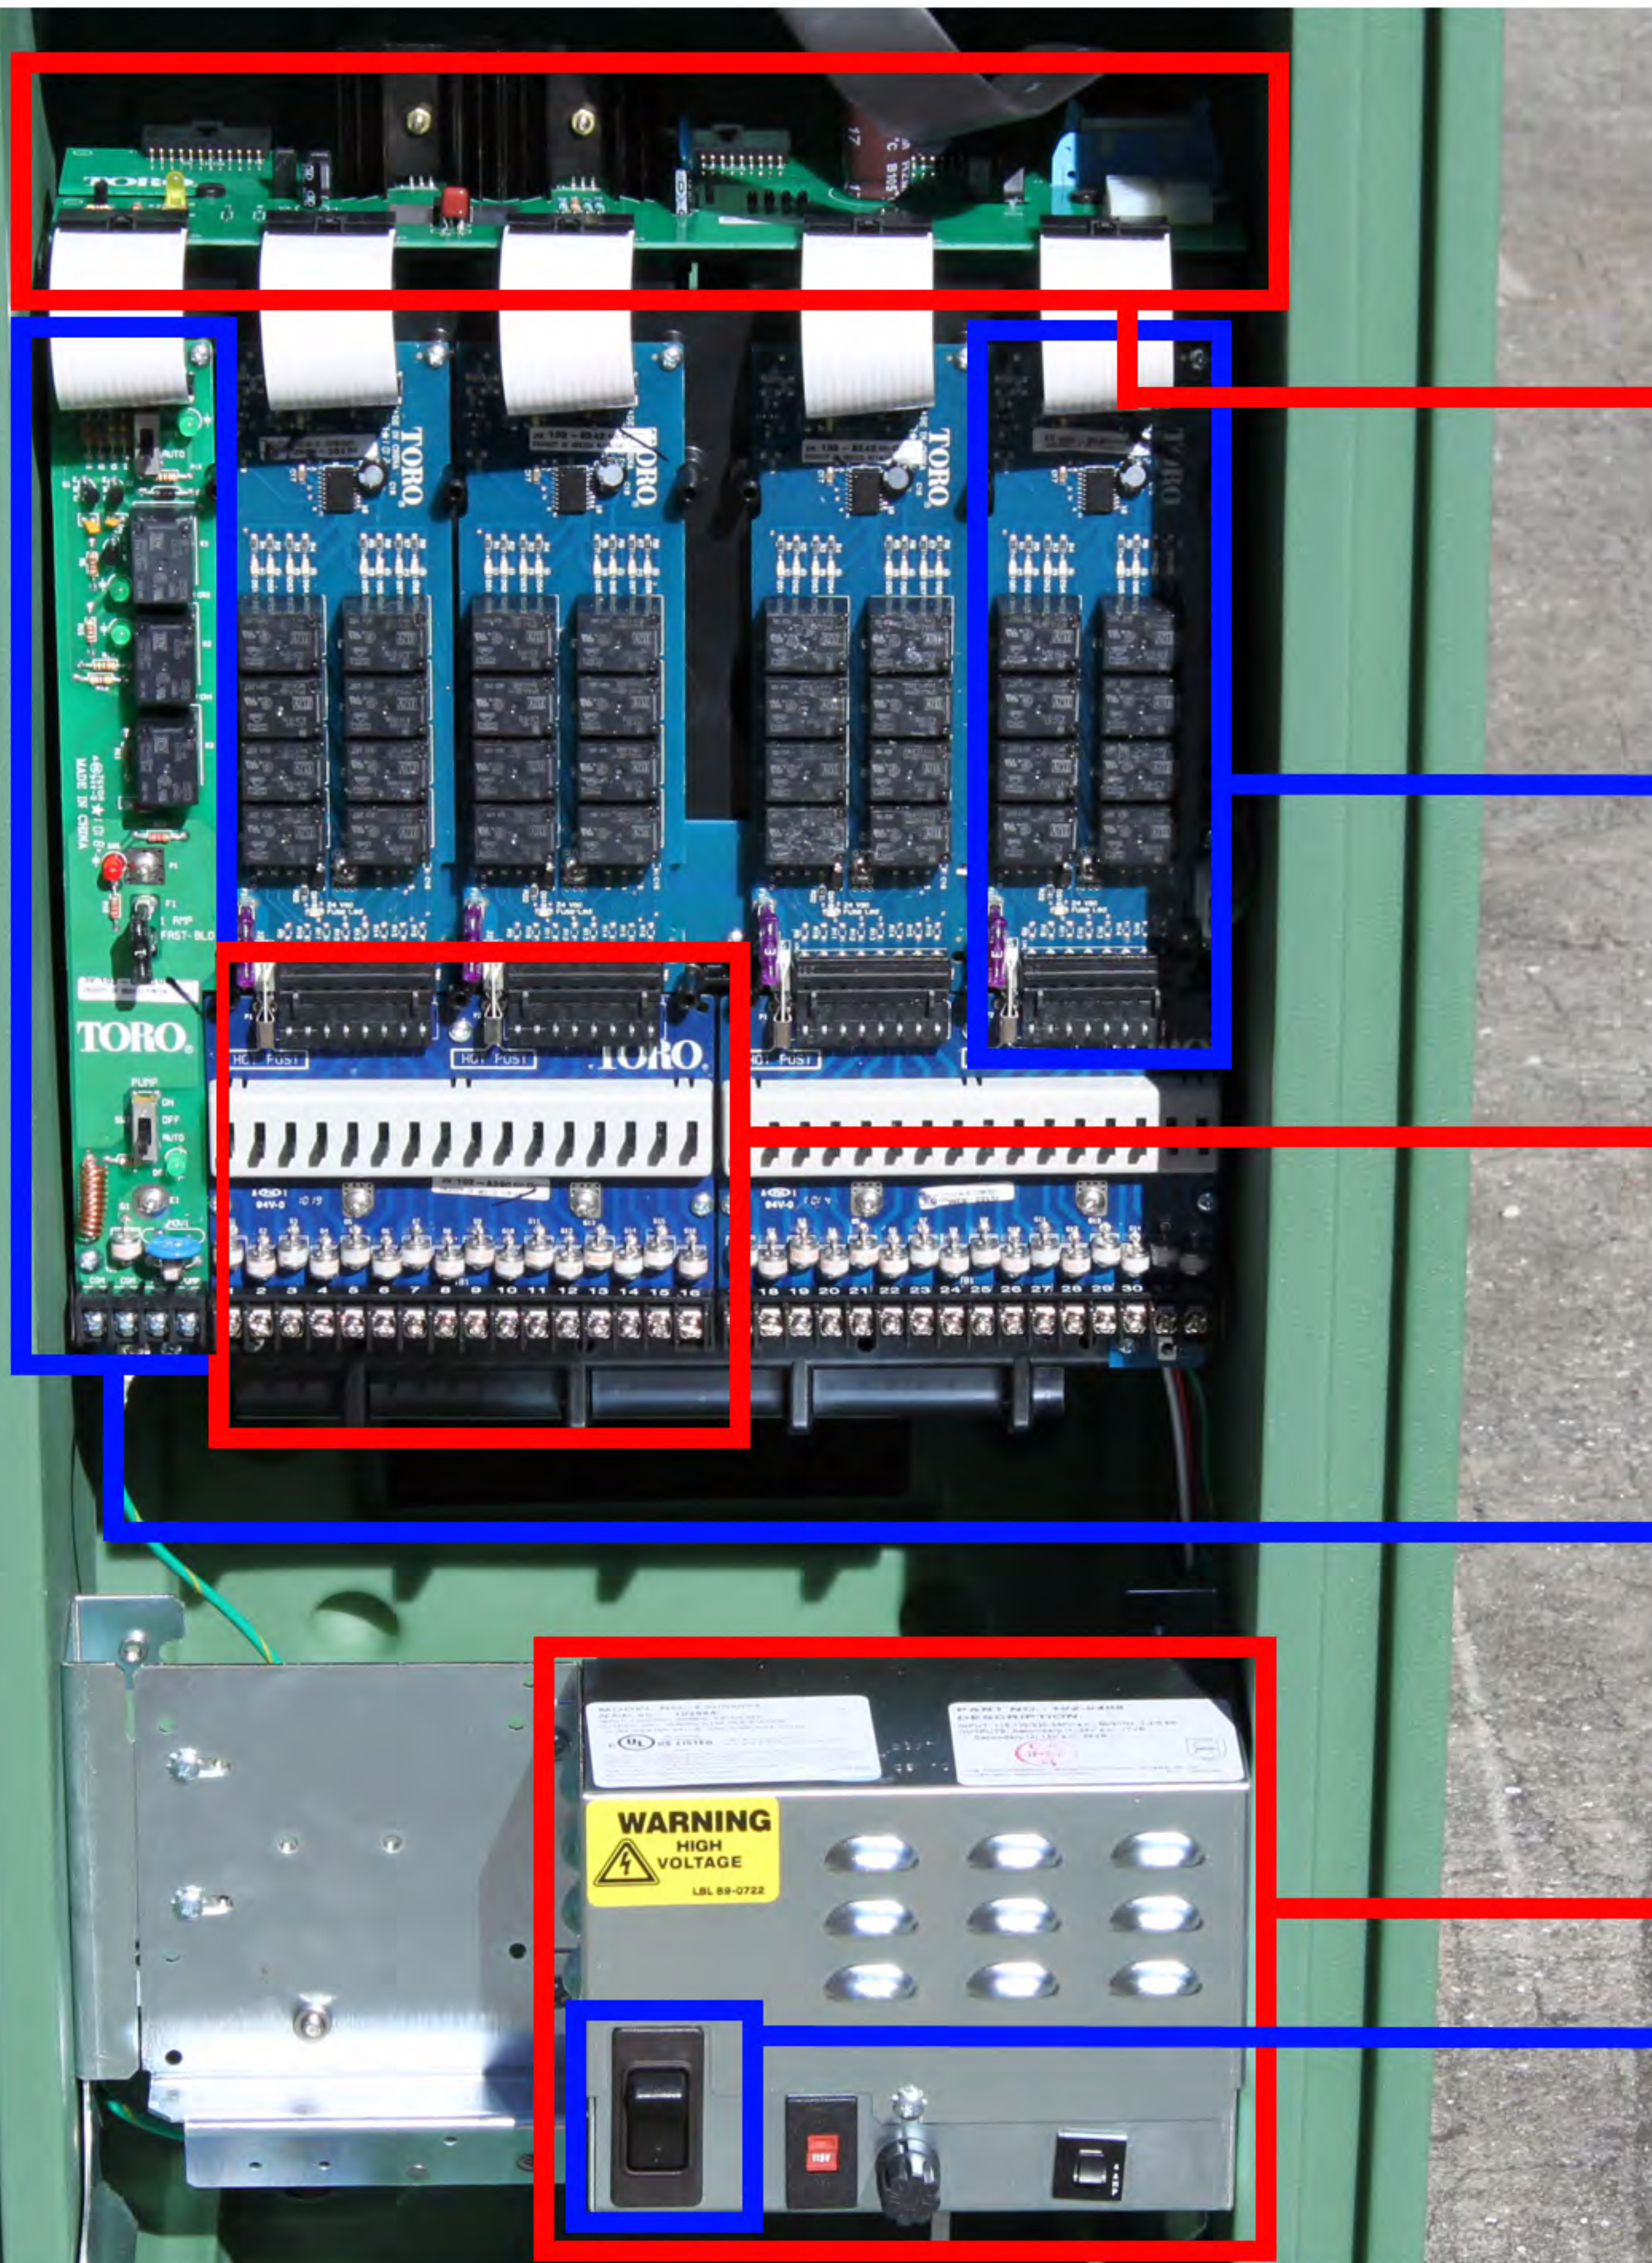

**Distribution Board
New
102-0672
Board Exchange
R102-0318**

**8 Station Output Card
New
102-0654
Board Exchange
R102-2549**

**16 Station Surge Card
New
102-0642
Board Exchange
R89-9804**

**Pump / Common Board
New
102-0669
Board Exchange
R102-0320**

Power Supply 102-0645

Switch 102-0666

**Transformer 102-0647
(Inside Power Supply)**

LTC + Satellite



Faceplate
New
102-0794
Board Exchange
R102-0238

LTC + Satellite

**Pump / Common Module
New**

102-0695

Board Exchange

R102-0682

**8 Station Output Card
New**

102-0796


Board Exchange

R102-0681


Power Supply 102-0645

Switch 102-0666

**Transformer 102-0647
(Inside Power Supply)**

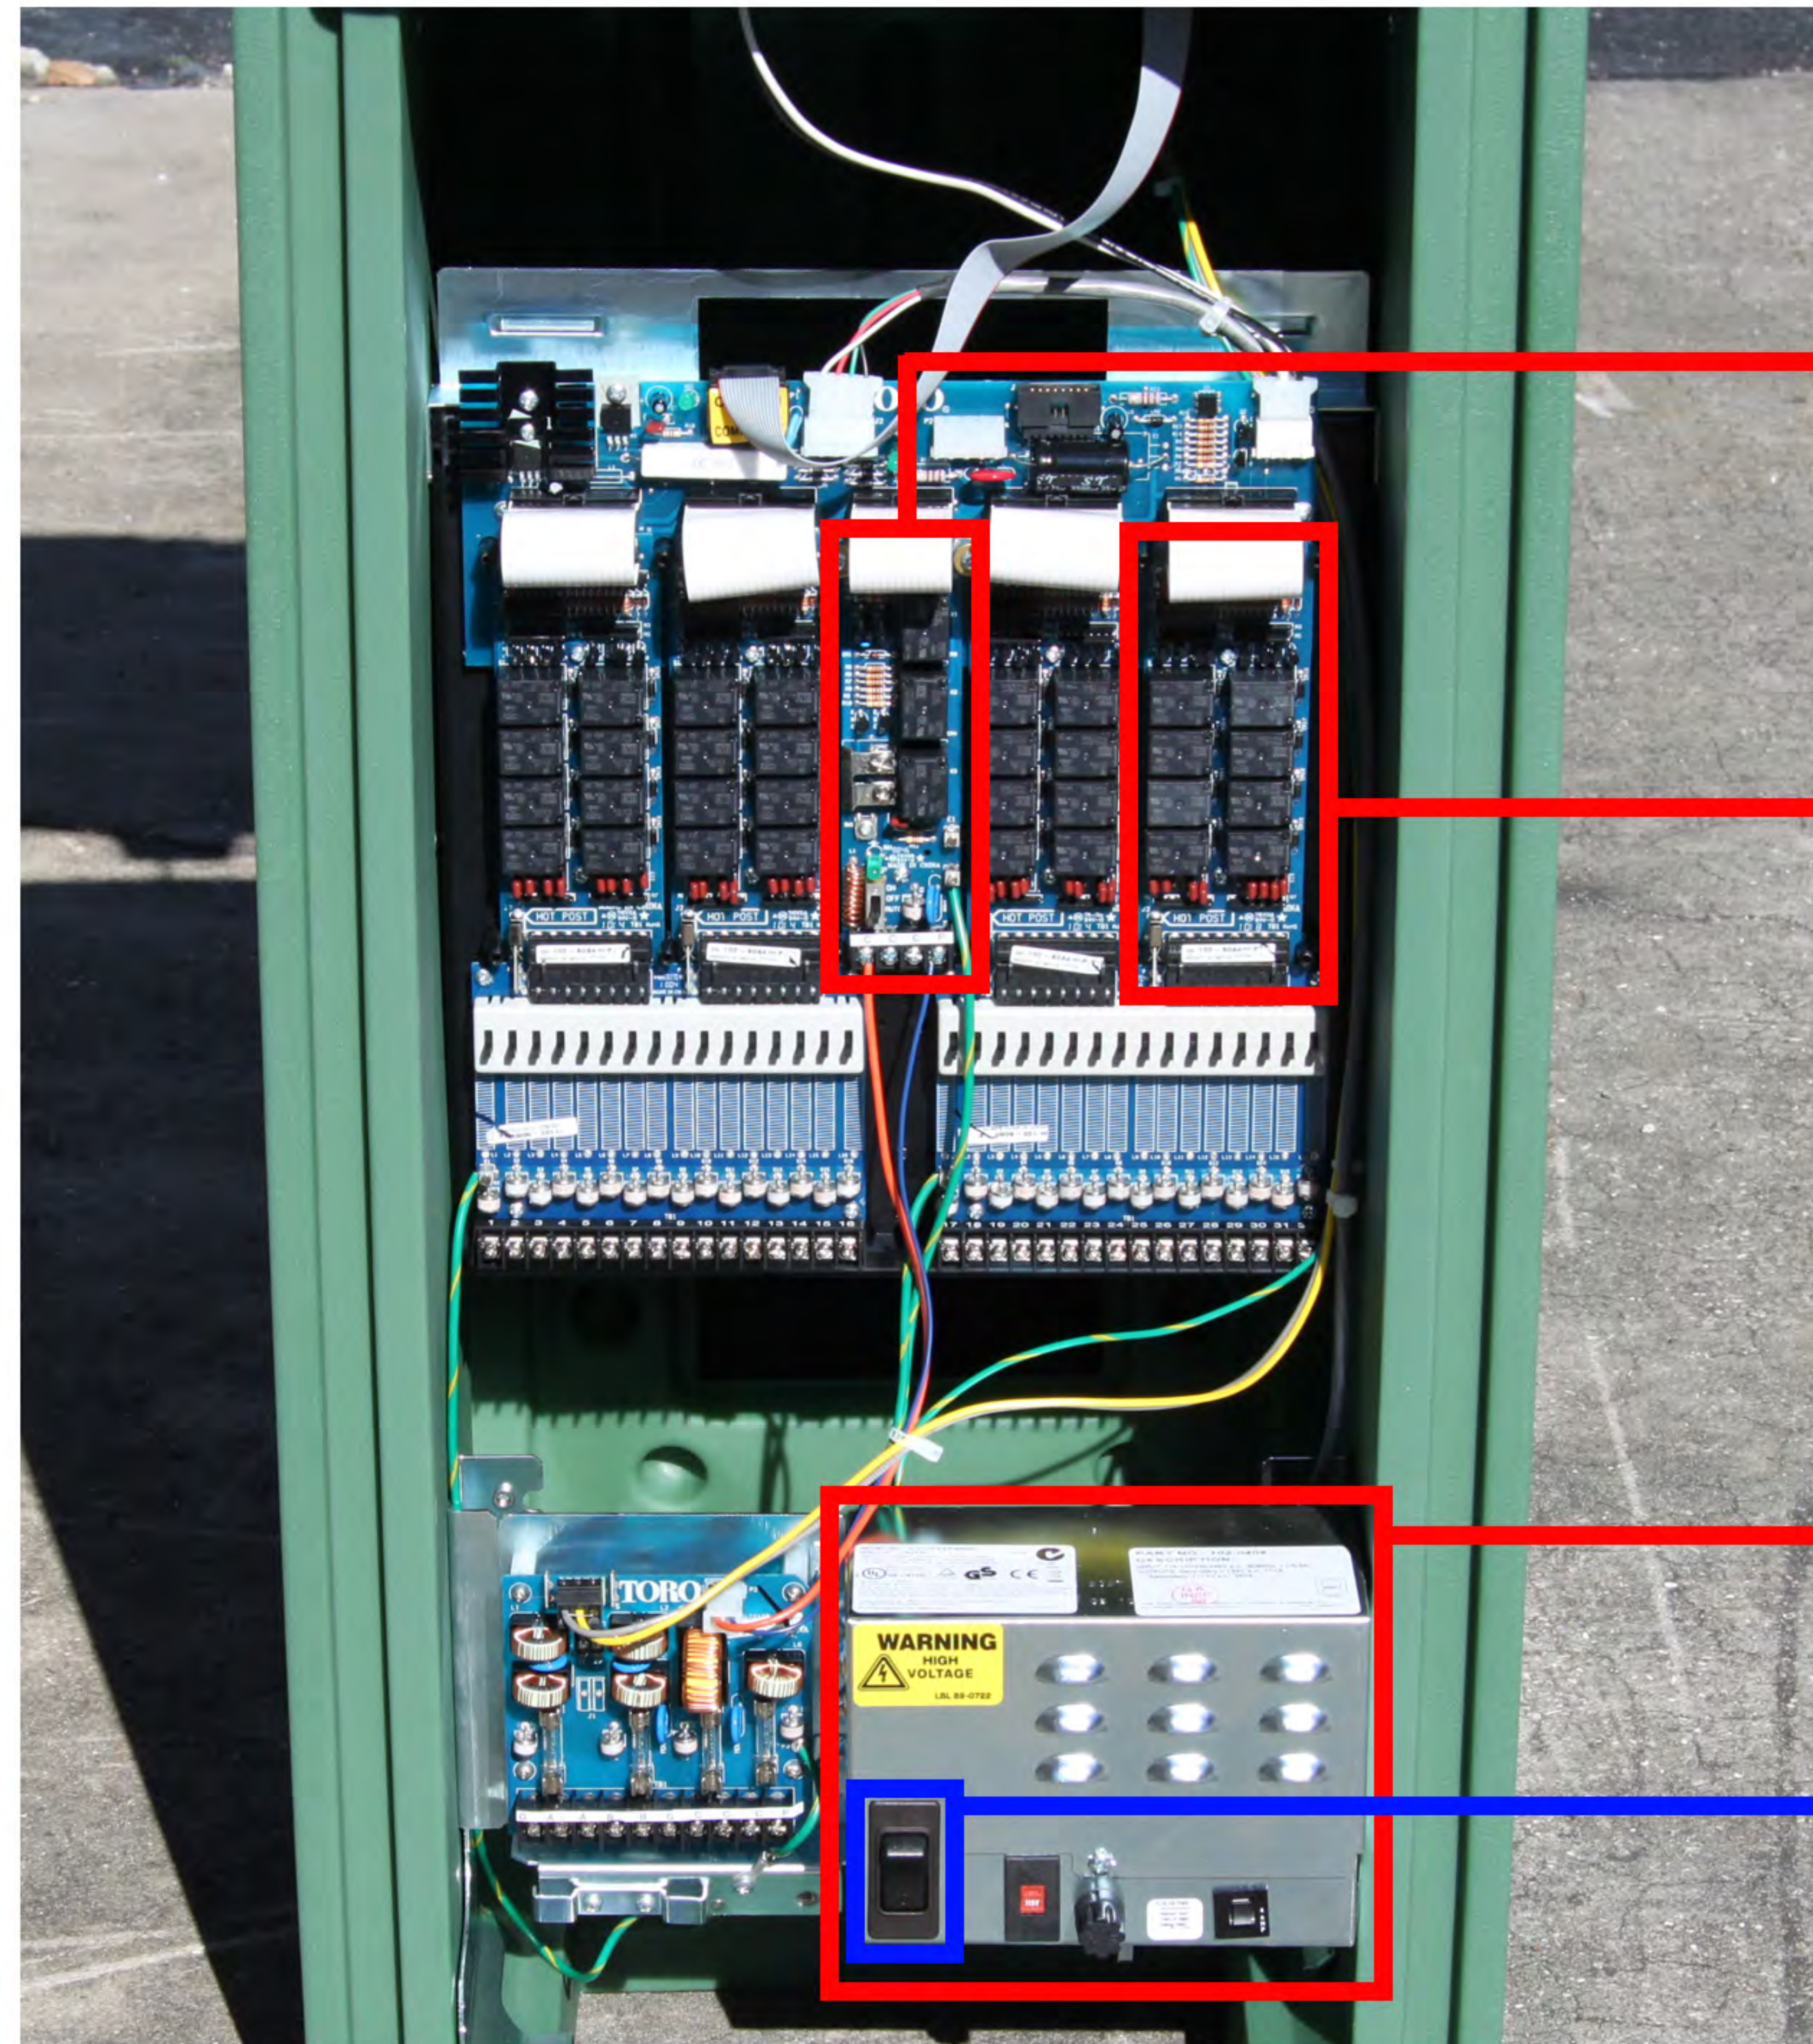

LTC + Satellite

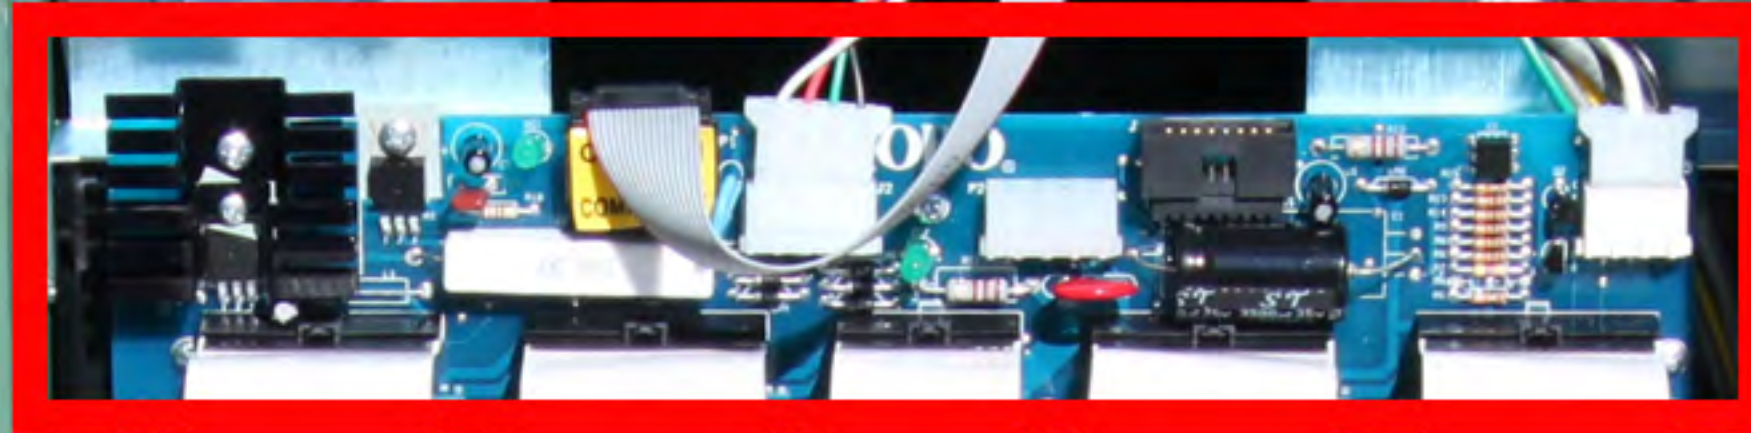

**Distribution Board
New
102-0793
Board Exchange
R102-0612**




**16 Station Surge Card
New
89-9036
Board Exchange
R89-8521**



**Surge Board
New
89-9039
Board Exchange
R89-8589**


RDR Control Box

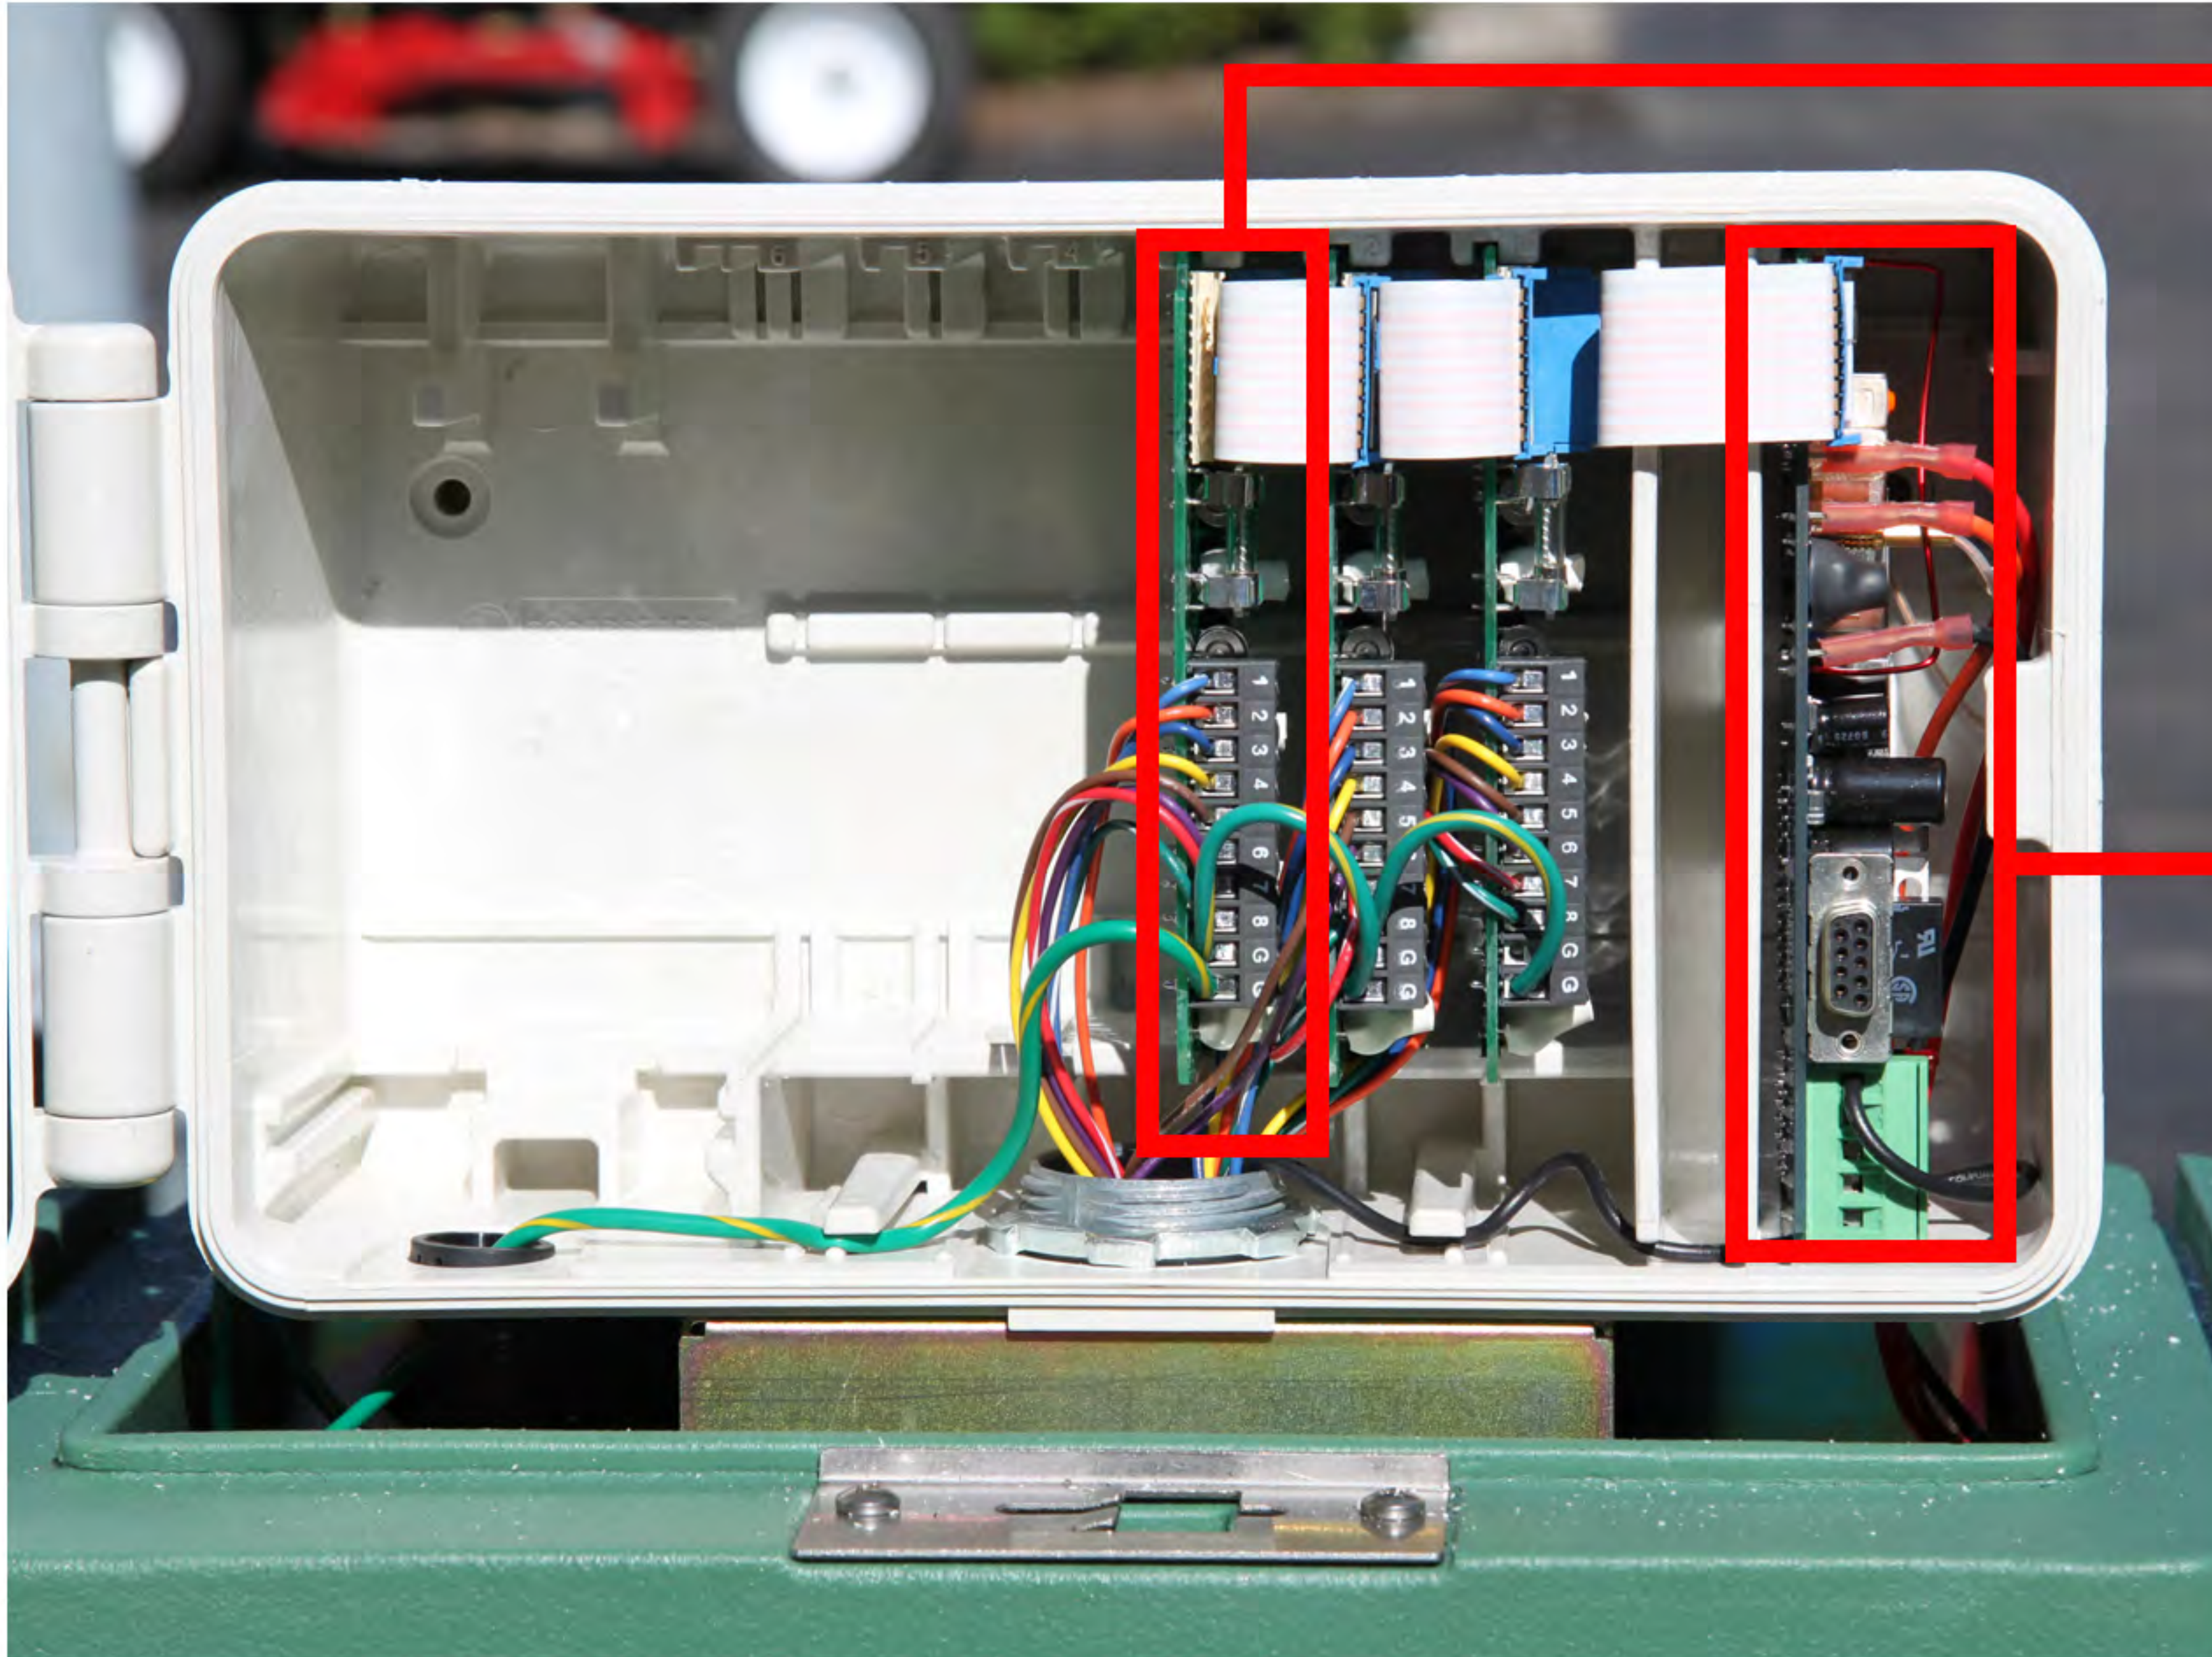

**8 Station Output Card
New
NLN3491A
Board Exchange
RNLN3491A**

**Main Decoder Board
New - Narrow Band
102-2012
New - Wide Band
NLN3485
Board Exchange - Narrow
R102-2012
Board Exchange - Wide
RNLN3485**

RDR Power Supply Assembly

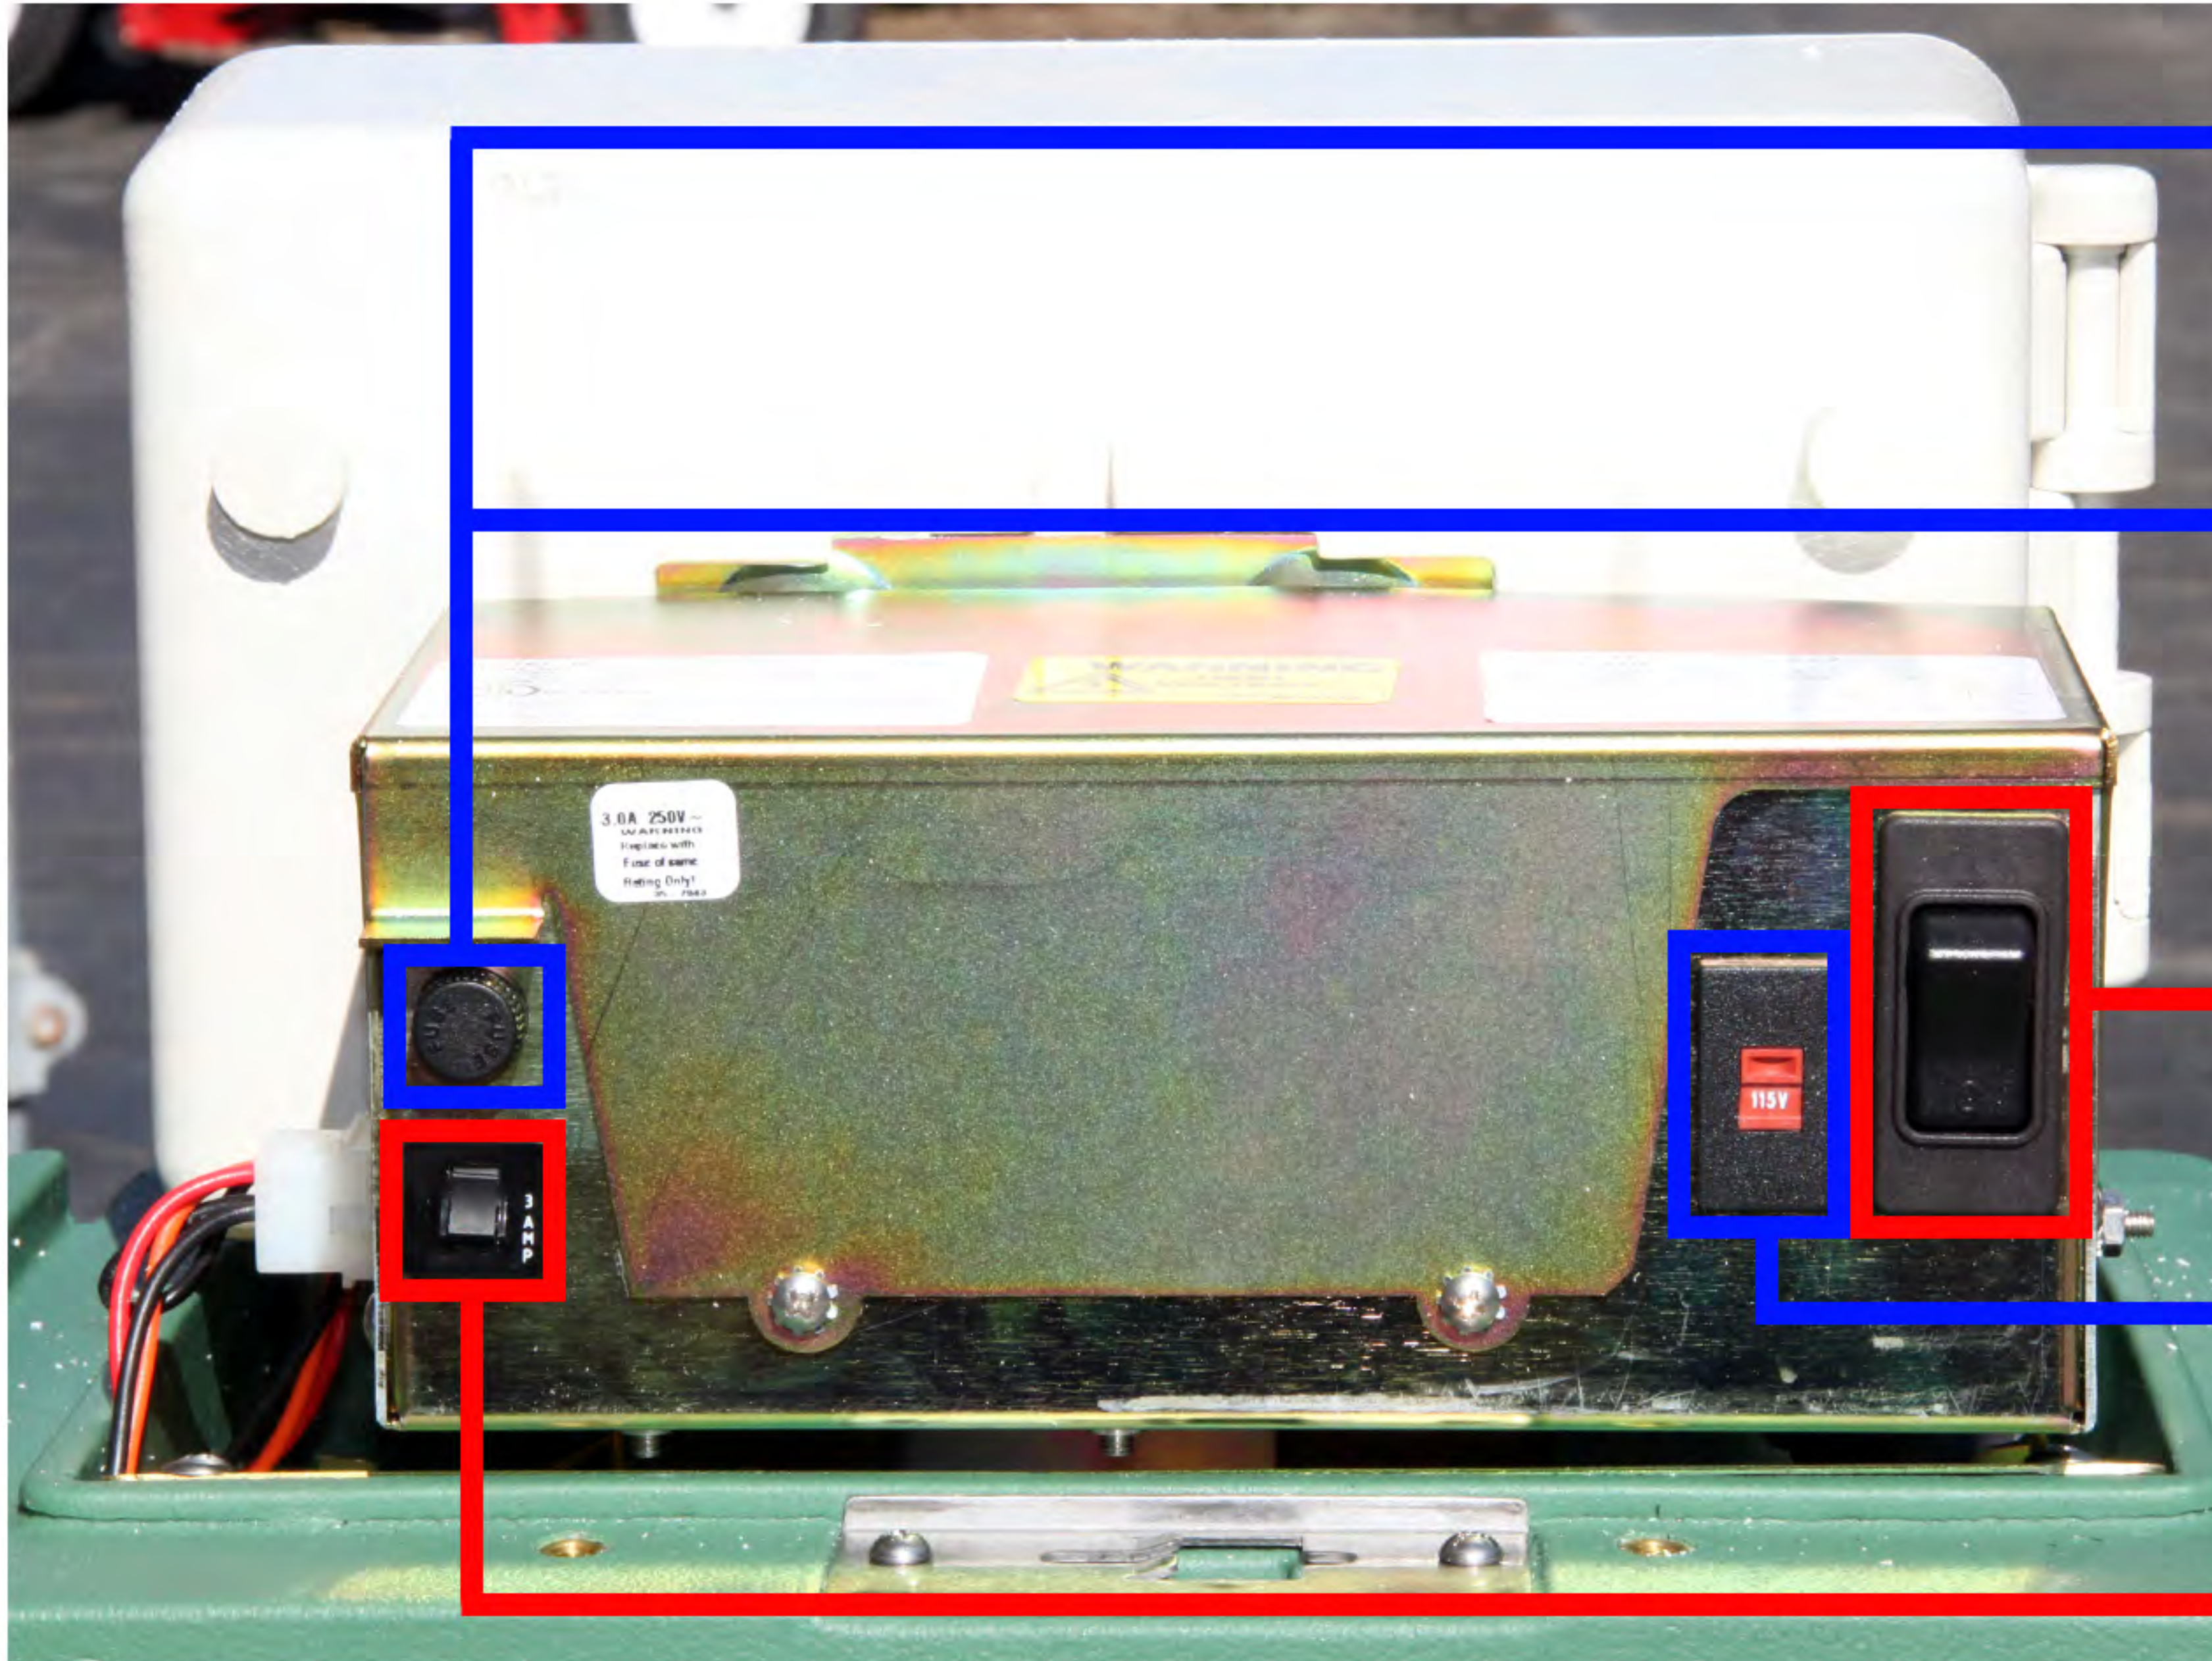

Fuse 3.2 Amp Short
363-4249
Fuse Holder Short
363-4250

Fuse 3.2 Amp Long
102-0650
Fuse Holder Long
102-0649


Switch
102-0666

Selector Switch
102-0648

Circuit Breaker
102-0651

Transformer
102-0647
(Not Shown)

RDR Satellite

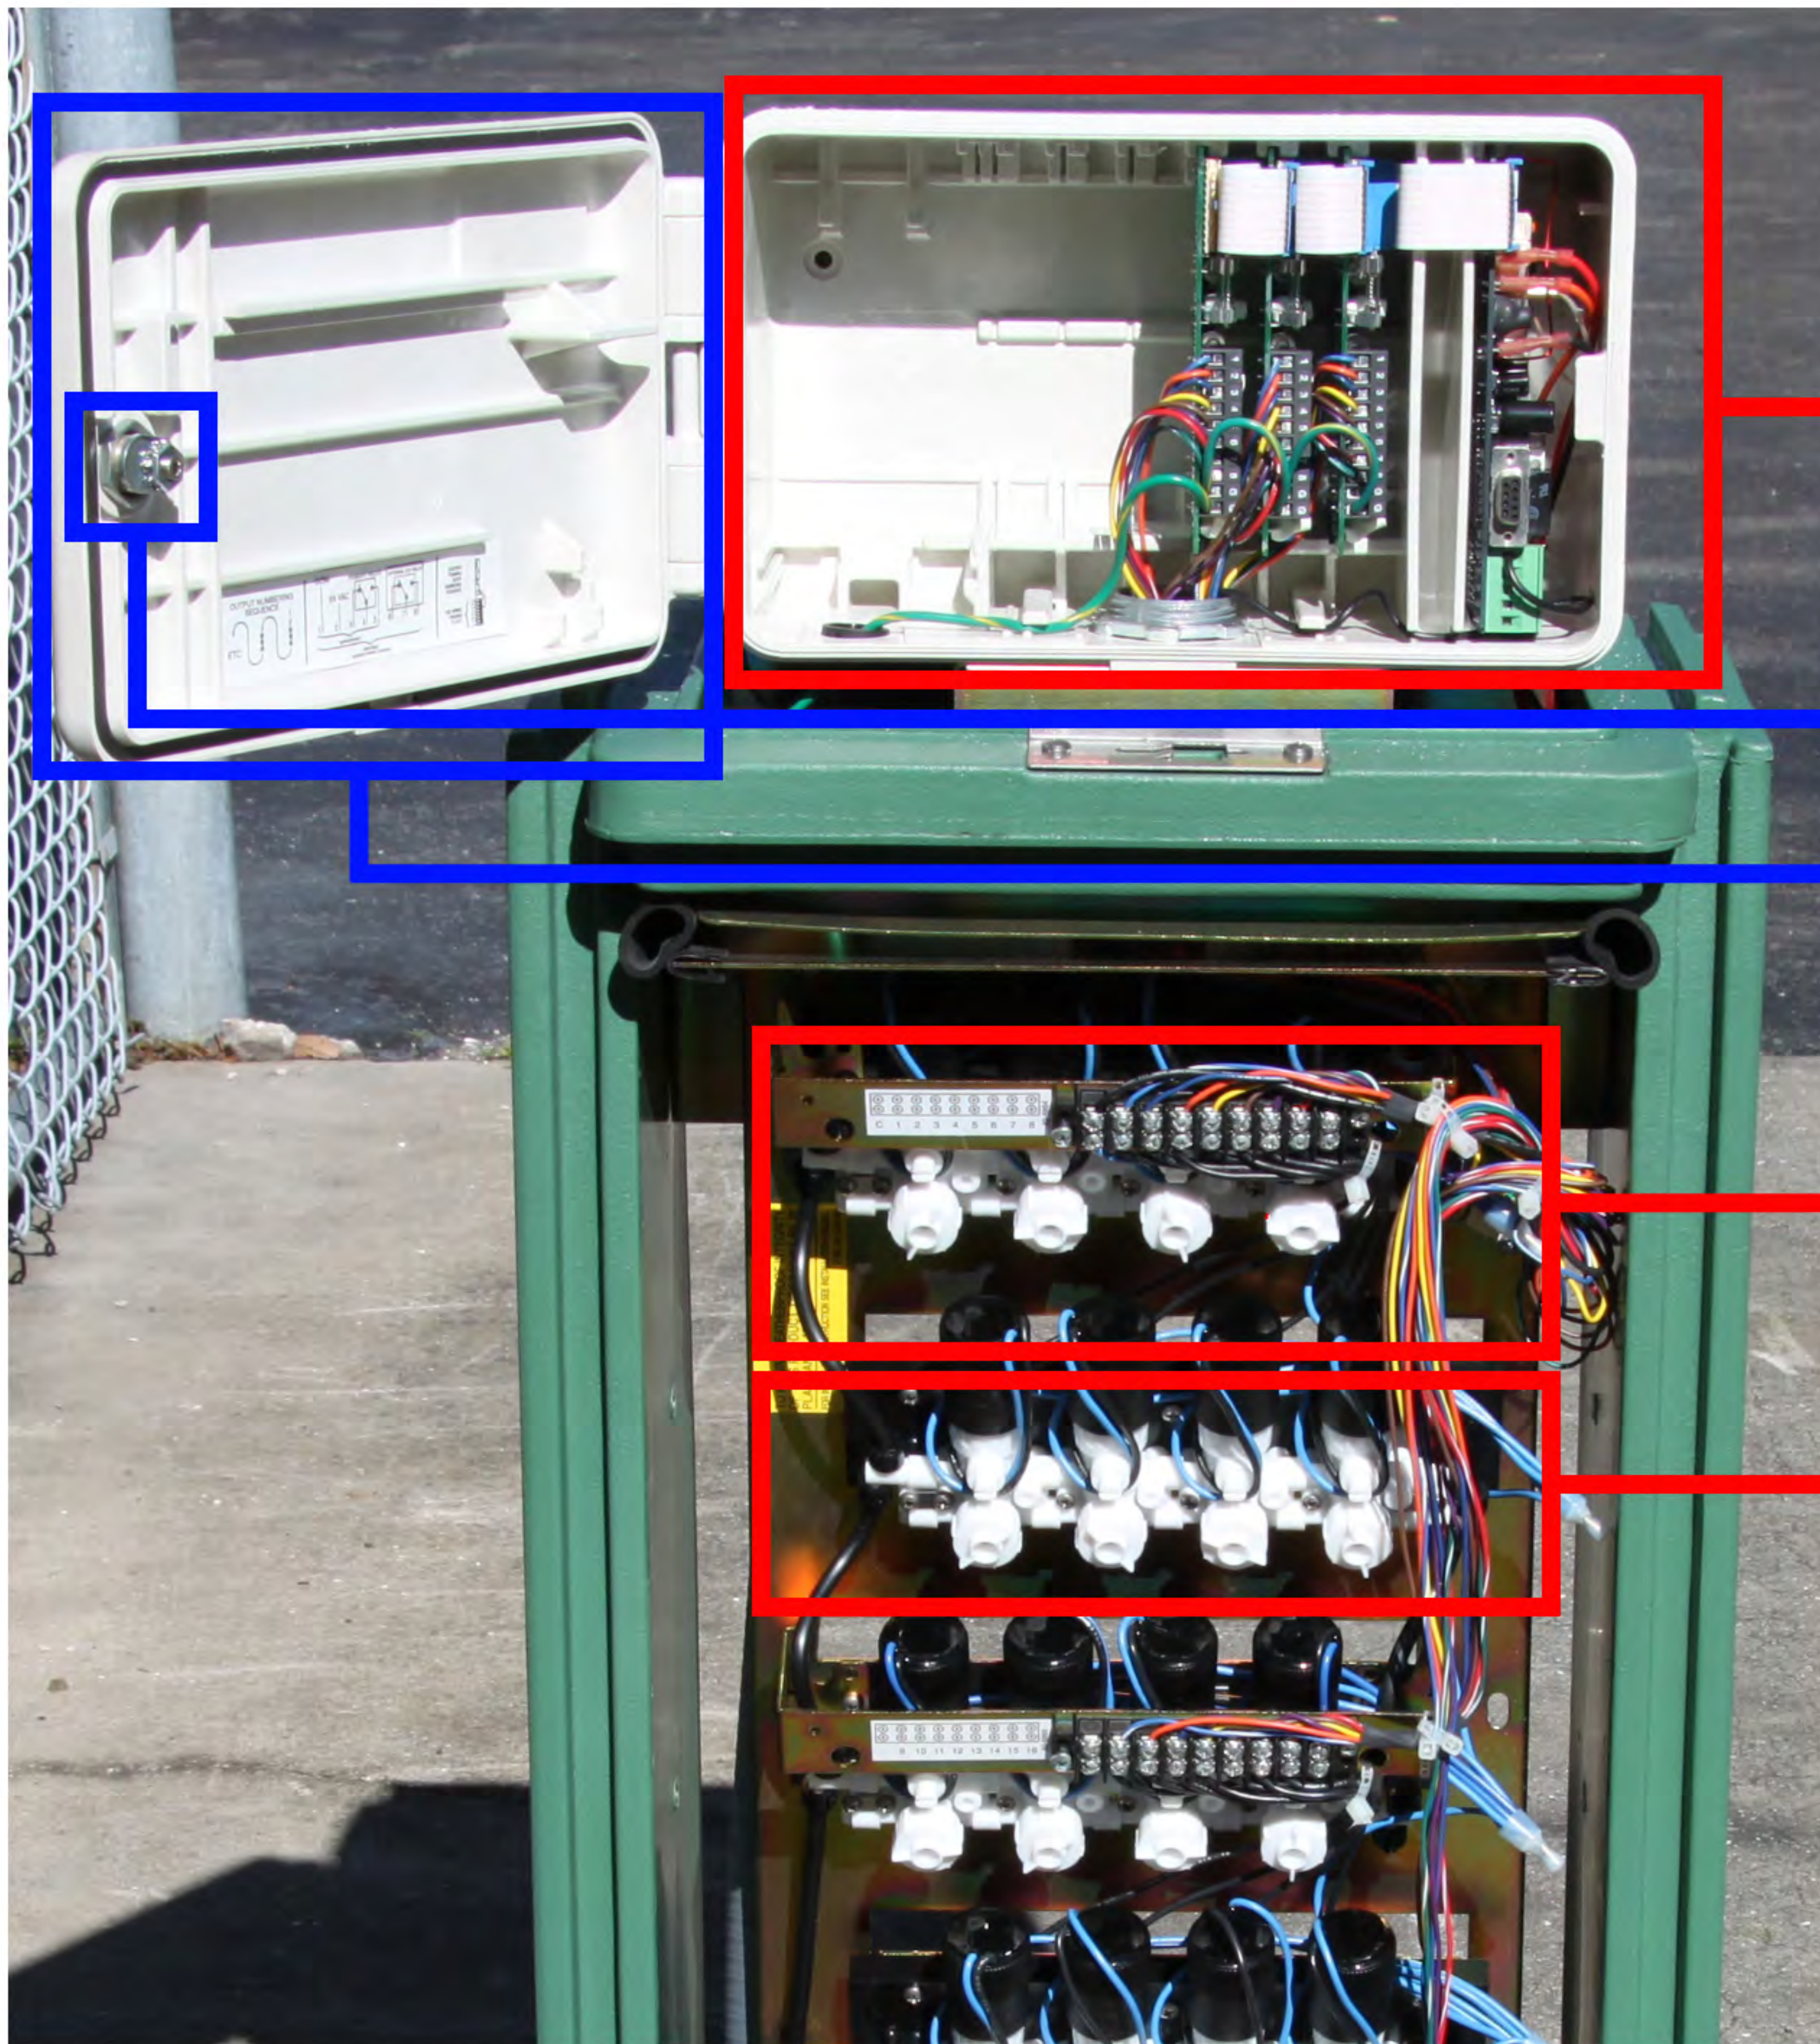

**Housing Kit
102-2921**


**Lock and Key Set
363-4120**

**Door Kit
102-2920**

**4 Station Converter Bank
with Terminal Strip
MOD4-WT-01**

**4 Station Converter Bank
with out Terminal Strip
MOD4-LT-01**


VP Satellite

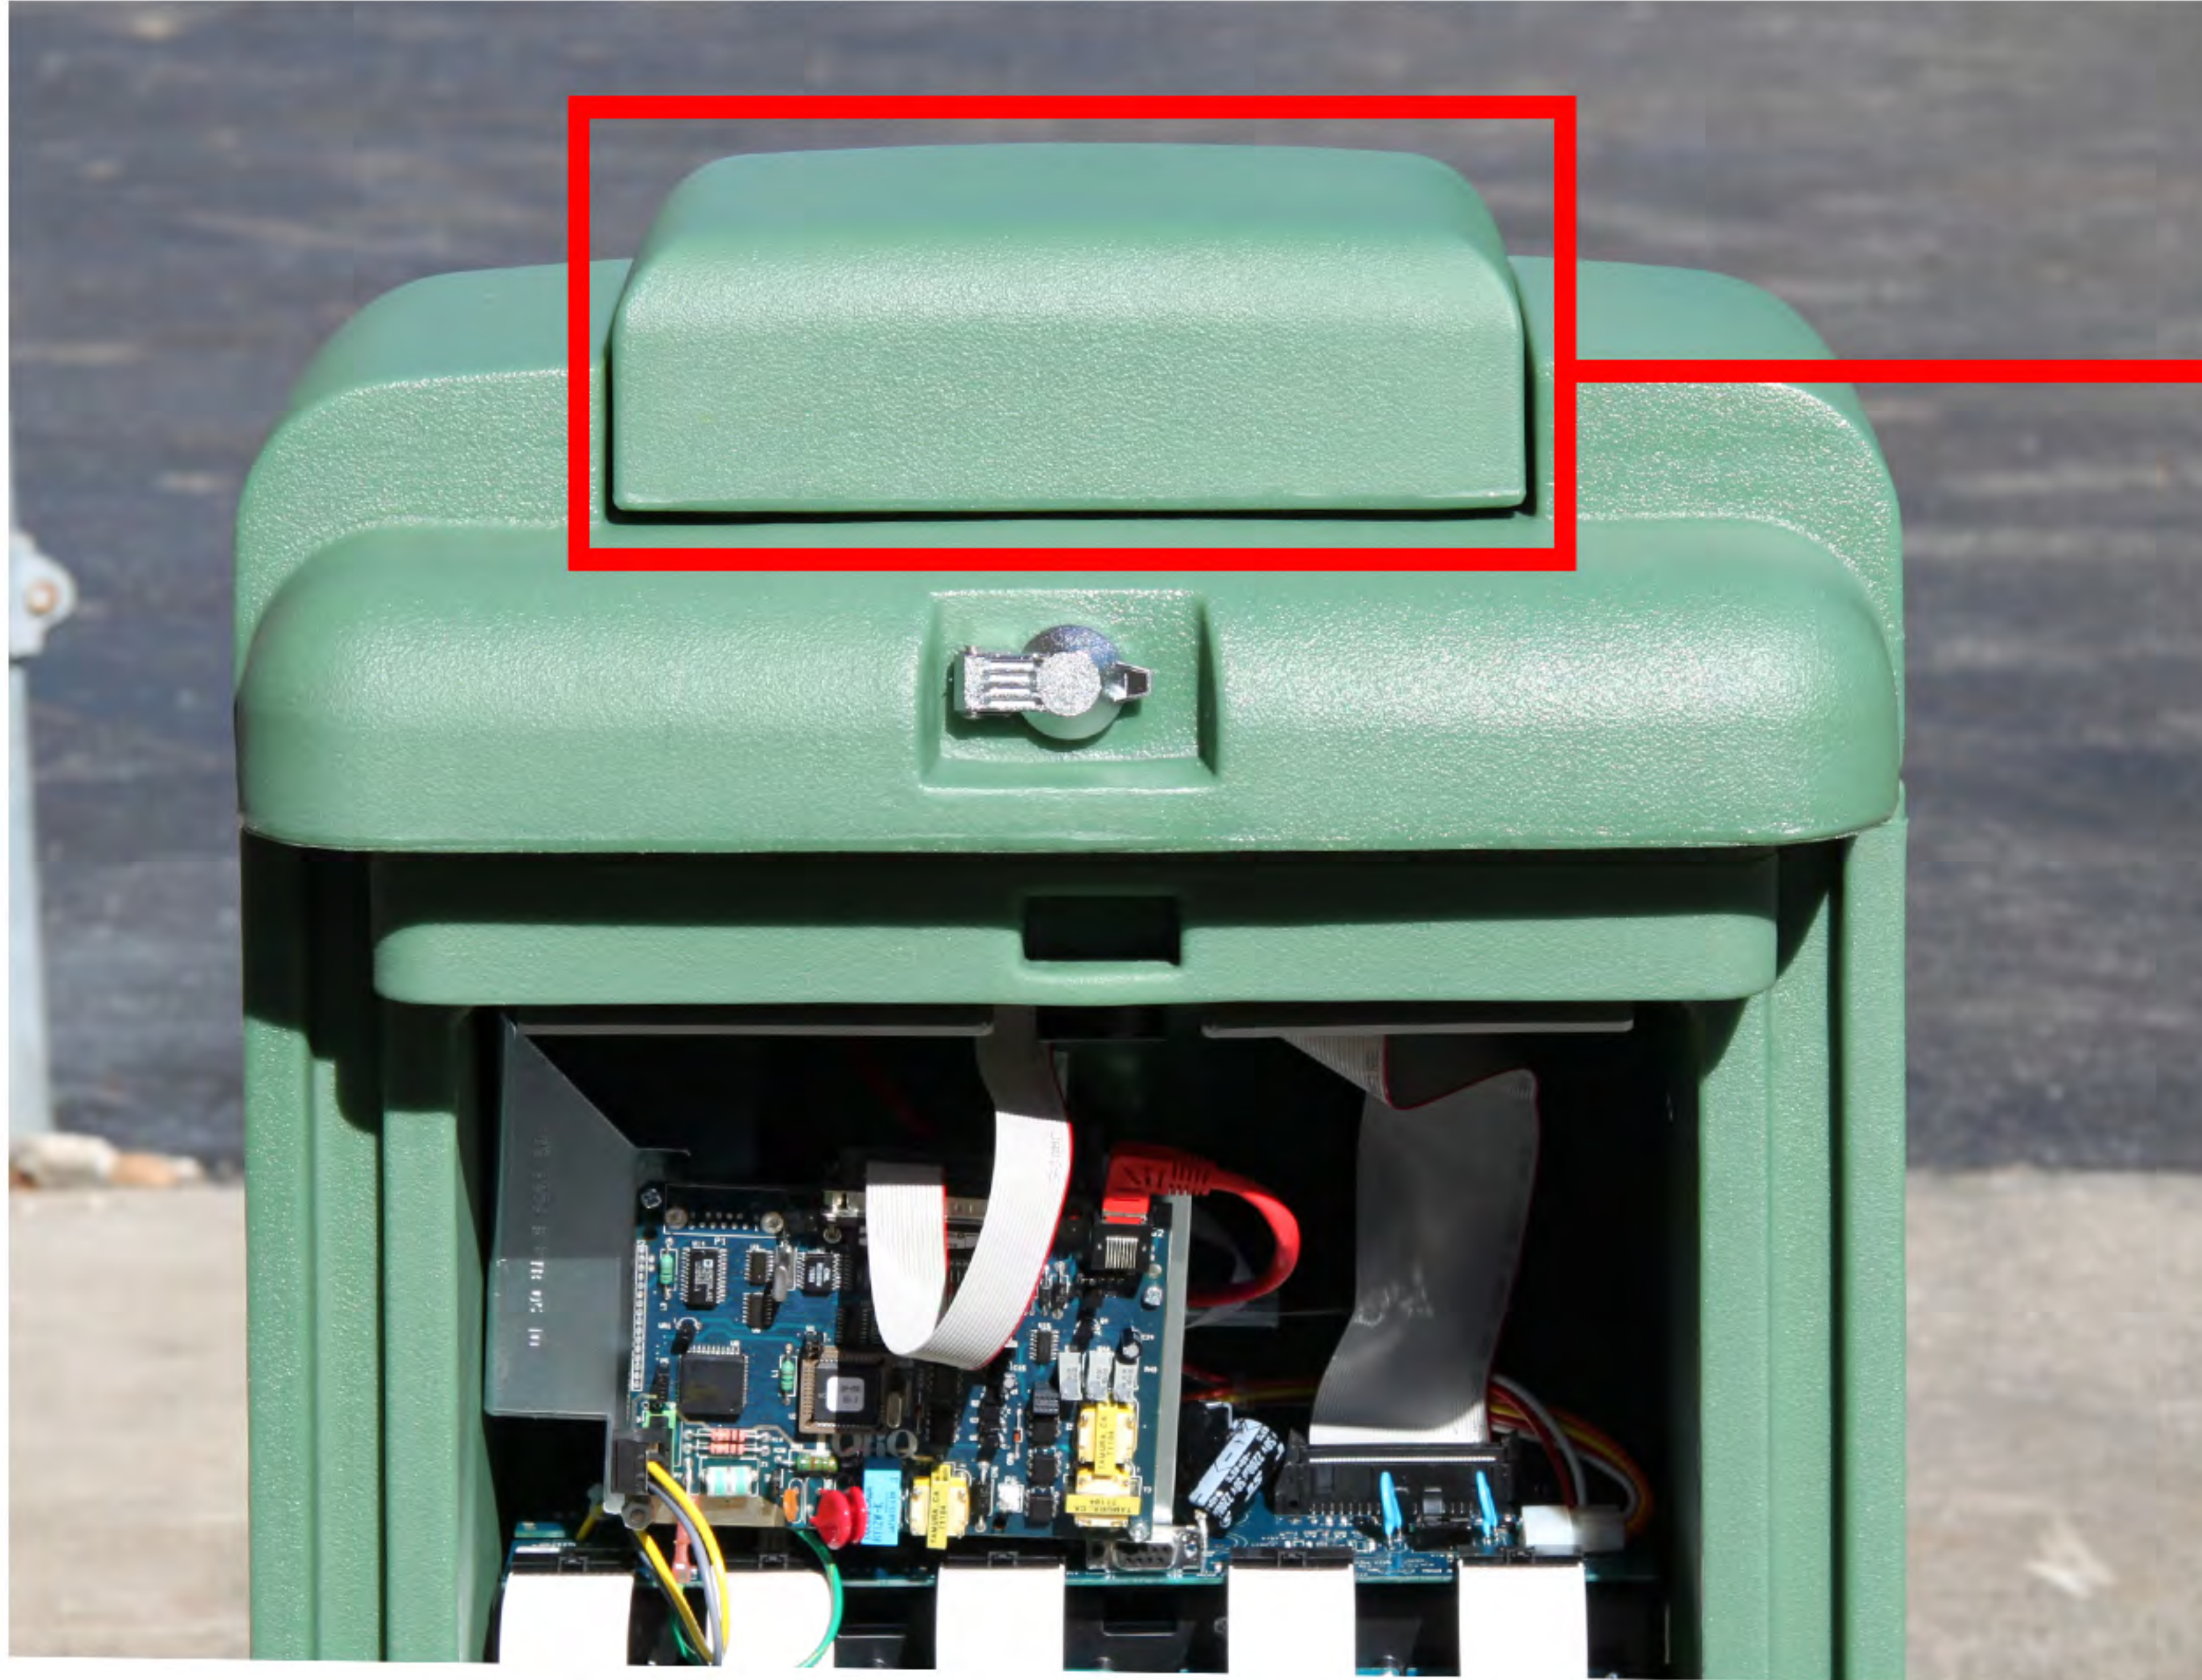

**Pancake Antenna Kit
102-6808**


**Can also be used on
LTC+ Satellite**

VP Satellite

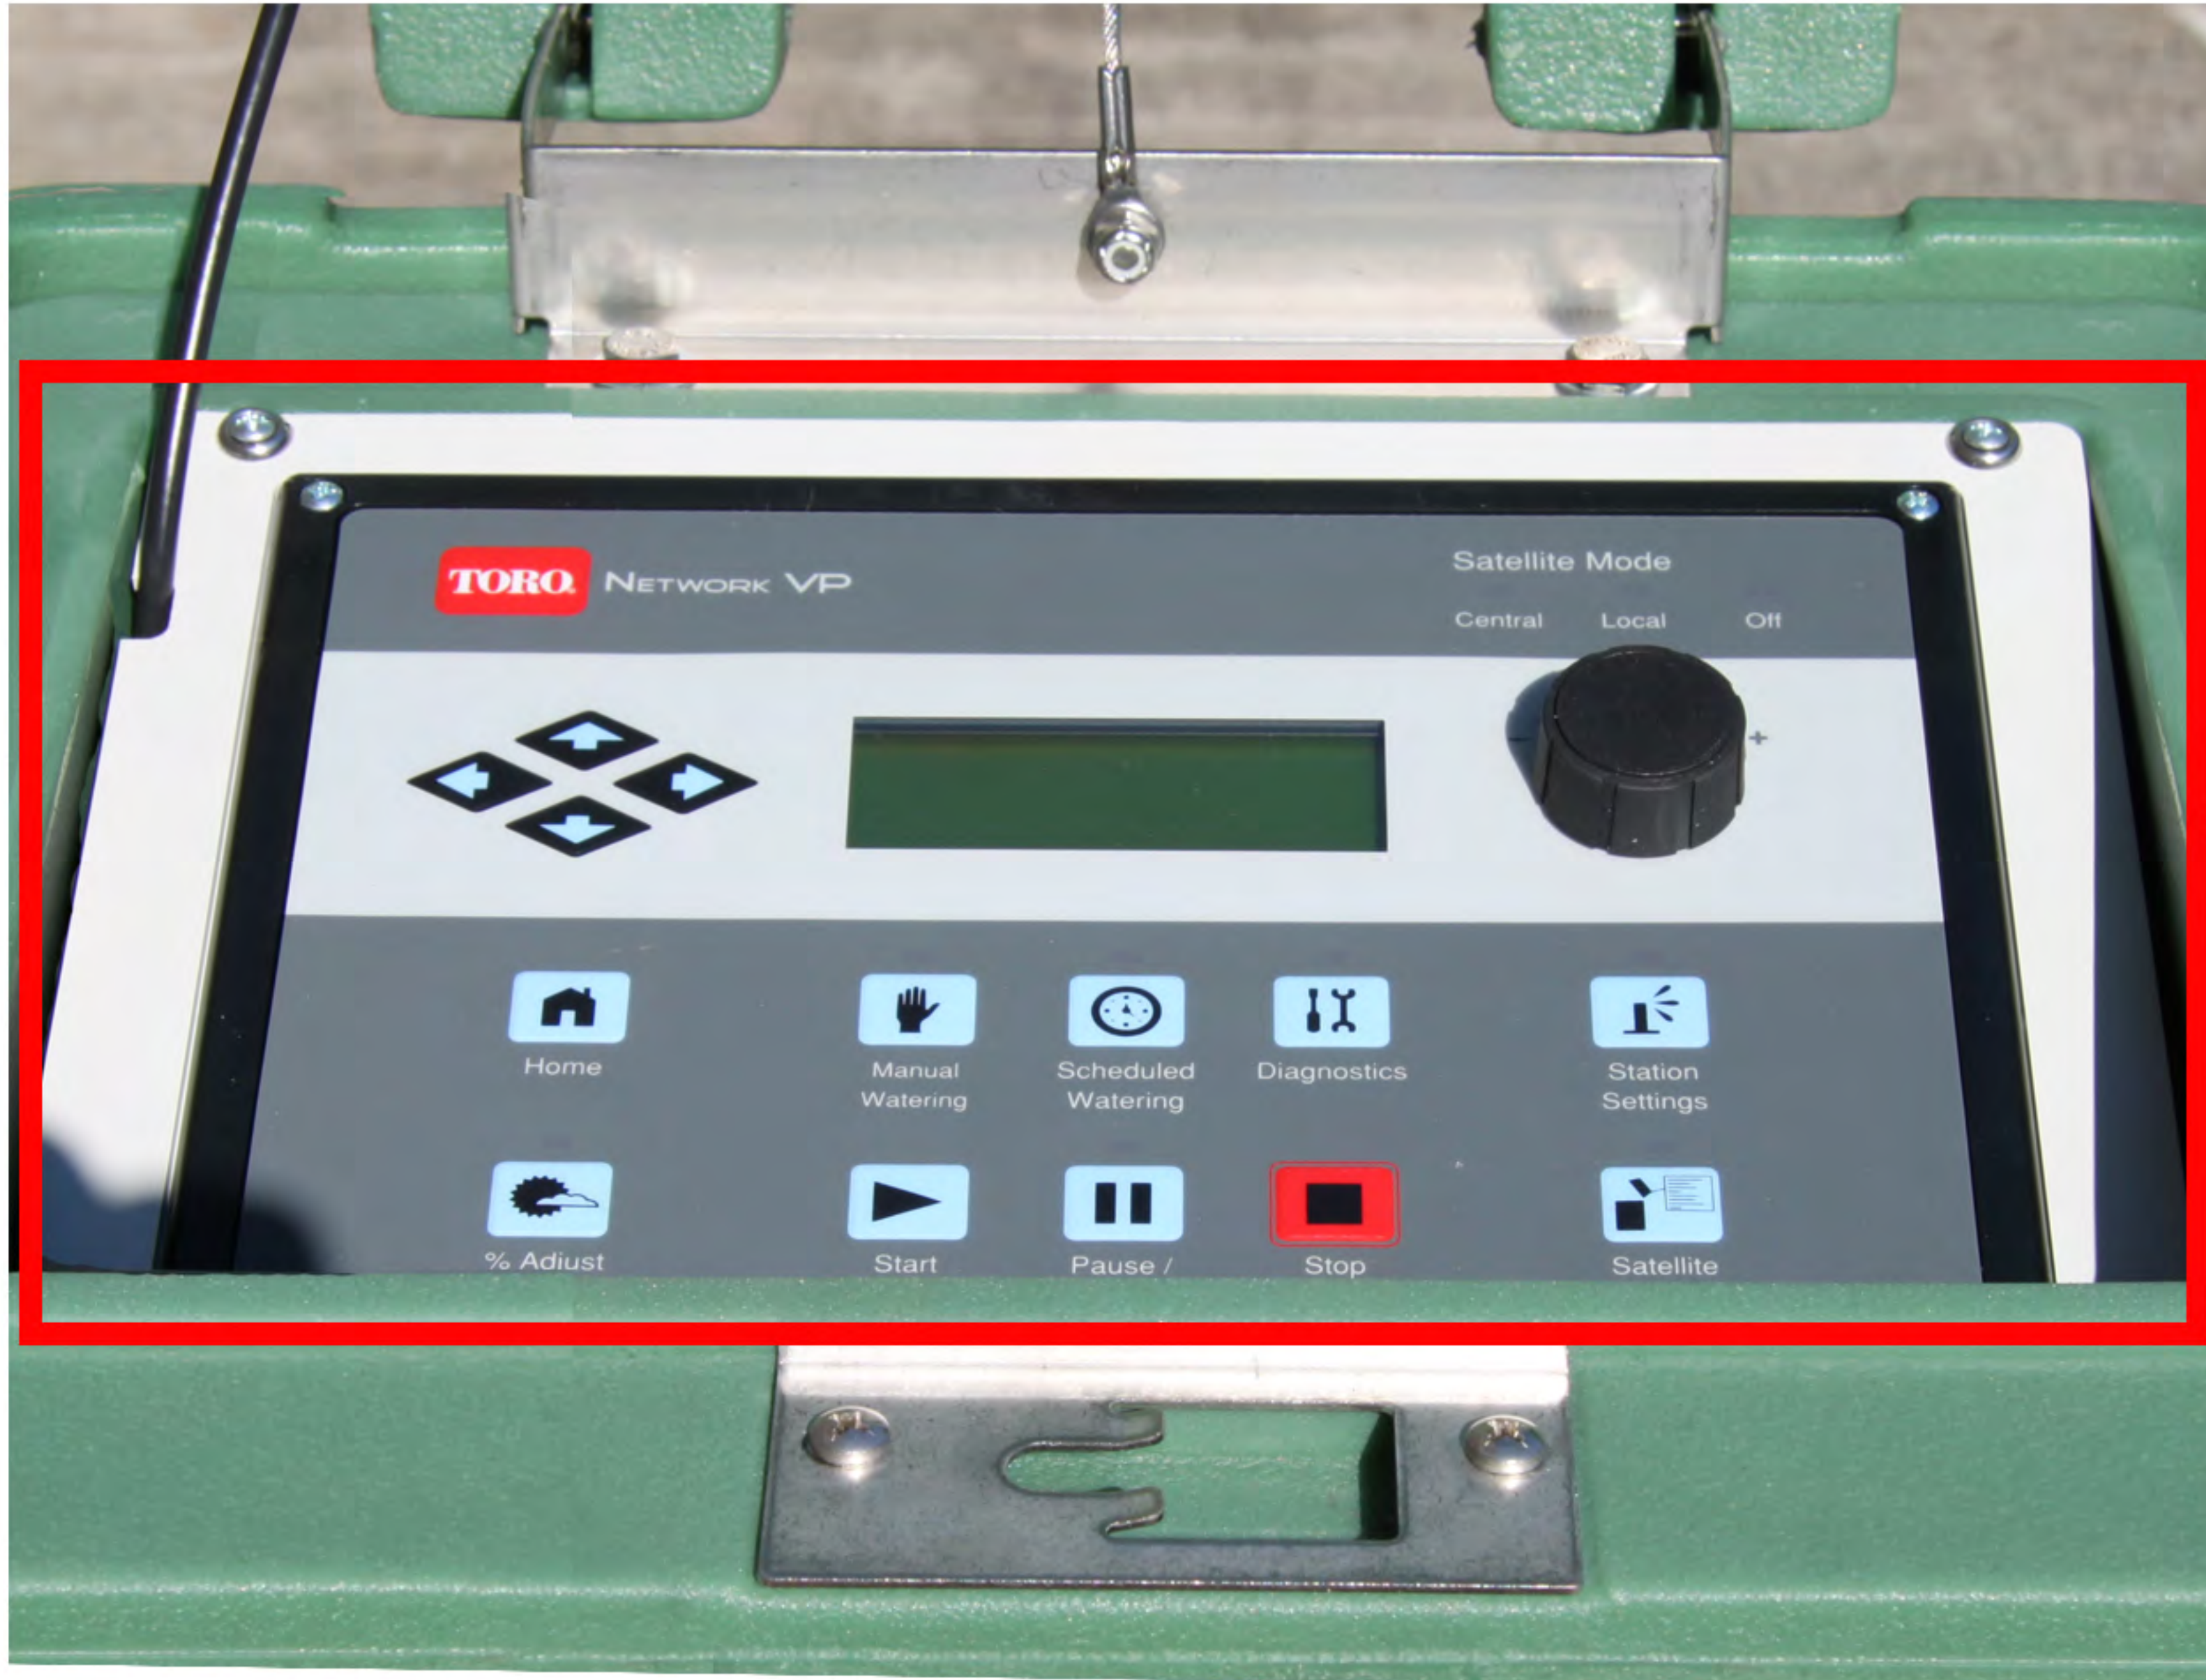

Face Plate
New
102-3497SK
Board Exchange
R102-3497-2.01
R102-3497-4.0

VP Satellite

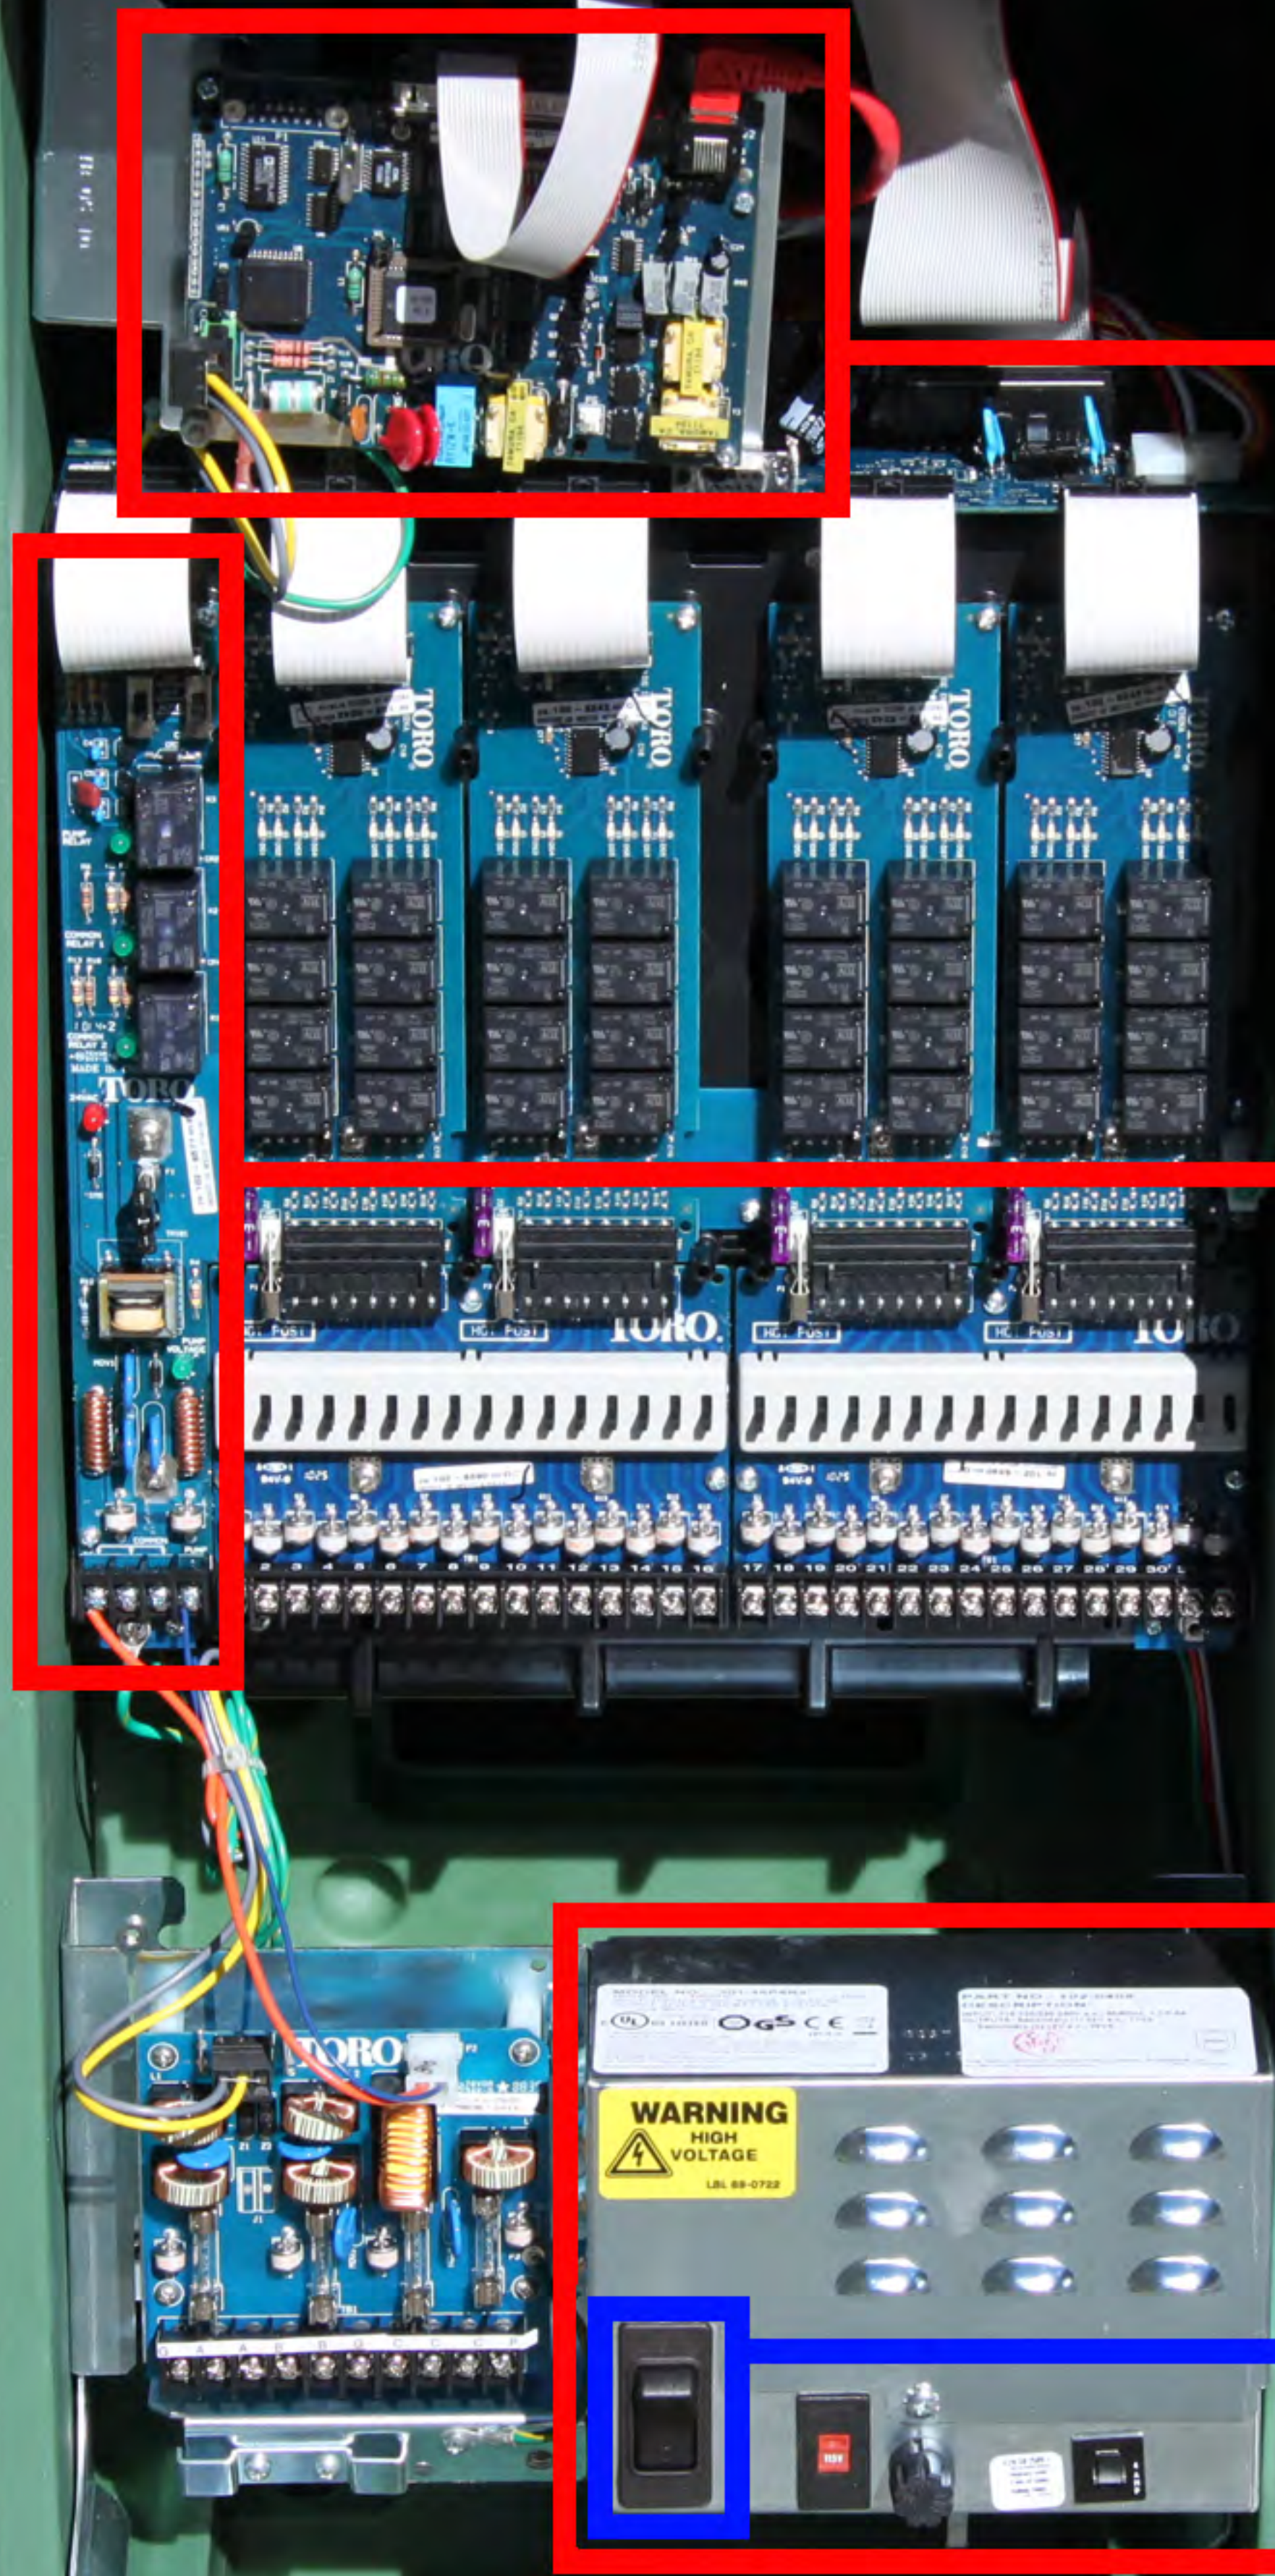

**Modem Board
New - Radio Link
89-7701**


**Board Exchange
R102-0106
New - Non Radio Link
89-9026
Board Exchange
R102-0104**

**Pump / Common Board
New
102-3015SK
Board Exchange
R102-3015**

Power Supply 102-0645

**Switch 102-0666
Transformer 102-0647
(Inside Power Supply)**

VP Satellite

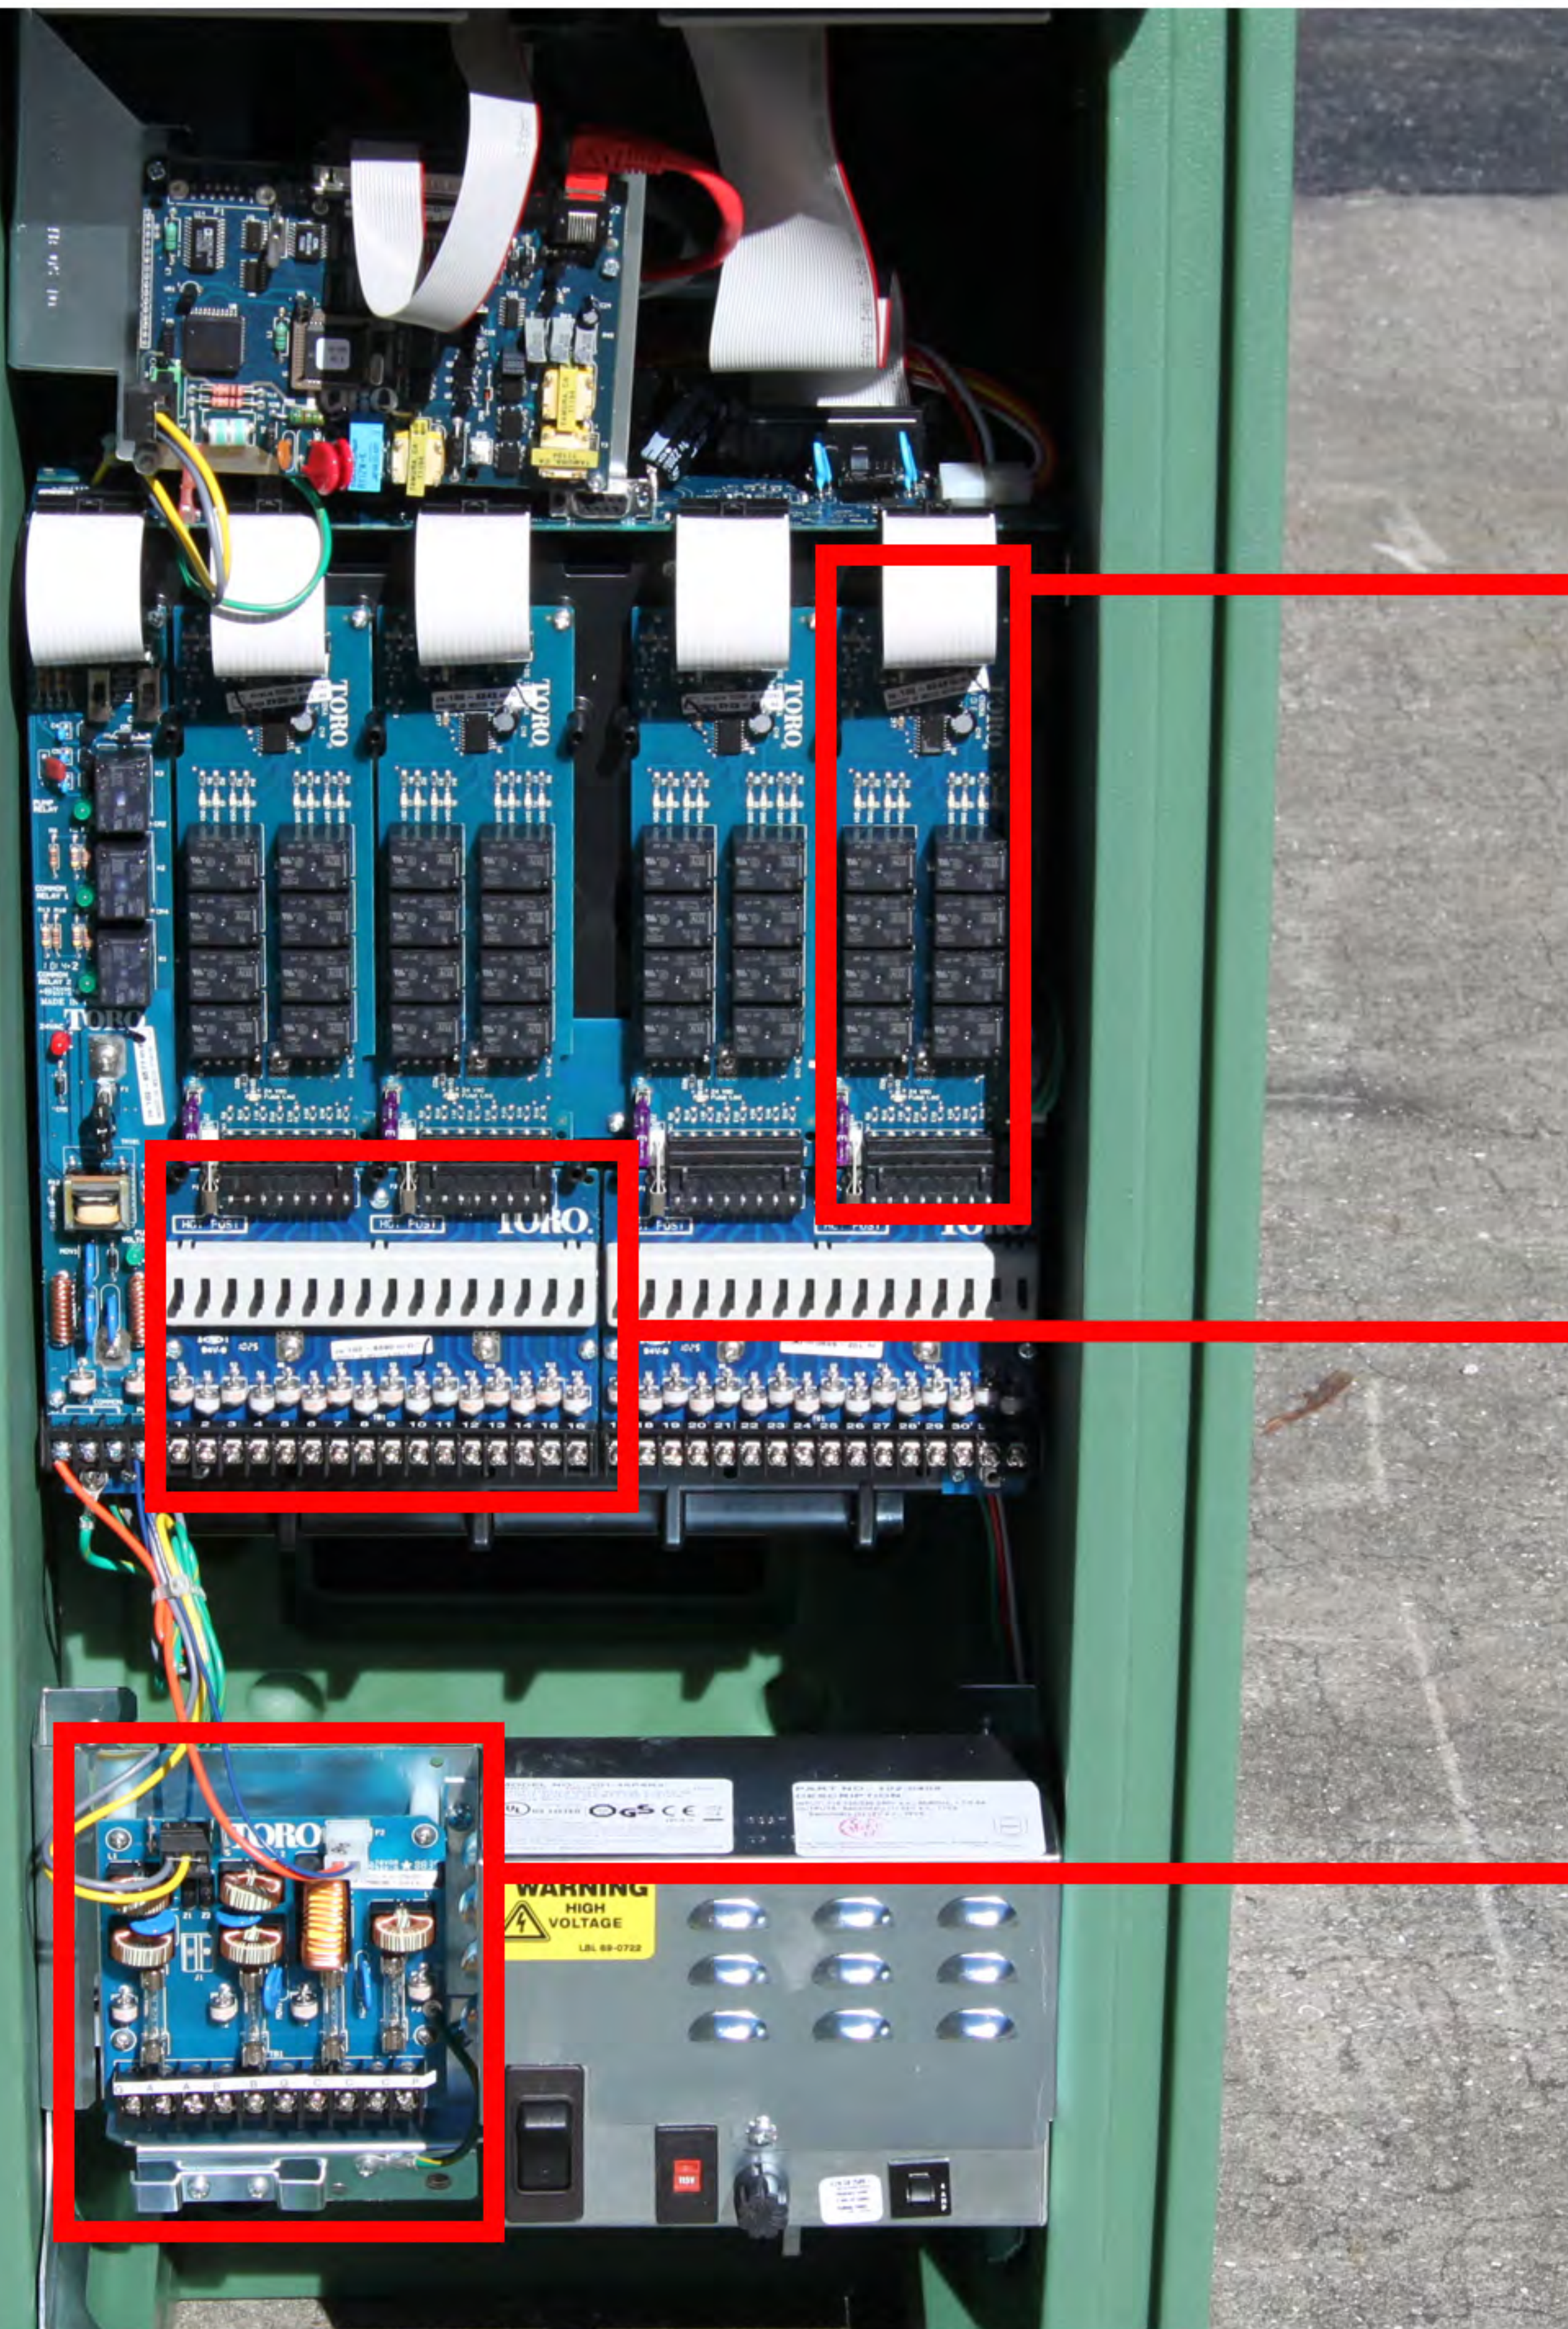


**8 Station Output Module
New
102-0654
Board Exchange
R102-2549**

**16 Station Surge Card
New
102-0642
Board Exchange
R89-9804**

**Surge Board
New
89-8589
Board Exchange
R89-8589**

VP Satellite (Back View)

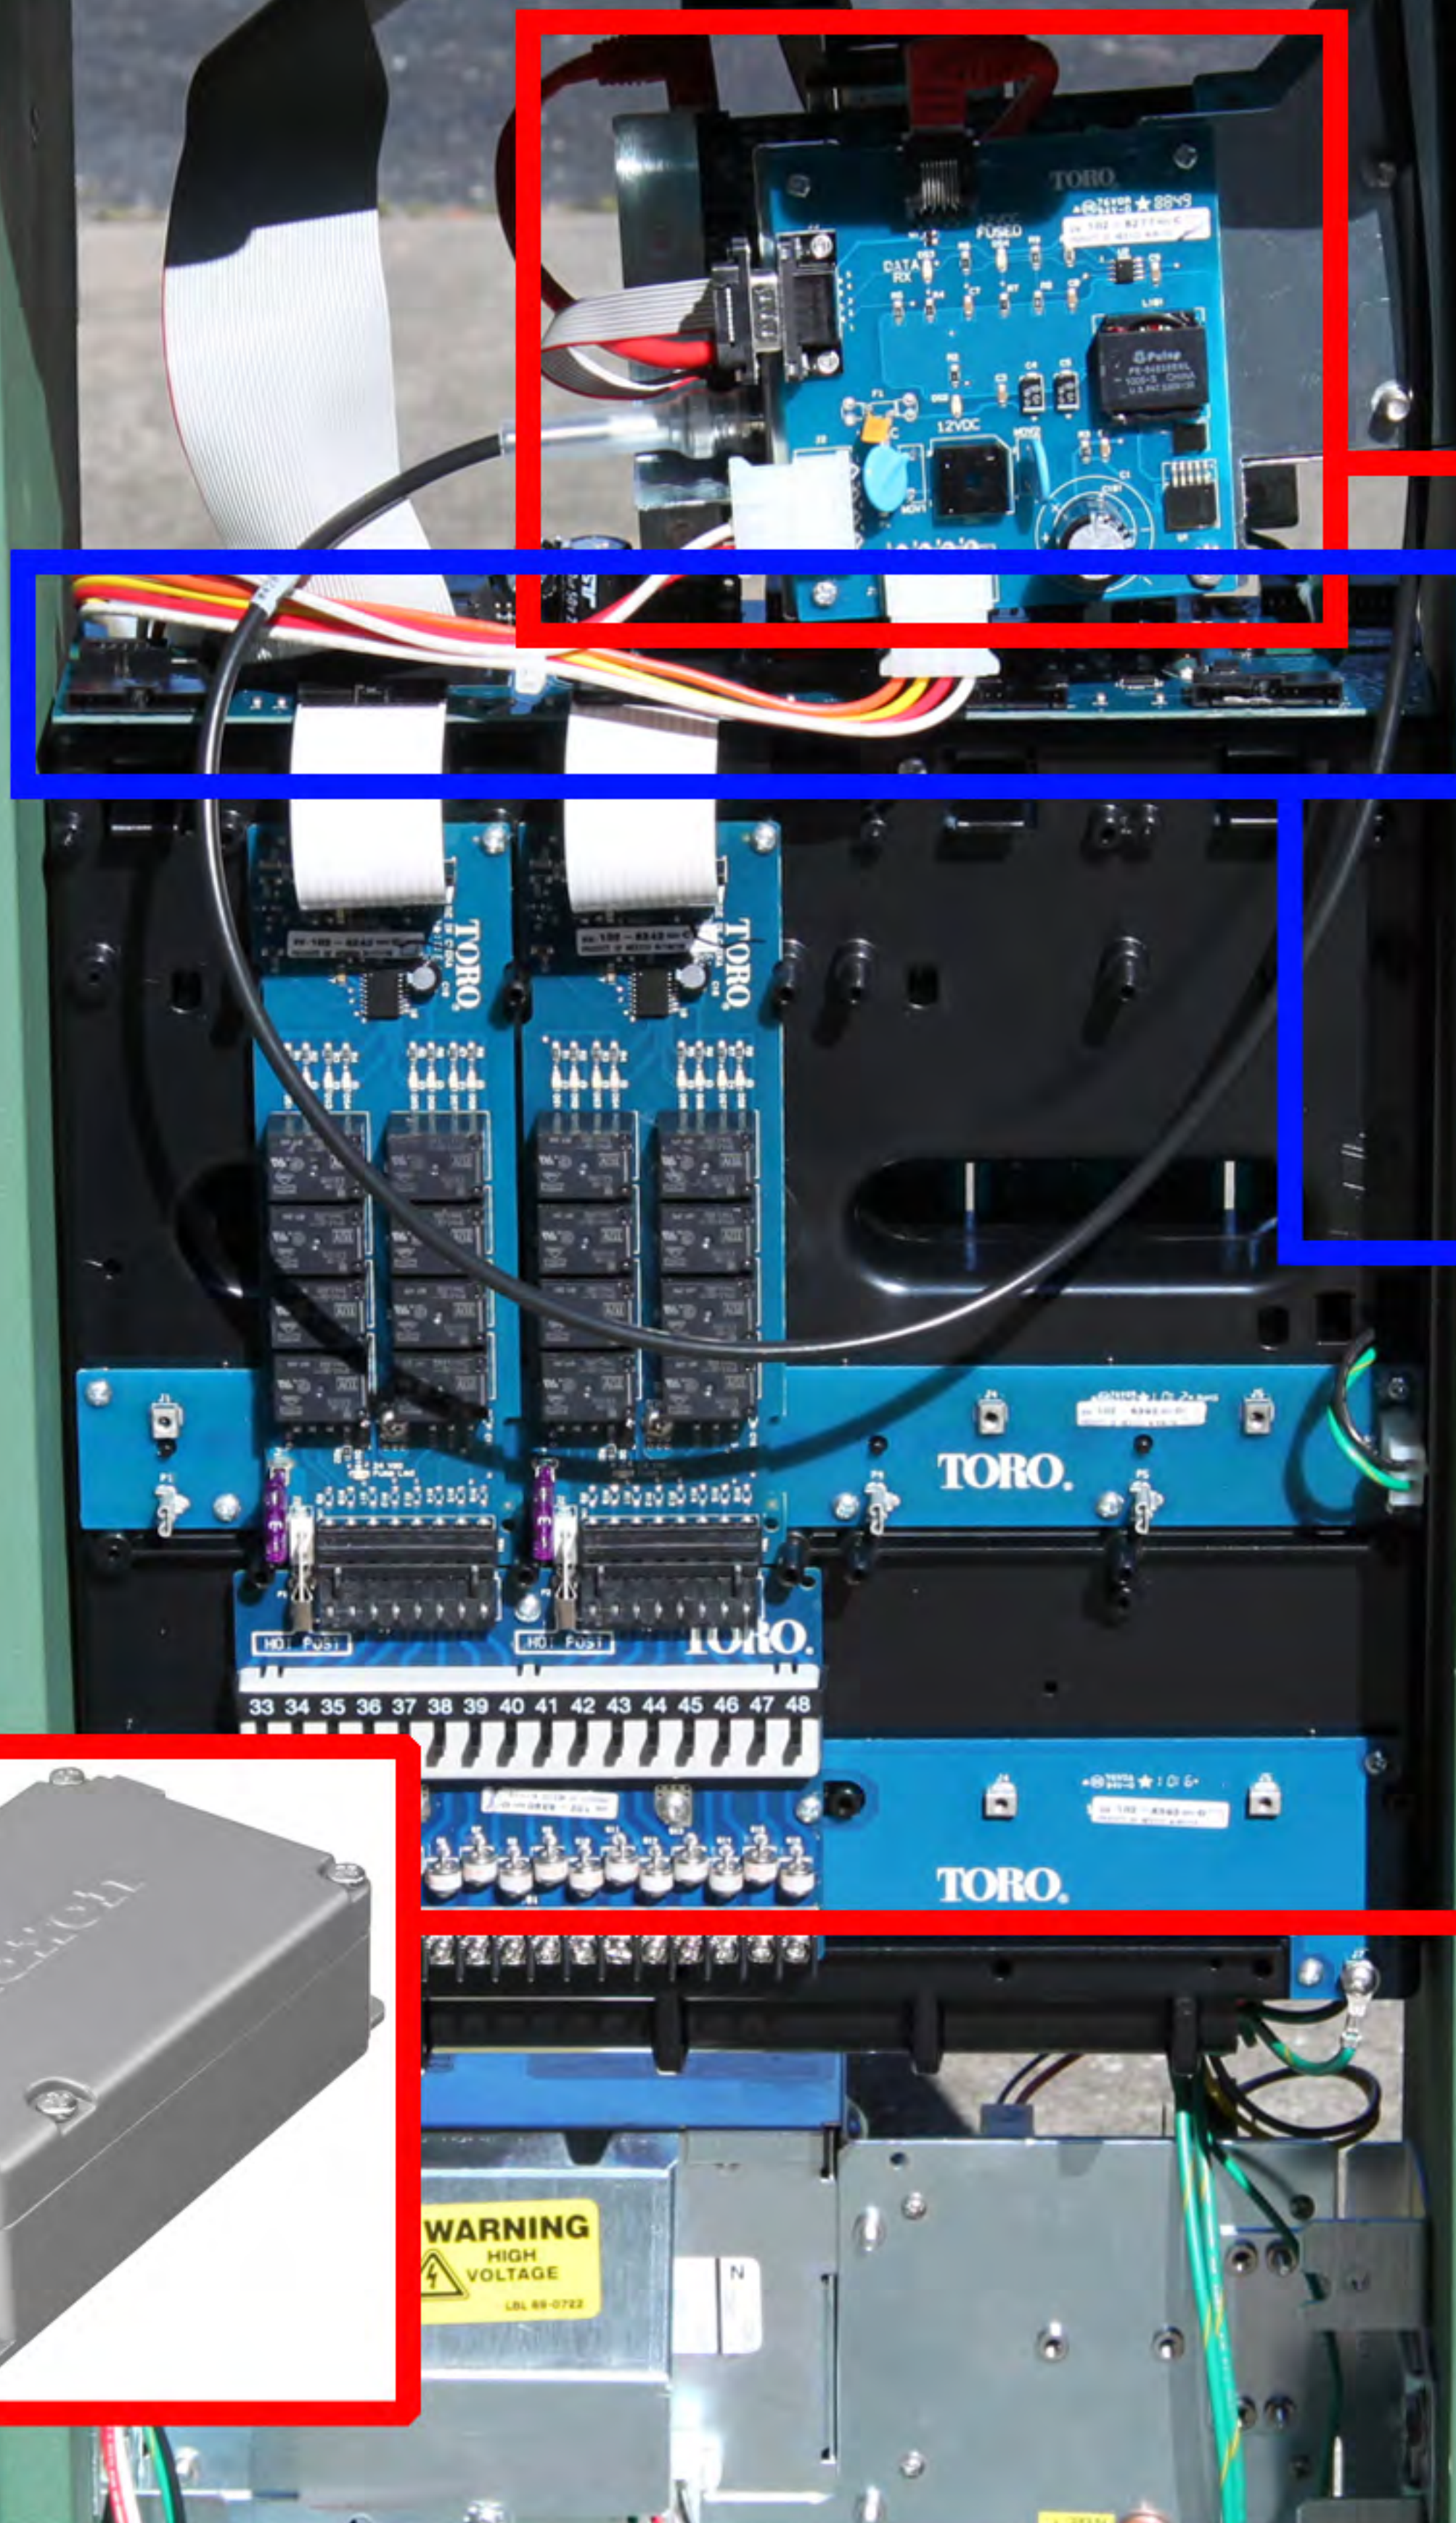

**Radio Interface Board
New
102-3125SK
Board Exchange
R102-3125**

**Distribution Board
New
102-2782SK
Board Exchange
R102-2782**

**Maxon Radio
New
363-4638SK
Board Exchange
R363-4638**

**(Located Behind Radio
Interface Board)**

LSS Satellite Components


Lynx Smart Satellite




R118-6363

Description- LSS timing Mechanism

LSS Front View

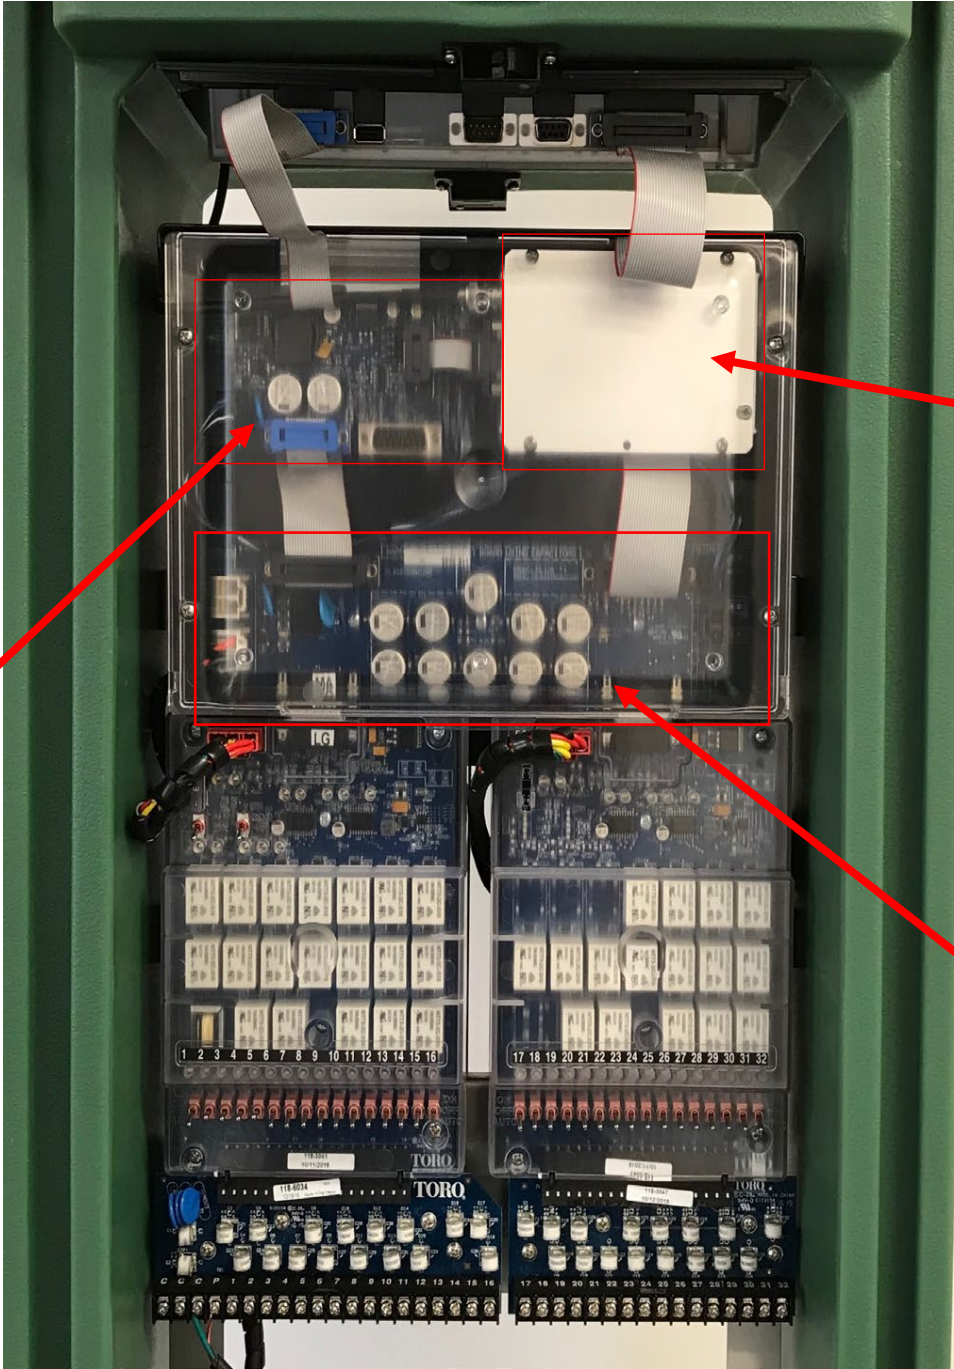



LSS Front View

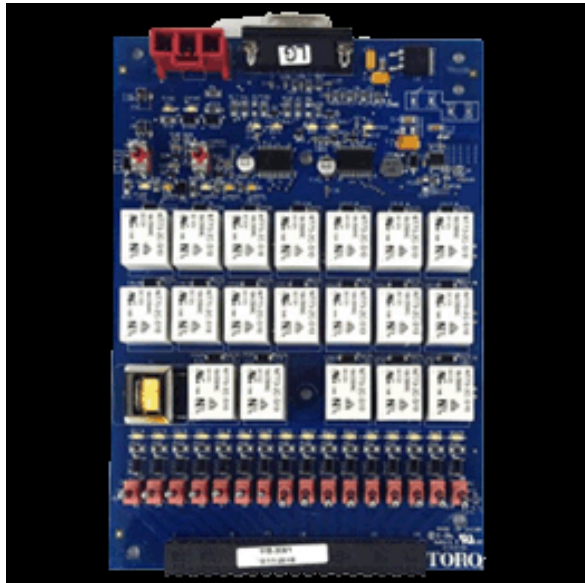

R118-6369
LSS Pump Common Relay
* Use for Stations 1-16 only *



R118-6034
16 station surge/ w common
Use for Stations 1-16 only

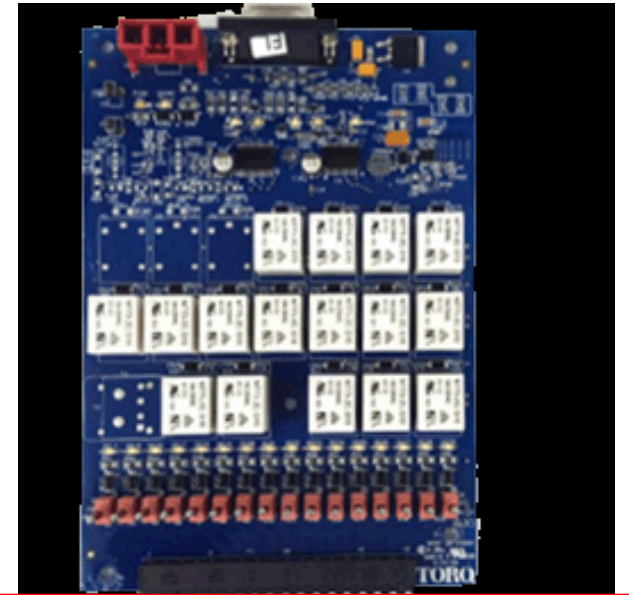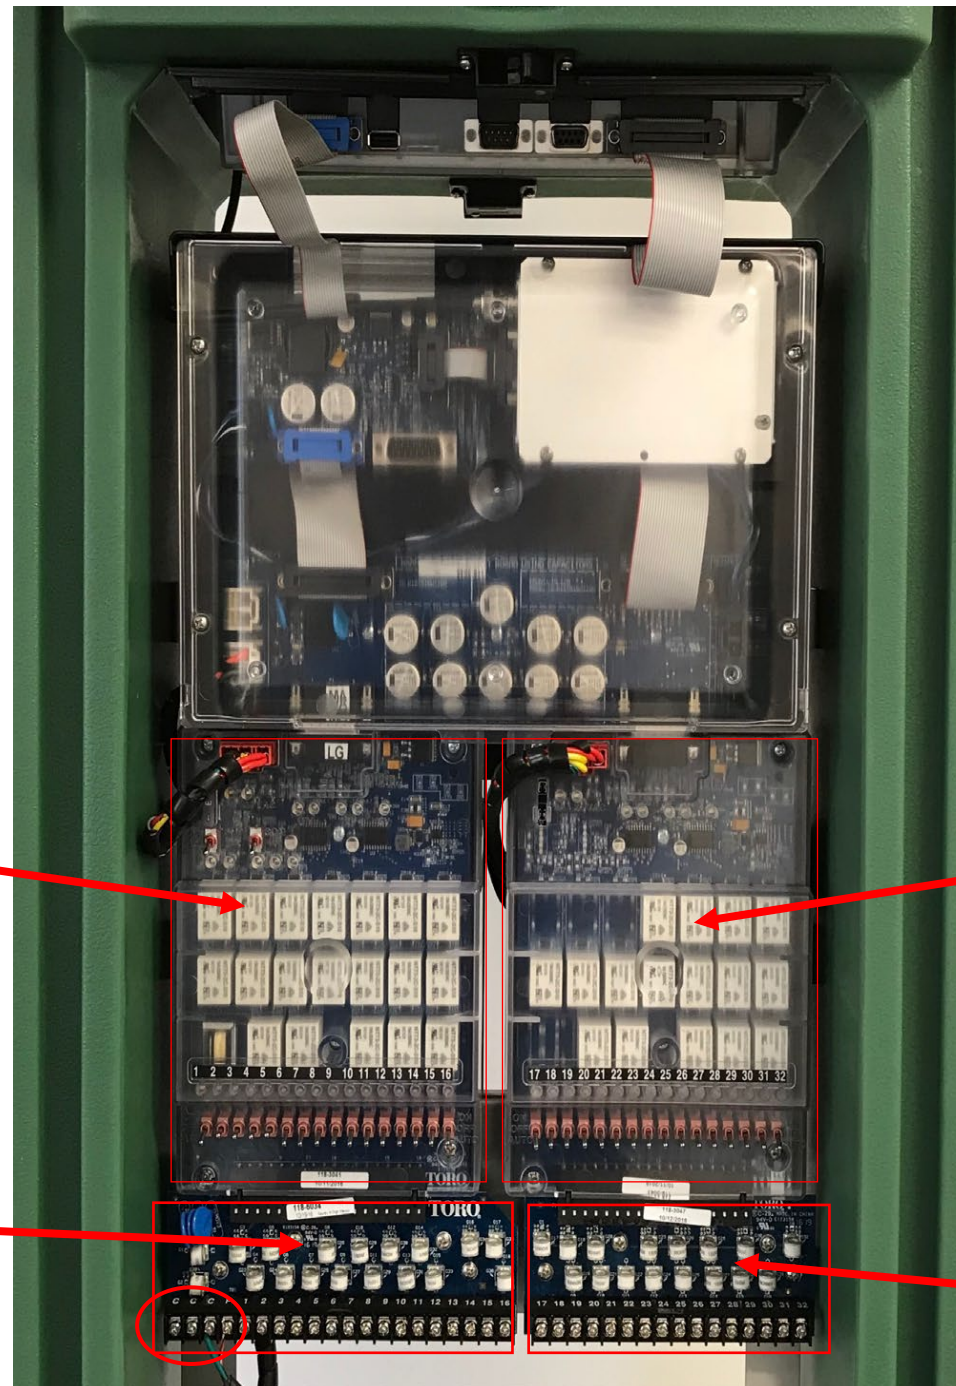

R118-6370
LSS Relay Output
Use for Stations 17 through 64



R118-3047
16 station surge
*Use for Stations 17-64 *

LSS BACK VIEW



R118-3128
LSS Distribution Expand Board

