



2024 Carryall 100 Illustrated Parts List



Gasoline (SZ) and Electric (FC) Vehicle

Manual Number 86753090265
Edition Code A

USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual is divided into several sections. Note that there are flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flags contain the letters G or E, signifying that the page pertains to either the gasoline vehicle, the electric vehicle, or both.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is *the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2024 Club Car, Inc.
Club Car and ArmorFlex
are registered trademarks of Club Car, Inc. This
manual effective February 1, 2024.

2024 Carryall 100 Illustrated Parts List

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body	1-3
Front Body and Dash Closeout	1-5
Canopy and Rear Strut – Rear Seat	1-7
Windshield Canopy Frame	1-9
Canopy and Rear Strut – Cargo Bed	1-11
Hinged Windshield	1-13
Bumper – Gasoline Vehicles	1-15
Bumper – Electric Vehicles	1-17
Brush Guard	1-19
Dash Boxes – Gasoline and Electric Vehicles	1-21
Glove Box	1-23
Floormat and Side Trim	1-25
Nerf Bar	1-27
Rear Body with Rear Facing Seat – Gasoline Vehicle	1-29
Rear Body with Fenders – Bed Box – Gasoline Vehicle	1-31
Rear Body with Rear Facing Seat – Electric Vehicle	1-33
Rear Body with Fenders – Bed Box – Electric Vehicle	1-35
Fwd Seat Back and Structure	1-37
Front Seat Bottom and Armrests	1-39
Rear Seat Back and Structure	1-41
Cargo Bed	1-43
Bed Hinge	1-45
Fold Down Seat Hinge	1-47
Rear-Facing Seat Frame and Foot Deck	1-49

SECTION 2 – WHEELS AND TIRES

Wheels and Tires	2-3
Hubcap	2-5

SECTION 3 – LOGO AND DECALS

Logo Decals	3-3
Safety Decals – Gasoline Vehicles	3-5
Safety Decals – Electric Vehicles	3-7

SECTION 4 – LIGHTS, CONTROLS, AND INDICATORS

Headlights	4-3
Lighting System Components – Gasoline Vehicles	4-5

CONTENTS

Lighting System Components – Electric Vehicles	4-7
Turn Signal Kit – Gasoline and Electric Vehicles	4-9
Reverse Buzzer	4-11
Instrument Panel – Gasoline Vehicle	4-13
Instrument Panel – Electric Vehicle	4-15
Battery Condition Indicator – Electric Vehicles	4-17
DC Converter – Electric Vehicle	4-19
Voltage Limiter – Gasoline Vehicle	4-21
Strobe Light, Post-Mounted – Gasoline Vehicles	4-23
Strobe Light, Post-Mounted – Electric Vehicles	4-25
Strobe Light, Canopy-Mounted	4-27
Horn	4-29
Taillights – LED	4-31
Taillights – Standard Version	4-33

SECTION 5 – BRAKE SYSTEM

Brake Pedal Assembly	5-3
Accelerator Pedal Assembly – Electric Vehicles with MCOR	5-5
Accelerator Pedal Assembly – Gasoline Vehicles	5-7
Accelerator Rod – Gasoline Vehicles	5-9
Rear Brakes, Self-Adjusting – Electric Vehicle	5-11
Rear Brakes, Self-Adjusting – Gasoline Vehicle	5-13
Brake Cables and Equalizer	5-15

SECTION 6 – STEERING AND SUSPENSIONS

Steering Gear Assembly	6-3
Steering Column	6-5
Steering Wheel	6-7
Front Suspension, Lower – Vehicles with Two-Wheel Brakes	6-9
Front Suspension, Upper	6-11
Front Spindles and Hubs	6-13
Rear Suspension Components	6-15

SECTION 7 – ELECTRICAL SYSTEM – GASOLINE VEHICLES

Wiring, Fuses, and Diodes, Pedal-Start – EFI	7-3
Starter/Generator (Model 114-05-4001) – EFI	7-5
Starter/Generator Mounting – ECH440	7-7
Electrical Component Box, Pedal-Start	7-9
Forward/Reverse Shifter Switches, Pedal-Start – EFI, CA100	7-11

CONTENTS

Top-Post Battery – Gasoline Utility Vehicles	8-13
--	------

SECTION 8 – ENGINE (KOHLER ECH440)

Tune-Up Parts	8-3
Engine and Engine Mounting	8-5
Engine Pan and Snubber Mounting	8-7
Blower Housing and Heat Shield – ECH440	8-9
Ignition Components and Flywheel – ECH440	8-11
Cylinder Head and Valve – ECH440	8-13
Crankcase and Piston – ECH440	8-15
Oil Sensor and Lubrication – ECH440	8-17
Crankshaft – ECH440	8-19

SECTION 9 – FUEL SYSTEM – EFI

Fuel Tank with Pump, Top Fill – EFI	9-3
Carbon Canister – EFI	9-5
Throttle Body and Mounting	9-7
Governor Bracket and Cover – EFI	9-9
Governor and Accelerator Cables – EFI	9-11
Air Intake Elbow – EFI	9-13
Air Filter System and Intake Hose – EFI	9-15

SECTION 10 – EXHAUST SYSTEMS – ECH440

Exhaust Systems	10-3
-----------------------	------

SECTION 11 – DRIVE BELT AND CLUTCHES – EFI GASOLINE VEHICLES

Drive Belt – EFI	11-3
Drive Clutch – Pedal-Start Vehicles	11-5
Driven Clutch – Pedal Start	11-7

SECTION 12 – TRANSAXLE (FUJI ED65)

Forward/Reverse Shifter – EFI	12-3
Shifter Cable	12-5
Shift Lever and Bracket – Pedal-Start Engines	12-7
Governor Arm and Brackets – Utility Vehicles	12-9
Transaxle (ED65), Limited Slip – Page 1 of 3	12-11
Transaxle (ED65), Open – Page 1 of 3	12-13
Transaxle (ED65), Limited Slip and Open – Page 2 of 3	12-15

CONTENTS

Transaxle (ED65), Limited Slip – Page 3 of 3	12-17
Transaxle (ED65), Open – Page 3 of 3	12-19
Hub, Rear	12-21
Differential Guard, ED65 – Gasoline Vehicle	12-23

SECTION 13 – ELECTRICAL SYSTEM – ELECTRIC VEHICLES

Forward/Reverse Switch, Tow/Run Switch	13-3
Accelerator Pedal Position Sensor (APPS)	13-5
Wiring – Electric Vehicle	13-7
Battery Charger Receptacle	13-9
Computer, Controller, and Solenoid	13-11
Batteries 8-Volt, Heavy Duty	13-13
Single Point Watering System (SPWS)	13-15
Hand Pump and Deionizer (Battery-Powered Quality Light)	13-17

SECTION 14 – ELECTRIC MOTOR

Motor (Model EJ8-4001A) – Electric Vehicle	14-3
--	------

SECTION 15 – TRANSAXLE – ELECTRIC VEHICLES

Transaxle – Electric Vehicles	15-3
Differential Guard – Electric Vehicles	15-5

SECTION 16 – BATTERY CHARGERS

Battery Charger, High-Frequency – U.S./Canada	16-3
Battery Charger, High-Freq., 2.74 m DC Cord – Global	16-5
Battery Charger, High-Freq., 3.66 m DC Cord – Global	16-7
Battery Charger, High-Freq., 6.1 m DC Cord – Global	16-9
Cords – Battery Charger, High-Frequency	16-11

SECTION 17 – MAINTENANCE AND SERVICE TOOLS

Maintenance and Service Tools	17-3
Maintenance and Service Tools, Continued	17-5
Maintenance and Service Tools, Continued	17-7

SECTION i – INDEX

BODY AND TRIM

1


G

E

1

G

E

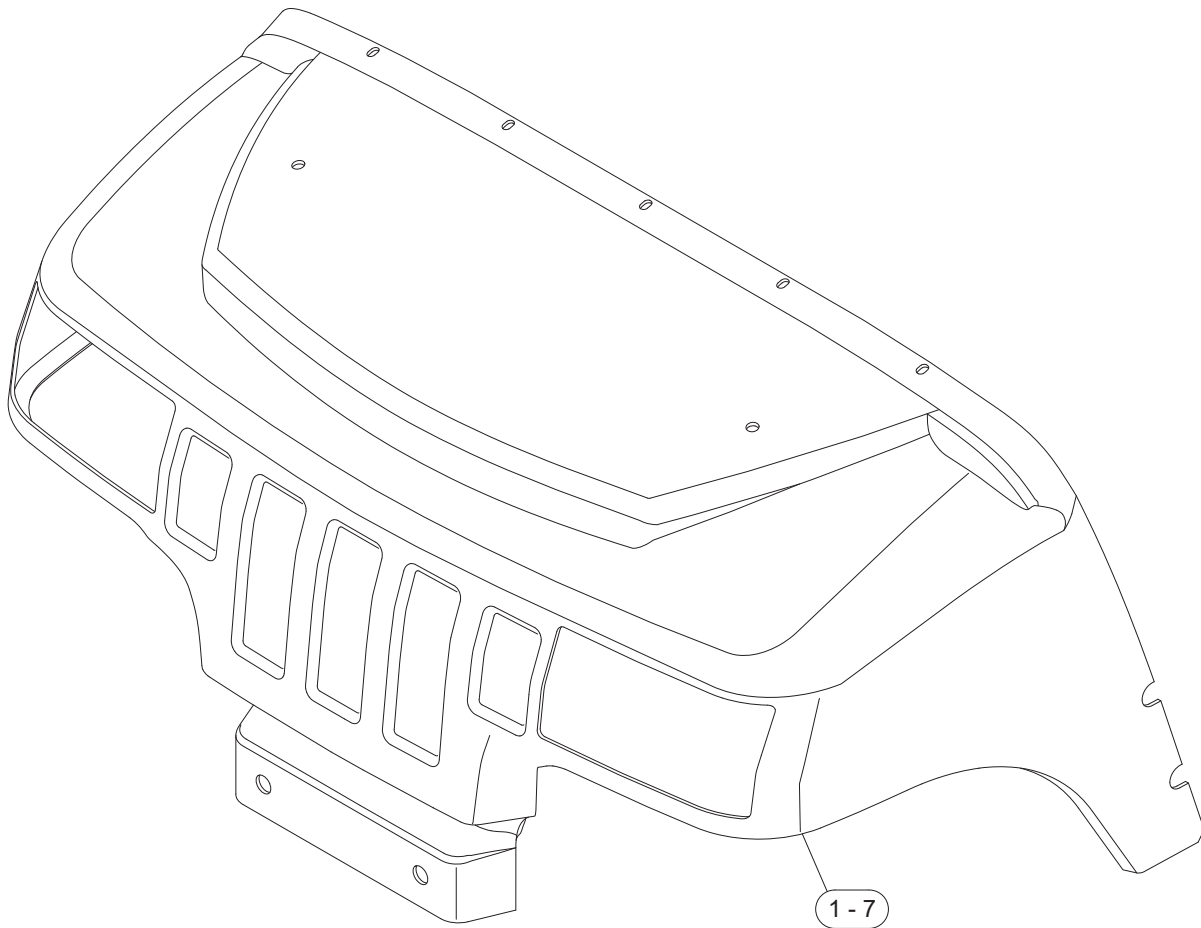

G-140299-000020


FRONT BODY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	103984401	Cowl, Red, Common	1
2	103984402	Cowl, Dk Green, Common	1
3	103984404	Cowl, Cl Blue, Common	1
4	103984405	Cowl, Black, Common	1
5	103984410	Cowl, White, Common	1
6	103984411	Cowl, Dk Gray, Common	1
7	103984412	Cowl, Beige, Common	1
Note: For current and addional color options that may be available contact your nearest Club Car dealer or distributor for more information.			

1

G

E

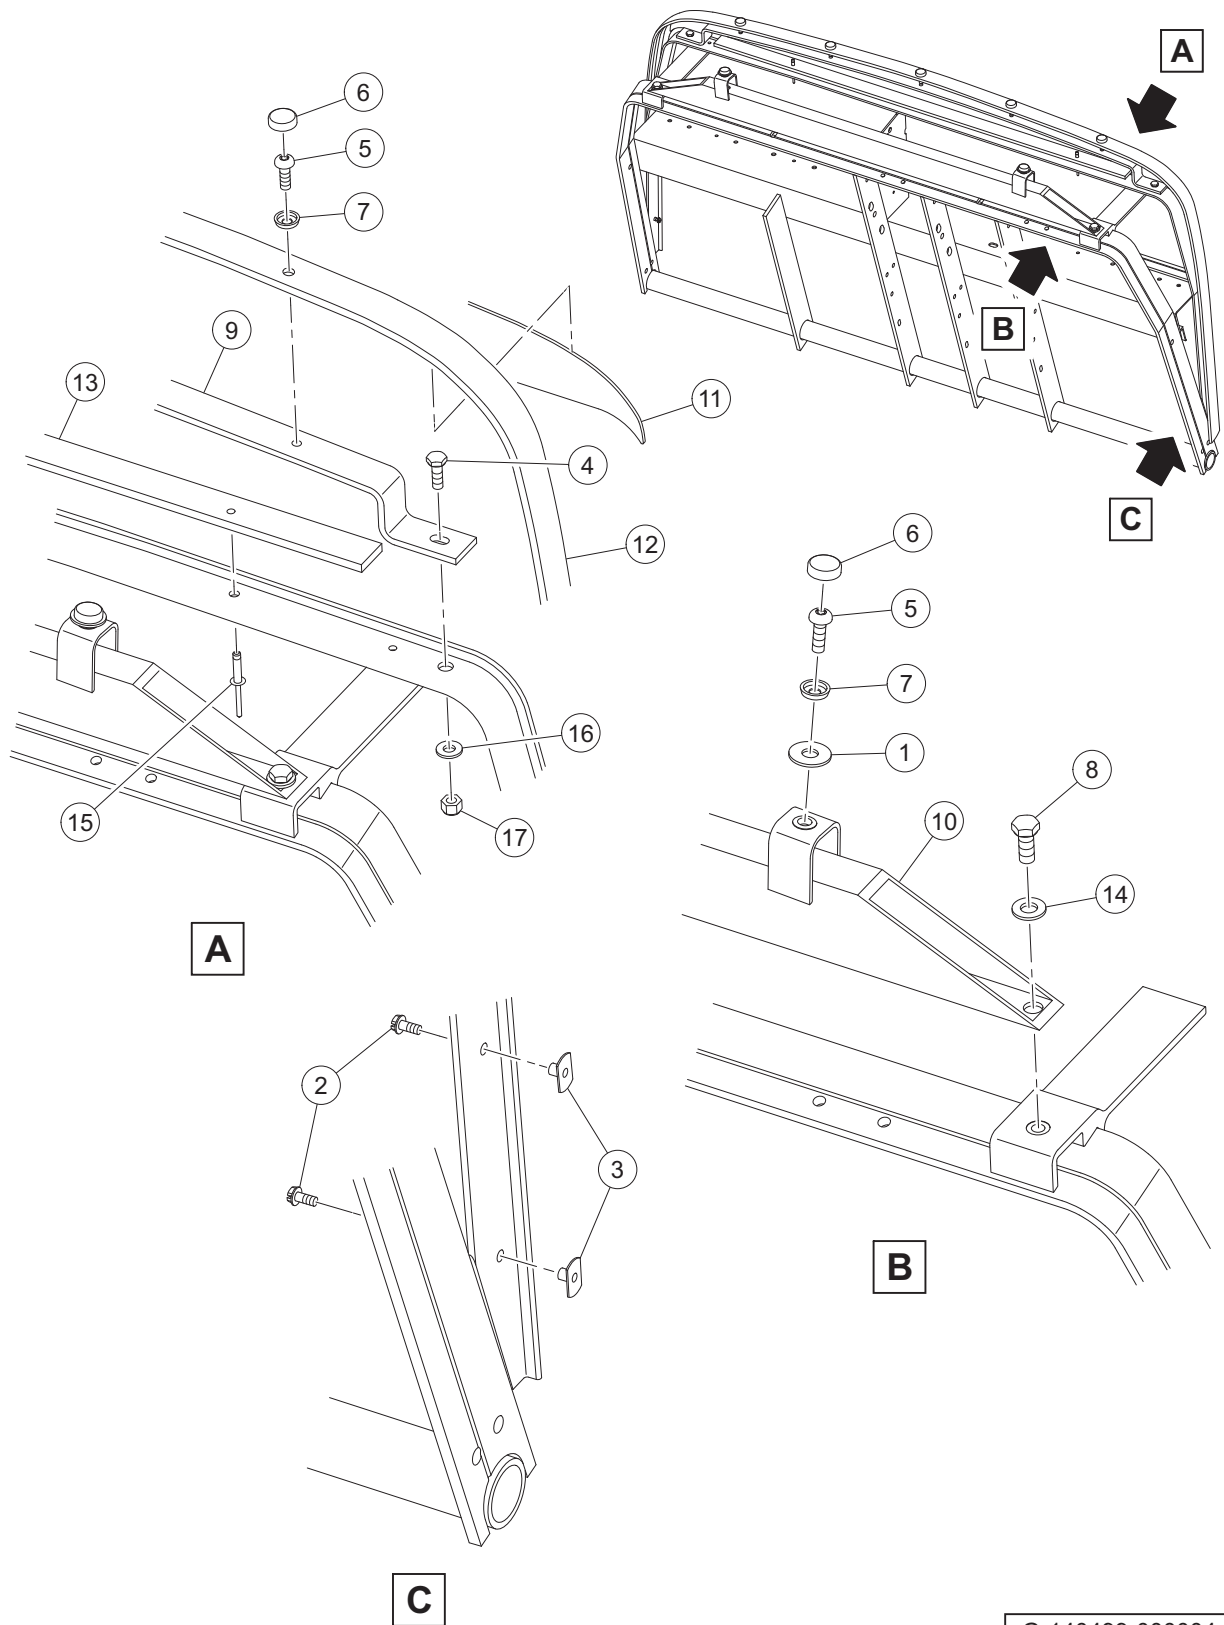1**G****E**

G-140499-000004


FRONT BODY AND DASH CLOSEOUT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010517	Washer, .88 Od X .343 Id Nylon	2
2	1011017	Screw, #8-32 X 0.375	4
3	1011659	#8-32 Unc-2b Slub Base Teenut	4
4	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap	2
5	102025801	Screw, 1/4-20 X .75 Torx Pn Hd	7
6	102045001	Cap, 1/4" Plastic Screw Head	7
7	102048401	Washer, 1/4 Id Scalloped Plast	7
8	102242101	Screw, 5/16-18 X 3/4 Hex-Head with Patch	2
9	102778601	Support, Upper Cowl	1
10	103313301	Asm, Brace, Canopy, Tube, Xrt	1
11	103364101	Panel, Closeout, Dash	1
12	103364201	Strip, Trim, Dash, Black	1
13	103395101	Plate, Retention, Closeout	1
14	1241	Washer, 5/16 Type A Flat	2
15	1606	Rivet, 3/16 X .500 Alum Pop	2
16	332	Washer, 1/4 Type A Narrow Flat	2
17	8233	Locknut, 1/4-20, Nylon Insert	2

1

G

E

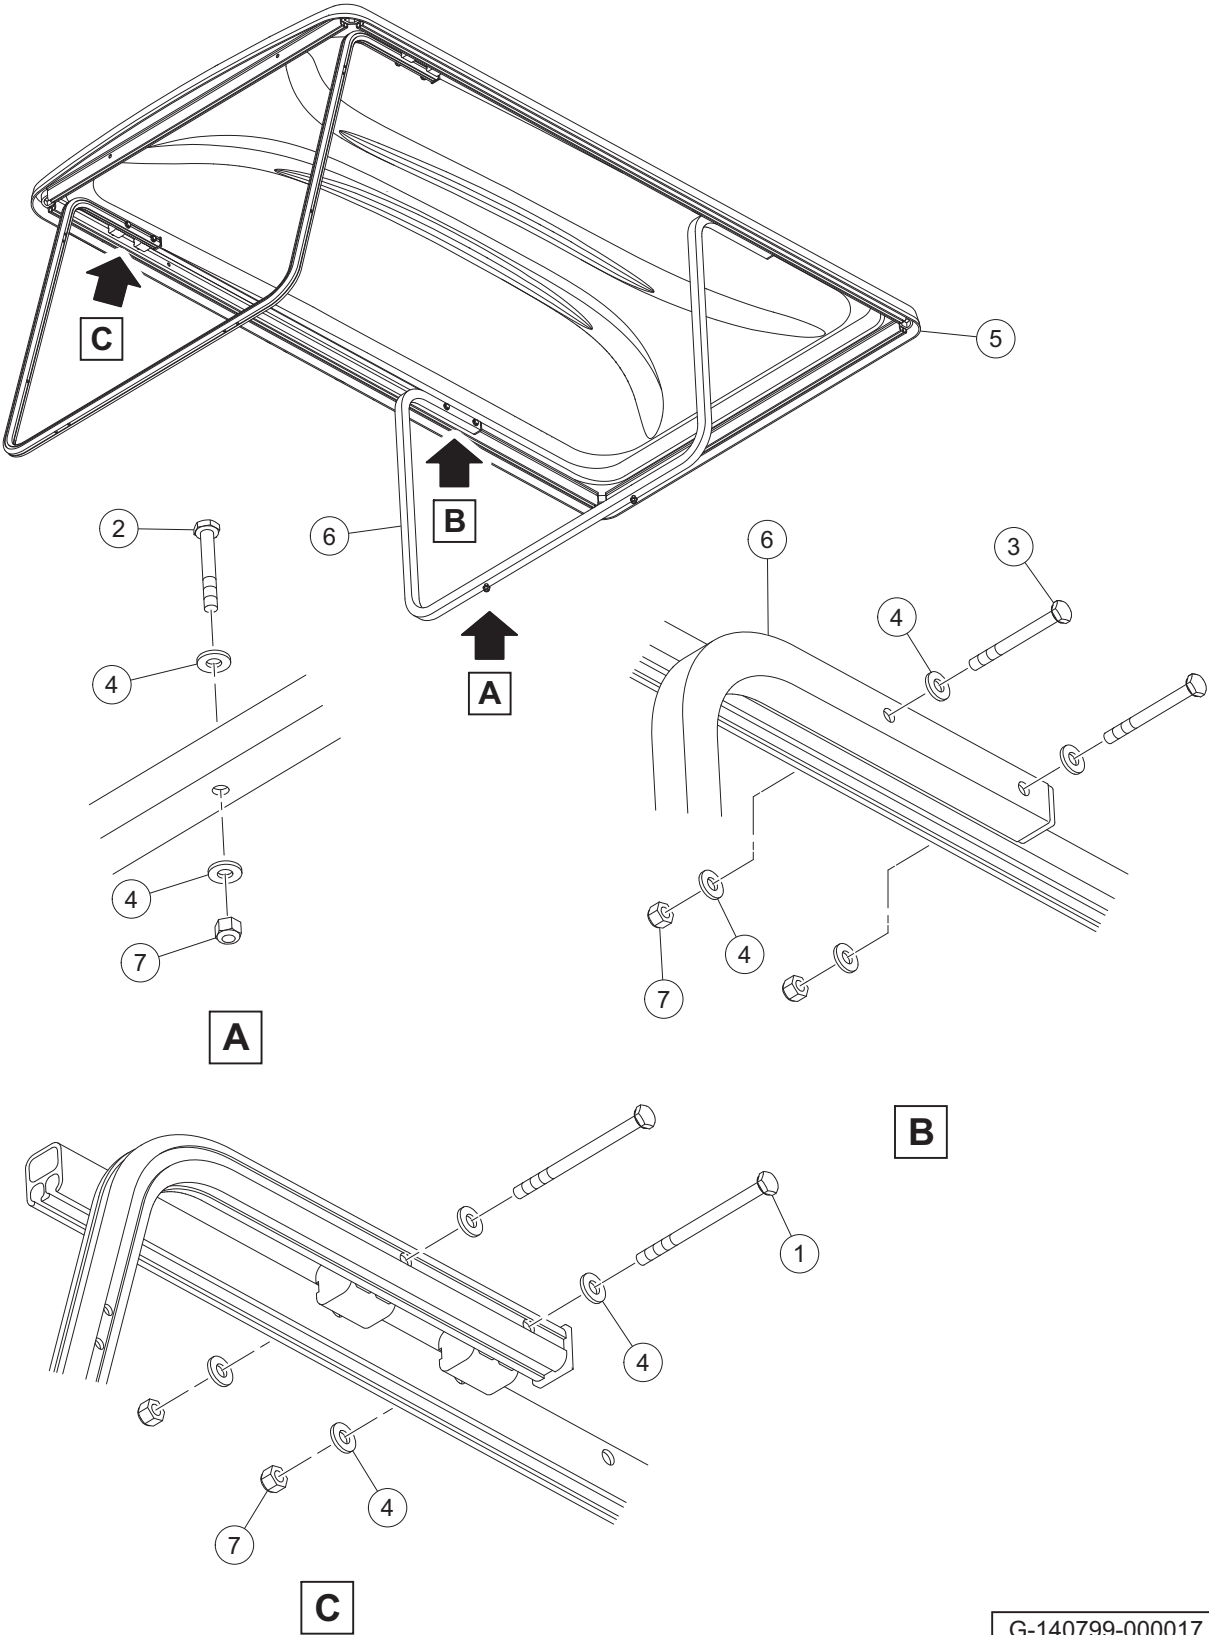

G-140799-000017


CANOPY AND REAR STRUT – REAR SEAT

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1012462	Bolt, 1/4-20 X 3.50 Hex Head	4	
2	1013509	Screw, 1/4-20 X 1.75 Hx Hd Cap	2	
3	324	Screw, 1/4-20 X 2.50 Hx Hd Cap	4	
4	332	Washer, 1/4 Type A Narrow Flat	20	
5	47557674001	Top, Canopy, Phantom Blk	1	
6	47595292001	Strut, Canopy, Rear, Long	1	
7	8233	Locknut, 1/4-20, Nylon Insert	10	
Note: For complete black canopy and rear strut kit order p/n 47595294001. See the windshield canopy frame for additional parts information.				

1

G

E

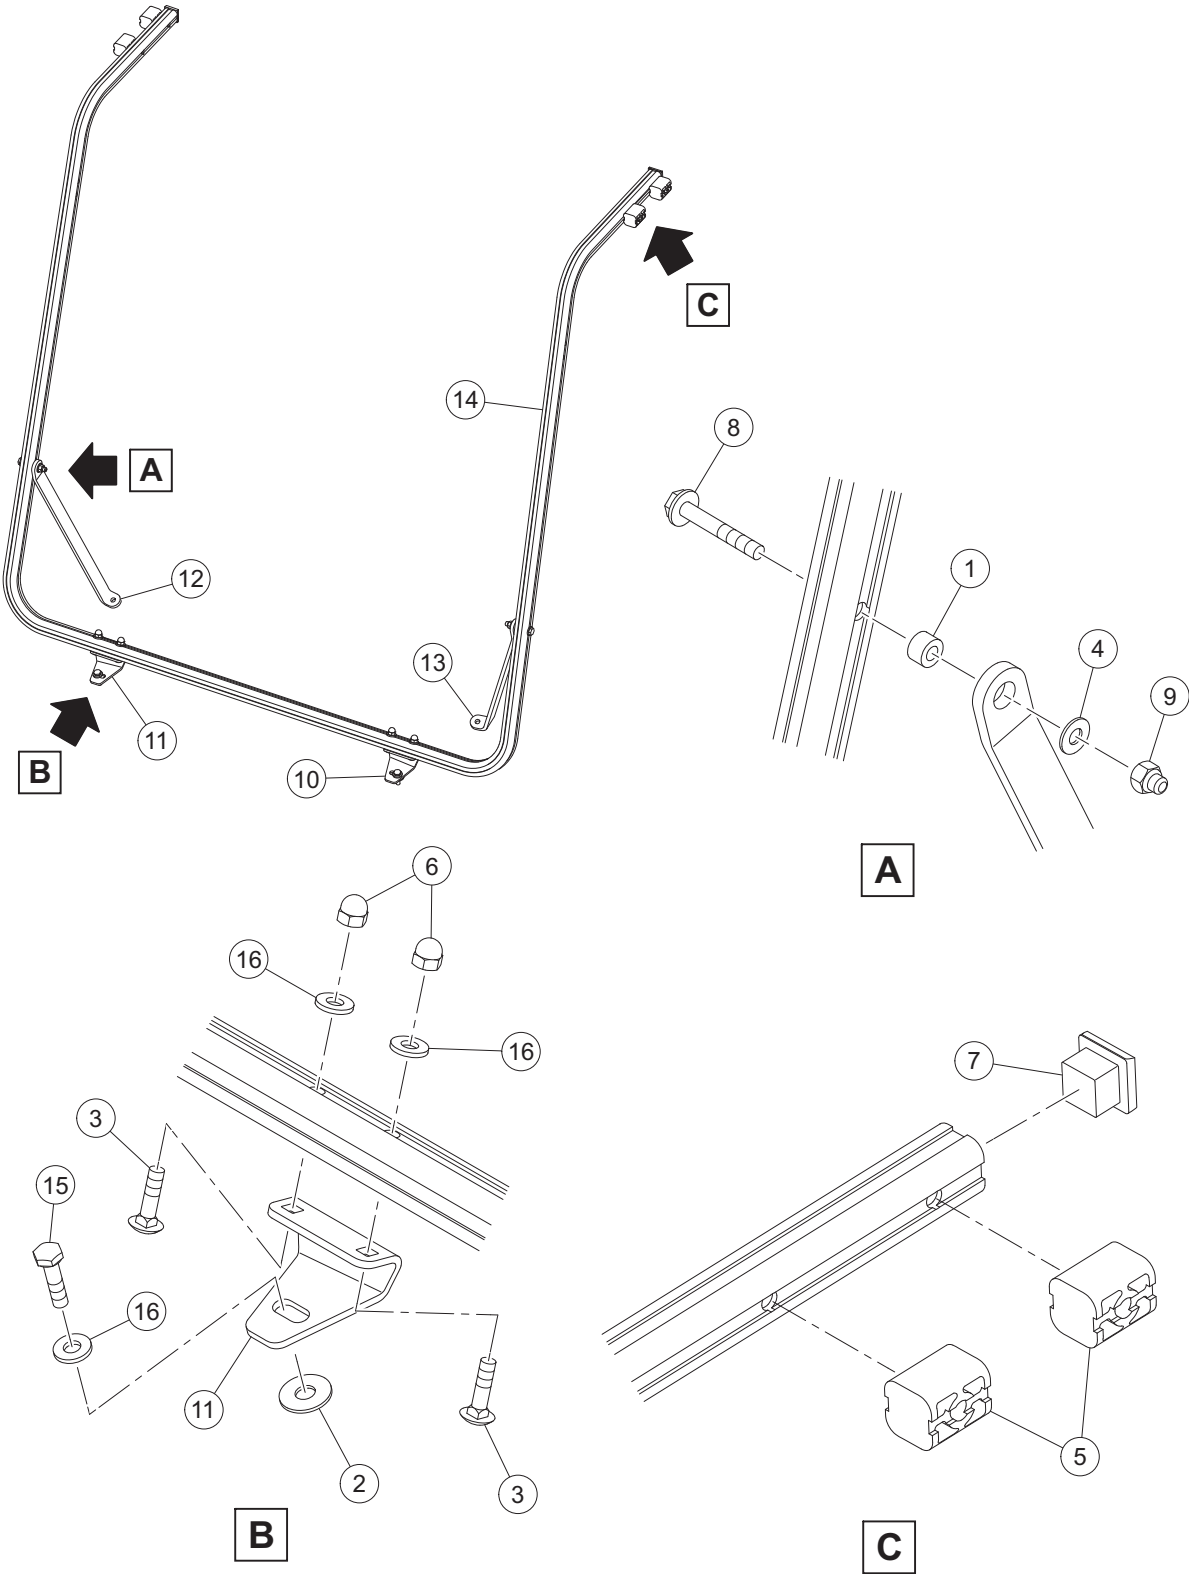

G-140799-000018


WINDSHIELD CANOPY FRAME

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010237	Bushing	2
2	1010517	Washer, .88 Od X .343 Id Nylon	2
3	1011963	Bolt, 1/4-20 X 1.50 Rd Hd Sq N	4
4	1011964	Washer, 1/4 Flat	2
5	1013884	Spacer, Bag Hoop	4
6	1015091	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
7	1017271	Finishing Plug	2
8	102076702	Screw, 1/4-20 X 1.75 Hexhead, SEMS, Black	2
9	102242401	Nut - Nylon Insert W/cap	2
10	102854301	Bracket, Support, Windshield Frame, Driver-Side	1
11	102854302	Bracket, Support, Windshield Frame, Passenger-Side	1
12	103411101	Brace, Knee, Passenger	1
13	103411201	Brace, Knee, Driver	1
14	103787304	Windshield Frame, Long	1
15	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
16	332	Washer, 1/4 Type A Narrow Flat	6
Note: For complete windshield canopy frame kit order p/n 103795504. See the canopy and rear strut installation for additional parts information.			

1

G


E

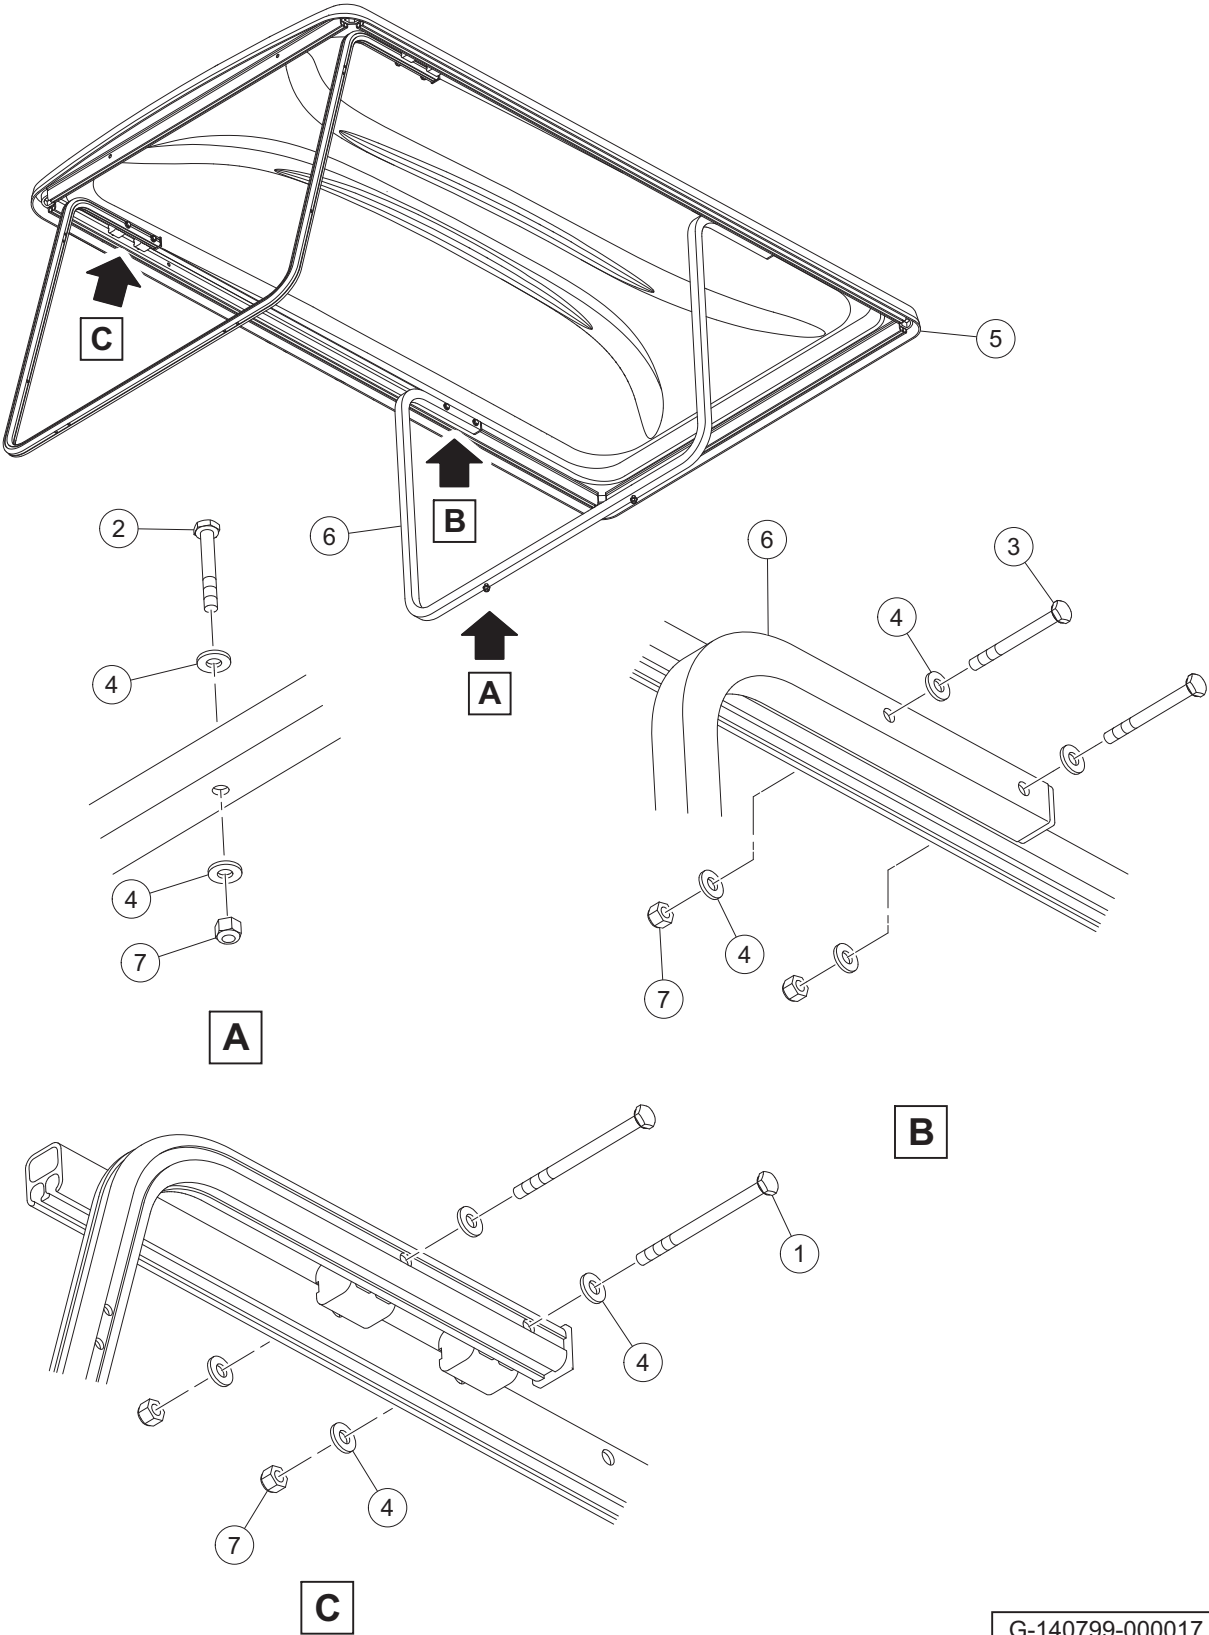

G-140799-000017

CANOPY AND REAR STRUT – CARGO BED

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	102824001	Kit, Canopy, Black (includes items 2 through 20)	1	
2	1010517	Washer, .88 Od X .343 Id Nylon	2	
3	1011852	Plate, Canopy Trim	8	
4	1012008	Support, Side Canopy	2	
5	102914501	Strut, Cpy, Rear, Pass	1	
6	102914502	Strut, Cpy, Rear, Drv	1	
7	103795502	Asm, W/s Frame, 800, Black (includes items 8 through 13)	1	
8	1011963	Bolt, 1/4-20 X 1.50 Rd Hd Sq N	4	
9	1015091	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4	
10	102854301	Bracket, Support, Windshield Frame, Driver-Side	1	
11	102854302	Bracket, Support, Windshield Frame, Passenger-Side	1	
12	103787302	Frame, Windshield, Vac Cowl	1	
13	332	Washer, 1/4 Type A Narrow Flat	4	
14	103804004	Asm, Canopy, Utility Black (includes item 15)	1	
15	1011942	Modified Grommet	2	
16	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2	
17	324	Screw, 1/4-20 X 2.50 Hx Hd Cap	4	
18	332	Washer, 1/4 Type A Narrow Flat	26	
19	7311	Screw, 1/4-20 X 2.00 Hex-Head Cap	8	
20	8233	Locknut, 1/4-20, Nylon Insert	12	
Note: For complete black canopy and rear strut kit order p/n 47595294001. See the windshield canopy frame for additional parts information.				

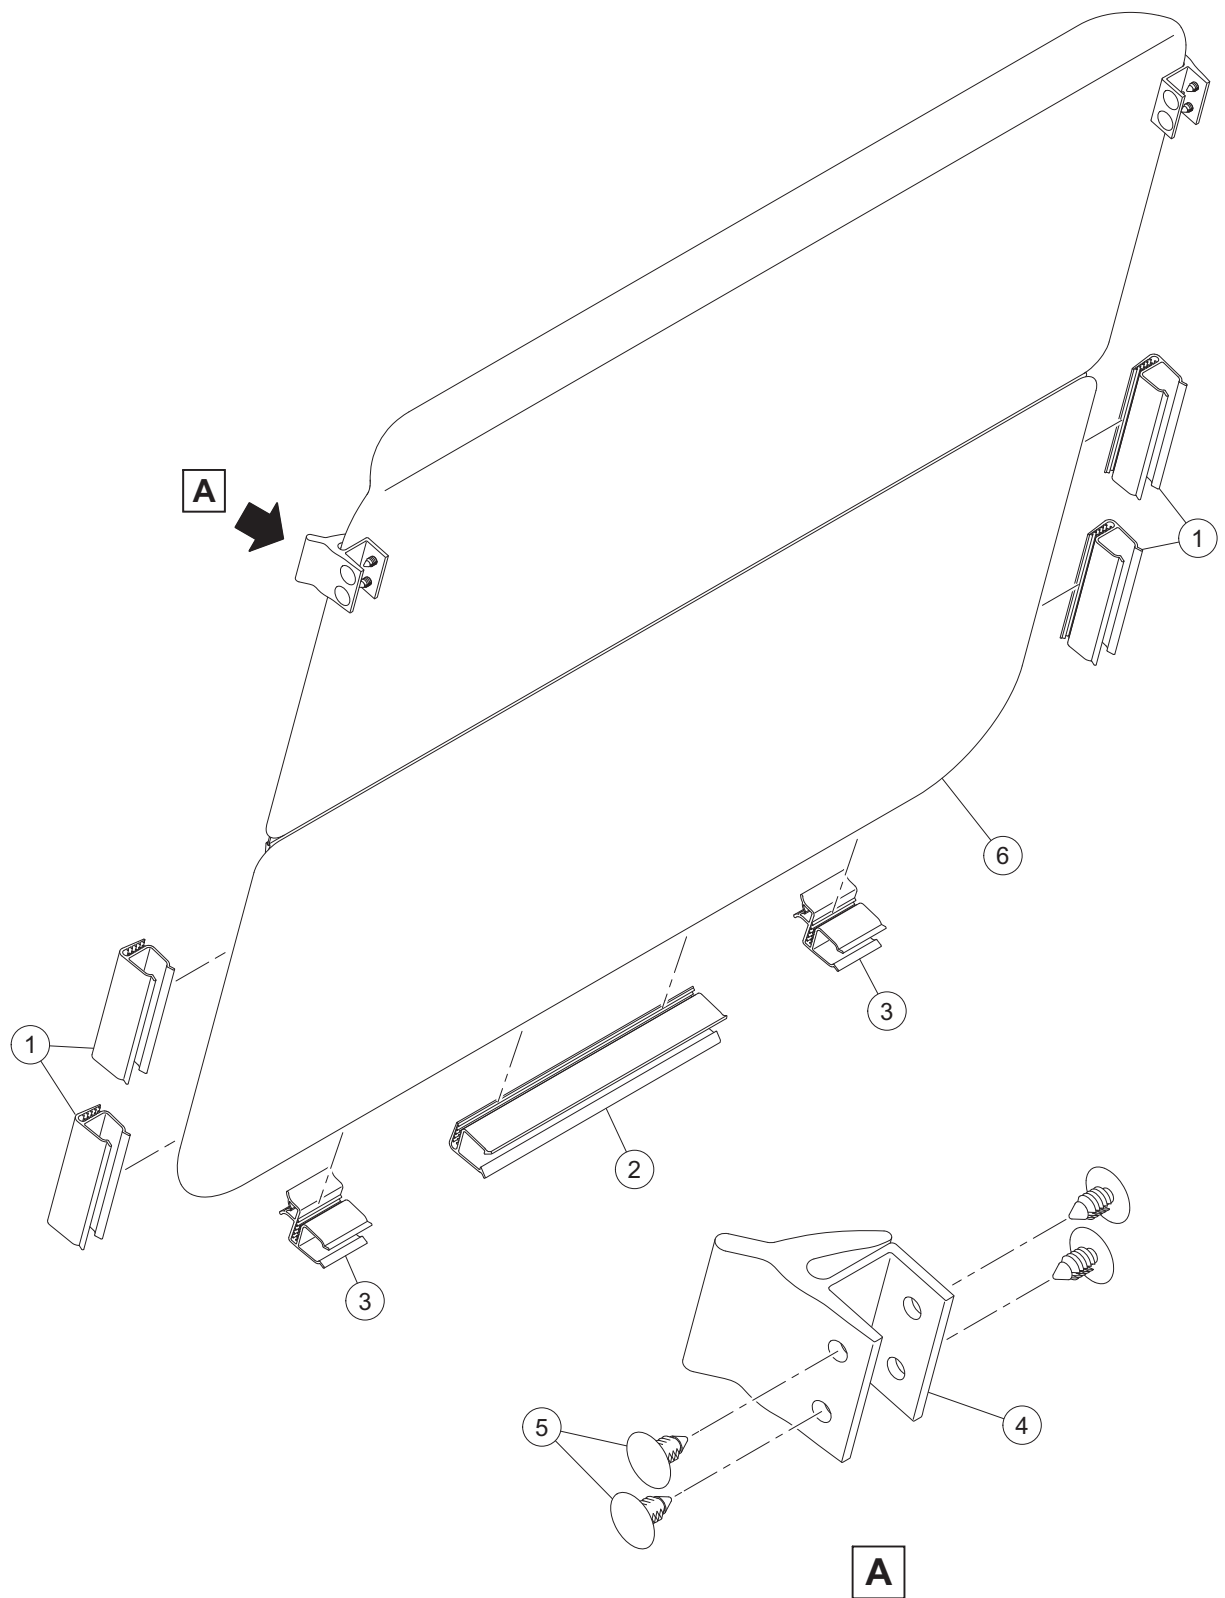

G-140899-000007


HINGED WINDSHIELD

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	102005701	5" Plastic Extrusion	4			
2	102163001	Windshield Channel	1			
3	102163101	Channel with Receiver Clip	2			
4	103677101	W/s, Rubber, Clip Retainer	2			
5	103754901	Fastener, Barrel - .610 X .25	8			
6	105077701	Ws, Hinged, Utility, Clear	1			
Note: For complete hinged windshield kit order p/n 105077801. See the windshield canopy frame for additional parts information.						

1

G

E

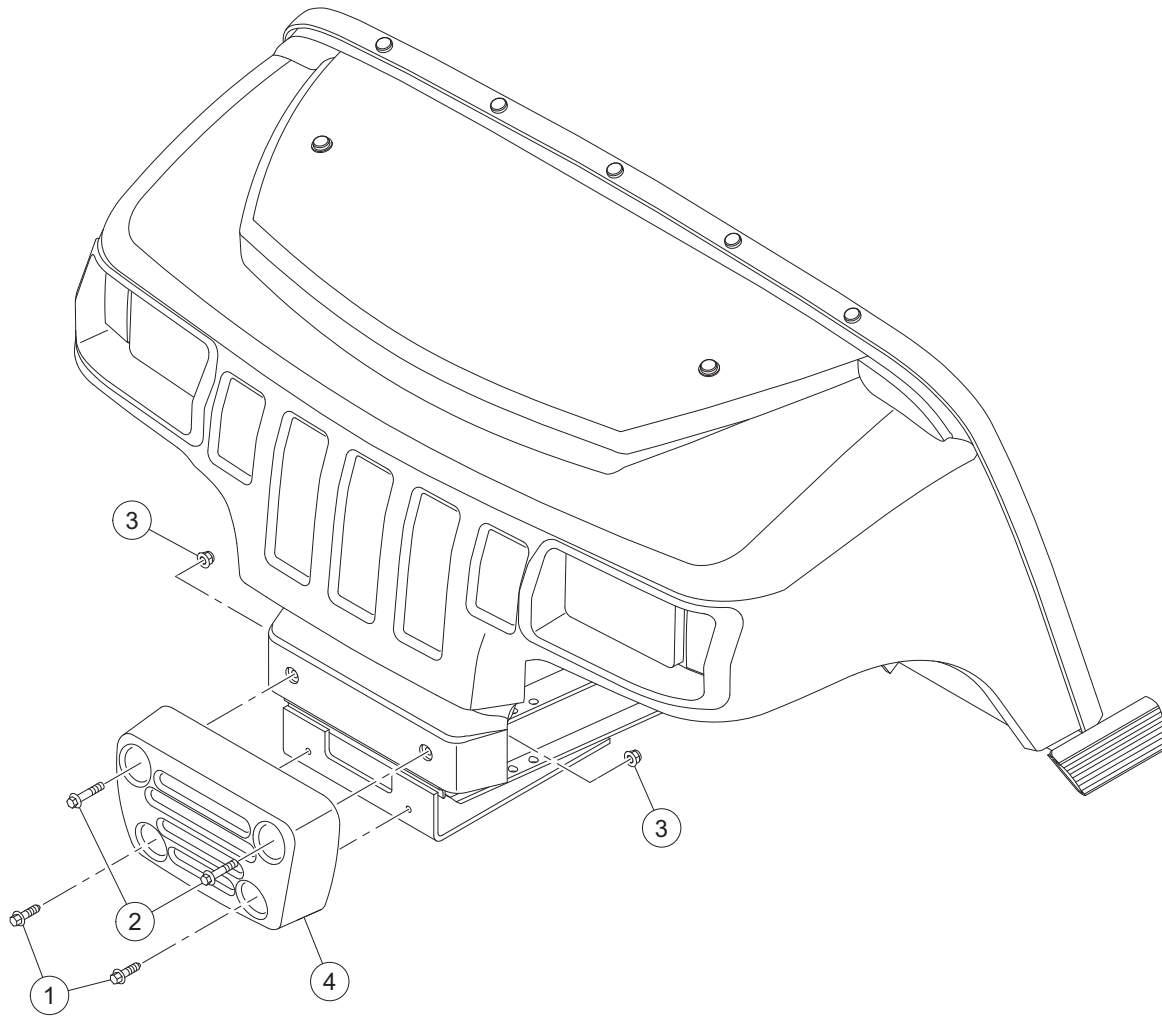

G-140199-000024

BUMPER – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102289002	Screw, M8 X 1.25 X 30 Tri, Blk	2
2	102298240	Bolt, Flange Head, M8-1.25 X 40	2
3	102618601	Lock Nut, Flange, M8 X 1.25 Nylon	2
4	102830501	Bumper, Cast	1

1


G

E

1

G


E

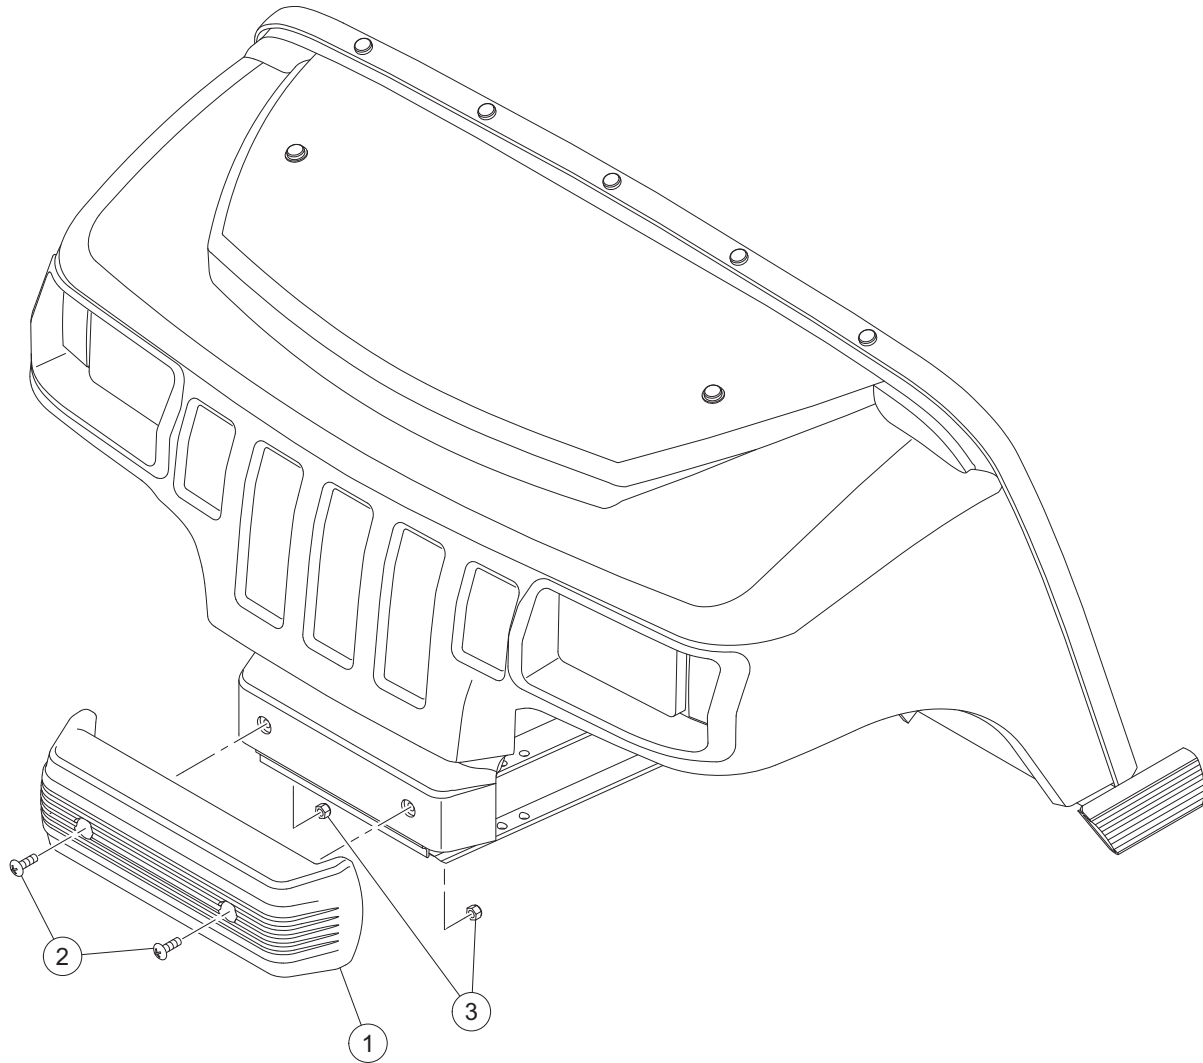

G-140199-000023

BUMPER – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	1
		1 2 3 4		G
1	1016868	Front Bumper	1	E
2	7251	Screw, 5/16-18 x 1.0 Truss-Head	2	
3	7473	Locknut, 5/16-18 Nylon Insert	2	
Note: For complete electric vehicle bumper kit order p/n 1017080.				

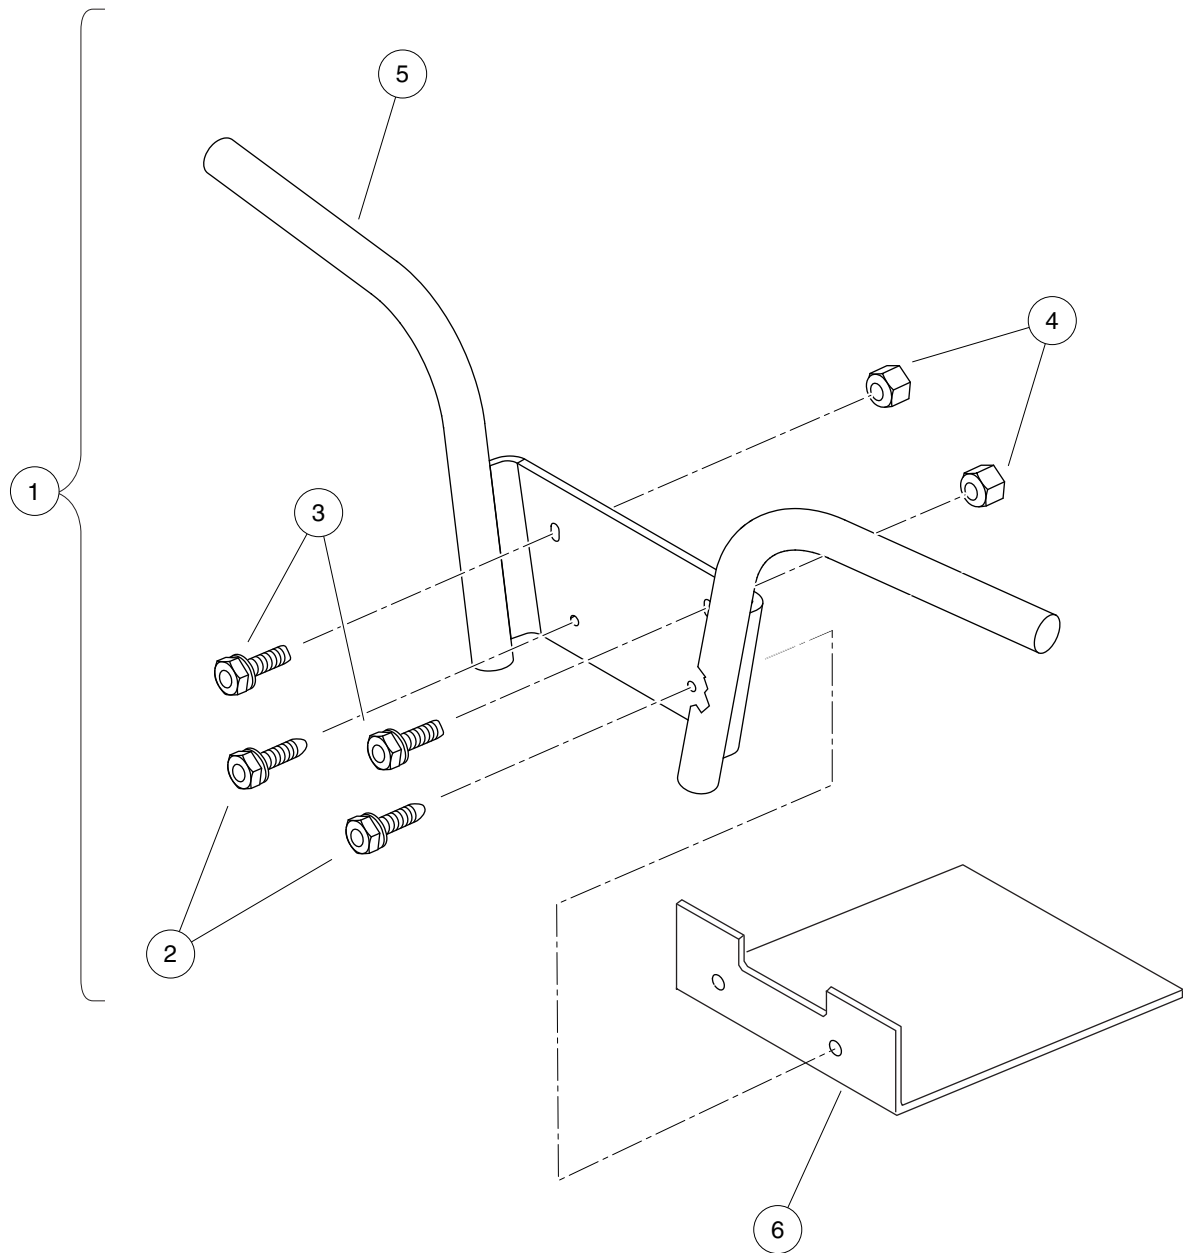

000356-003

BRUSH GUARD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102852401	Kit, Brush Guard (includes items 2 through 6)	1
2	102289002	Screw, M8 X 1.25 X 30 Tri, Blk	2
3	102298240	Bolt, Flange Head, M8-1.25 X 40	2
4	102618601	Lock Nut, Flange, M8 X 1.25 Nylon	2
5	102830201	Guard, Brush	1
6	102830401	Support, Brush Guard	1

1



G

E

1

G

E

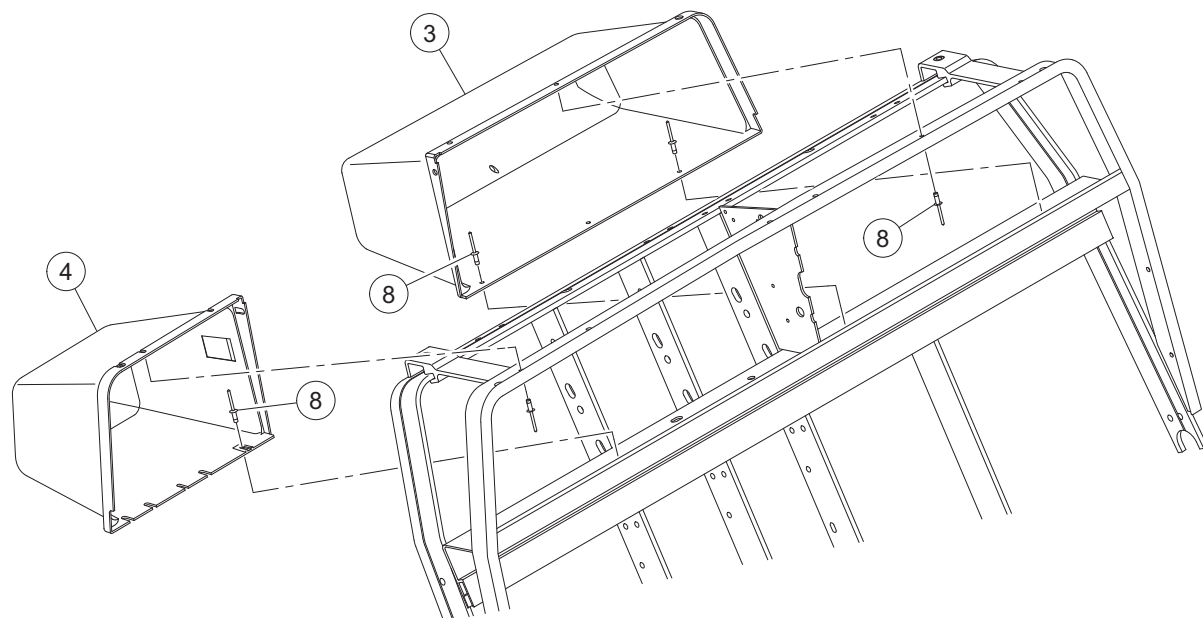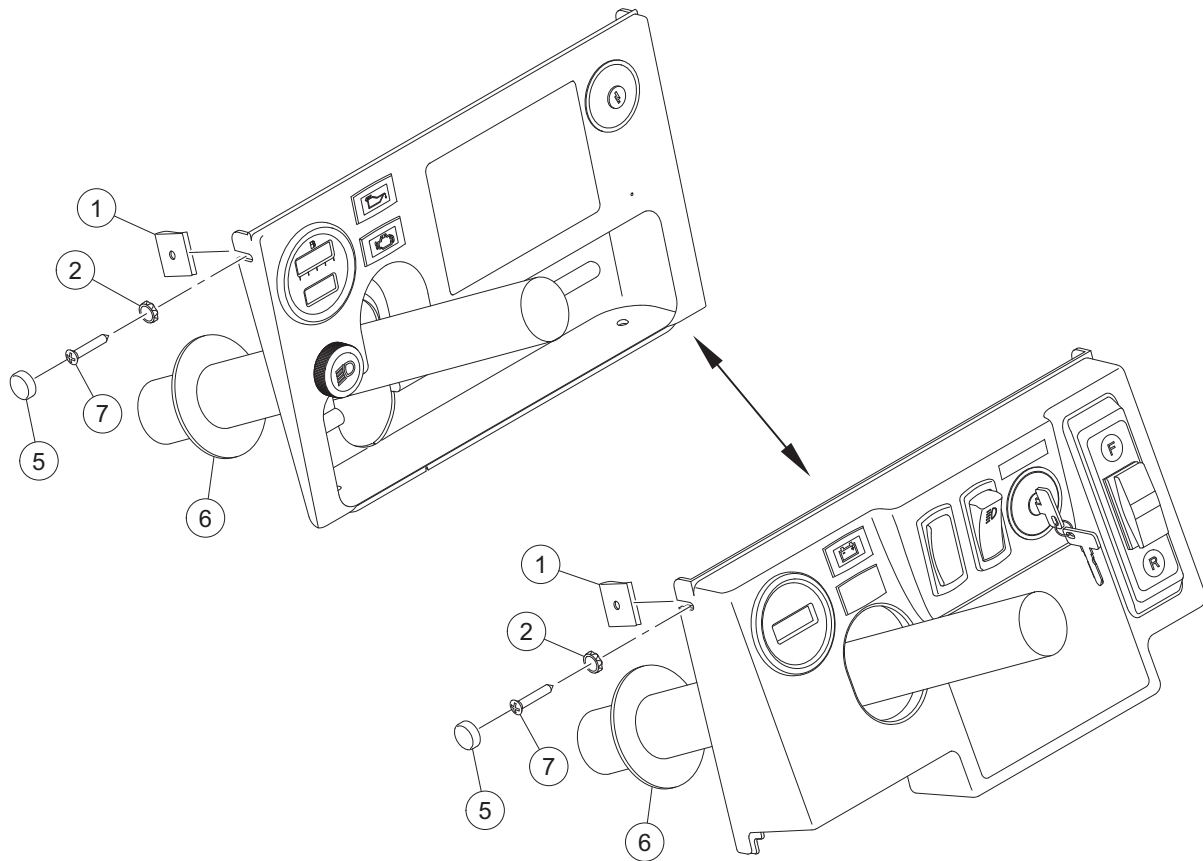

G-140499-000005

DASH BOXES – GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011019	Nut, Speed	2
2	1011382	Washer, #10 Pan-Head Screw	2
3	1013343	Dash Component, Passenger-Side, Black	1
4	1013344	Dash Component, Driver-Side	1
5	1013494	Cover, Screw Head	2
6	102278001	Boot, Steering Column Round	1
7	1620	Screw, #10-16 X 0.75 Pan-Head Tap	2
8	7973	Rivet, 3/16 X .400 Blind	5

1


G

E

1

G

E

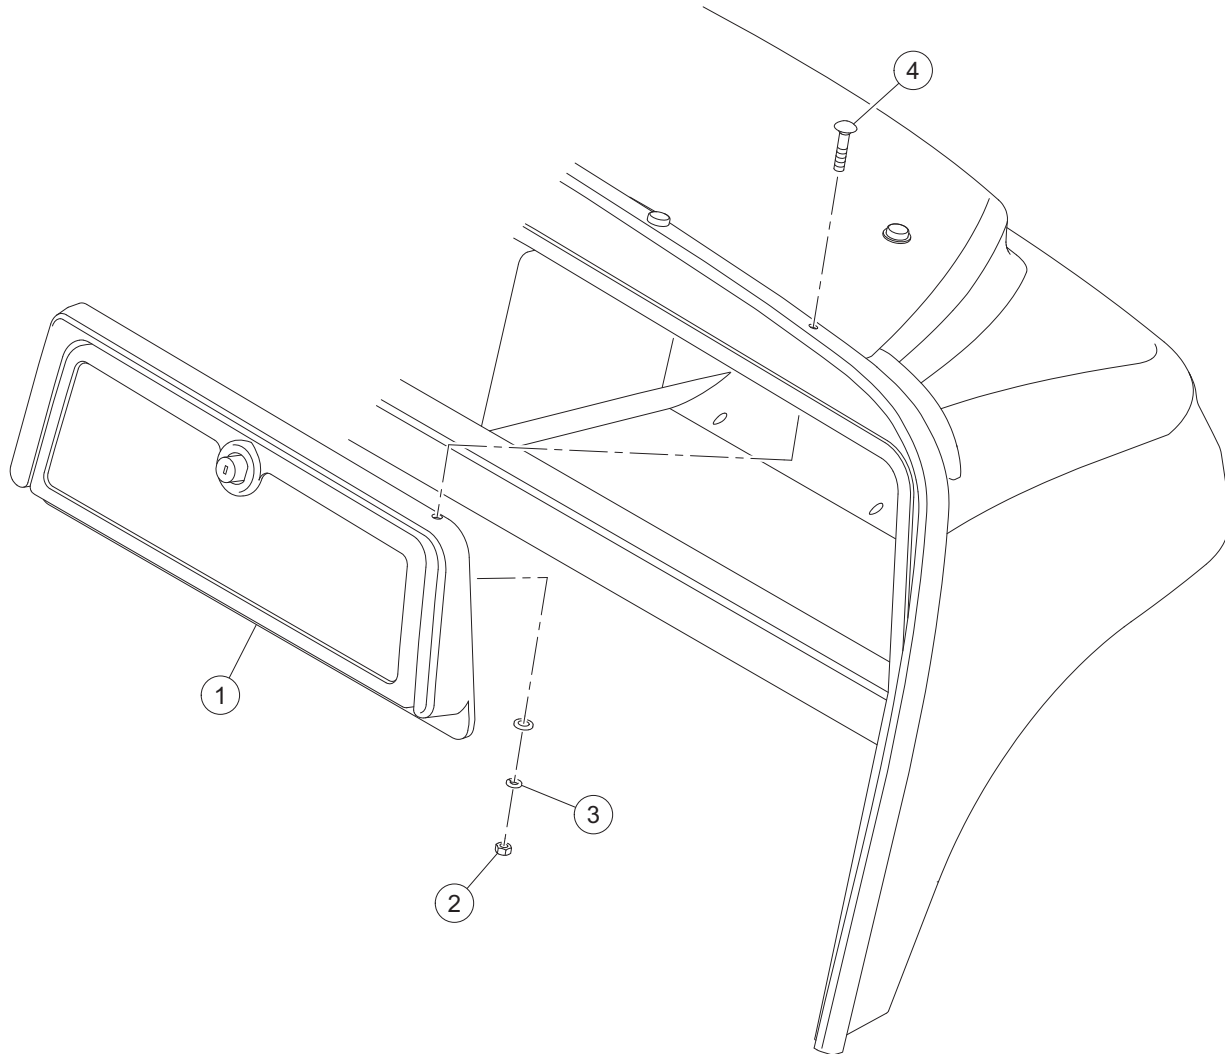

G-140499-000006

GLOVE BOX


ITEM	PART NO.	DESCRIPTION	QTY
1	1015484	Glove Compartment Subassembly (Black)	1
2	1242	Nut, 5/16-18 Hex	1
3	7174	Lockwasher, 5/16 Split	1
4	7818	Bolt, Carriage, 5/16-18 X 1.5	1

1

G

E

1
G
E

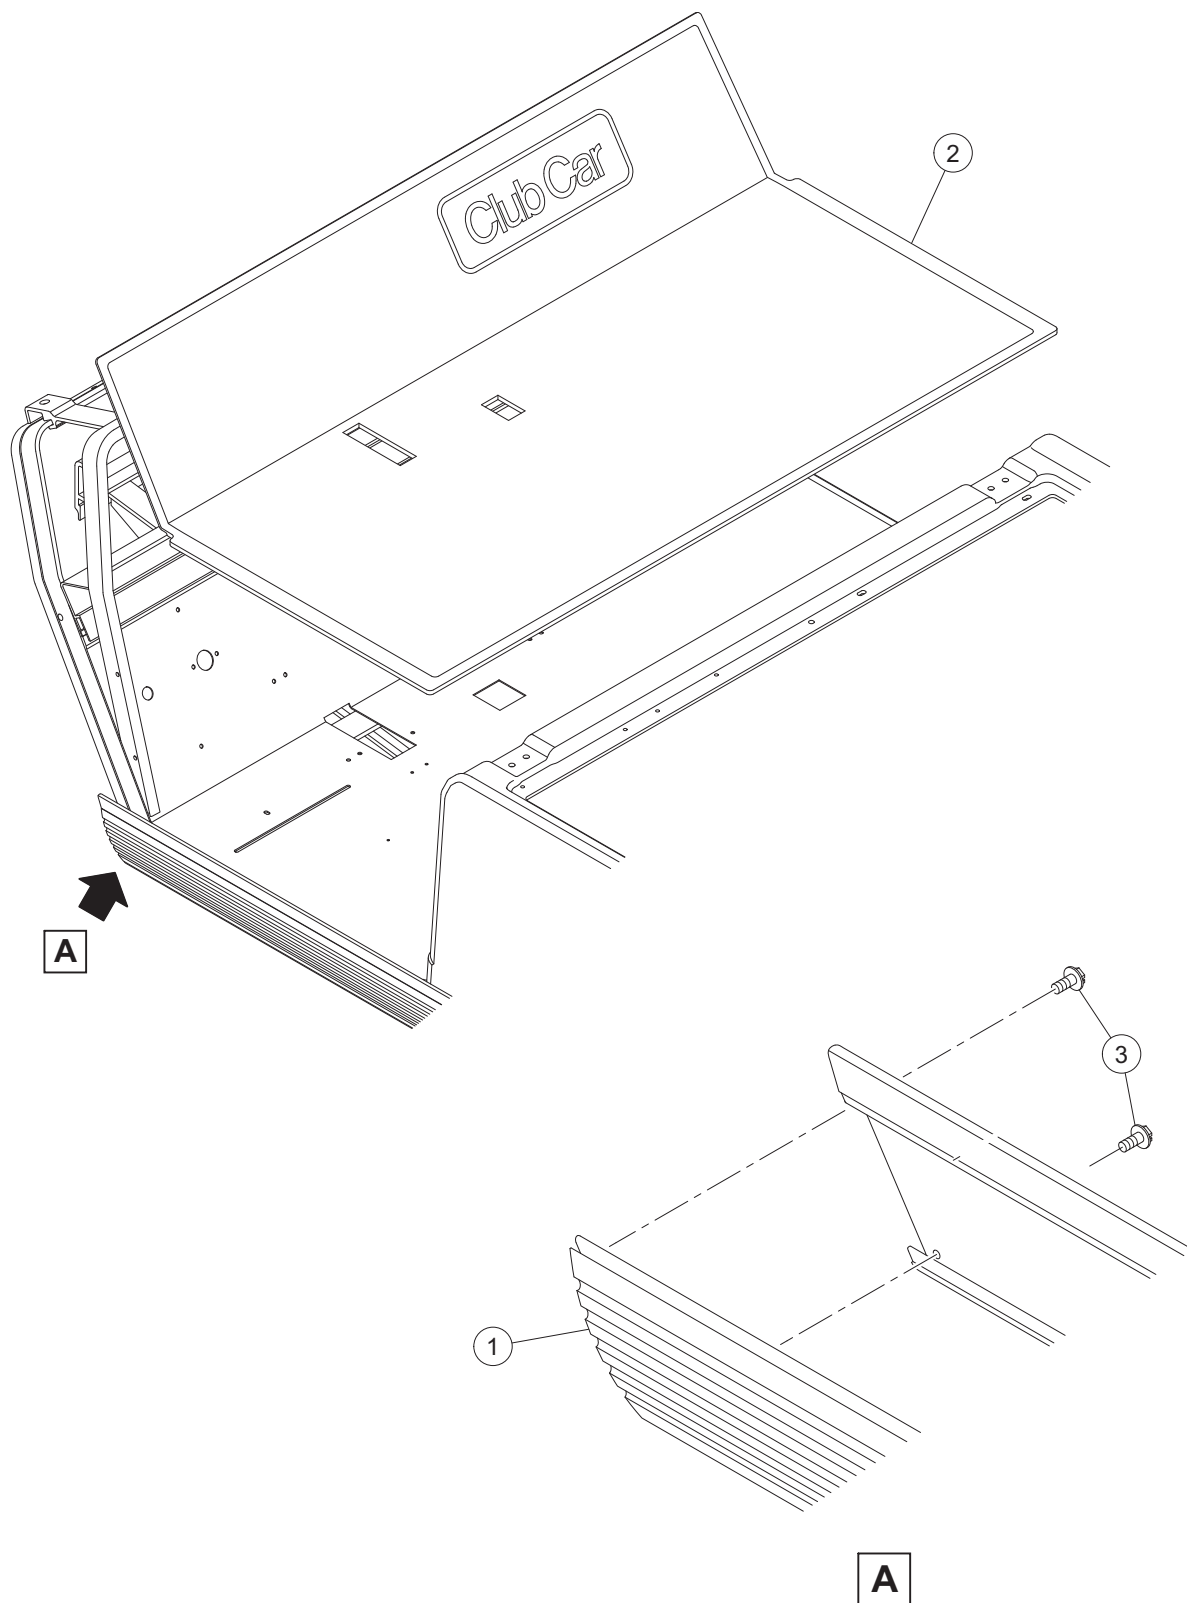

G-140599-000008

FLOORMAT AND SIDE TRIM


ITEM	PART NO.	DESCRIPTION	QTY
1	1013983	Bumper, Side Trim	2
2	101503202	Floormat	1
3	102310701	Screw, #8-18 x 0.375, Hex-Head Washer	8

1

G

E

1
G
E

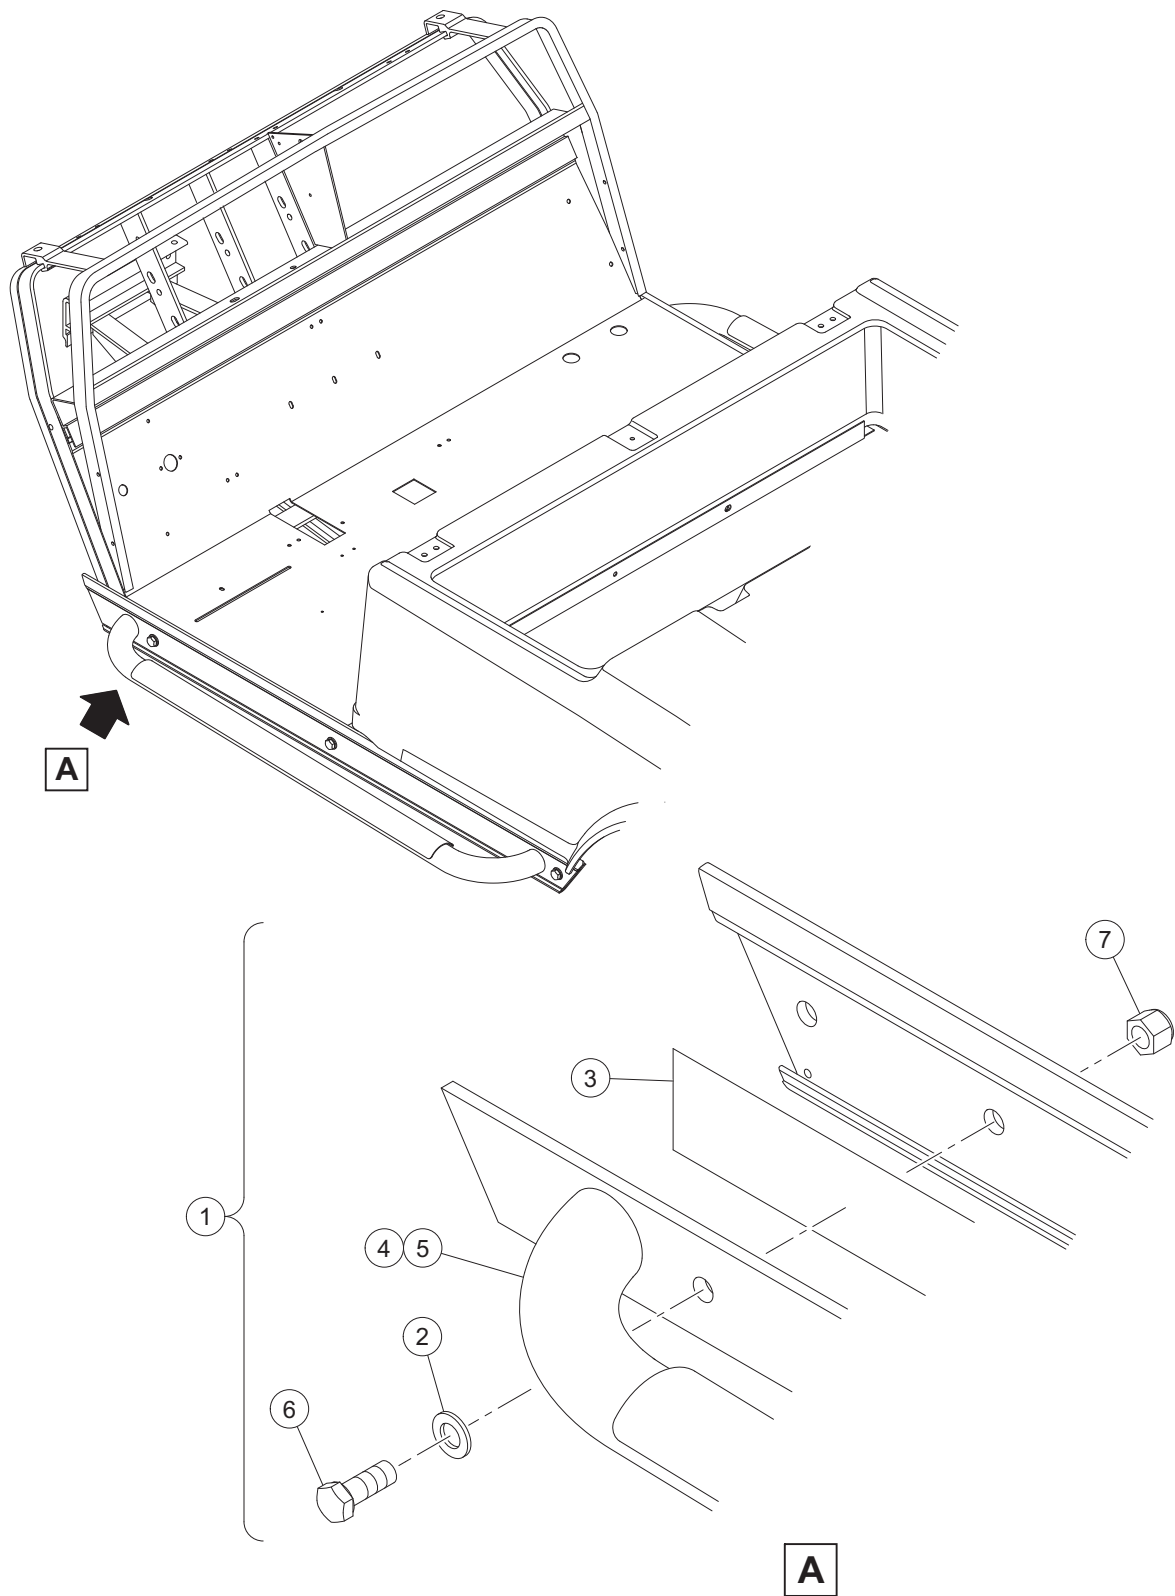

G-140199-000025

NERF BAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102829802	Kit, Nerf Bar (black) (includes items 2 through 7)	1
2	1011990	Washer, 3/8 Flat	6
3	102355102	Tape, Non-skid	2
4	102829703	Nerf Bar Assy, Driver	1
5	102829704	Nerf Bar Assy, Passenger	1
6	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	6
7	8754	Locknut, 3/8-16 Hex	6

1


G

E

1

G

E

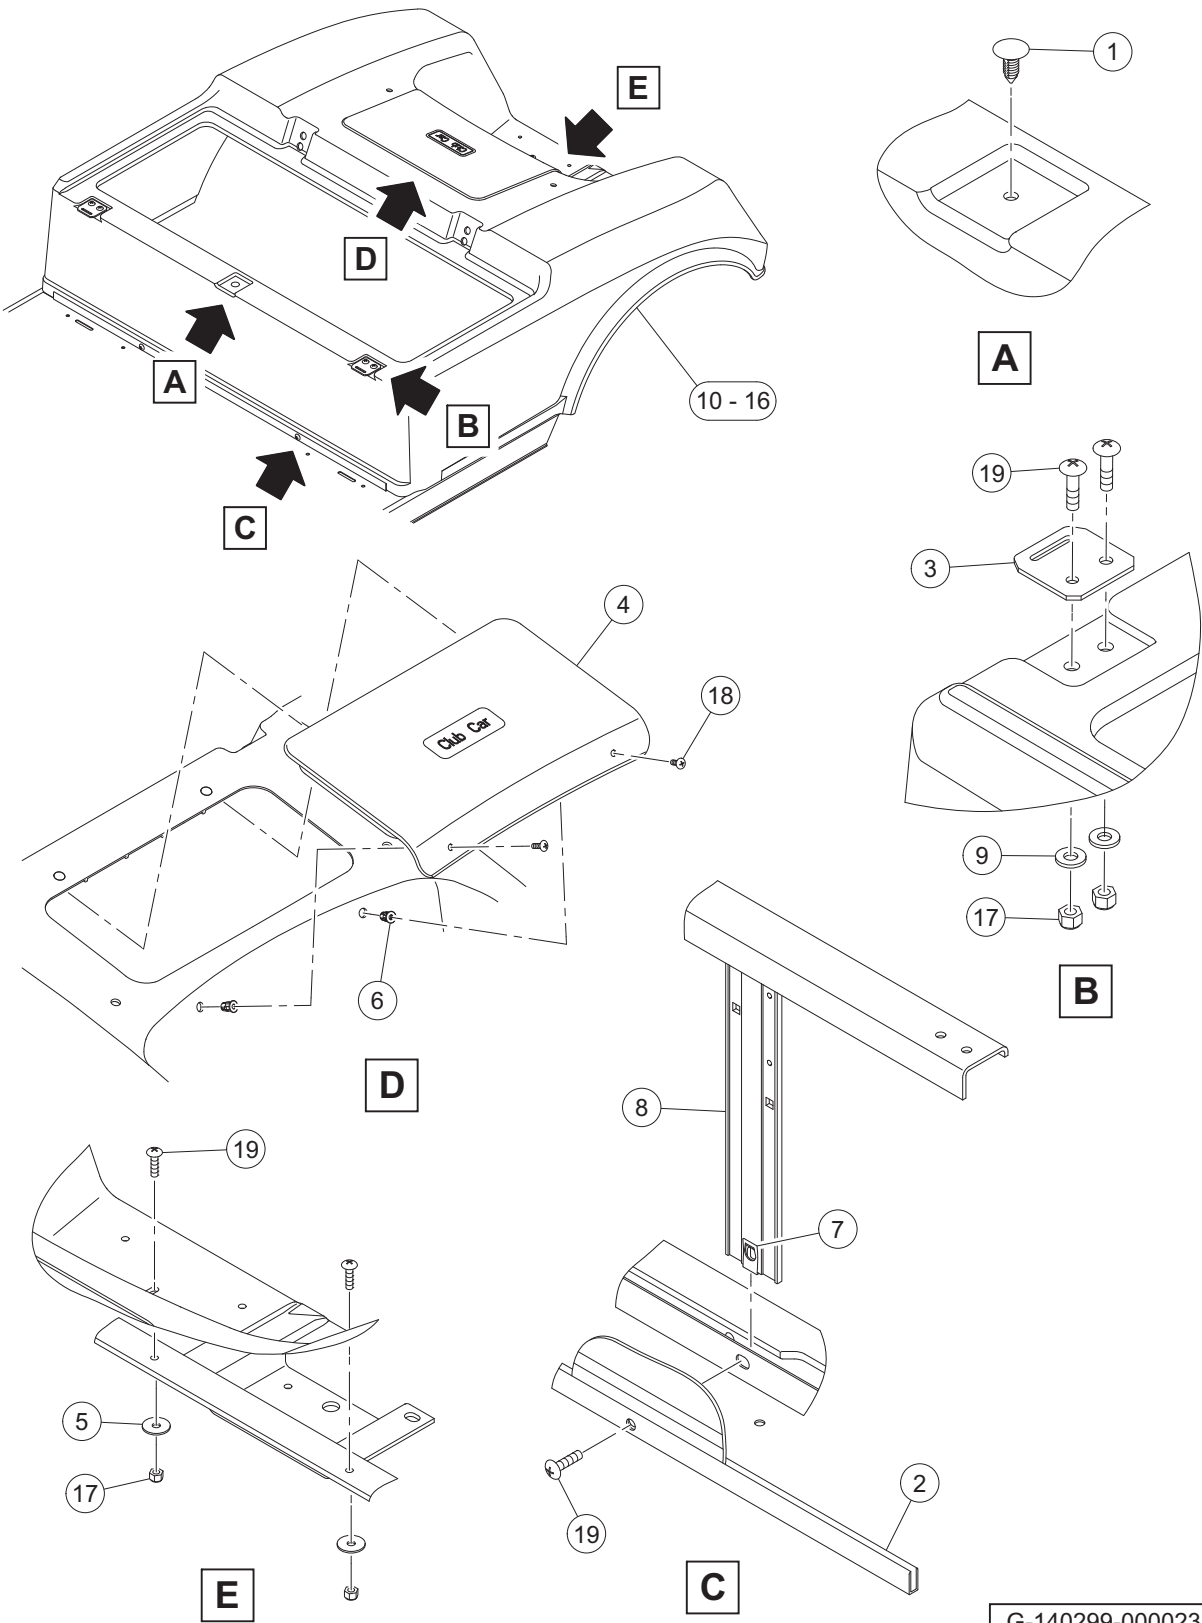

G-140299-000023


REAR BODY WITH REAR FACING SEAT – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010434	Barrel - Plastic	1	
2	1010993	Body Kick Plate	1	
3	1012412	Body, Hinge Plate	2	
4	1013032	Panel, Access, Top, Std	1	
5	1014306	Washer, 1/4" Type B Flat	2	
6	1015525	Nut, 1/4-20 Blind	2	
7	1016952	U-Nut, 1/4-20	2	
8	1017141	Body Support Weldment	1	
9	332	Washer, 1/4 Type A Narrow Flat	4	
10	47623450001	Body, Rear, Xrt 800, Gas -red	A/R	
11	47623450002	Body, Rear, Xrt 800, Gas -gree	A/R	
12	47623450003	Body, Rear, Xrt 800, Gas -blue	A/R	
13	47623450005	Body, Rear, Xrt 800, Gas -blac	A/R	
14	47623450006	Body, Rear, Xrt 800, Gas -whit	A/R	
15	47623450007	Body, Rear, Xrt 800, Gas -dk G	A/R	
16	47623450008	Body, Rear, Xrt 800, Gas -beig	A/R	
17	8233	Locknut, 1/4-20, Nylon Insert	6	
18	8248	Screw, 1/4-20 X 0.75, Truss-Head Machine	2	
19	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	8	
Note: For current and available color options contact your local Club Car dealer or distributor.				

1

G

E

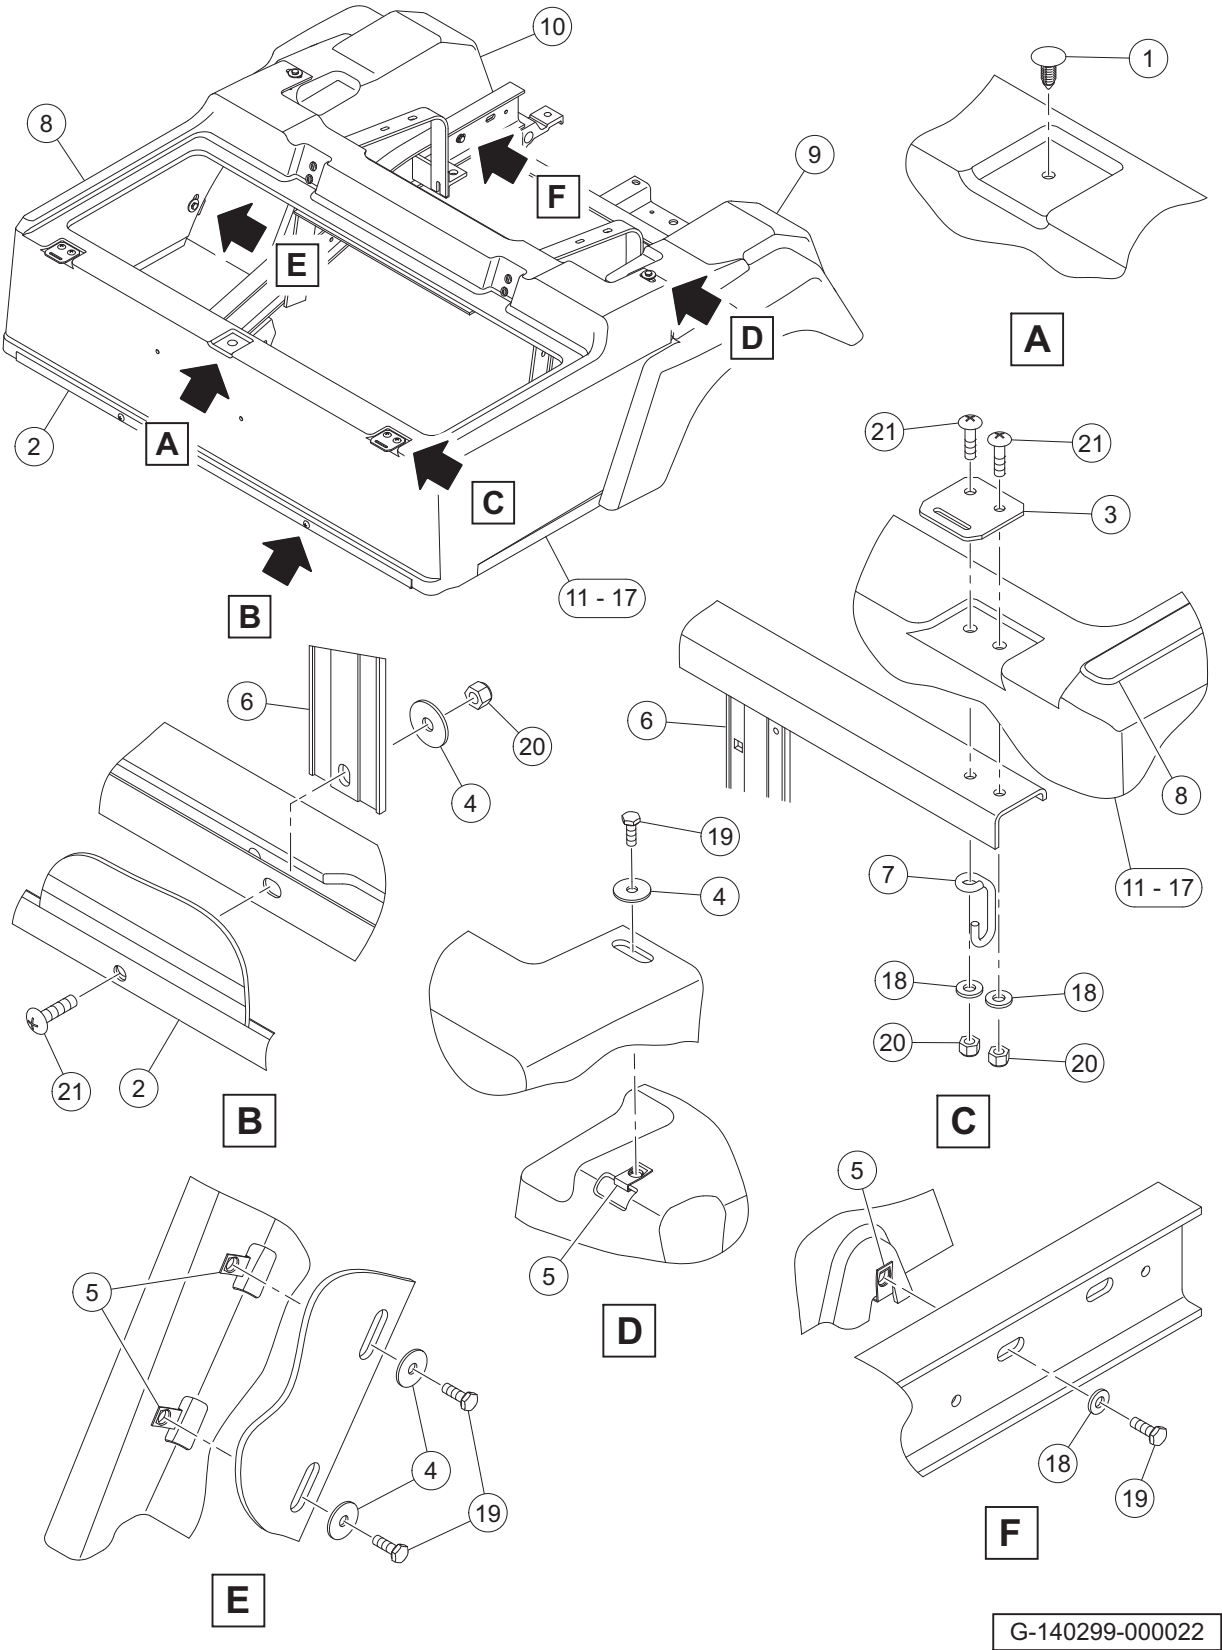

G-140299-000022


REAR BODY WITH FENDERS – BED BOX – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010434	Barrel - Plastic	1	
2	1010993	Body Kick Plate	1	
3	1012412	Body, Hinge Plate	2	
4	1014306	Washer, 1/4" Type B Flat	2	
5	1016952	U-Nut, 1/4-20	8	
6	1017141	Body Support Weldment	1	
7	101855801	Cable Retainer	1	
8	102221201	Wear Pad	2	
9	102777601	Fender, Driver Side	1	
10	102777602	Fender, Passenger Side	1	
11	105005201	Body, Rear, Efi, Cut, Red	A/R	
12	105005203	Body, Rear, Efi, Cut, Grn	A/R	
13	105005204	Body, Rear, Efi, Cut, Cls Blu	A/R	
14	105005206	Body, Rear, Efi, Cut, Black	A/R	
15	105005207	Body, Rear, Efi, Cut, White	A/R	
16	105005208	Body, Rear, Efi, Cut, Dk Gray	A/R	
17	105005209	Body, Rear, Efi, Cut, Beige	A/R	
18	332	Washer, 1/4 Type A Narrow Flat	4	
19	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	6	
20	8233	Locknut, 1/4-20, Nylon Insert	4	
21	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	4	
Note: For current and available color options contact your local Club Car dealer or distributor.				

1

G

E

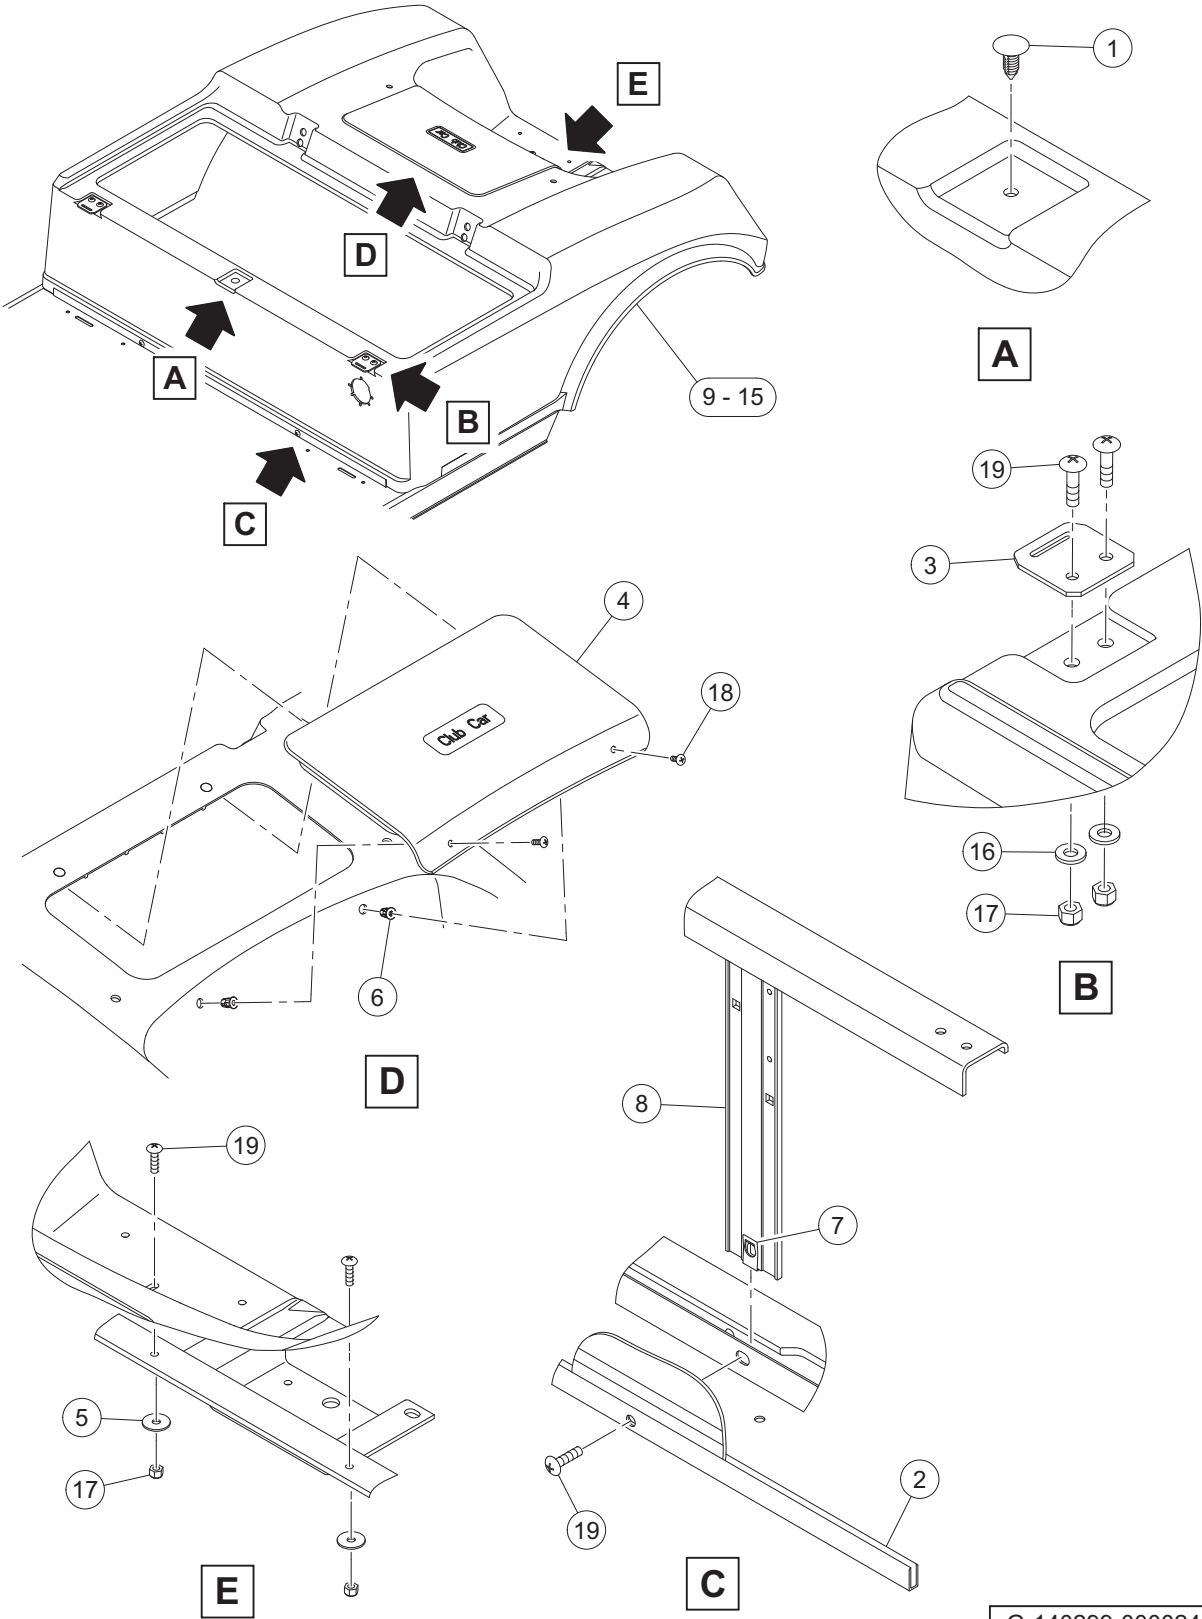

G-140299-000024


REAR BODY WITH REAR FACING SEAT – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	1010434	Barrel - Plastic	1			
2	1010993	Body Kick Plate	1			
3	1012412	Body, Hinge Plate	2			
4	1013032	Panel, Access, Top, Std	1			
5	1014306	Washer, 1/4" Type B Flat	2			
6	1015525	Nut, 1/4-20 Blind	2			
7	1016952	U-Nut, 1/4-20	2			
8	1017141	Body Support Weldment	1			
9	103365521	Body, Rear Xrt Red, Svc	A/R			
10	103365522	Body, Rear Xrt Green, Svc	A/R			
11	103365524	Body, Rear Xrt Blue, Svc	A/R			
12	103365525	Body, Rear Xrt Black, Svc	A/R			
13	103365530	Body, Rear, Xrt Beige	A/R			
14	103365531	Body, Rear, Xrt White	A/R			
15	103365532	Body, Rear, Xrt Dk Gray	A/R			
16	332	Washer, 1/4 Type A Narrow Flat	4			
17	8233	Locknut, 1/4-20, Nylon Insert	6			
18	8248	Screw, 1/4-20 X 0.75, Truss-Head Machine	2			
19	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	8			
Note: For current and available color options contact your local Club Car dealer or distributor.						

1

G

E

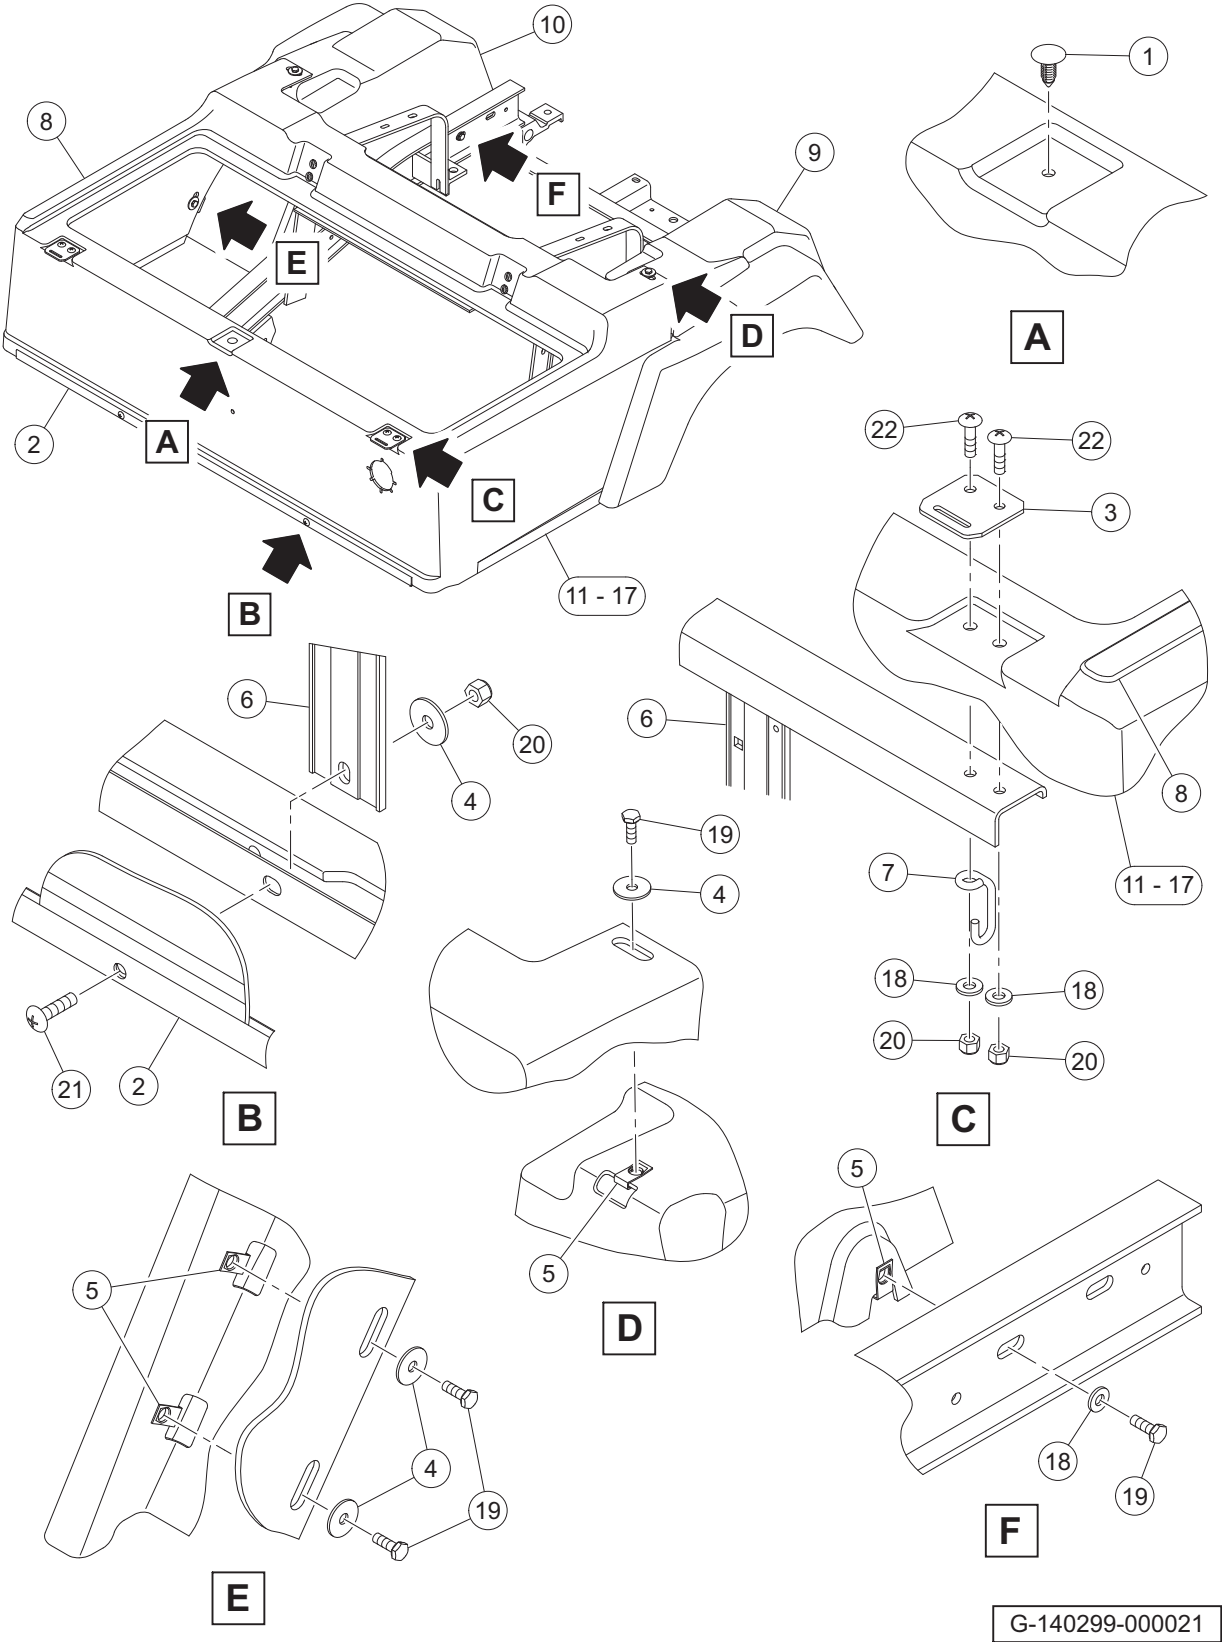

G-140299-000021


REAR BODY WITH FENDERS – BED BOX – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1010434	Barrel - Plastic	1	
2	1010993	Body Kick Plate	1	
3	1012412	Body, Hinge Plate	2	
4	1014306	Washer, 1/4" Type B Flat	2	
5	1016952	U-Nut, 1/4-20	8	
6	1017141	Body Support Weldment	1	
7	101855801	Cable Retainer	1	
8	102221201	Wear Pad	2	
9	102777601	Fender, Driver Side	1	
10	102777602	Fender, Passenger Side	1	
11	103698901	Body, Rear, Cut, El, Red	A/R	
12	103698903	Body, Rear, Cut, El, Grn	A/R	
13	103698904	Body, Rear, Cut, El, Cl Blue	A/R	
14	103698906	Body, Rear, Cut, El, Black	A/R	
15	103698907	Body, Rear, Cut, El, White	A/R	
16	103698908	Body, Rear, Cut, El, Dk Gray	A/R	
17	103698909	Body, Rear, Cut, El, Beige	A/R	
18	332	Washer, 1/4 Type A Narrow Flat	4	
19	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	6	
20	8233	Locknut, 1/4-20, Nylon Insert	4	
21	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	4	
Note: For current and available color options contact your local Club Car dealer or distributor.				

1

G

E

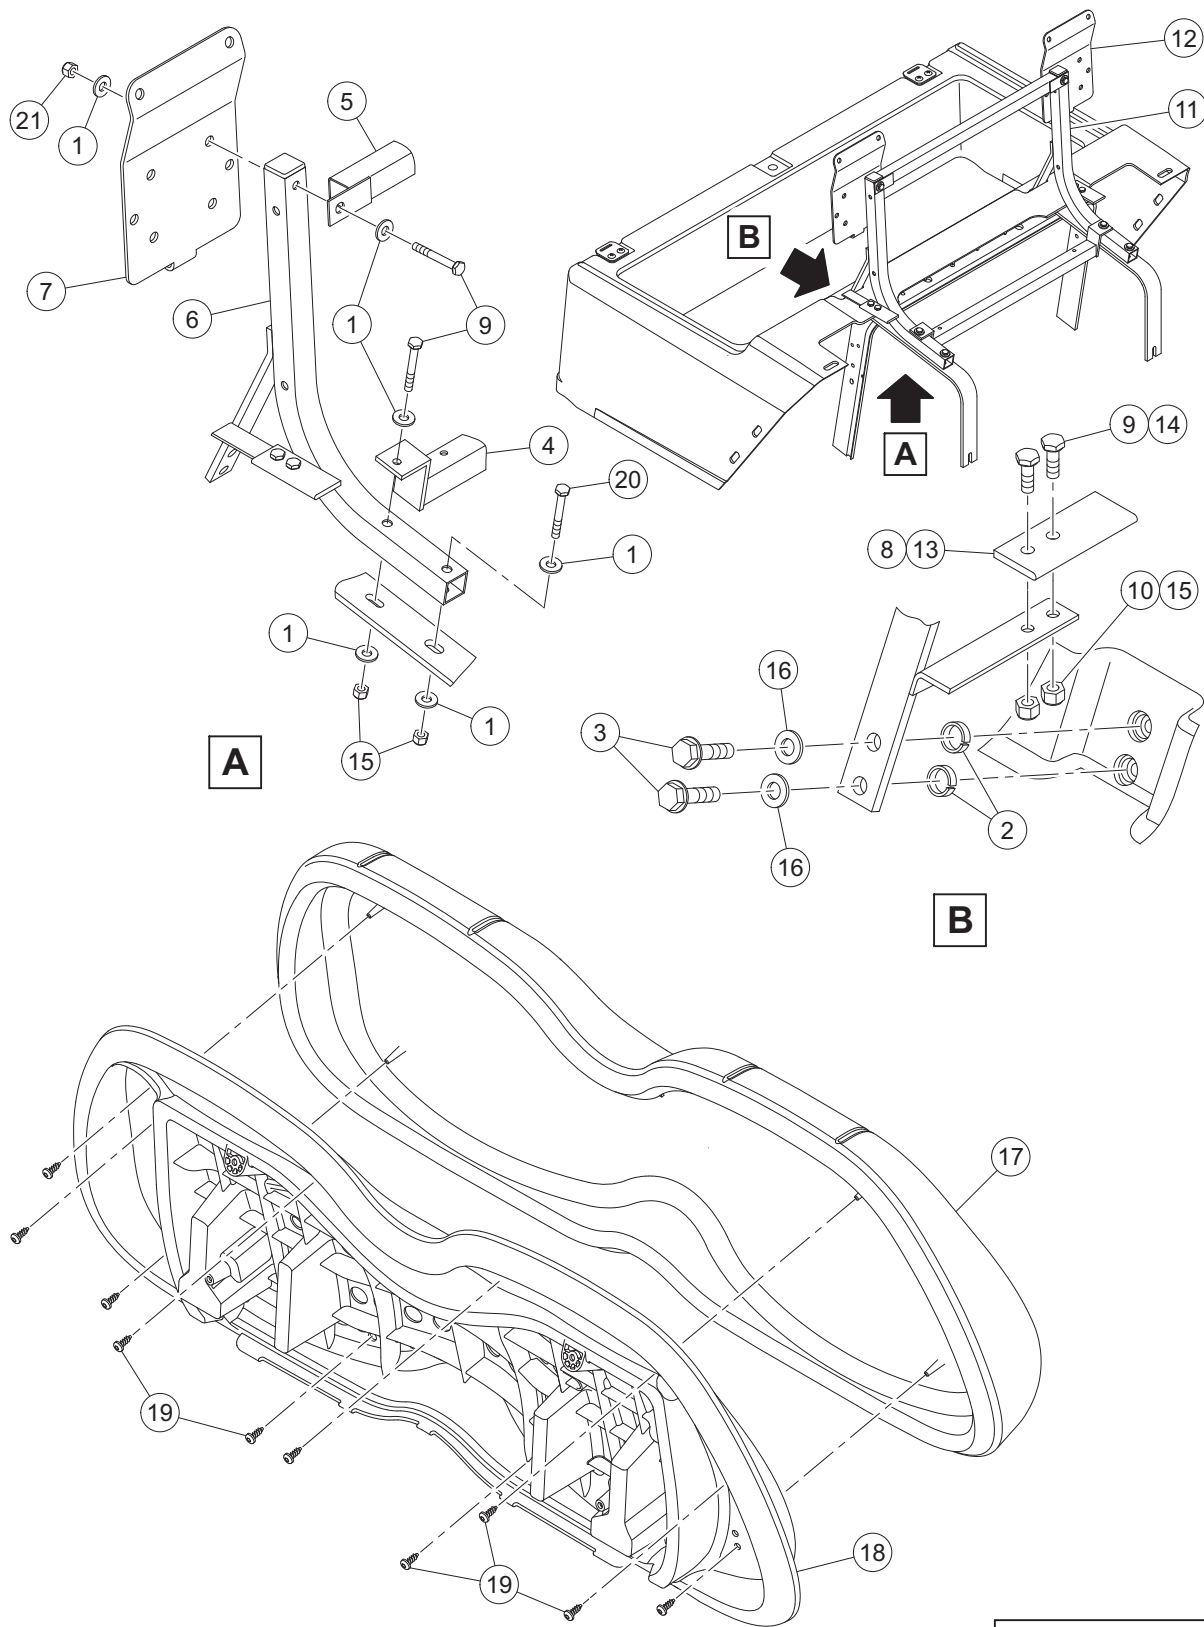

G-140699-000040


FWD SEAT BACK AND STRUCTURE

ITEM	PART NO.	DESCRIPTION	QTY	1 G E
		1 2 3 4		
1	1011931	Washer, 1/4 Flat	4	
2	1017774	Body Spacer	4	
3	101910401	Screw, 5/16-18 X 1.25 Thrd Frm	4	
4	102796101	Weldment, Bed Support	1	
5	102816201	Seat Support, Cross Brace	1	
6	102913101	Seat Support W/striker, Drv (includes items 7 through 10)	1	
7	102796301	Seat Support, Driver-Side	1	
8	102840301	Striker Plate	1	
9	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
10	8233	Locknut, 1/4-20, Nylon Insert	2	
11	102913102	Support, Seat, Right (passenger) (includes items 12 through 15)	1	
12	102796302	Seat Support, Passenger-Side	1	
13	102840301	Striker Plate	1	
14	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
15	8233	Locknut, 1/4-20, Nylon Insert	2	
16	1241	Washer, 5/16 Type A Flat	4	
17	47720336009	Asm, Seatback, Gray, Service (includes items 18 and 19)	1	
18	103852901	Pan, Seatback W/holes, Prec	1	
19	47729995001	Screw, Tx Flange Hd Pt, M6x18	10	
20	7311	Screw, 1/4-20 X 2.00 Hex-Head Cap	6	
21	8233	Locknut, 1/4-20, Nylon Insert	6	

1

G

E

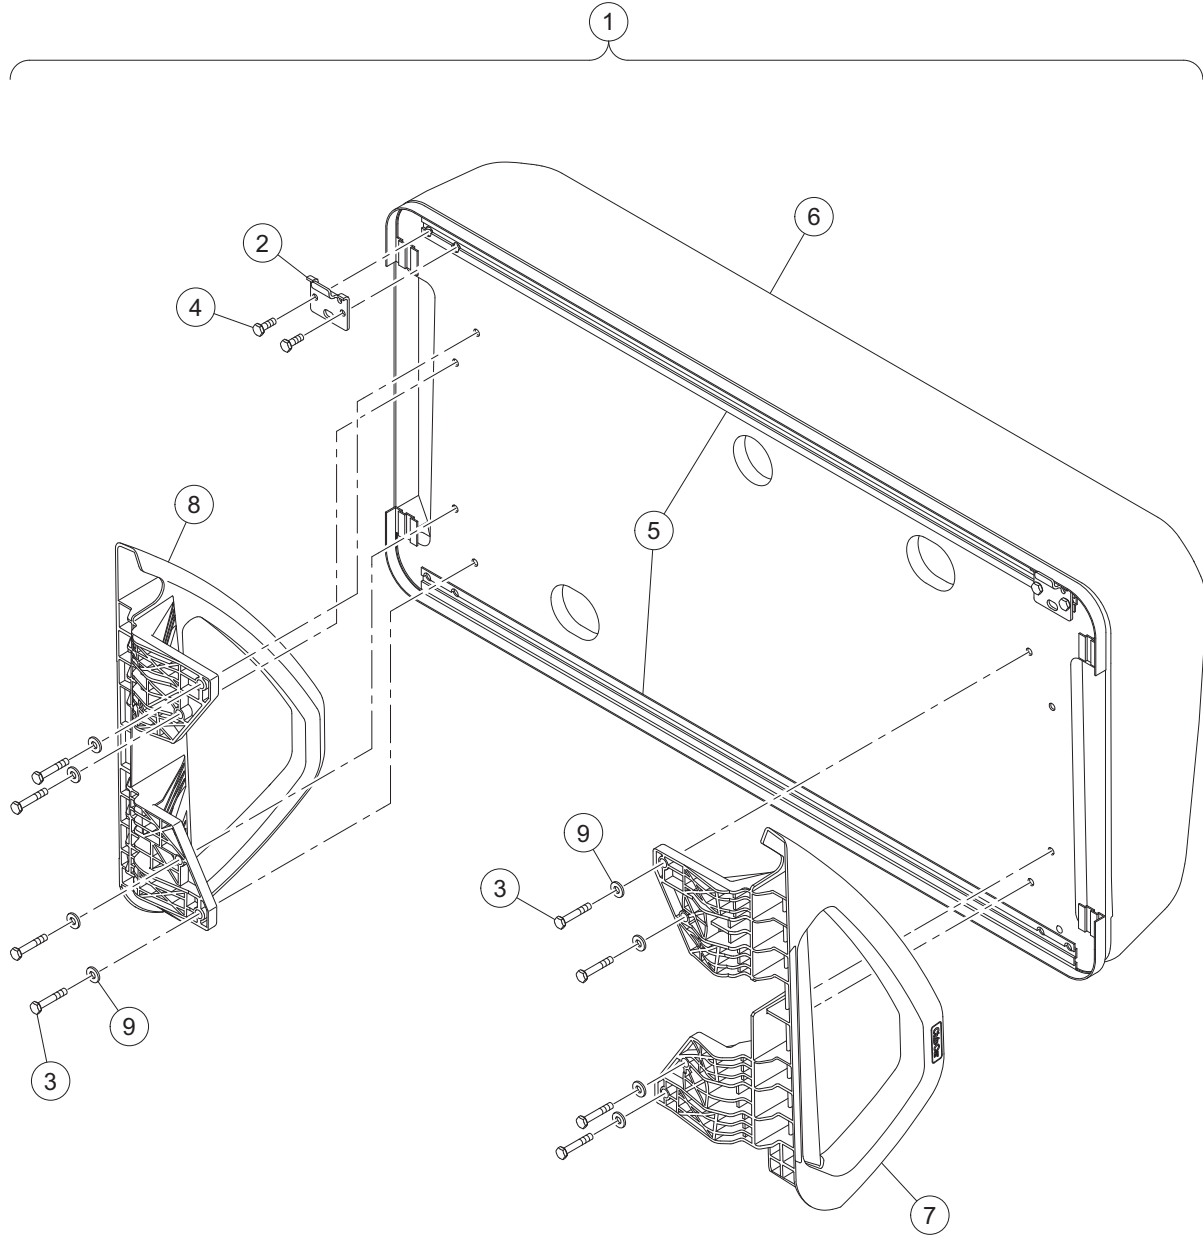

G-140699-000039

FRONT SEAT BOTTOM AND ARMRESTS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101998011	Seat Assy Ds, Prec Gray (includes items 2 through 9)	1
2	1011652	Hinge Plate	2
3	1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap	4
4	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
5	101998501	Gasket, Seat	2
6	102174208	Seat Assembly Prec Gray	1
7	103246701	Hip Restraint, Drvr Side	1
8	103246801	Hip Restraint, Pass Side	1
9	332	Washer, 1/4 Type A Narrow Flat	8

1

G

E

1
G
E

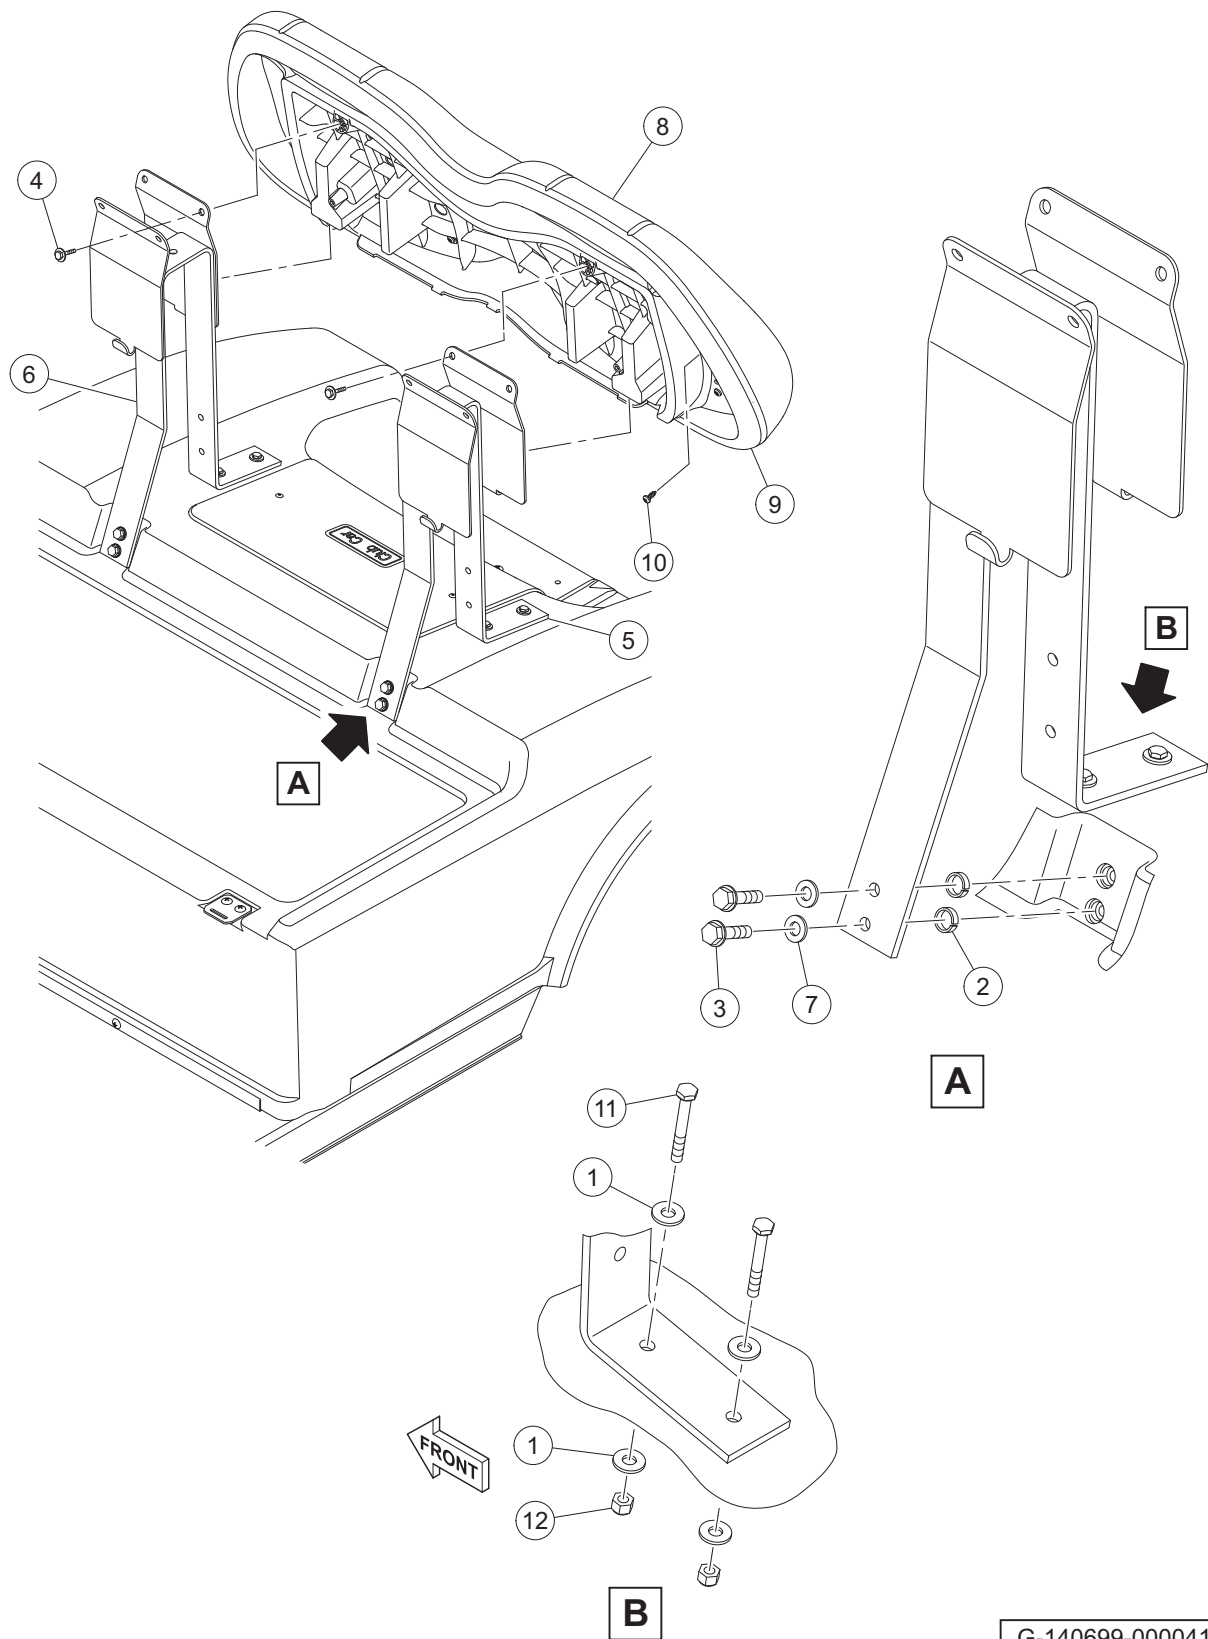

G-140699-000041


REAR SEAT BACK AND STRUCTURE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011931	Washer, 1/4 Flat	4
2	1017774	Body Spacer	4
3	101910401	Screw, 5/16-18 X 1.25 Thrd Frm	4
4	102296530	Screw - M6 X 1.0 X 30 Sems	2
5	103378301	Weldment, Bracket, Seat, Fd Rh	1
6	103378302	Weldment, Bracket, Seat, Fd Lh	1
7	1241	Washer, 5/16 Type A Flat	4
8	47720336010	Asm, Seatback, Black, Service (includes items 9 and 10)	1
9	103852901	Pan, Seatback W/holes, Prec	1
10	47729995001	Screw, Tx Flange Hd Pt, M6x18	4
11	7311	Screw, 1/4-20 X 2.00 Hex-Head Cap	4
12	8233	Locknut, 1/4-20, Nylon Insert	4

1

G

E

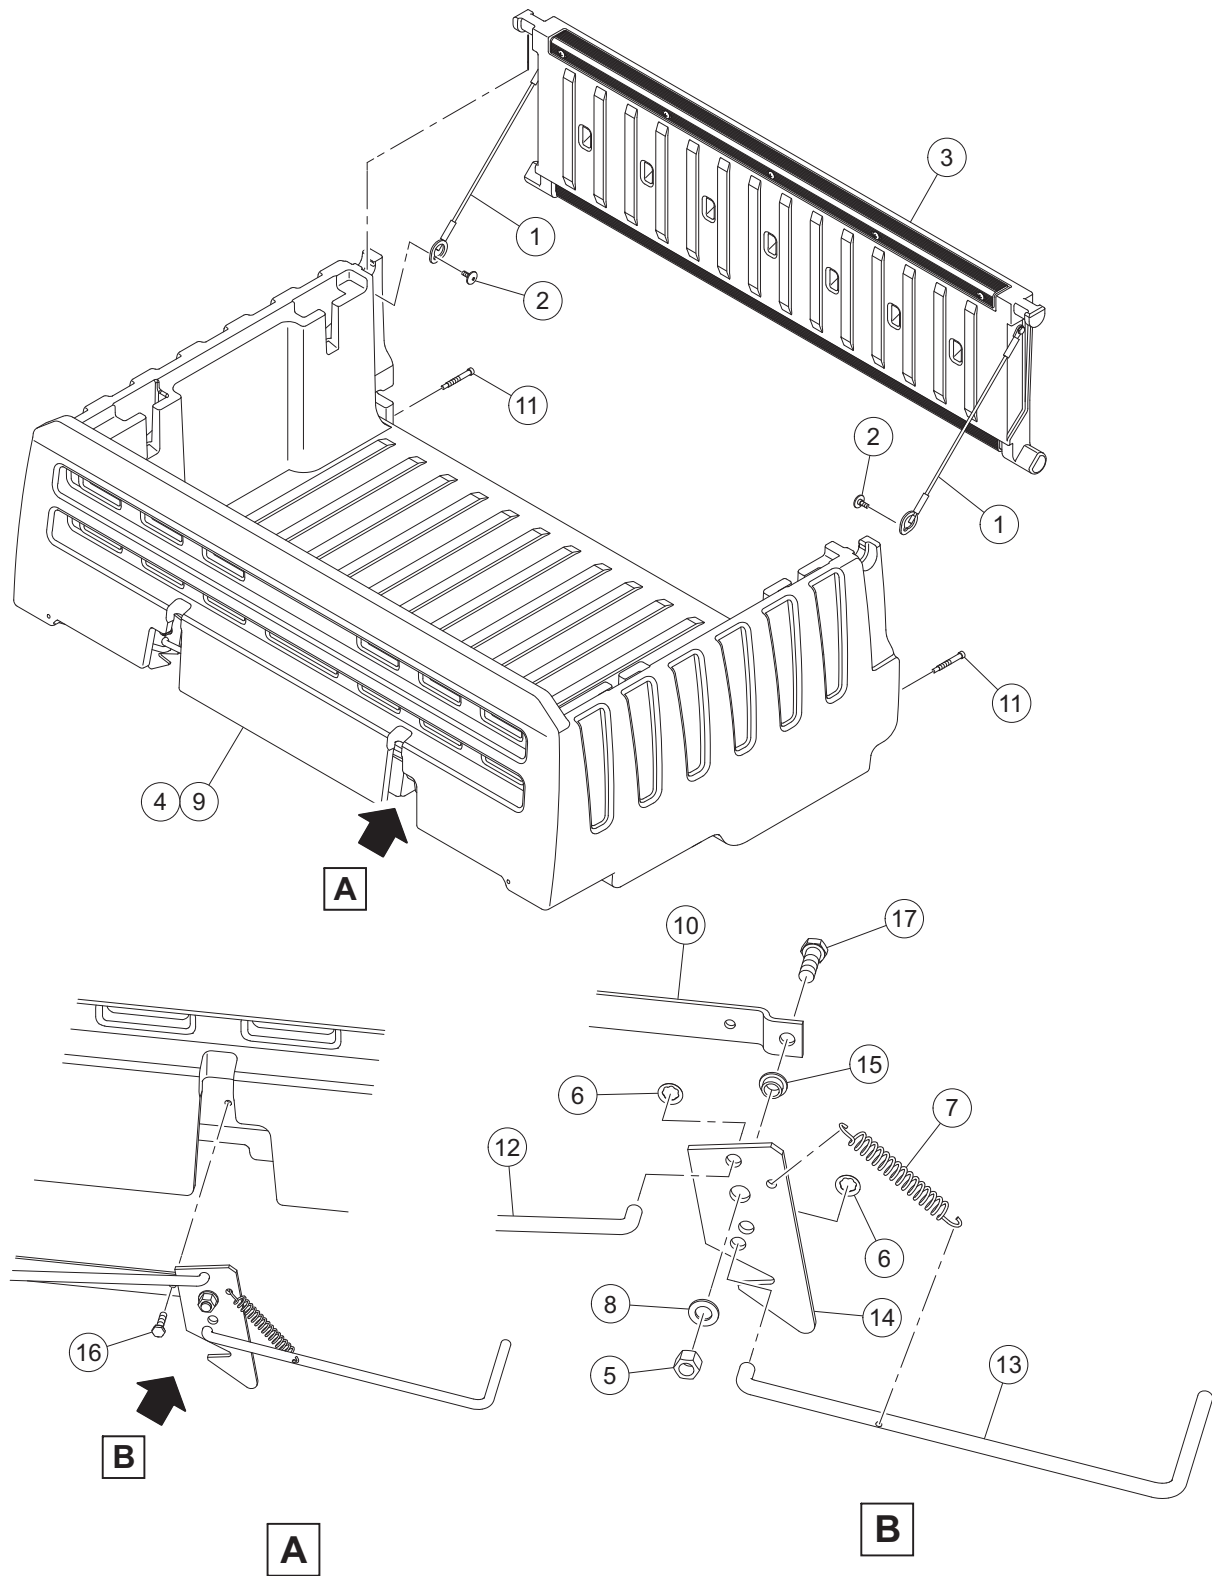

G-140399-000007

CARGO BED


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102779001	Lanyard, Tailgate	2
2	102779401	Bolt Lanyard	2
3	102779501	Tailgate	1
4	103189901	Bed Assembly (includes items 5 through 17)	1
5	1010138	Locknut, 3/8-16 Dimpled	2
6	1013876	Pushnut, 3/8	4
7	1015391	Extension, Spring Latch	2
8	N/A	Washer, 3/8 Flat Type A	2
9	N/A	Bed	1
10	102778901	Support, Latch Link	1
11	N/A	Pin, Support	2
12	102779201	Rod, Long Link	1
13	102779301	Rod, Bed Lift, Short Bent	2
14	102779601	Catch, Tilt Bed	2
15	102830701	Bearing, Bronze, 1/2x9/32	2
16	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
17	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1

1

G

E

E

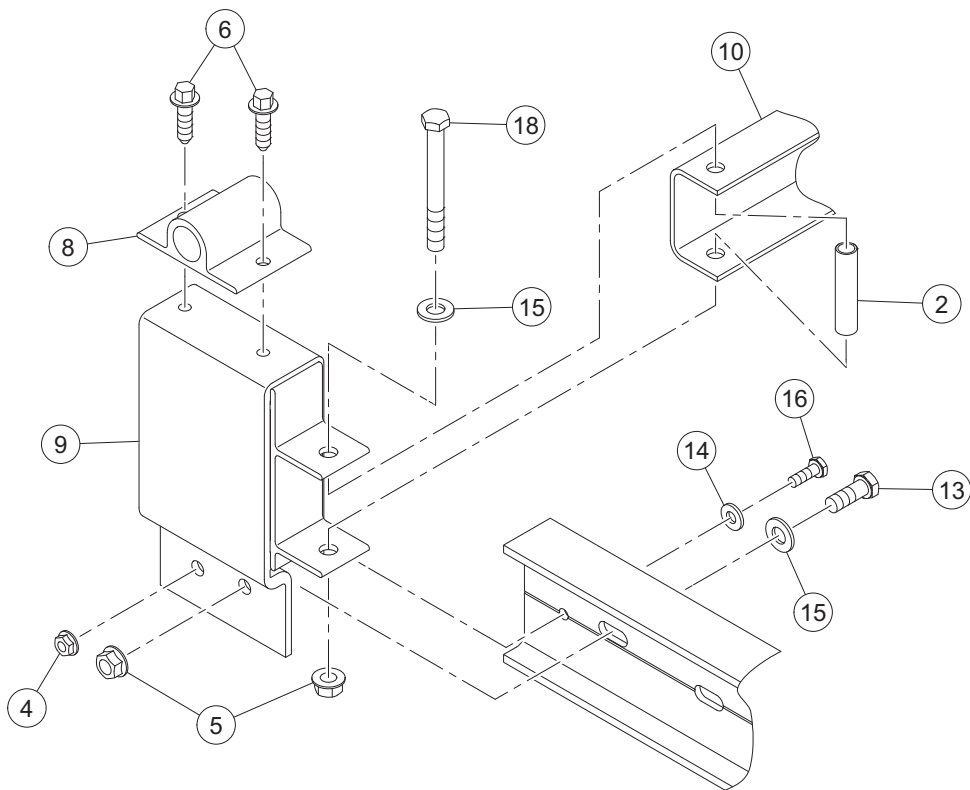

A

G-140399-000008



BED HINGE

ITEM	PART NO.	DESCRIPTION	QTY	1	G	E
		1 2 3 4				
1	1010878	Bumper, Rubber	2			
2	1012303	Bushing, Steel	2			
3	1015583	Bushing, Urethane	4			
4	101835601	Locknut, 1/4-20 Hex Whiz	2			
5	102065901	Locknut, 3/8-16 Flanged Dimple	4			
6	102289001	Screw, M8X1.25X30, Hex	4			
7	102289301	Rue Ring - 1/2"	2			
8	102797201	Hinge, Roto Bed	2			
9	102820301	Support, Hinge	2			
10	102820501	Stiffener, Bed Support	1			
11	102821101	Bushing, Steel	2			
12	102823201	Pin, Clevis, 3/8	2			
13	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	2			
14	332	Washer, 1/4 Type A Narrow Flat	2			
15	334	Washer, 3/8, Type A, Flat	8			
16	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2			
17	8233	Locknut, 1/4-20, Nylon Insert	2			
18	8755	Screw, 3/8-16 X 3.375 Hex Cap	2			

1

G

E

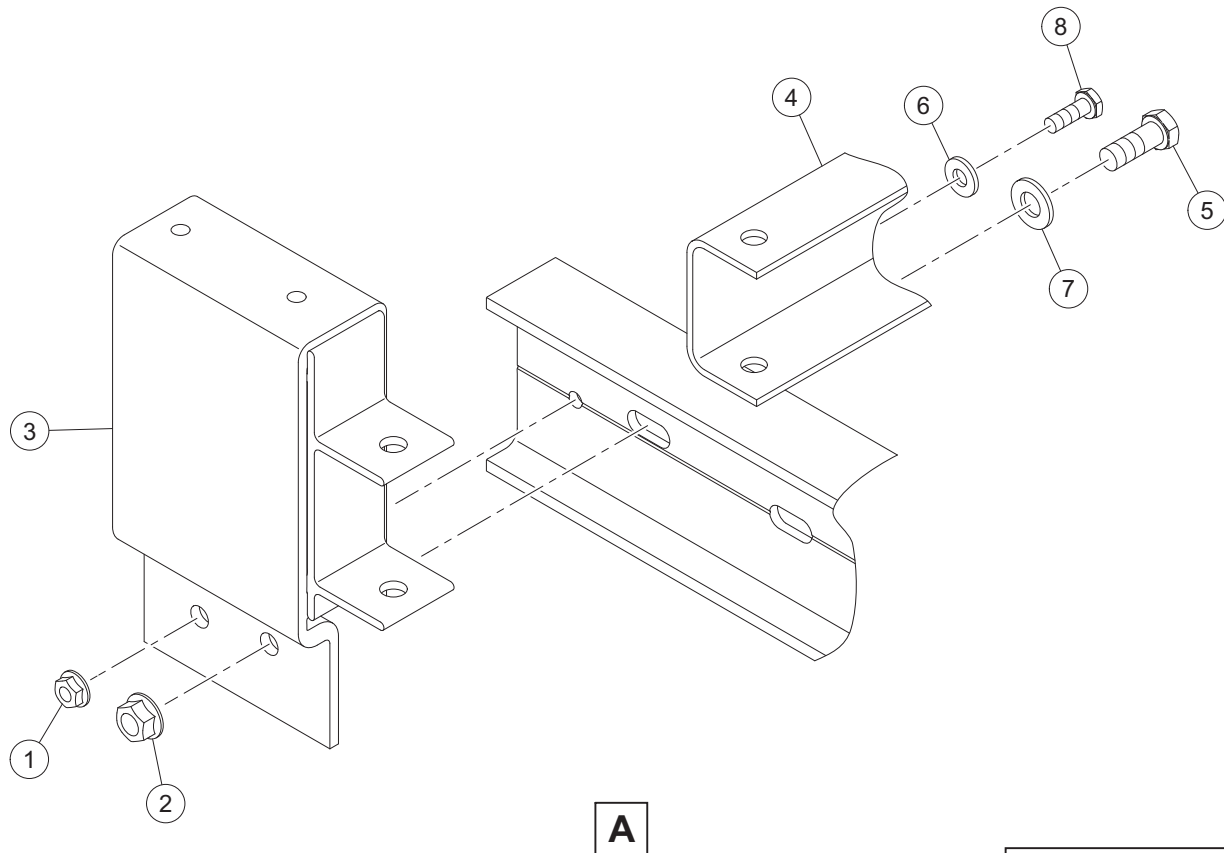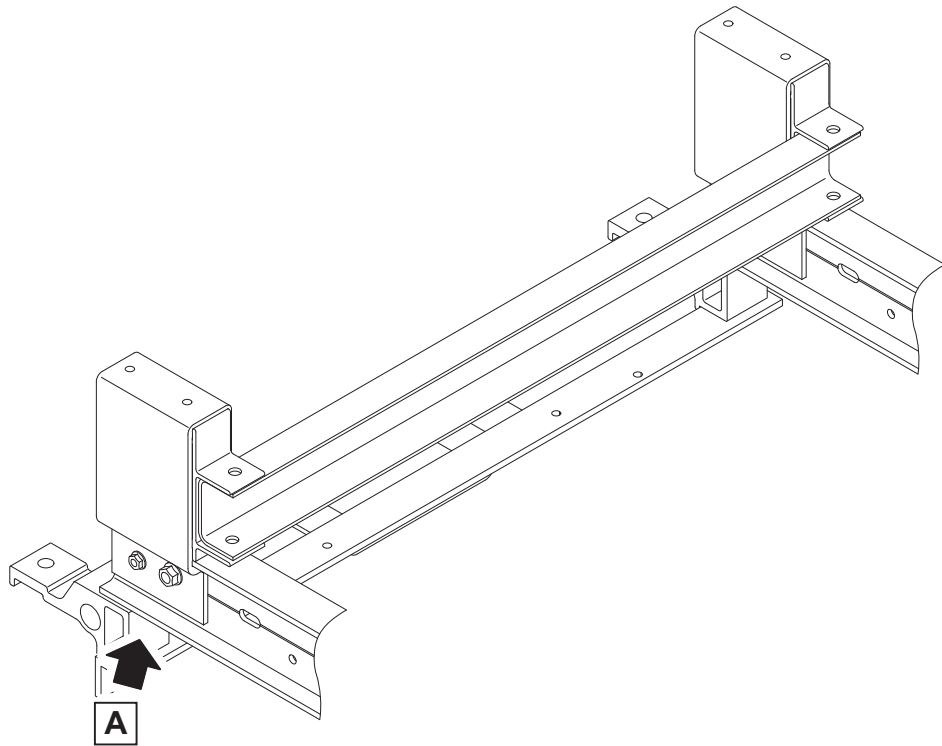

G-140399-000009

FOLD DOWN SEAT HINGE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101835601	Locknut, 1/4-20 Hex Whiz	2
2	102065901	Locknut, 3/8-16 Flanged Dimple	2
3	102820301	Support, Hinge	2
4	102820501	Stiffener, Bed Support	1
5	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	2
6	332	Washer, 1/4 Type A Narrow Flat	2
7	334	Washer, 3/8, Type A, Flat	2
8	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2

1


G

E

1

G

E

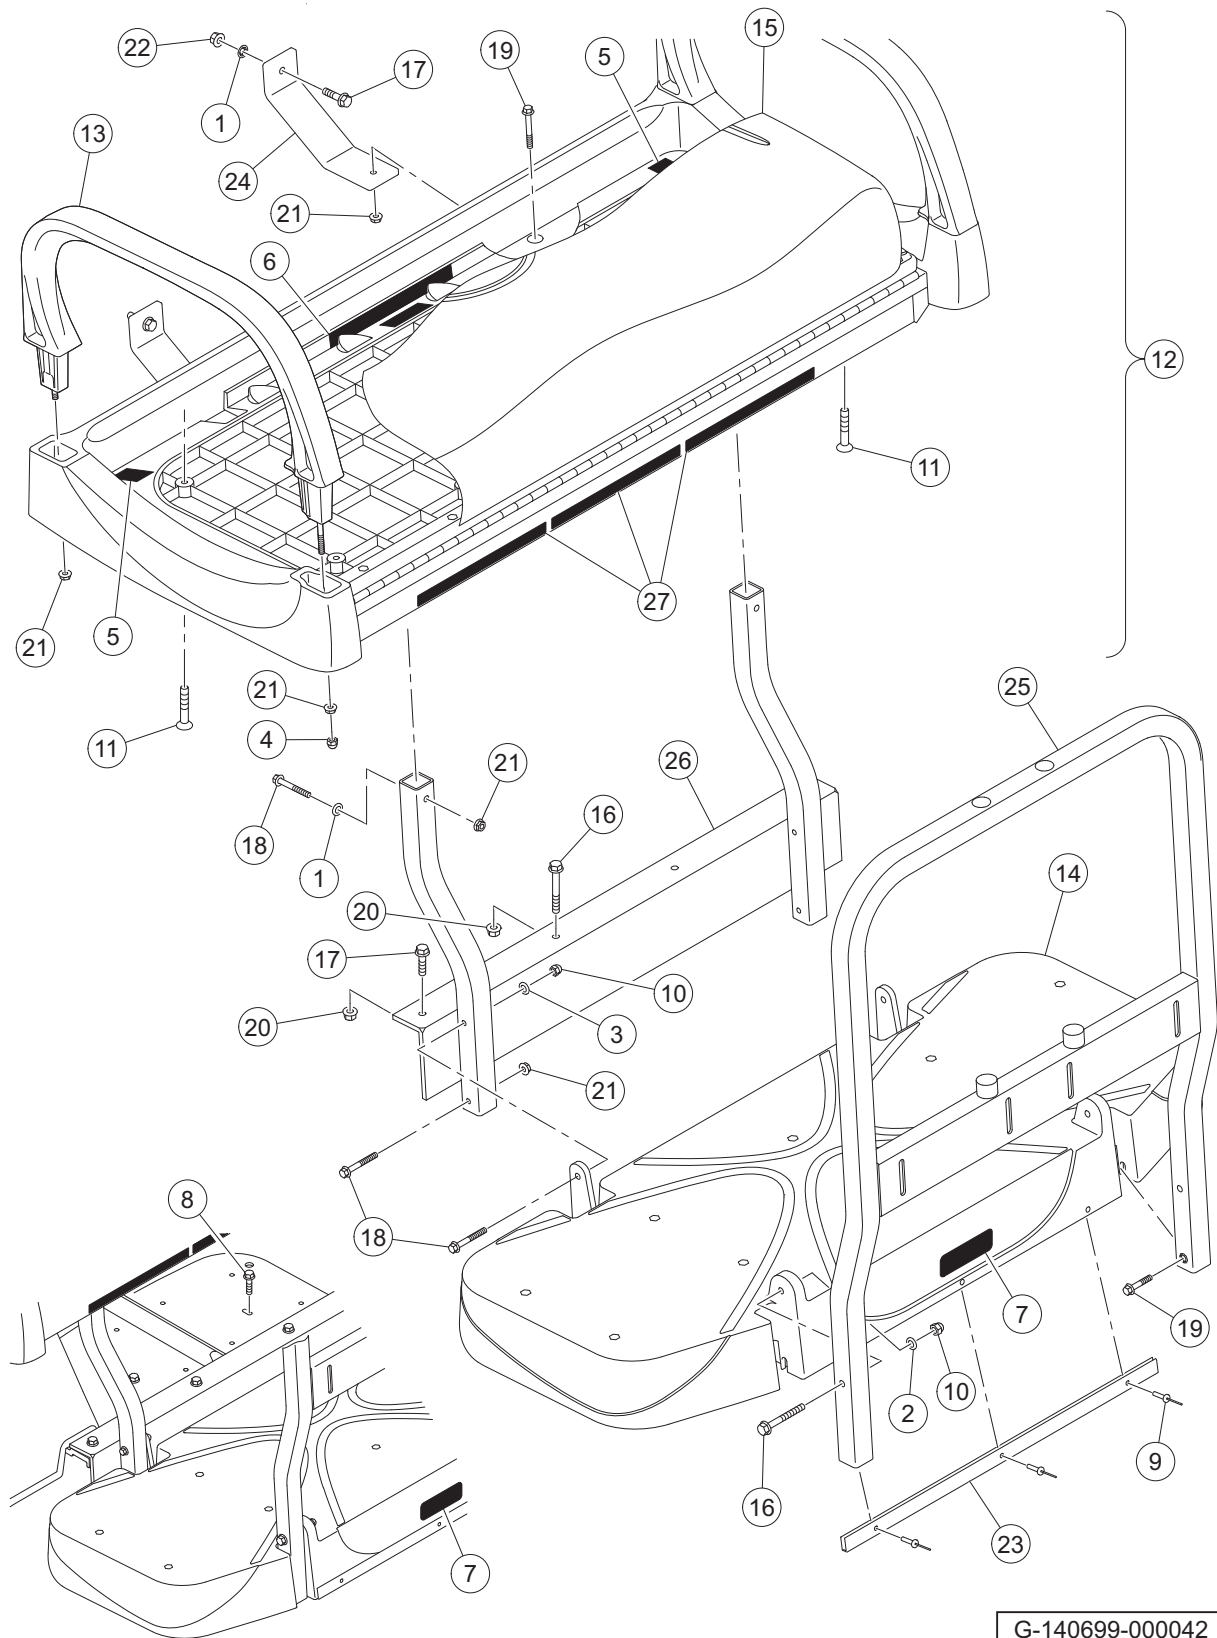

G-140699-000042

REAR-FACING SEAT FRAME AND FOOT DECK

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011578	Washer, 5/16 Type B Flat	2
2	1011697	Washer, 5/16 Flat	2
3	1011931	Washer, 1/4 Flat	2
4	1015091	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
5	101609401	Decal, Crush Area Warning	3
6	101972001	Decal, D.s. Box Bed Warning (for vehicles with bed box option)	1
7	102278802	Decal, Club Car, Silver	1
8	102298720	Screw, M8-1.25x20, Taptite	2
9	102828701	Rivet, Alum, 3/16"	3
10	103245301	Nut, Hex, Cp, Mech Def, 5/16-18	2
11	47563307001	Screw, Flthd, 1/4-20x1.50, Ss	10
12	47564782001	Assy, Seat Base, Dmd, Mx5	1
13	47564783001	Arm Rest, Mx5	2
14	47564784001	Assy, Foot Rest, Mx5	1
15	47564887024	Asm, Seat Bottom, Rear, Gray, Service Replacement	1
16	47568672001	Bolt, 5/16-18x2.5 Hx Flg Zn G8	4
17	47568673001	Bolt, 5/16-18x1.25 Hx Flg Zn G5	4
18	47568674001	Bolt, 1/4-20x2.0 Hx Flg Zn G5	6
19	47568674002	Bolt, 1/4-20x1.25 Hx Flg Zn G5	4
20	47568675001	Nut, 5/16-18 Hx Flg Zn Nyloc	6
21	47568676001	Nut, 1/4-20 Hx Flg Zn Nyloc	10
22	47568677001	Nut, 5/16, Push, Ps	2
23	47581051001	Stiffener, Foot Rest, Mx5	1
24	47582894002	Bracket, Seat Mount, Coated	2
25	N/A	Asm, Grab Bar, Rear	1
26	N/A	Asm, Weldment, Bumper Mount	1
27	SVP370901	Asm, Decal, Warn 800 850 Prec (includes items 28 through 30)	1
28	SVP370601	Decal, Warn 800 850 Prec Fld L	A/R
29	SVP370701	Decal, Warn 800 850 Prec Fld M	A/R
30	SVP370801	Decal, Warn 800 850 Prec Fld R	A/R
Note: Item 27 contains all three decals needed for the rear seat. Items 28, 29 and 30 are not illustrated.			

1
G
E

1

G



E

WHEELS AND TIRES

2

G

E

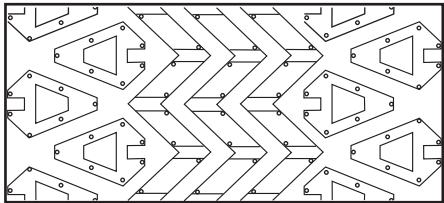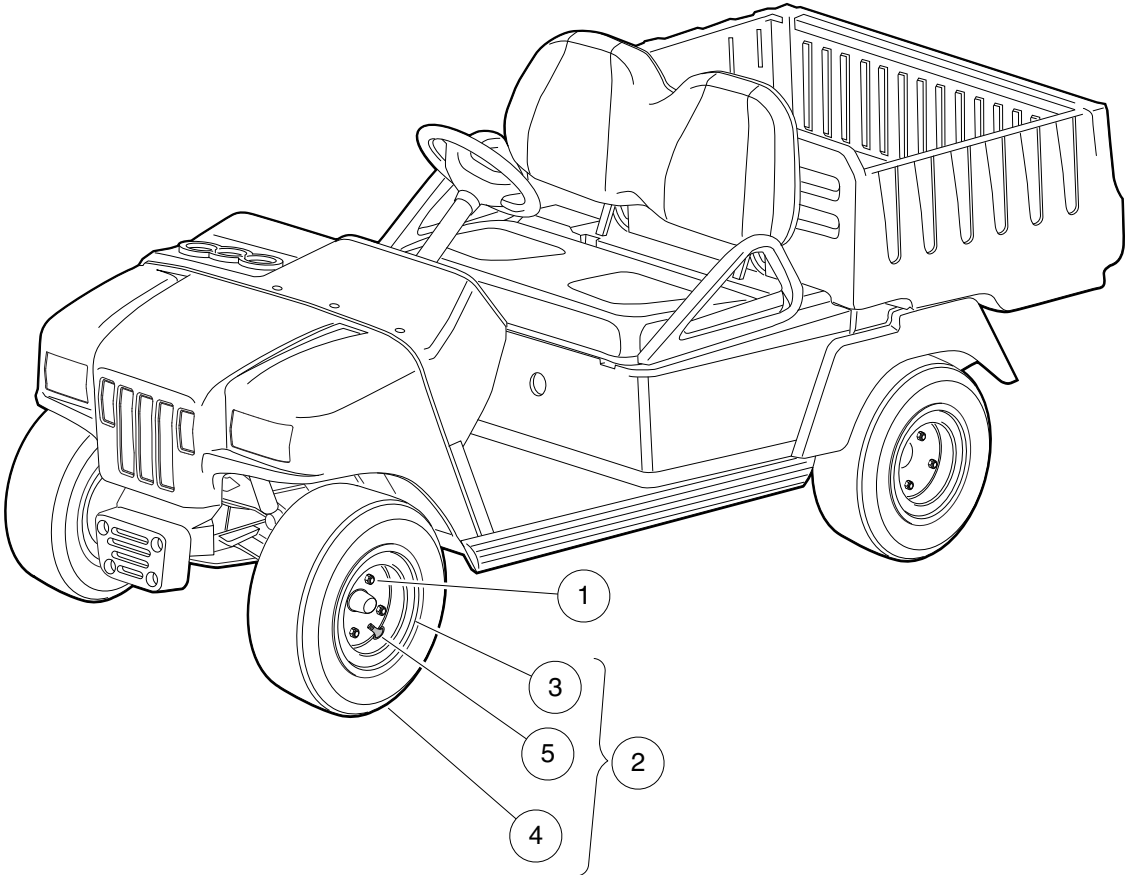

000224-002

WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010984	.500-20 Unf Lug Nut	16
2	102819101	Tire Assembly, All Trail II (includes items 3 through 5)	4
3	102815801	Wheel Rim, Gray	1
4	102815901	Tire, Unmounted, All Trail II	1
5	7310	Valve Stem, Black Plastic	1

2


G

E

2

G

E

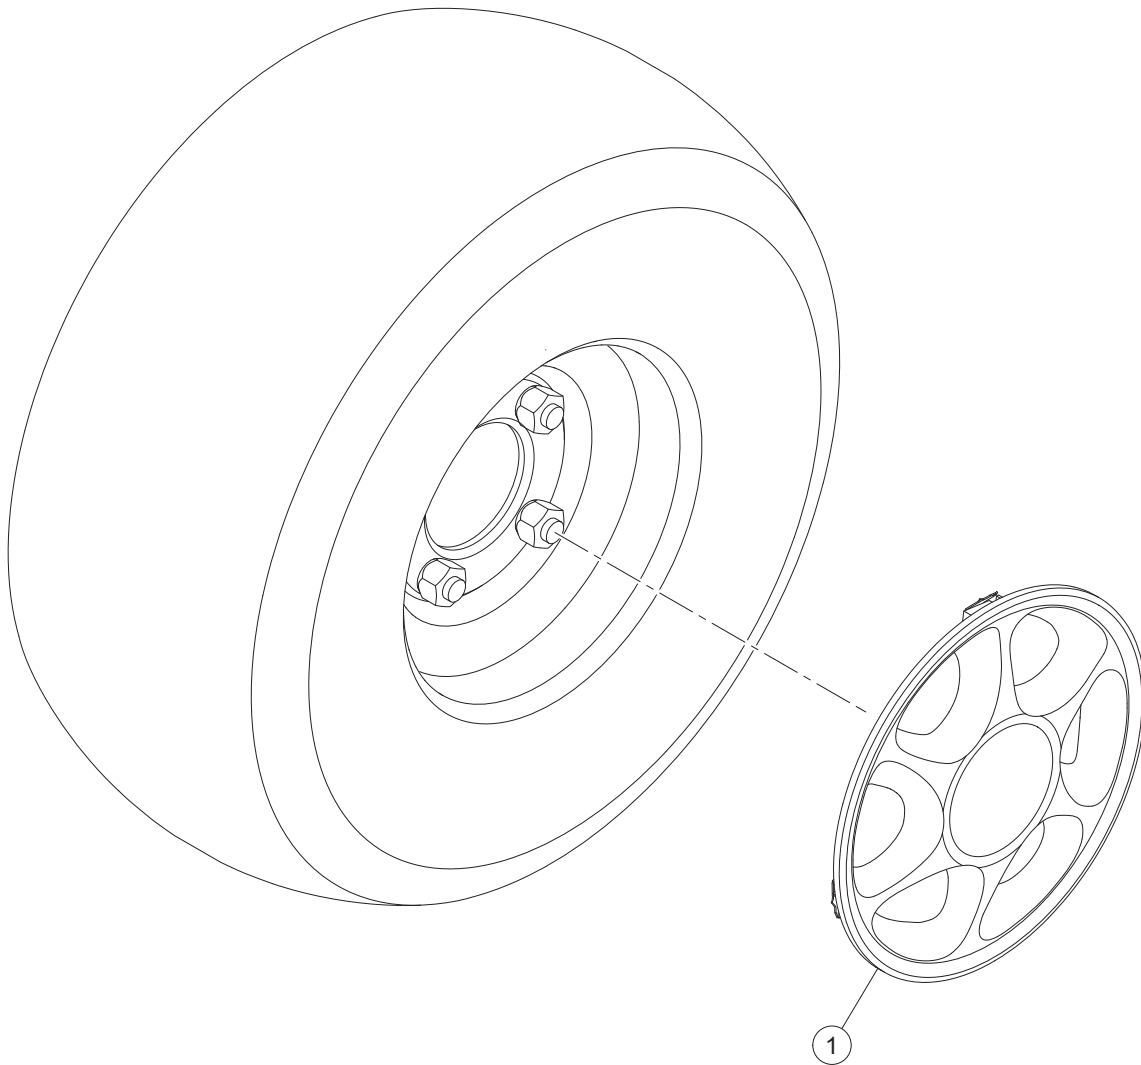

000318-002

HUBCAP

ITEM	PART NO.	DESCRIPTION	QTY	2 G E
1	102861401	1 2 3 4 Wheel Cover, Chrome Elite	4	

2

G

E

LOGO AND DECALS

3



G

E

3

G

E

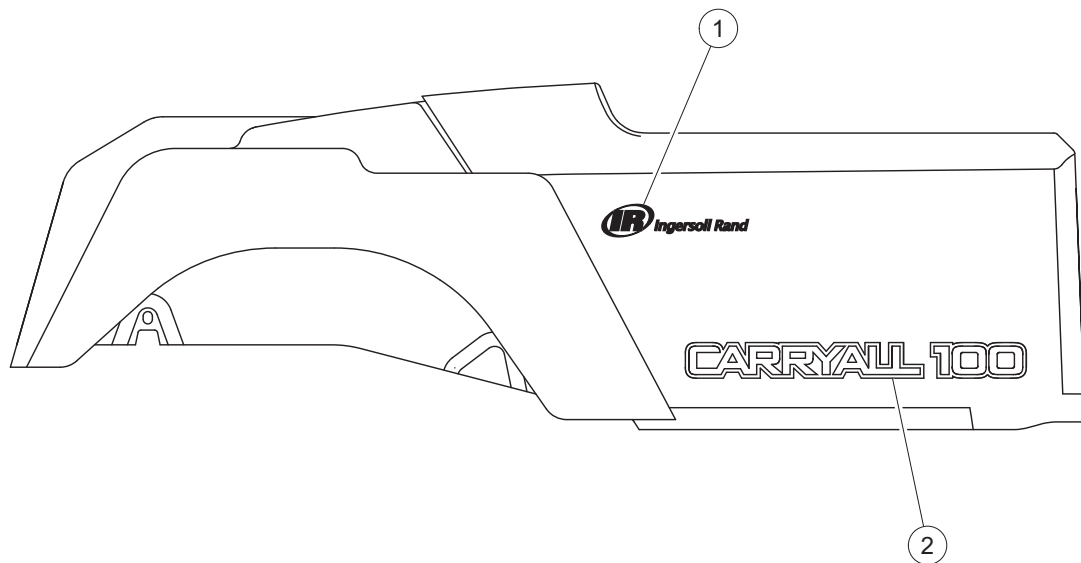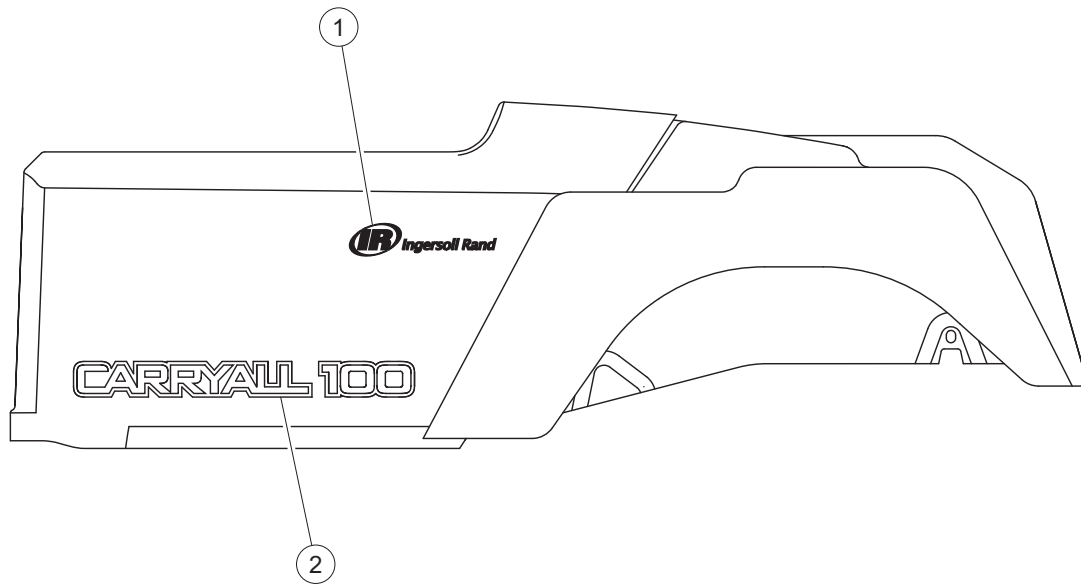

G-160299-000003


LOGO DECALS

ITEM	PART NO.	DESCRIPTION	QTY
1	103234303	1 2 3 4 Decal, Badge, Ir Black	2
2	105199601	Decal,†carryall†100	2

3

G

E

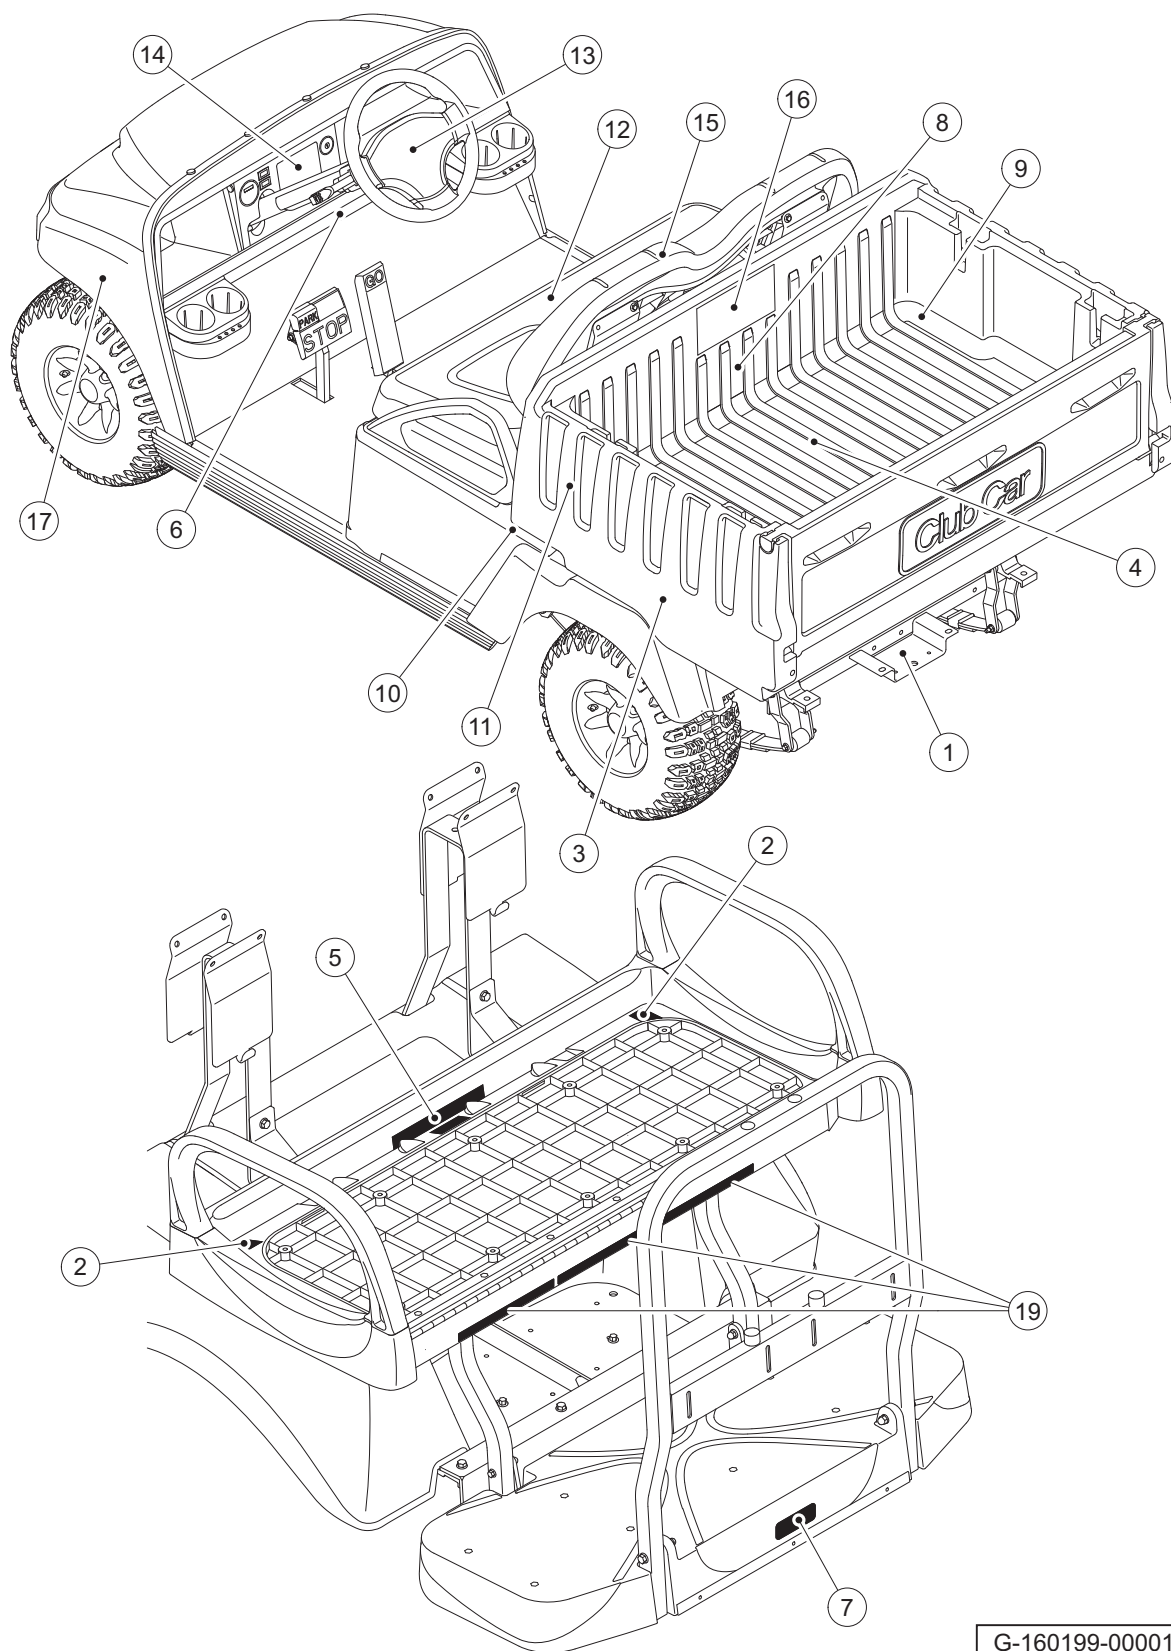

G-160199-000019


SAFETY DECALS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	101155301	Decal, Trailer Hitch Weight	1	
2	101609401	Decal, Crush Area Warning	3	
3	101915201	Decal, Frame Ground and Governor Warning	1	
4	101960501	Decal, Rotating Parts/Hot Manifold	1	
5	101972001	Decal, D.s. Box Bed Warning (for vehicles with bed box option)	1	
6	102075801	Decal, Young Driver Warning	1	
7	102278802	Decal, Club Car, Silver	1	
8	102458901	Decal, Hot Surface Warning	1	
9	102831901	Decal, Crush Warning, Driver-Side	1	
10	102832001	Decal, Crush Warning, Passenger-Side	1	
11	102833301	Decal, Maintenance	1	
12	103205501	Decal, Maintenance/Operate Switch	1	
13	103783002	Decal, Op Instr, Gas Ps	1	
14	103961601	Decal, Warn, Rollover, Ds Utl	1	
15	105082301	Decal, Warn, Gas Pressure	1	
16	105137107	Decal, Vehicle Load, Xrt800	1	
17	105153301	Decal, Efi, Italic, Lh	1	
18	105153302	Decal, Efi, Italic, Rh	1	
19	SVP370901	Asm, Decal, Warn 800 850 Prec (includes items 20 through 22)	1	
20	SVP370601	Decal, Warn 800 850 Prec Fld L	A/R	
21	SVP370701	Decal, Warn 800 850 Prec Fld M	A/R	
22	SVP370801	Decal, Warn 800 850 Prec Fld R	A/R	
Note: Item 18 (RH) is not illustrated and is opposite of item 17 (LH). Item 19 contains all three decals (not illustrated) needed for the rear seat.				

3

G

E

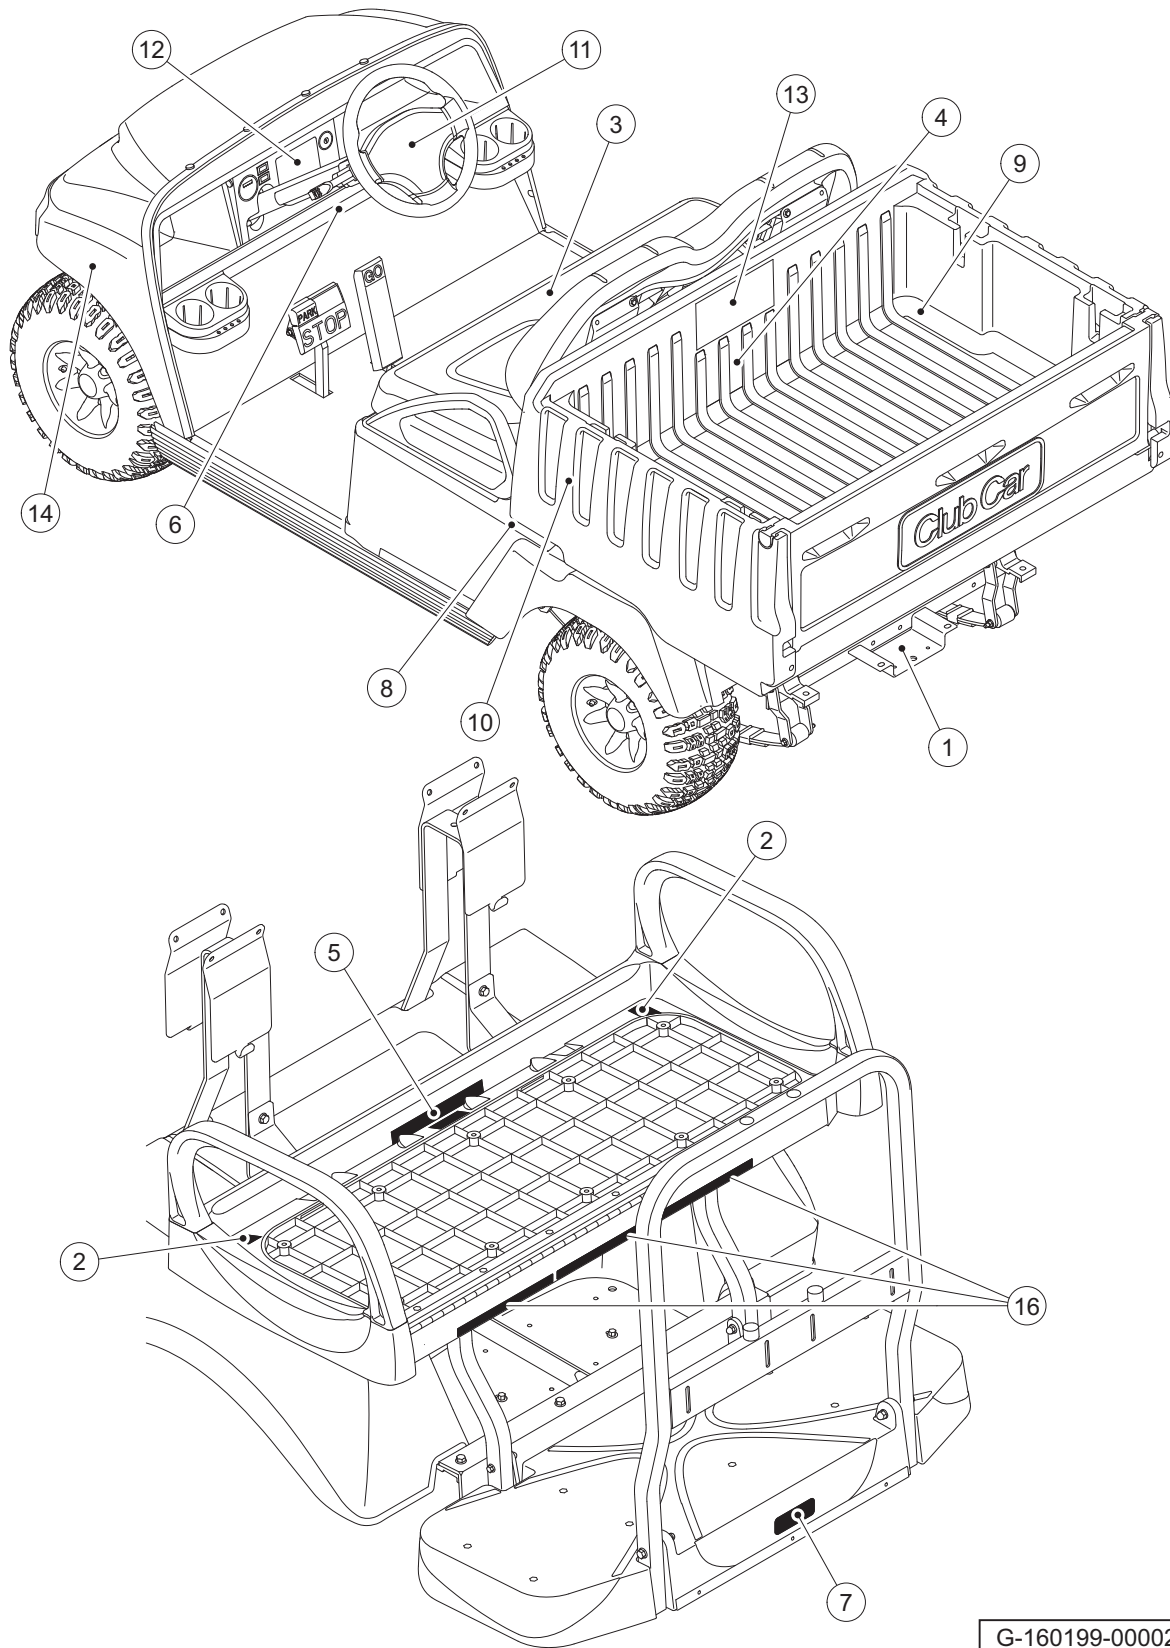

G-160199-000020

SAFETY DECALS – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	3 G E
		1 2 3 4		
1	101155301	Decal, Trailer Hitch Weight	1	
2	101609401	Decal, Crush Area Warning	3	
3	101908601	Decal, Tow/Run Switch Warning	1	
4	101931501	Decal, Component Cover	1	
5	101972001	Decal, D.s. Box Bed Warning (for vehicles with bed box option)	1	
6	102075801	Decal, Young Driver Warning	1	
7	102278802	Decal, Club Car, Silver	1	
8	102831901	Decal, Crush Warning, Driver-Side	1	
9	102832001	Decal, Crush Warning, Passenger-Side	1	
10	102833301	Decal, Maintenance	1	
11	103783001	Decal, Op Instr, Ele	1	
12	103961601	Decal, Warn, Rollover, Ds Utl	1	
13	105137107	Decal, Vehicle Load, Xrt800	1	
14	105153201	Decal, Zero Emission Vhcle, Lh	1	
15	105153202	Decal, Zero Emission Vhcle, Rh	1	
16	SVP370901	Asm, Decal, Warn 800 850 Prec (includes items 17 through 19)	1	
17	SVP370601	Decal, Warn 800 850 Prec Fld L	A/R	
18	SVP370701	Decal, Warn 800 850 Prec Fld M	A/R	
19	SVP370801	Decal, Warn 800 850 Prec Fld R	A/R	
Note: Item 15 (RH) is not illustrated and is opposite of item 14 (LH). Item 16 contains all three decals (not illustrated) needed for the rear seat.				

3

G


E

LIGHTS, CONTROLS, AND INDICATORS

4

G

E

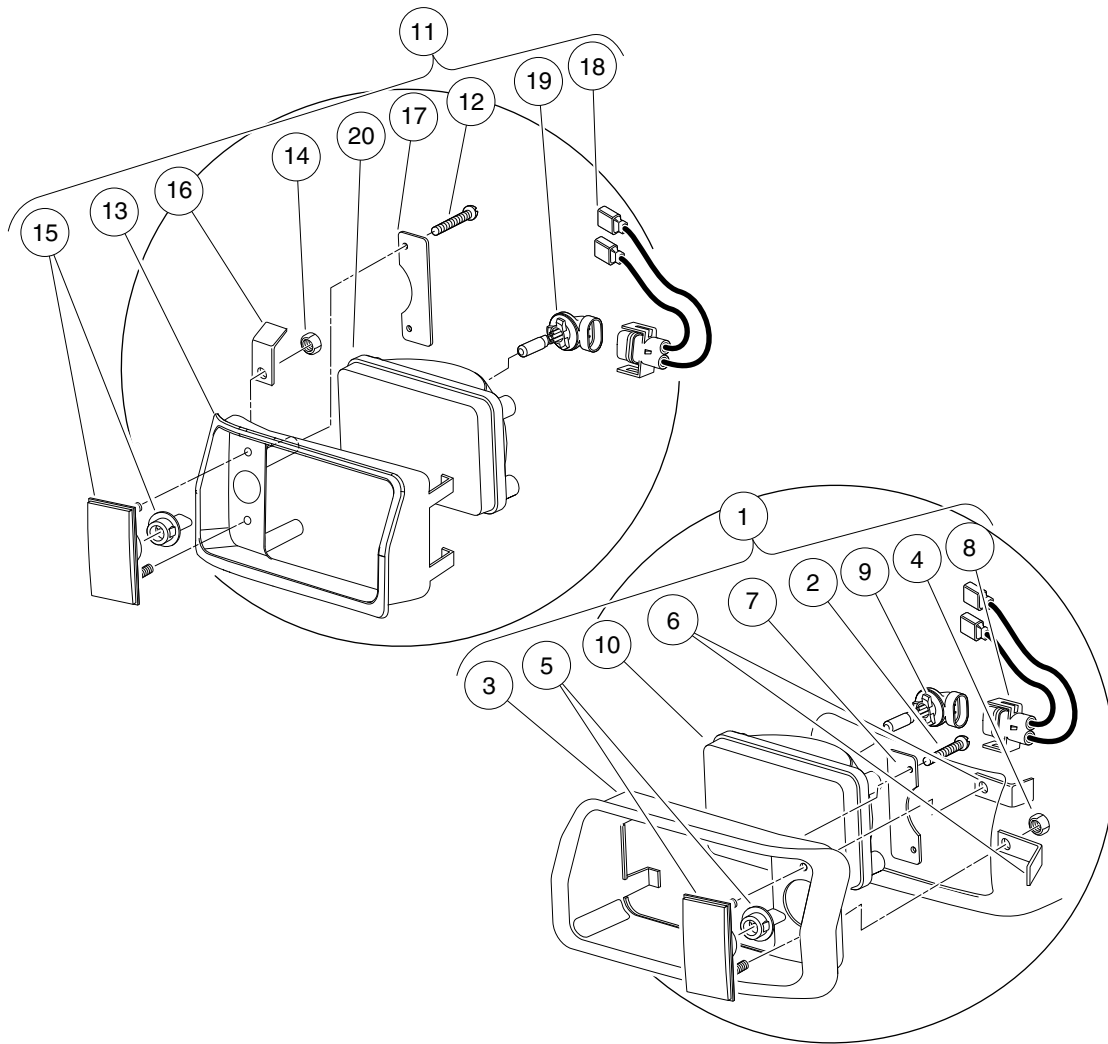

000073-001






HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	101988001	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1	E
2	1013461	Screw, #10-16 Hex-Head Hi-Lo	2	
3	1016880	Headlight Bezel, Left	1	
4	1017	Nut, #10-24 Stainless-Steel Hex Machine	2	
5	1017062	Turn Signal Lens Assy	1	
6	1017064	Mounting Bracket	2	
7	1017065	Retainer, Headlight	1	
8	101987901	Connector, Harness Assembly, Headlight	1	
9	101988101	Bulb, Headlight	1	
10	101988201	Lens, Headlight	1	
11	101988002	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1	
12	1013461	Screw, #10-16 Hex-Head Hi-Lo	2	
13	1016879	Headlight Bezel, Right	1	
14	1017	Nut, #10-24 Stainless-Steel Hex Machine	2	
15	1017062	Turn Signal Lens Assy	1	
16	1017064	Mounting Bracket	2	
17	1017065	Retainer, Headlight	1	
18	101987901	Connector, Harness Assembly, Headlight	1	
19	101988101	Bulb, Headlight	1	
20	101988201	Lens, Headlight	1	

4

G

E

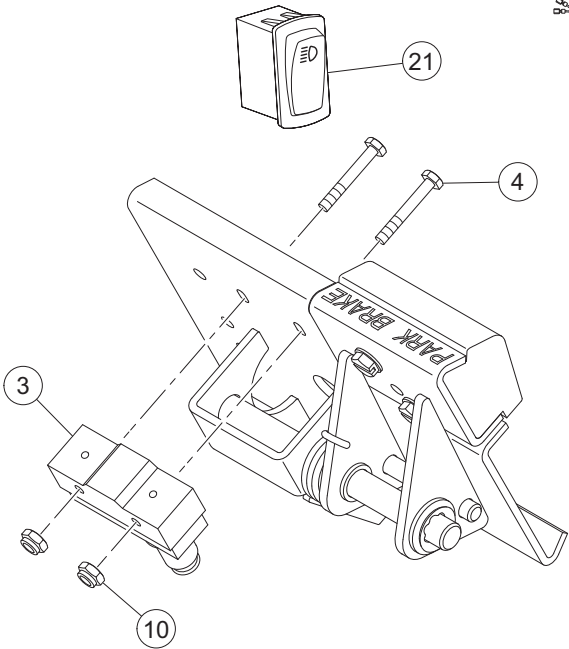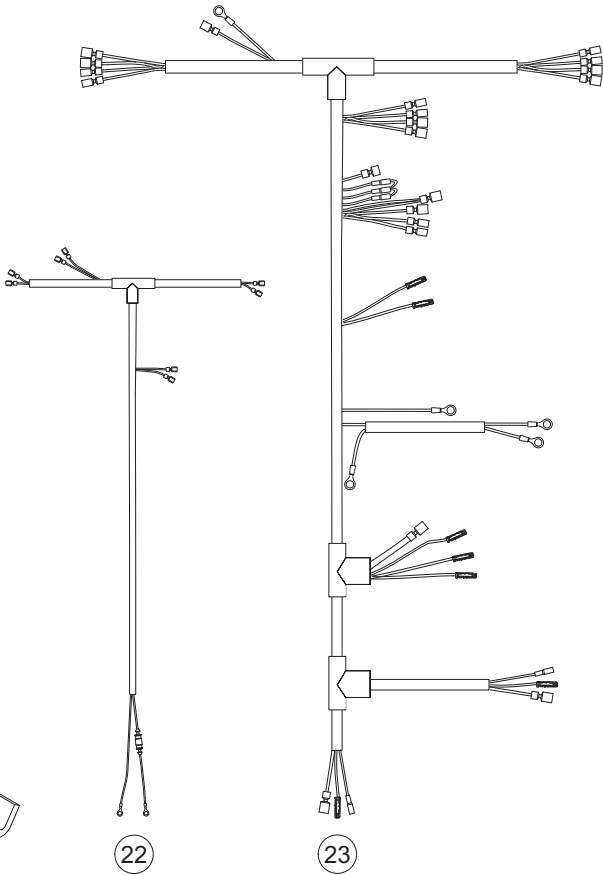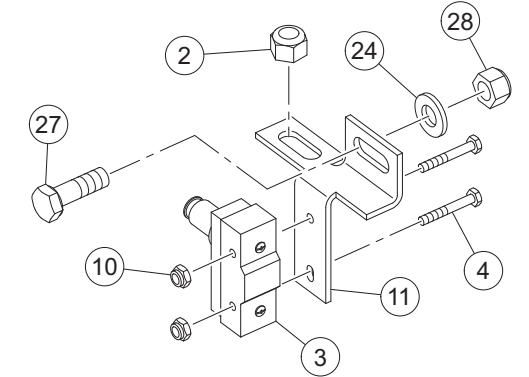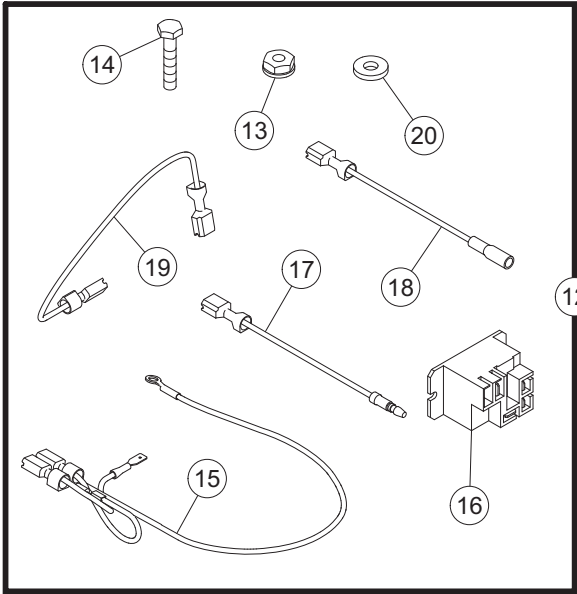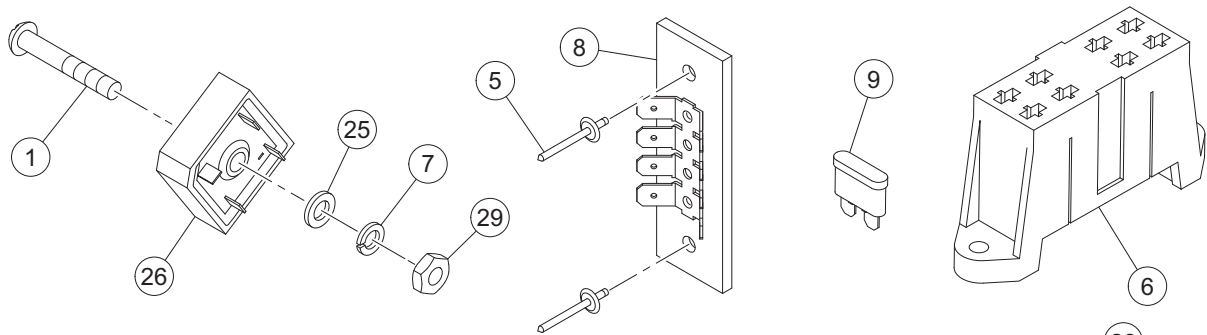


G-080299-000001

LIGHTING SYSTEM COMPONENTS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010909	Screw, #10-32 X 1.25 Rd Hd Mch	1
2	1011280	Locknut, 5/16-18	1
3	1011439	Switch, Limit	2
4	1011557	Screw, #6-32 X 1.00 Hex-Head Machine	4
5	1013357	Rivet, 5/32 Aluminum Pop	2
6	1015741	Fuse Block	1
7	1016	Lockwasher, #10 Split	1
8	1016356	Terminal Block with Insulator	1
9	1016423	Fuse, 20-Amp	3
10	101932201	Locknut, #6-32 Nylon	4
11	101957101	Bracket, Brake Light Switch	1
12	102198701	Brake Relay Kit - 12v (includes items 13 through 20)	1
13	1011229	Locknut, #6-32 Whiz	2
14	1017853	Screw, #6-32 X 0.75 Hex-Head Machine	2
15	101914401	Assembly, Voltage Suppressor	1
16	102199001	Relay, 12-Volt	1
17	102199201	Wire Asm #18 Brown	1
18	102199301	Wire Asm #18 Black	1
19	102199401	Wire Asm #18 Black	1
20	7591	Washer, #6, Flat	2
21	102869401	Switch, Rocker, Light	1
22	103255601	Wire Harness, Headlights-Only, CA, Gas	1
23	103256901	Wire Harness, Lighting, CA2	1
24	1241	Washer, 5/16 Type A Flat	1
25	183	Washer, #10, Type A, Flat	1
26	47604303001	Voltage Limiter, Gas	1
27	7173	Screw, 5/16-18 X 0.75, Hex-Head Cap	1
28	7473	Locknut, 5/16-18 Nylon Insert	1
29	7893	Nut, #10-32 Hex	1
Note: Use item 22 for headlights only. NOTE 2: Use item 23 for headlights and taillights. NOTE 3: Items 22 and 23 are used in multiple applications.			


4
G
E

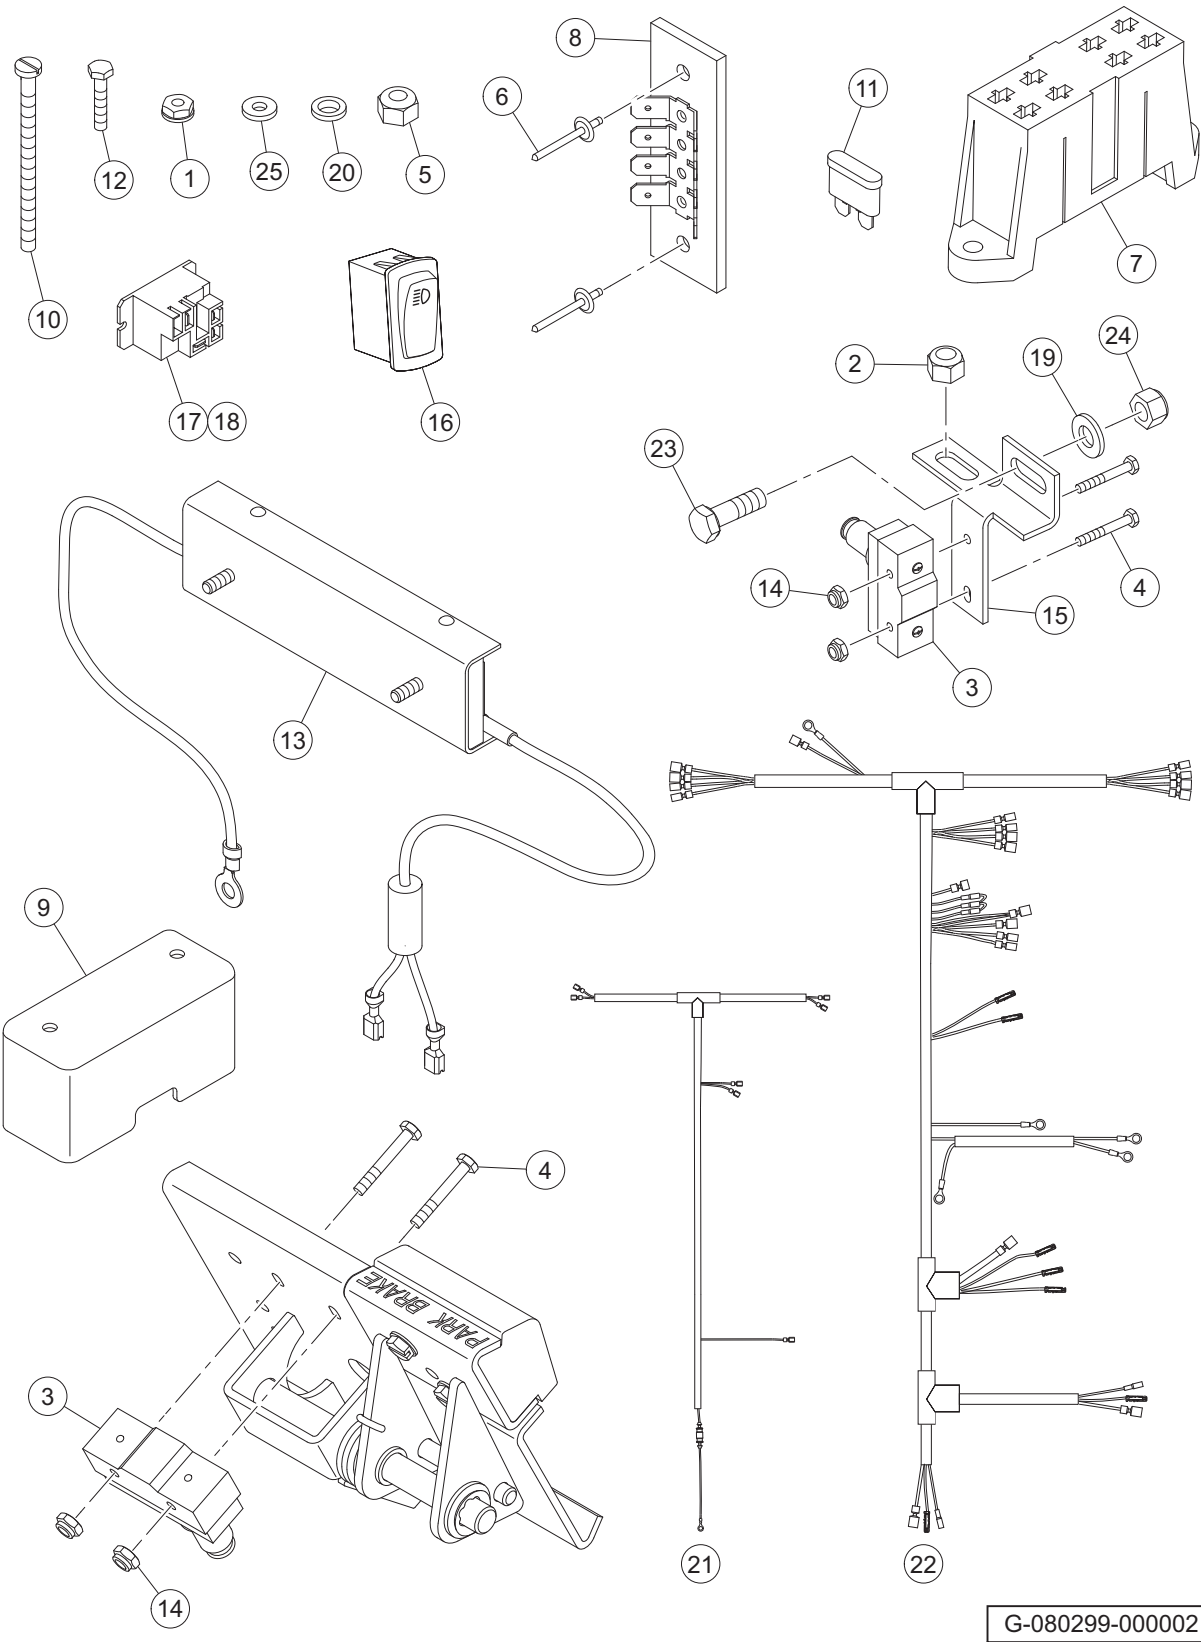

G-080299-000002

LIGHTING SYSTEM COMPONENTS – ELECTRIC VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	1011229	Locknut, #6-32 Whiz	2	
2	1011280	Locknut, 5/16-18	1	
3	1011439	Switch, Limit	2	
4	1011557	Screw, #6-32 X 1.00 Hex-Head Machine	4	
5	1012438	Locknut, #10-24 Nylon Insert	2	
6	1013357	Rivet, 5/32 Aluminum Pop	2	
7	1015741	Fuse Block	1	
8	1016356	Terminal Block with Insulator	1	
9	1016363	Fuse Block Cover	1	
10	1016366	Screw, #10-24 X 3.0 Pan-Head Machine	2	
11	1016423	Fuse, 20-Amp	3	
12	1017853	Screw, #6-32 X 0.75 Hex-Head Machine	2	
13	101810501	Limiter, Voltage	1	
14	101932201	Locknut, #6-32 Nylon	4	
15	101957101	Bracket, Brake Light Switch	1	
16	102869401	Switch, Rocker, Light	1	
17	103414901	Kit, Relay, 48v 30a W/instr (includes item 18)	1	
18	103397901	Relay, Spst No, 48v 30a, Pmt	1	
19	1241	Washer, 5/16 Type A Flat	1	
20	183	Washer, #10, Type A, Flat	4	
21	47564770001	Harness, Headlight, Sb	1	
22	47564777001	Harness, Lighting, Sb	1	
23	7173	Screw, 5/16-18 X 0.75, Hex-Head Cap	1	
24	7473	Locknut, 5/16-18 Nylon Insert	1	
25	7591	Washer, #6, Flat	2	
Note: Use item 21 for headlights only. NOTE 2: Use item 22 for headlights and taillights. NOTE 3: Items 21 and 22 are used in multiple applications.				

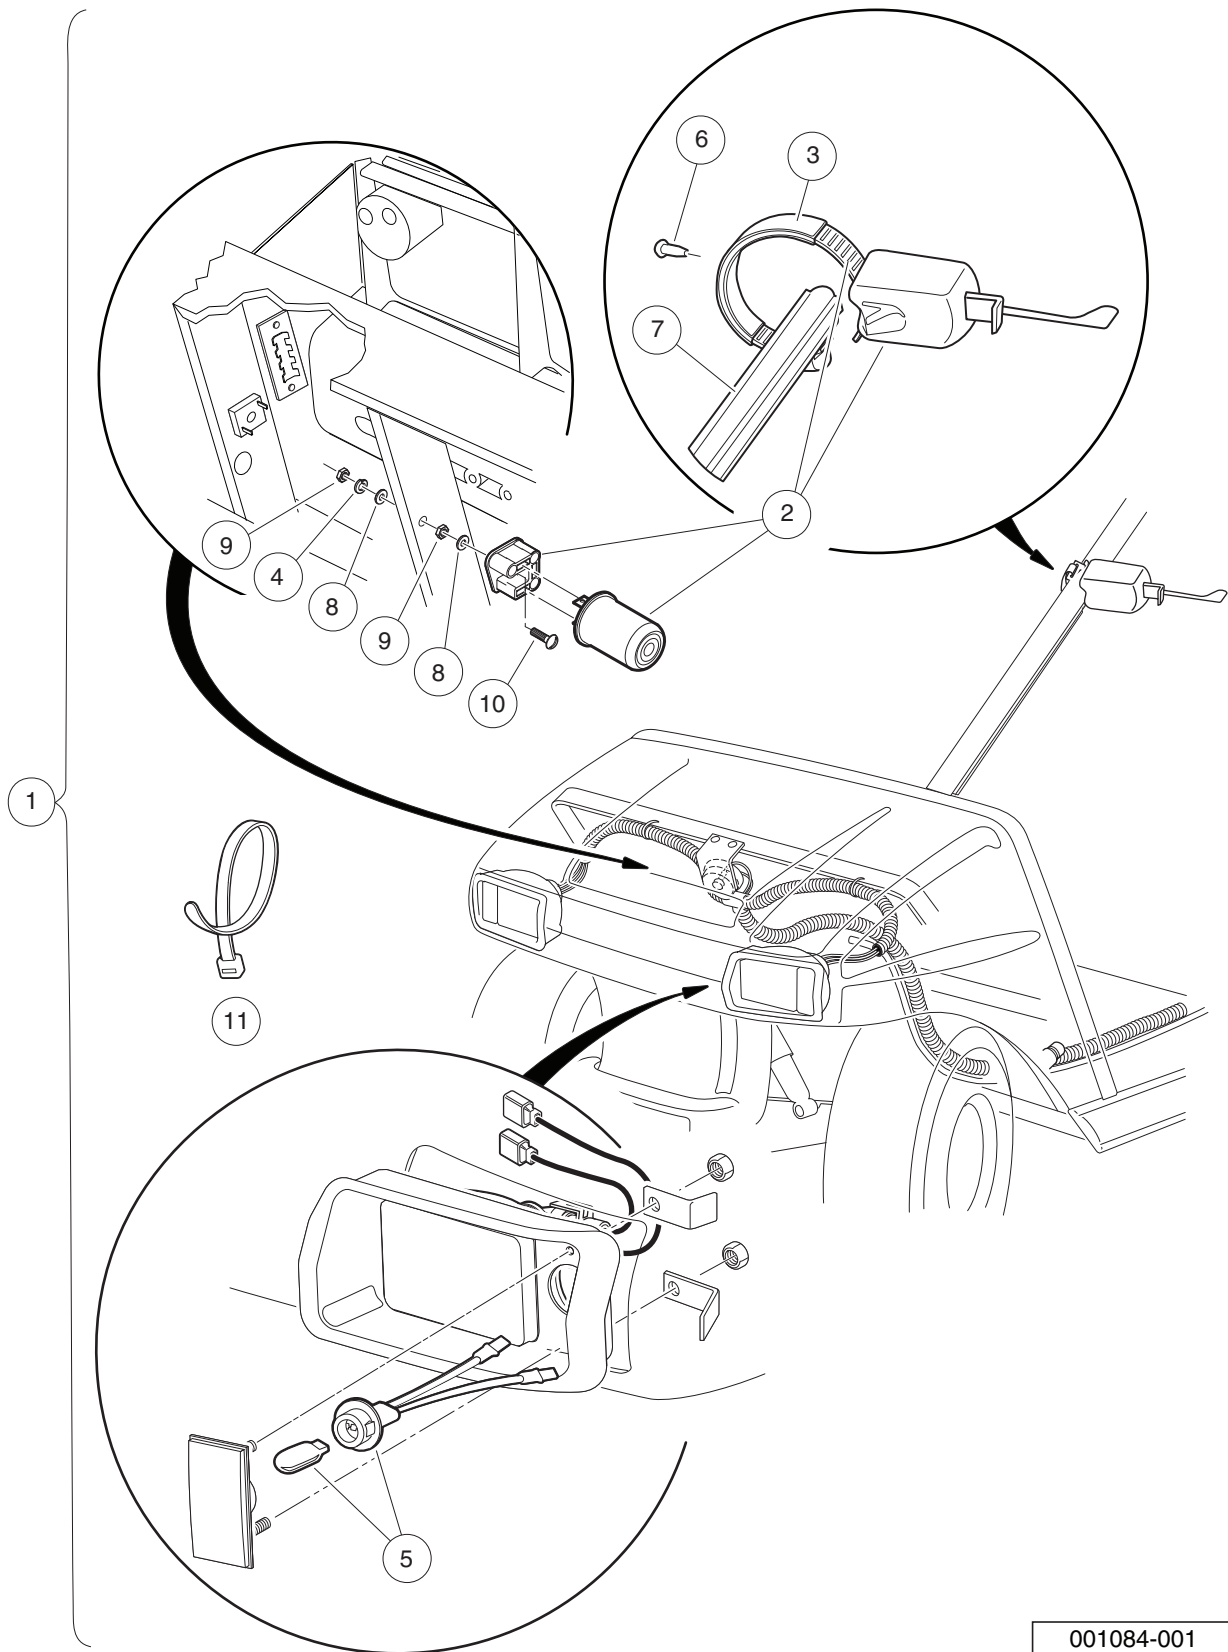

001084-001

TURN SIGNAL KIT – GASOLINE AND ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	101707402	Turn Signal Conversion Kit (includes items 2 through 11)	1	E
2	1011590	Switch Sub-assy, Turn Signal	1	
3	N/A	Strap, Extrusion	1	
4	1016	Lockwasher, #10 Split	1	
5	1017075	Socket & Lamp Assembly	2	
6	1017724	Rivet, Plastic	1	
7	102529201	Wire Cover, Steering Column	1	
8	183	Washer, #10, Type A, Flat	2	
9	7893	Nut, #10-32 Hex	2	
10	8104	Screw, #10-32 X .75 Rd Hd Mach	1	
11	8990	Tie Wrap, 8" Nylon	1	

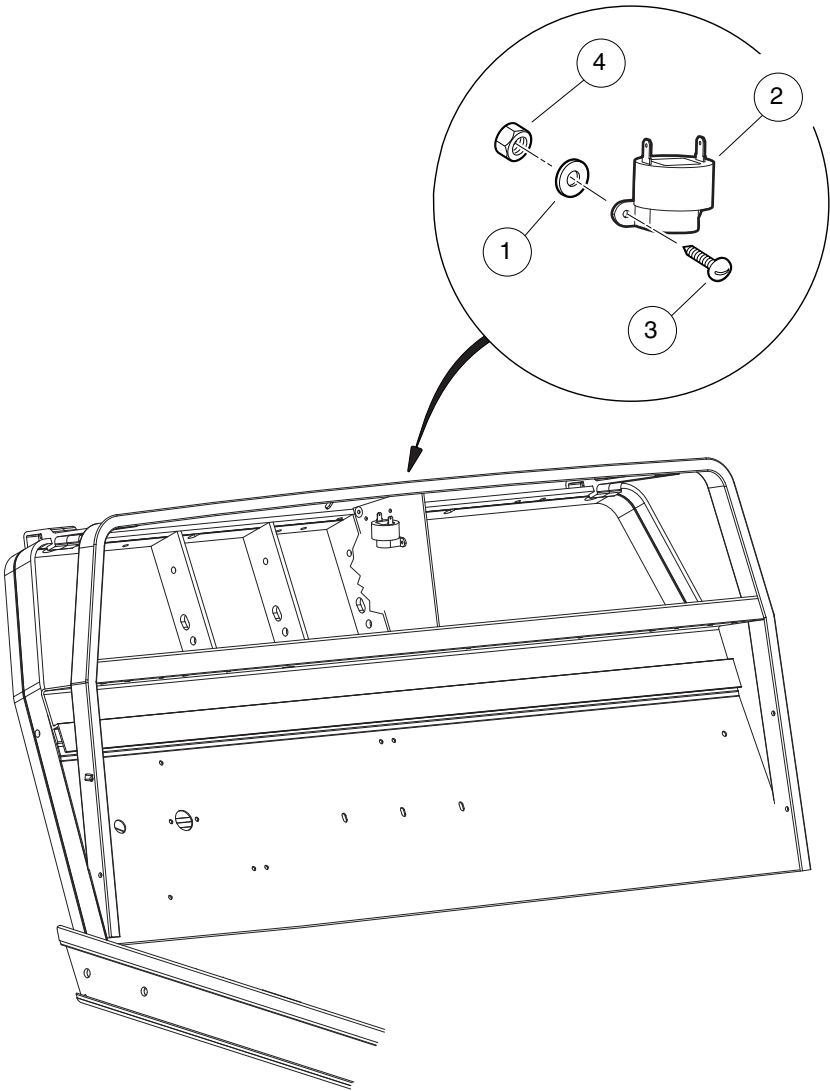

000363-001


REVERSE BUZZER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012431	Washer, #4 Flat	1
2	1016851	Multi-Purpose Buzzer (9-48 VDC)	1
3	8056	Screw, #4-40 X 0.75 Round-Head Machine	1
4	8057	Nut, #4-40 Hex Machine	1

4

G


E

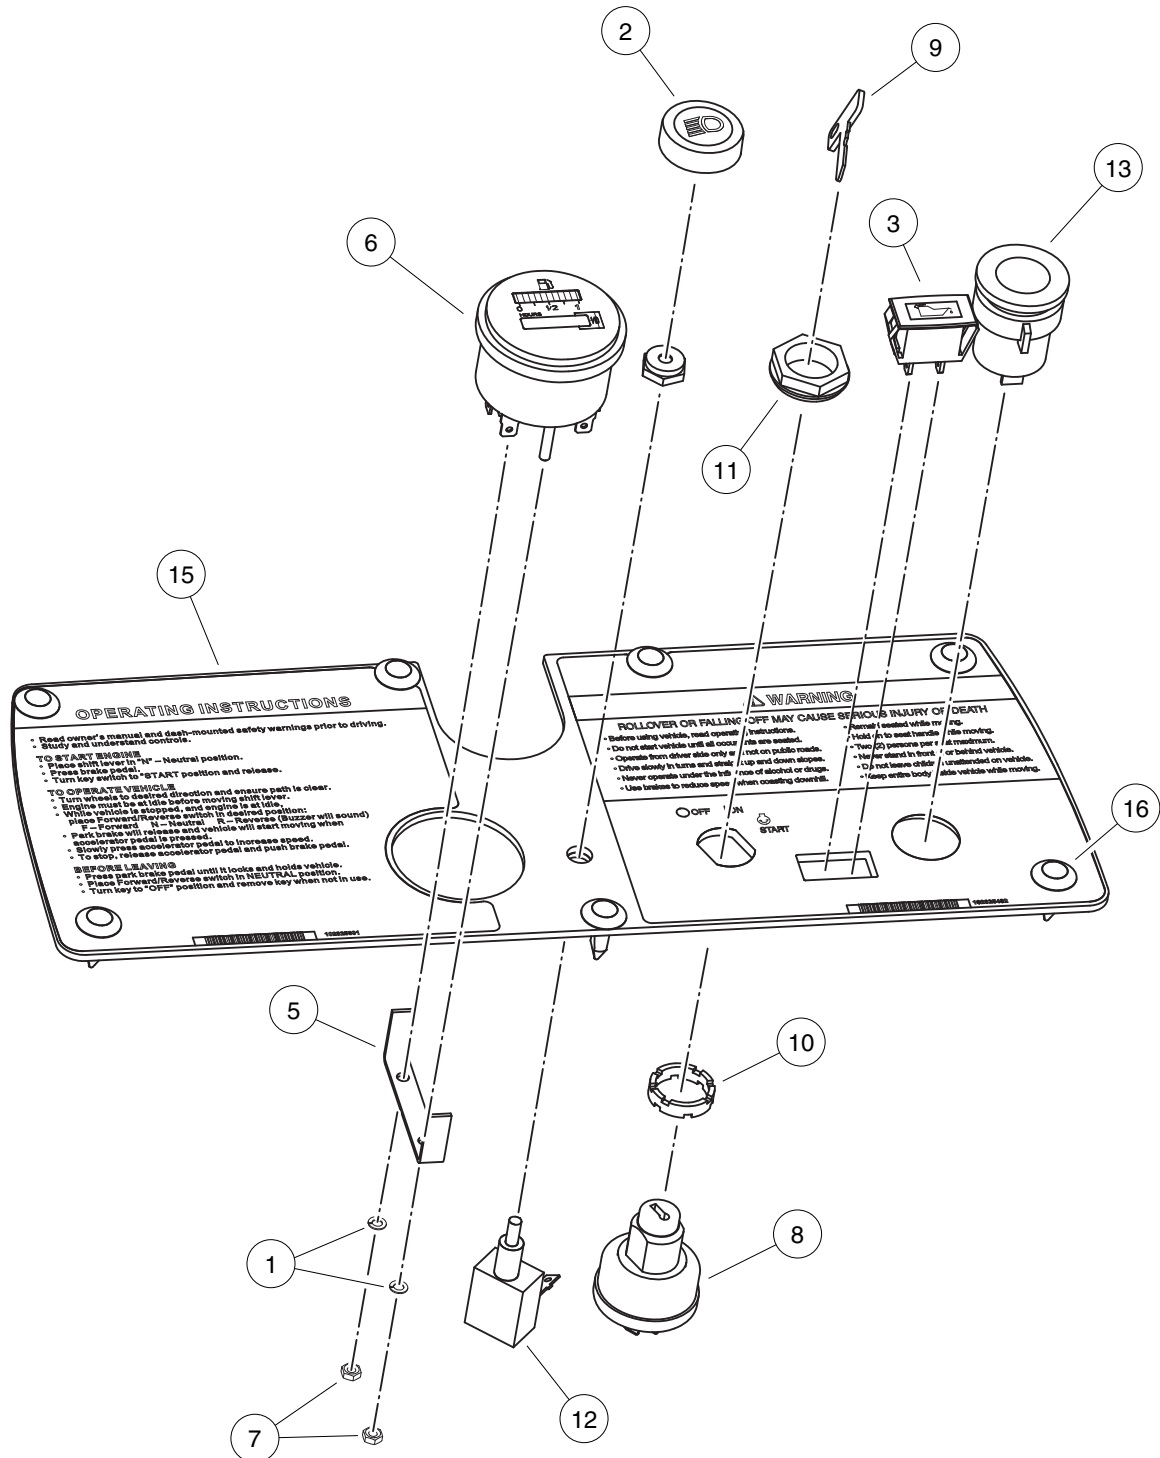

000232-001

INSTRUMENT PANEL – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	1012986	Lockwasher, M4	2	E
2	1013857	Knob, Light Switch	1	
3	1016630	Light, Oil	1	
4	101990703	Gauge, Fuel/Hour, with Bracket (includes items 5 and 6)	1	
5	102025901	Bracket, Fuel Gauge/Hour Meter	1	
6	N/A	Gauge, Fuel/Hour	1	
7	101991101	Nut, M4-0.7	2	
8	102044702	Key Switch 12v Key Start	1	
9	102044801	Key Set	1	
10	102051601	Spacer, Keyswitch	1	
11	102051701	Nut, Key Switch	1	
12	102051901	Switch, Light	1	
13	102198001	Receptacle, Accessory	1	
14	102804501	Panel, Instrument	1	
15	102804502	Panel, Instrument (with 12-Volt Accessory Outlet Cutout)	1	
16	102967901	Rivet, Removable, Tuflok 1/4"	7	
Note: Item 4 is not illustrated.				

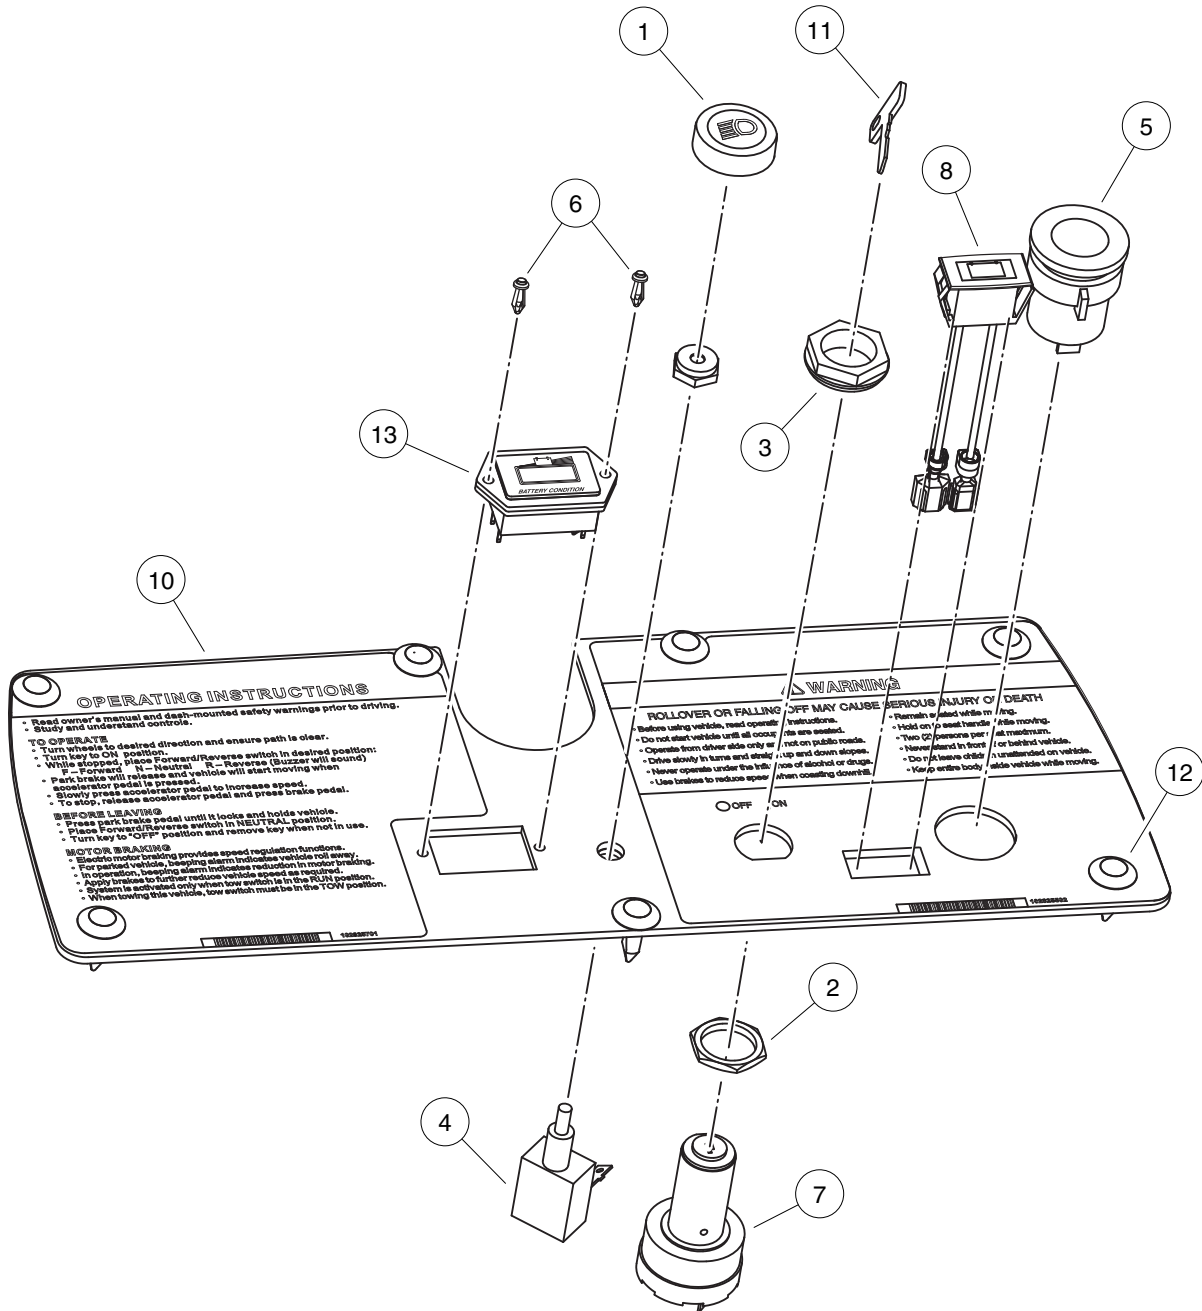

000231-001


INSTRUMENT PANEL – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	1013857	Knob, Light Switch	1	E
2	101830701	Nut, Key Switch	1	
3	102051701	Nut, Key Switch	1	
4	102051901	Switch, Light	1	
5	102198001	Receptacle, Accessory	1	
6	102499001	Rivet, Micro Tuflok	2	
7	102508601	Key Switch, Electric	1	
8	102508701	Light, Battery	1	
9	102804503	Panel, Instrument	1	
10	102804504	Panel, Instrument (With 12-Volt Accessory Outlet Cutout) *	1	
11	102830801	Set, Key	1	
12	102967901	Rivet, Removable, Tuflok 1/4"	7	
13	103200701	Battery Condition Indicator - 48V	1	
Note: Items marked with an asterisk (*) are to be used only on vehicles equipped with a 12-volt accessory outlet. Item 9 is not illustrated. This item to be used only in vehicles equipped with accessory outlets.				

4

G

E

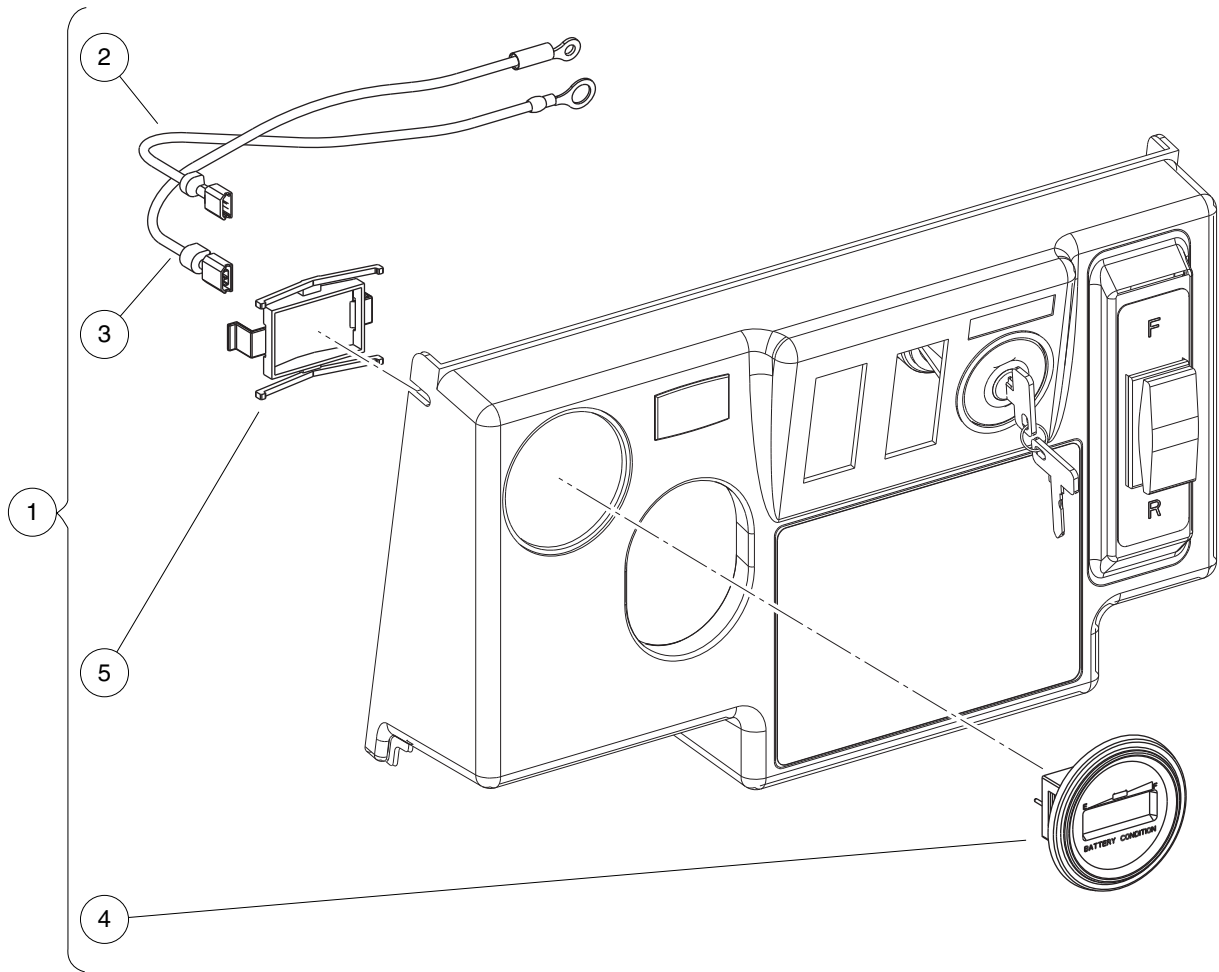

000817-002


BATTERY CONDITION INDICATOR – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	103257603	Kit, Gauge, Battery Condition Indicator (includes items 2 through 4)	1
2	103257701	Wire Asm, #18 Black, 2565mm	1
3	103257801	Wire Asm, #16 Red, 330mm	1
4	103354401	Gauge, Battery Cond Ind, Rnd (includes item 5)	1
5	103348202	Clip, Bci, Round	1

4

G

E

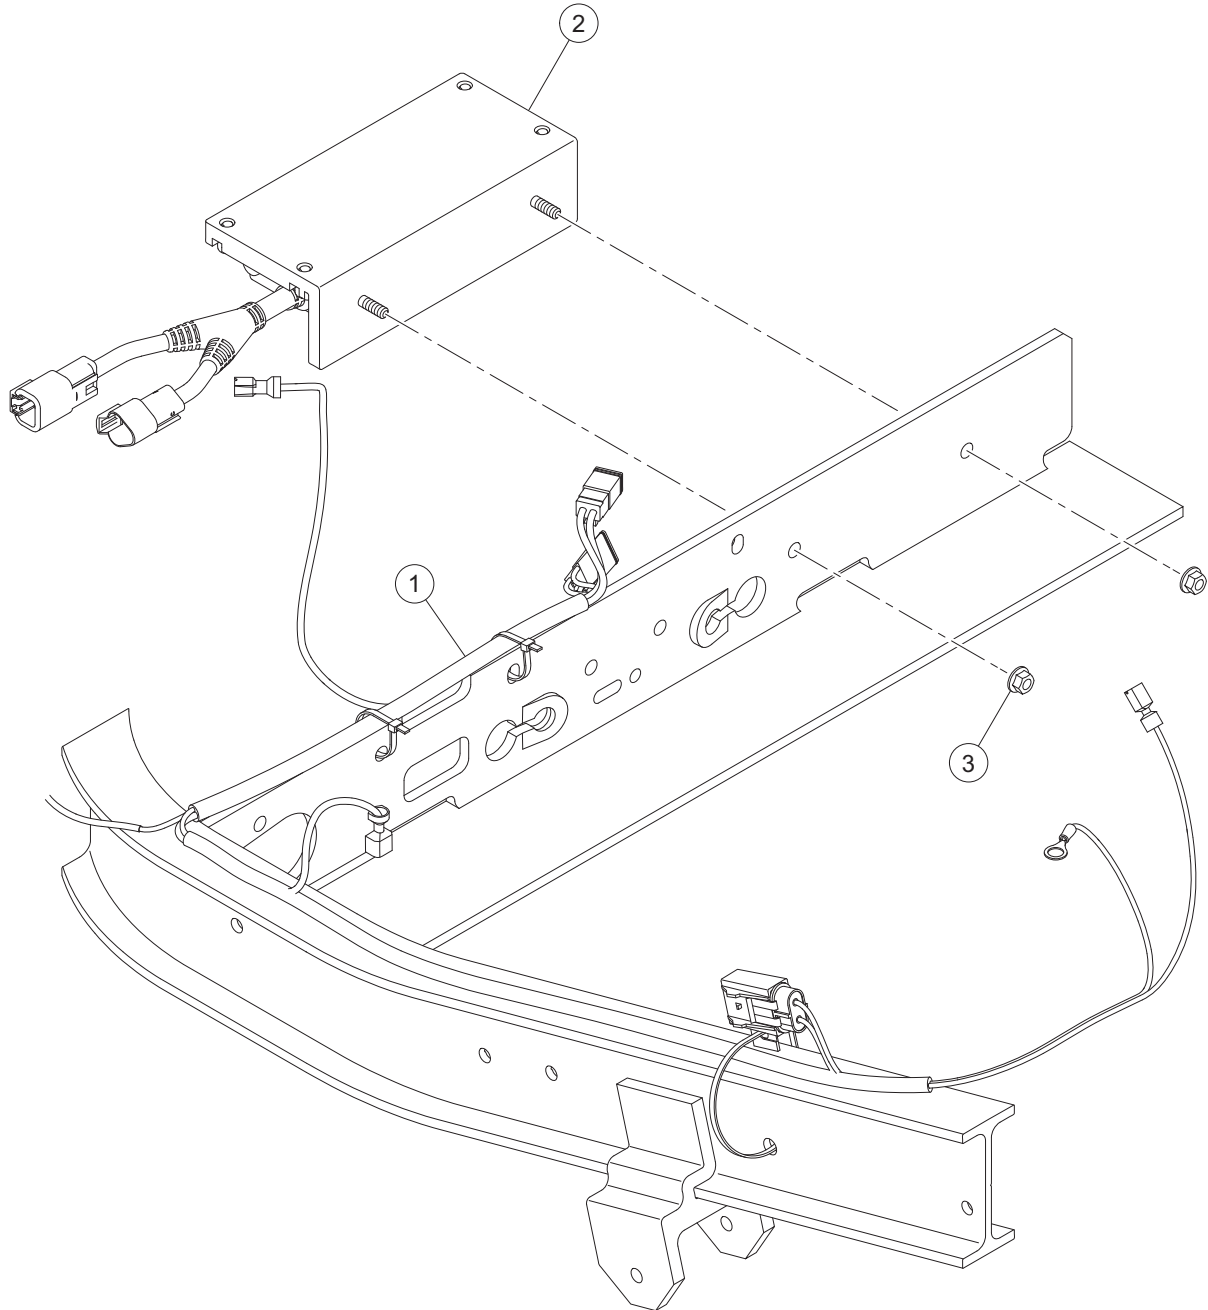


G-130299-000011

DC CONVERTER – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
1	47564778001	Harness, Dc-dc, Sb	1
2	47594727001	Converter, Dc/dc	1
3	96704176	Nut, Flanged, M6 X 1, Serrated	2


4
G
E

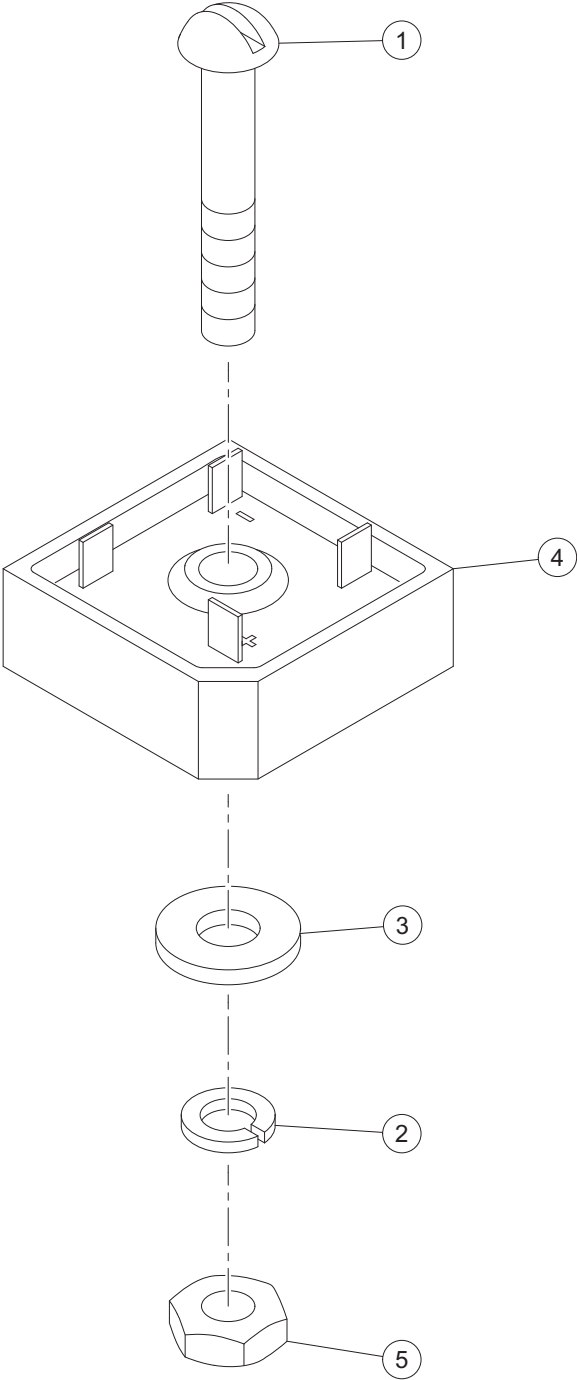

001091-001

VOLTAGE LIMITER – GASOLINE VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		4
1	1010909	Screw, #10-32 X 1.25 Rd Hd Mch	1	G
2	1016	Lockwasher, #10 Split	1	E
3	183	Washer, #10, Type A, Flat	1	
4	47604303001	Voltage Limiter, Gas	1	
5	7893	Nut, #10-32 Hex	1	

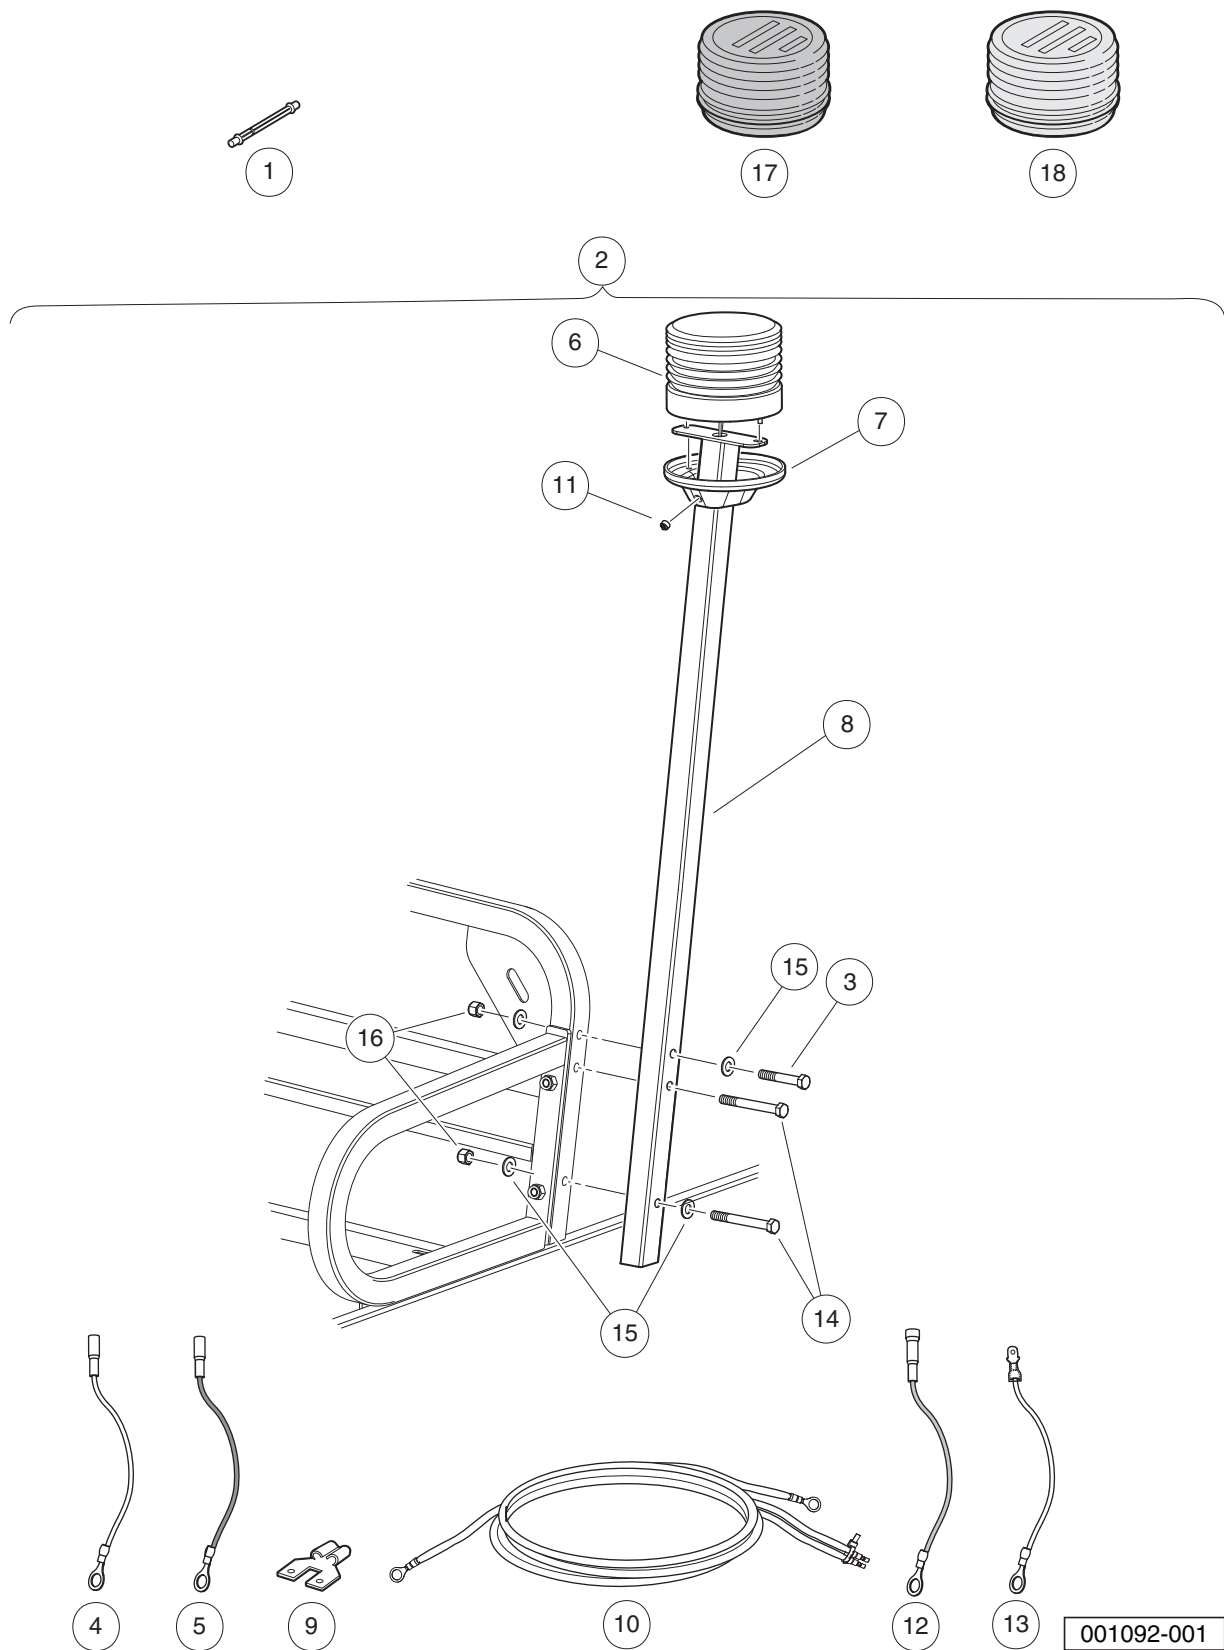

001092-001

STROBE LIGHT, POST-MOUNTED – GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	1015526	Bulb, Replacement, for Strobe Light	1	
2	1015765	Safety Strobe Lht Post Mnt Gas (includes items 3 through 16)	1	
3	1013509	Screw, 1/4-20 X 1.75 Hx Hd Cap	2	
4	1015153	Wire Assembly #16 Yellow	1	
5	1015154	Wire Assembly Blue Ca #16	1	
6	1015156	Light Assembly, Strobe	1	
7	1015157	Cover Plate Switch - Pole Ca	1	
8	1015160	Pole Weldment Carryall	1	
9	1015162	3/16 Tab Adapter Non-insul	1	
10	1015172	Wire Harness Assy, Strobe Lght	1	
11	1015187	Switch Assembly	1	
12	1016837	Wire Assembly Red #18	1	
13	1016929	Wire Assembly Black #16	1	
14	324	Screw, 1/4-20 X 2.50 Hx Hd Cap	2	
15	332	Washer, 1/4 Type A Narrow Flat	4	
16	8233	Locknut, 1/4-20, Nylon Insert	2	
17	AM1243701	Lens, Blue, for Strobe Light	1	
18	AM1243801	Lens, Red, for Strobe Light	1	

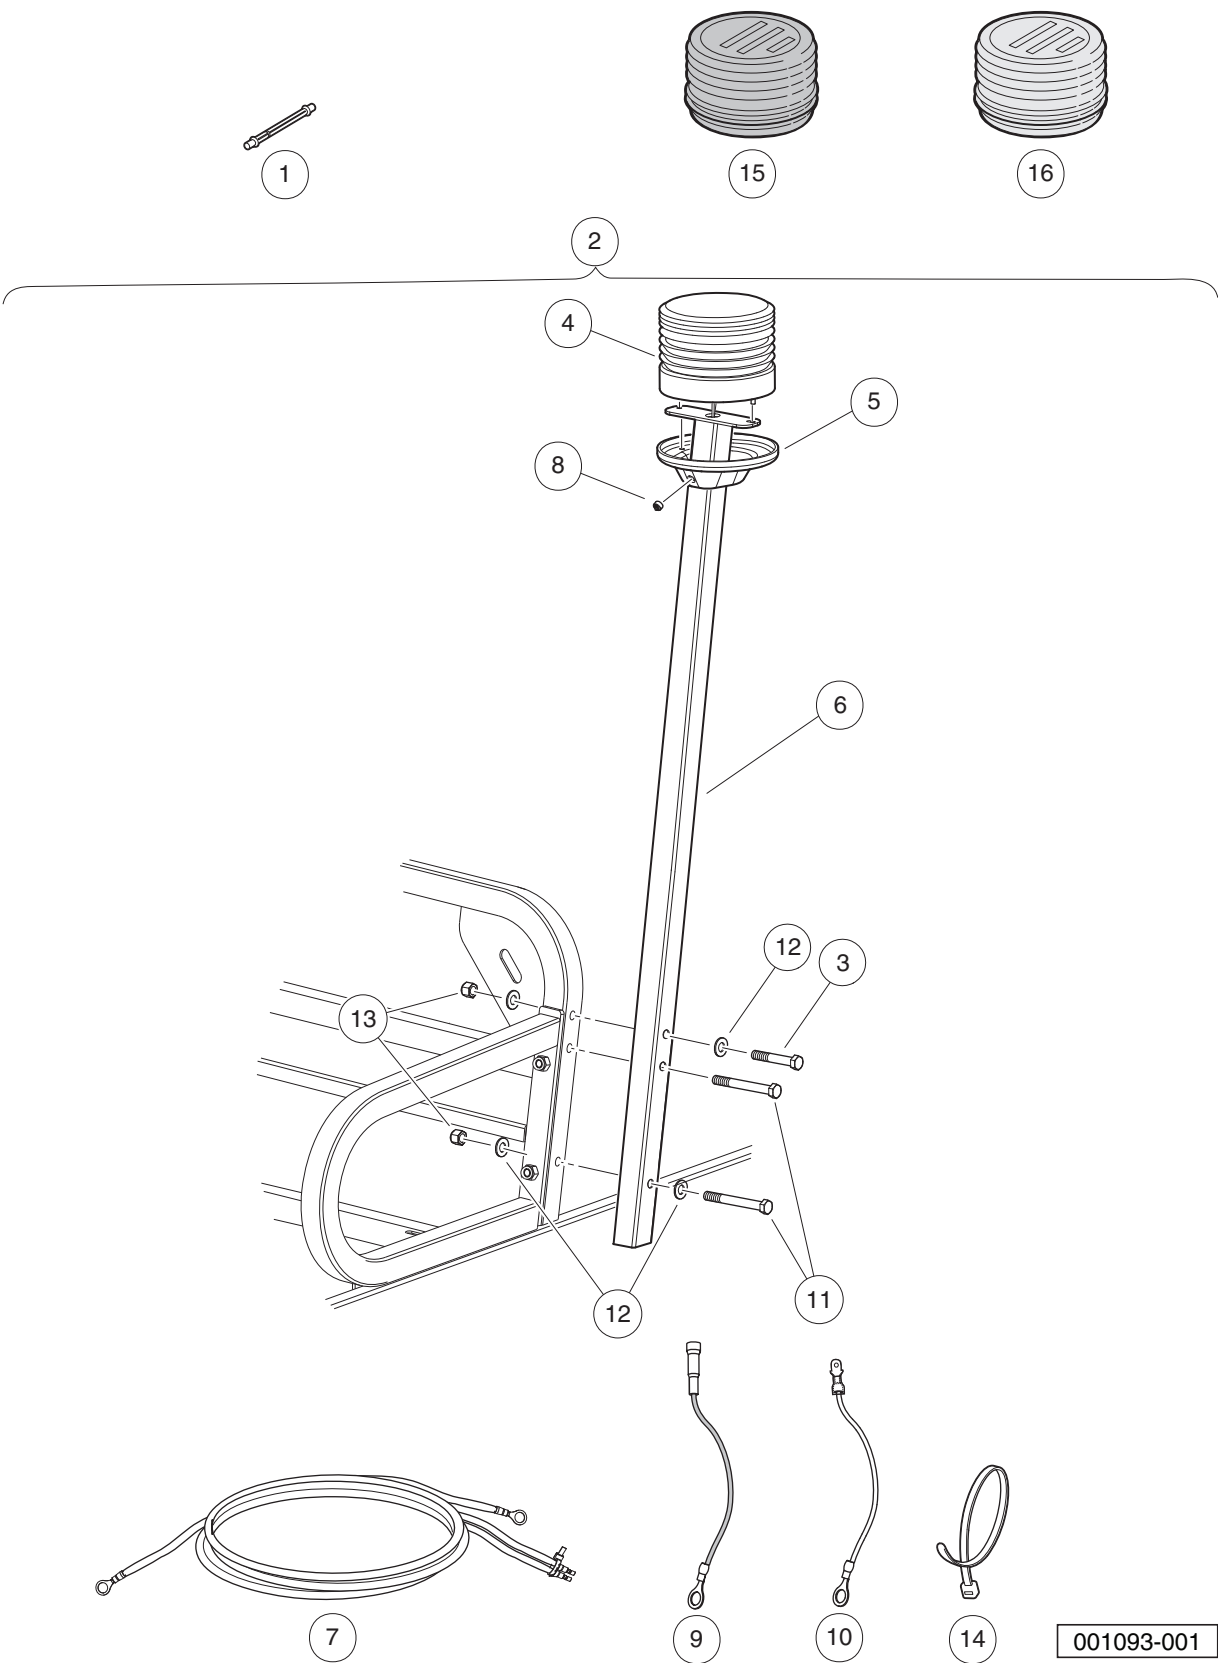

001093-001

STROBE LIGHT, POST-MOUNTED – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	1015526	Bulb, Replacement, for Strobe Light	1	E
2	101814601	Safety Strobe Lht & Post Mt El (includes items 3 through 14)	1	
3	1013509	Screw, 1/4-20 X 1.75 Hx Hd Cap	2	
4	1015156	Light Assembly, Strobe	1	
5	1015157	Cover Plate Switch - Pole Ca	1	
6	1015160	Pole Weldment Carryall	1	
7	1015172	Wire Harness Assy, Strobe Lght	1	
8	1015187	Switch Assembly	1	
9	1016837	Wire Assembly Red #18	1	
10	1016929	Wire Assembly Black #16	1	
11	324	Screw, 1/4-20 X 2.50 Hx Hd Cap	2	
12	332	Washer, 1/4 Type A Narrow Flat	4	
13	8233	Locknut, 1/4-20, Nylon Insert	2	
14	8990	Tie Wrap, 8" Nylon	4	
15	AM1243701	Lens, Blue, for Strobe Light	1	
16	AM1243801	Lens, Red, for Strobe Light	1	

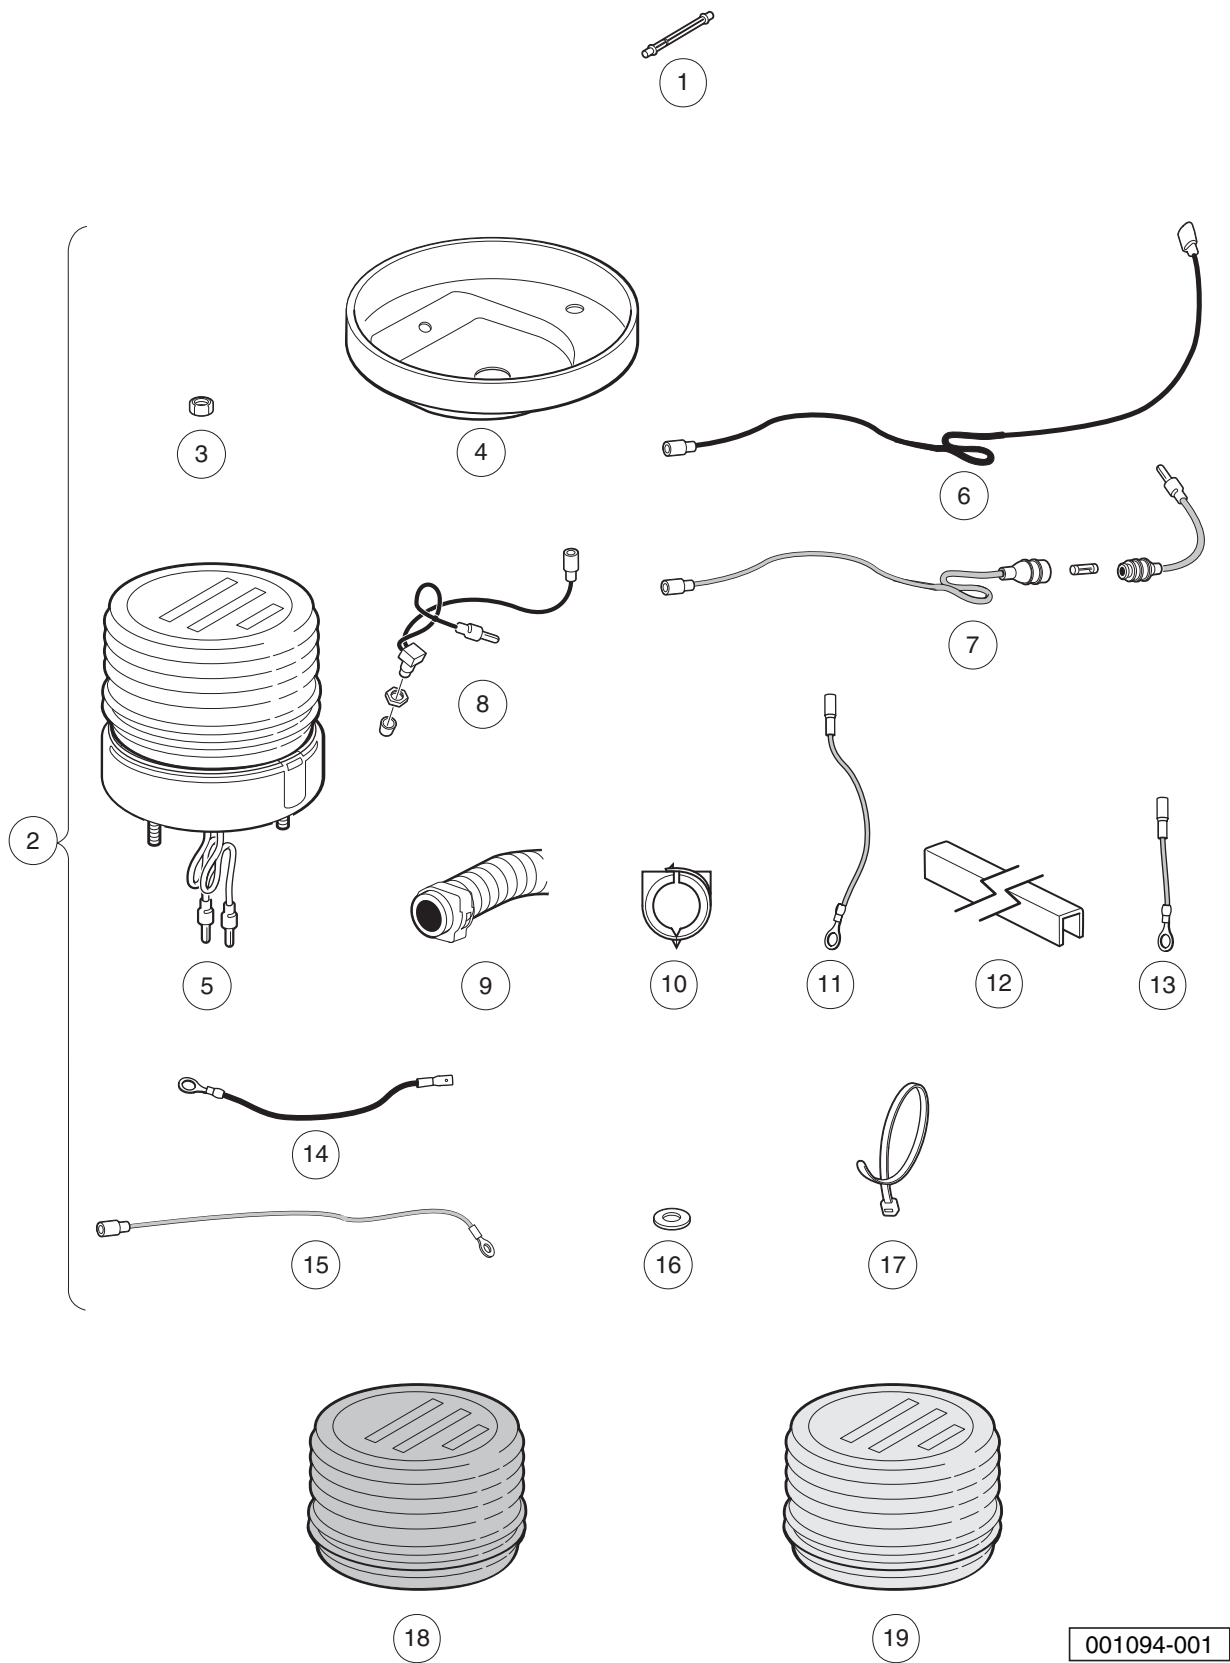

001094-001


STROBE LIGHT, CANOPY-MOUNTED

ITEM	PART NO.	DESCRIPTION	QTY	4
		1 2 3 4		G
1	1015526	Bulb, Replacement, for Strobe Light	1	E
2	AM1243501	Kit, Roof Mounted Strobe Fd (includes items 3 through 17)	A/R	
3	1012438	Locknut, #10-24 Nylon Insert	2	
4	1015010	Cover Plate Switch	1	
5	1015156	Light Assembly, Strobe	1	
6	1015167	#16 Black Wire Asm	1	
7	1015170	Wire Assembly #16	1	
8	1015187	Switch Assembly	1	
9	1015768	Split Convolute Elec Conduit	11	
10	1015770	Outlet Ring - .5 Diameter	5	
11	1016230	Wire Asm #16 Red	1	
12	1016267	Snap On Conduit Vert.	1	
13	1016287	Wire Asm #16 Red	1	
14	1016929	Wire Assembly Black #16	1	
15	101821601	#18 Red Wire Assembly	1	
16	183	Washer, #10, Type A, Flat	2	
17	8639	Tie Wrap, 11" Nylon	8	
18	AM1243701	Lens, Blue, for Strobe Light	A/R	
19	AM1243801	Lens, Red, for Strobe Light	A/R	

4

G

E

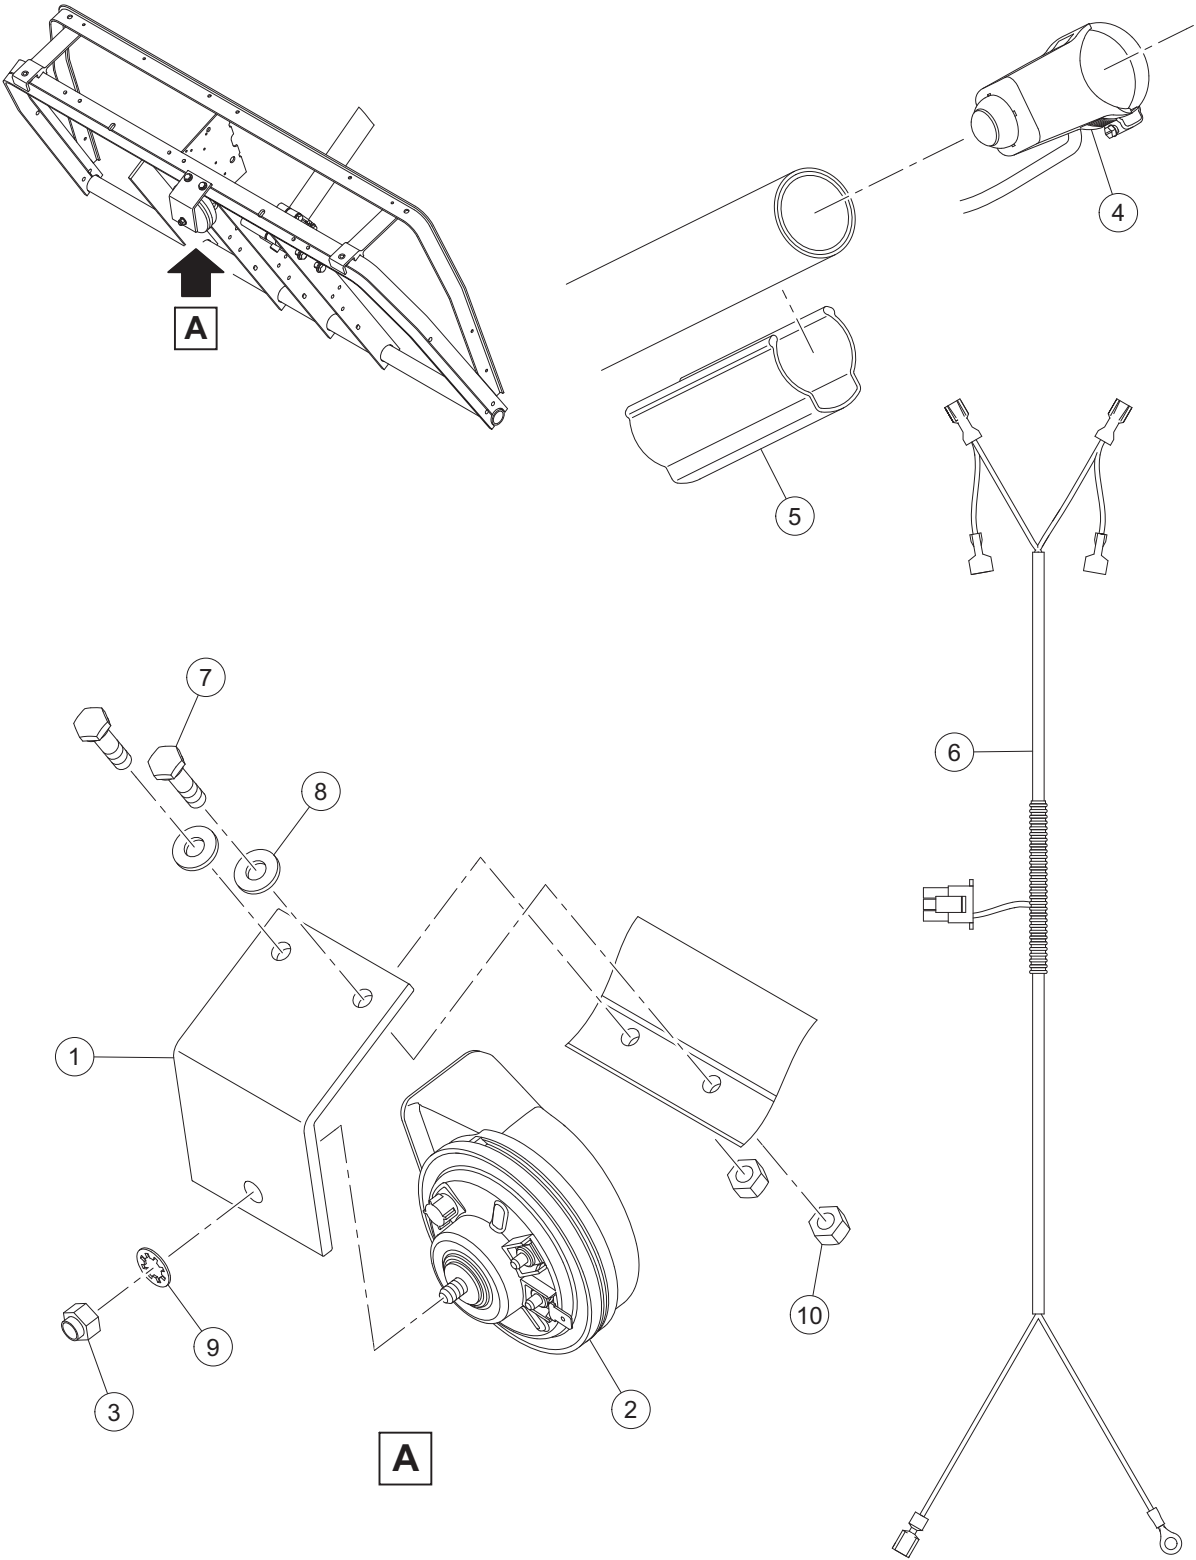

G-130699-000011

HORN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011825	Horn Bracket	1
2	1014530	Horn, 12-VDC	1
3	101955101	Nut, M6 Hex	1
4	102517601	Subasm, Horn Button Harness	1
5	102529202	Wire Cover-steer Column 85mm	1
6	103295301	Harness, Jumper, Horn, Sm Utl	1
7	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
8	332	Washer, 1/4 Type A Narrow Flat	2
9	7820	Washer, 5/16 Internal-Tooth	1
10	8233	Locknut, 1/4-20, Nylon Insert	2

4


G

E

4

G


E

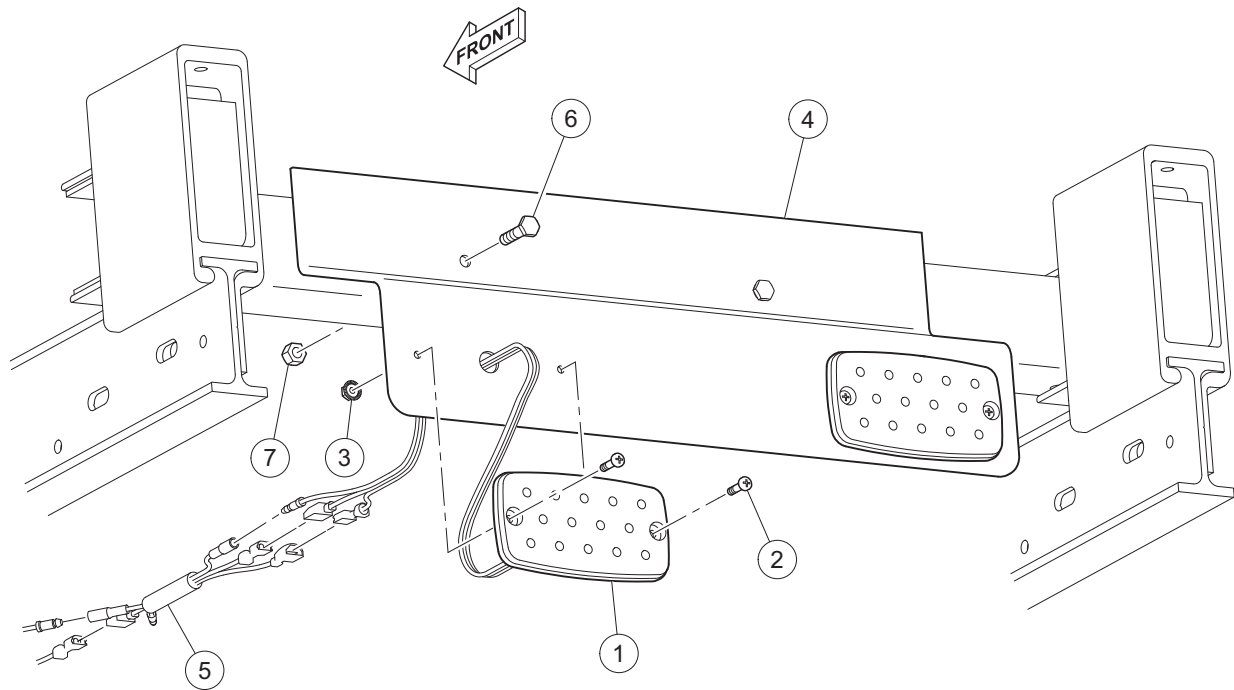

G-130699-000013

TAILLIGHTS – LED

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	105165801	Lamp, Stop/trn/tail, Footdeck	2	
2	105190601	Screw, #8-32 X 0.625, Clr Znc	4	
3	105190701	Nut, Flanged, #8-32, Serrated	4	
4	47607758001	Bracket, Tail Light, Support	1	
5	47613326001	Harness, Jumper, Tail Lt, Ca	2	
6	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
7	8233	Locknut, 1/4-20, Nylon Insert	2	
Note: There are different tail light options. Make sure to validate the correct replacement for your vehicle.				

E

TAILLIGHTS – STANDARD VERSION

ITEM	PART NO.	DESCRIPTION	QTY	4 G E
		1 2 3 4		
1	102852501	Kit, Tail Lights (includes items 2 through 12)	1	
2	1015752	Screw, #12-16 X 0.625, Hi-Lo	4	
3	1016717	Light Assembly, Stop/Taillight (includes items 4 through 8)	2	
4	1011582	Taillight Bulb	1	
5	N/A	Housing, Taillight	1	
6	N/A	Gasket, Taillight	1	
7	N/A	Lens, Taillight	1	
8	N/A	Screw, Taillight Lens	2	
9	101835601	Locknut, 1/4-20 Hex Whiz	2	
10	102909901	Support, Tail Light	1	
11	102911601	Asm, Wire Harness	1	
12	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2	
Note: There are different tail light options. Make sure to validate the correct replacement for your vehicle.				


4

G

E

BRAKE SYSTEM


5
G
E

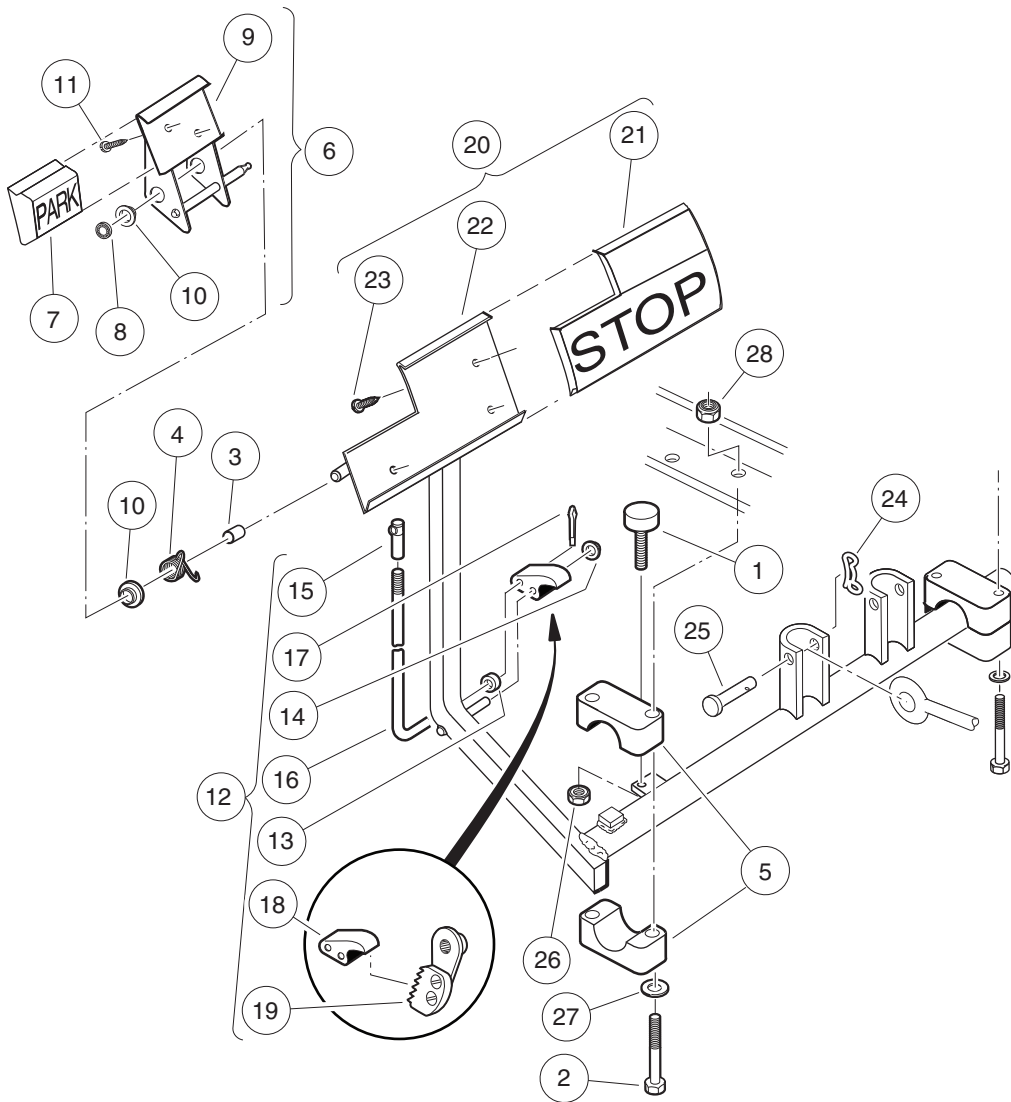

000187-001

BRAKE PEDAL ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY	5
		1 2 3 4		G
1	1010878	Bumper, Rubber	1	E
2	1010921	Screw, 5/16-18 X 2.50 Hex Cap	4	
3	1010927	Hill Brake Spacer	1	
4	1010933	Spring, Hill Brake Torsion	1	
5	1011402	Package, Brake Mounting Block	1	
6	1011418	Kit, Hill Brake Pedal (includes items 7 through 11)	1	
7	1013870	Pad, Hill Brake	1	
8	1013876	Pushnut, 3/8	1	
9	N/A	Hill Brake Weld Assembly	1	
10	1032	Bushing, Nylon	2	
11	7716	Screw, #10-16 Type AB, Sheet Metal	2	
12	101187702	Kit, Hill Brake Latch (includes items 13 through 19)	1	
13	1010805	Sleeve, Hill Brake Rod	1	
14	1010877	Pushnut, 3/8	1	
15	1010932	Ball Joint, 1/4-28	1	
16	N/A	Rod, Hill Brake	1	
17	1017029	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1	
18	N/A	Pawl, Hill Brake	1	
19	101918501	Ratchet Assembly	1	
20	101878201	Brake Pedal Kit (includes items 21 through 23)	1	
21	1013869	Pad, Brake Pedal	1	
22	N/A	Weldment, Brake Pedal, 2wr Std	1	
23	7716	Screw, #10-16 Type AB, Sheet Metal	3	
24	102323101	Pin, Bow Tie Locking	1	
25	102323201	Pin, 3/8 X 1-5/16 Clevis	1	
26	1028	Nut, 1/4-20 Hex	1	
27	1241	Washer, 5/16 Type A Flat	4	
28	7473	Locknut, 5/16-18 Nylon Insert	4	

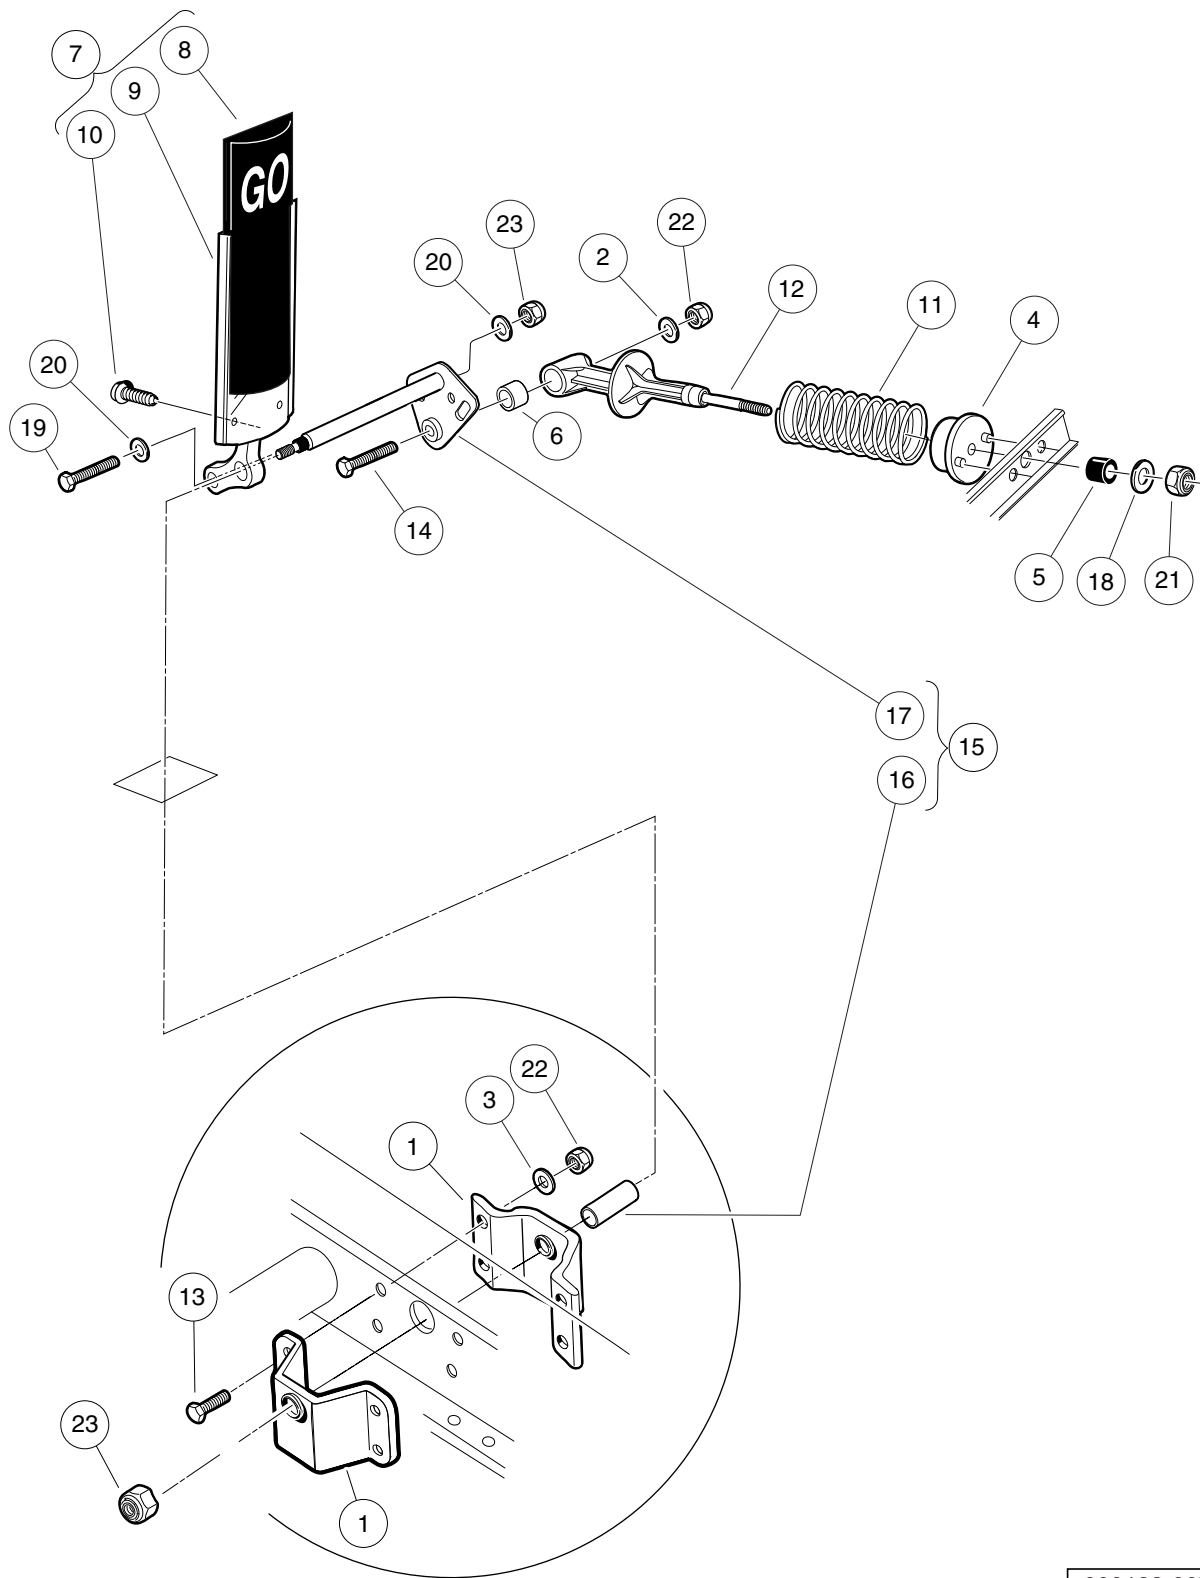

000188-007

ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES WITH MCOR


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	1011694	Accelerator Bracket and Bearing Assembly	2	
2	1011931	Washer, 1/4 Flat	1	
3	1014007	Washer, 1/4, Flat	4	
4	1017378	Cup, Spring	1	
5	1017380	Bumper, Spring Return	1	
6	1017424	Bearing, Pivot Support	1	
7	1017696	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	101817401	Retainer, Spring	1	
13	101861901	Screw, 1/4-20 X 1.125 Hex Cap	4	
14	101862001	Screw, 1/4-20 X 1.500 Flange	1	
15	102026001	Kit, Accelerator Pivot Rod Assembly (includes items 16 and 17)	1	
16	101919801	Spacer, Accelerator	1	
17	102158901	Pivot Rod Weldment	1	
18	1241	Washer, 5/16 Type A Flat	1	
19	1624	Screw, 3/8-16 X 1.50, Hex-Head Cap	1	
20	334	Washer, 3/8, Type A, Flat	2	
21	7473	Locknut, 5/16-18 Nylon Insert	1	
22	8233	Locknut, 1/4-20, Nylon Insert	5	
23	8754	Locknut, 3/8-16 Hex	2	

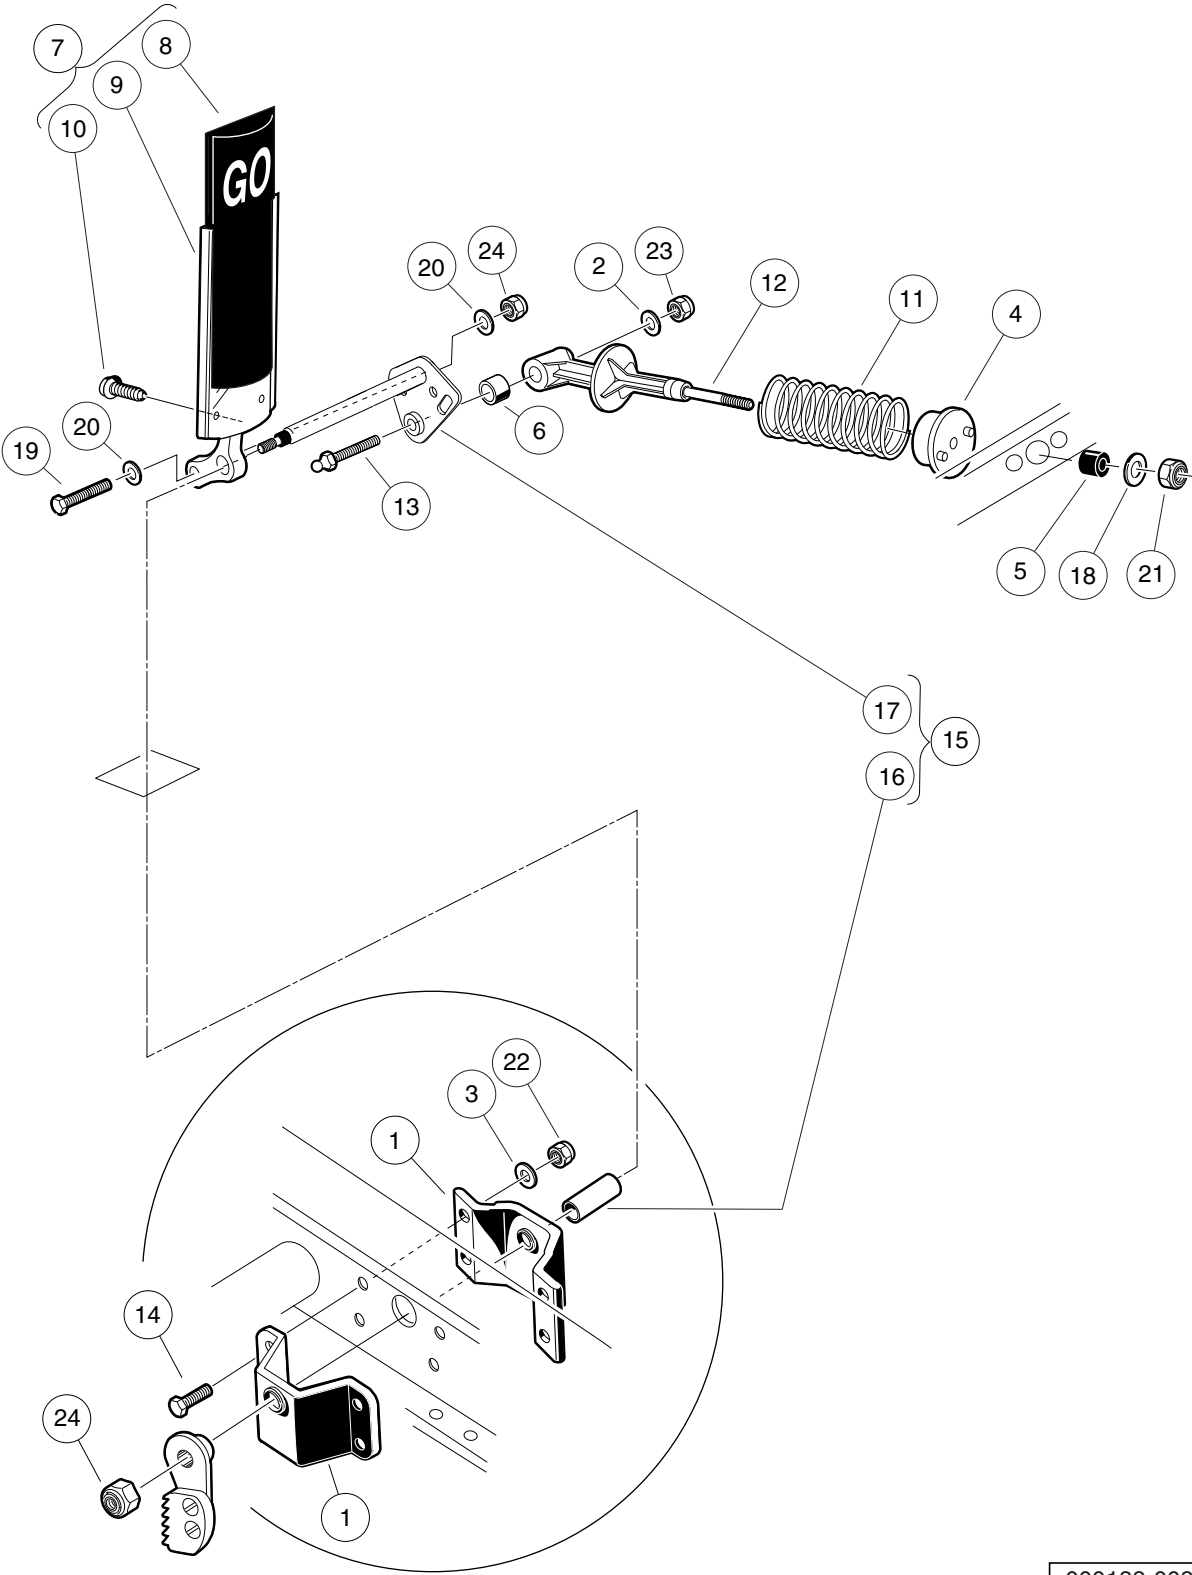

000188-008

ACCELERATOR PEDAL ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	1011694	Accelerator Bracket and Bearing Assembly	2	
2	1011931	Washer, 1/4 Flat	1	
3	1014007	Washer, 1/4, Flat	4	
4	1017378	Cup, Spring	1	
5	1017380	Bumper, Spring Return	1	
6	1017424	Bearing, Pivot Support	1	
7	1017696	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1	
8	1013871	Pad, Accelerator Pedal	1	
9	N/A	Accelerator Pedal Weldment	1	
10	7716	Screw, #10-16 Type AB, Sheet Metal	4	
11	101796201	Spring, Accelerator Return	1	
12	101817401	Retainer, Spring	1	
13	101818801	Stud, 1/4-28 X 1.35 Ball	1	
14	101861901	Screw, 1/4-20 X 1.125 Hex Cap	4	
15	102026001	Kit, Accelerator Pivot Rod Assembly (includes items 16 and 17)	1	
16	101919801	Spacer, Accelerator	1	
17	102158901	Pivot Rod Weldment	1	
18	1241	Washer, 5/16 Type A Flat	1	
19	1624	Screw, 3/8-16 X 1.50, Hex-Head Cap	1	
20	334	Washer, 3/8, Type A, Flat	2	
21	7473	Locknut, 5/16-18 Nylon Insert	1	
22	8233	Locknut, 1/4-20, Nylon Insert	4	
23	8717	Locknut, Nylon Insert, 1/4-28	1	
24	8754	Locknut, 3/8-16 Hex	2	

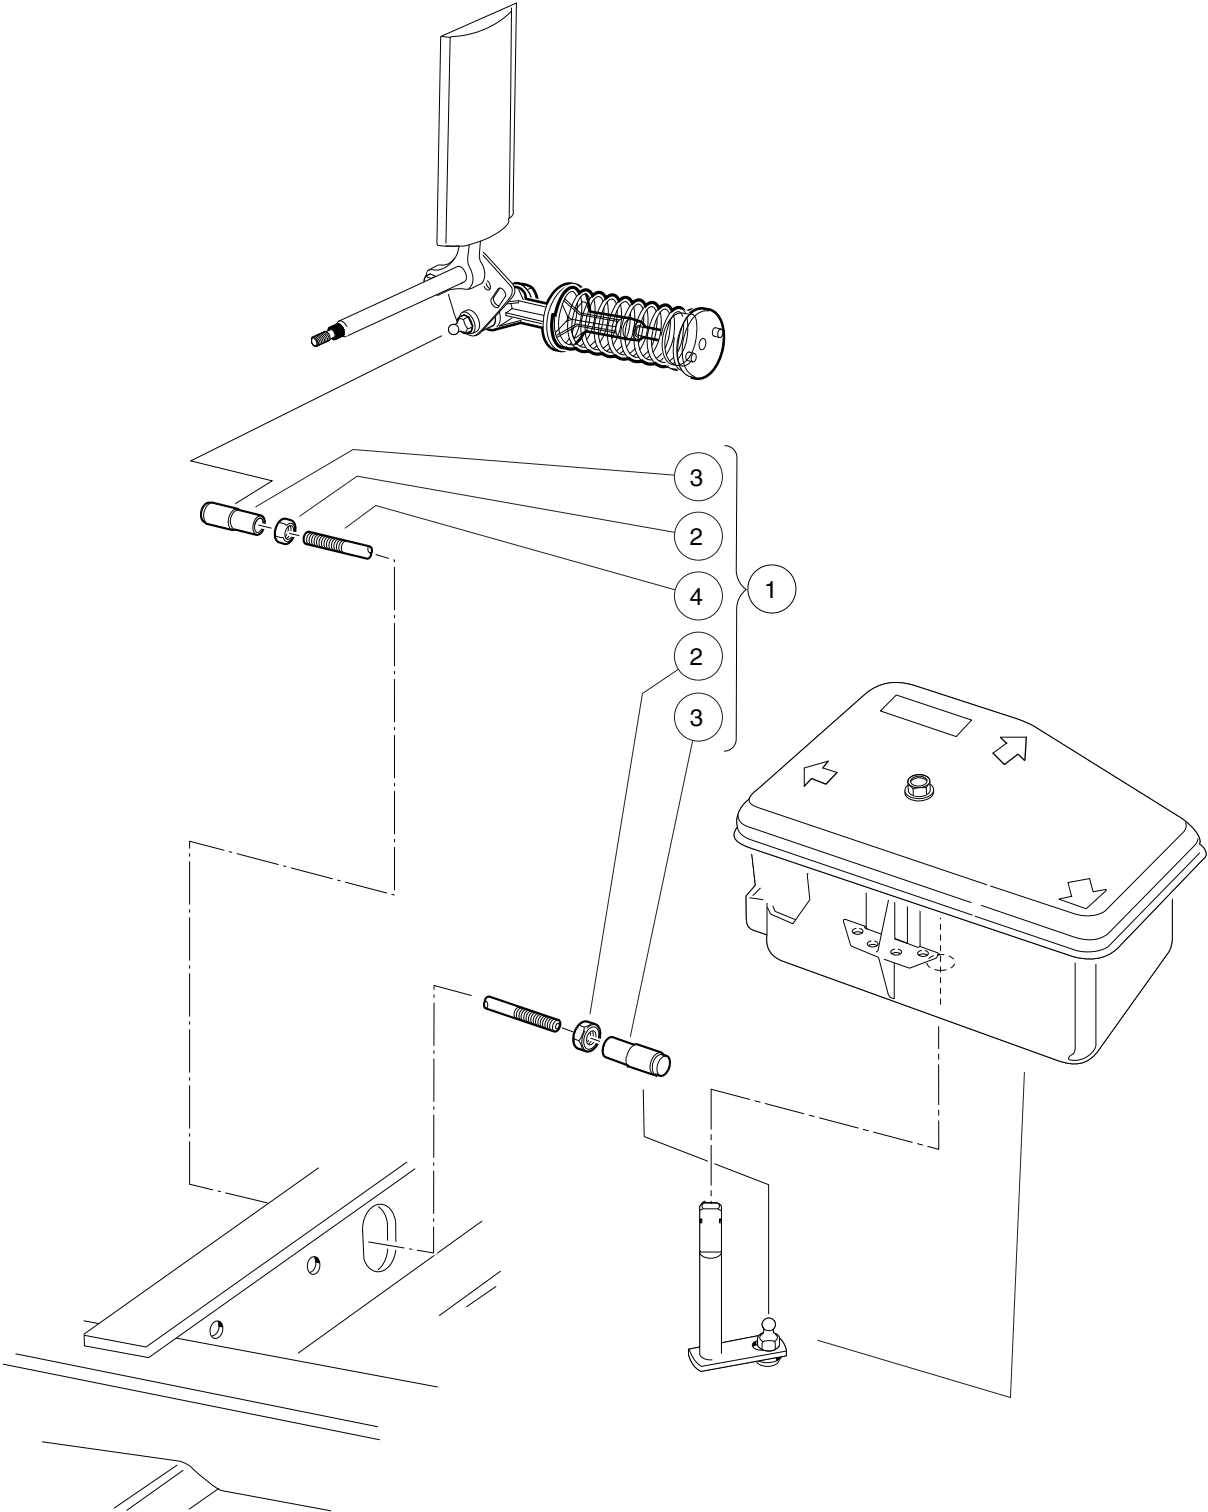

000362-001


ACCELERATOR ROD – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101912401	Rod, Accelerator (includes items 2 through 4)	1
2	1011084	Nut, 1/4-28 Hex Jam	2
3	1011734	Joint, Ball	2
4	N/A	Accelerator Rod	1

5

G


E

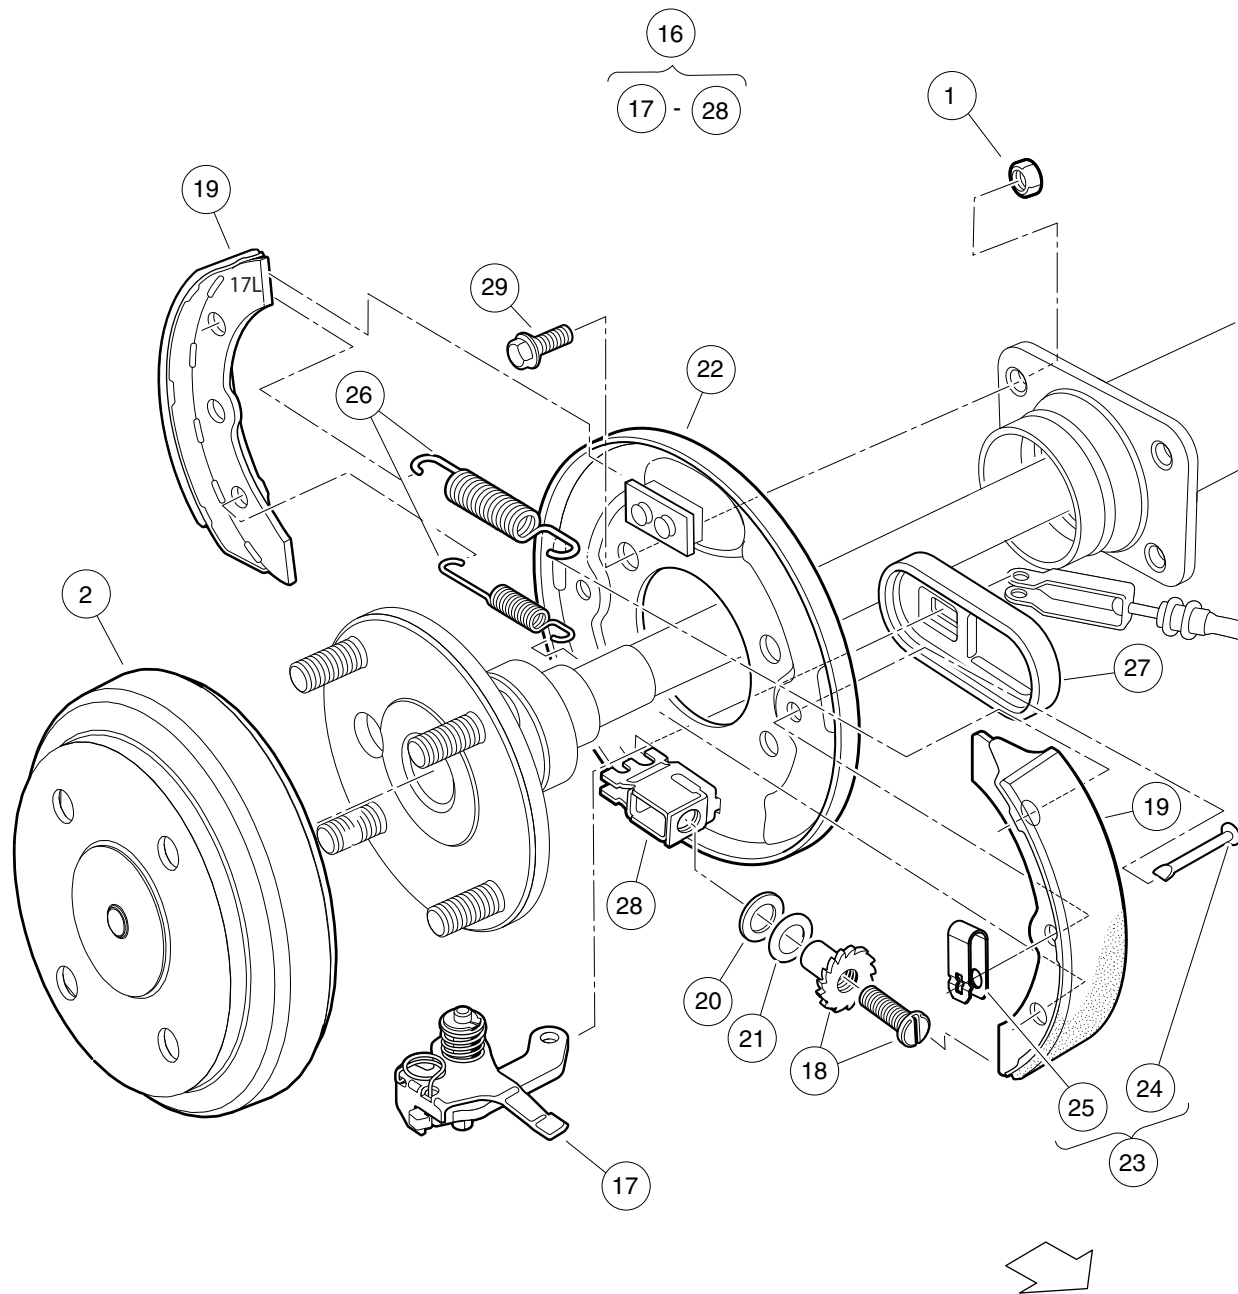

000186-006

REAR BRAKES, SELF-ADJUSTING – ELECTRIC VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	1013924	Nut, 5/16-24, Hex Head Cone	8	
2	101791101	Drum without Center Hole, Brake	2	
3	103380201	Asm, Brake Cluster, Mech, Drvr (includes items 4 through 15)	1	
4	101815502	Lever Assembly, Self-Adjusting Brake, Left	1	
5	101816502	Adjusting Mechanism, Self-Adjusting Brake, Left	1	
6	101823201	Package, Brake Shoe, Self-Adjusting	1	
7	101823801	Plate, Washer, Brake, Self-Adjusting	1	
8	101823901	Washer, Brake, Self-Adjusting	1	
9	103483102	Backing Plate, Driver-side	1	
10	103483201	Kit, Shoe Retainer (includes items 11 and 12)	1	
11	N/A	Pin	2	
12	N/A	Spring, Shoe, Clamp	2	
13	103483401	Package Brake Spring Self Adj	1	
14	103483601	Cover, Dust	1	
15	103483701	Brake Block	1	
16	103380202	Asm, Brake Cluster, Mech, Pass (includes items 17 through 28)	1	
17	101815501	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	1	
18	101816501	Adj Mechanism, S.A. Brakes, Right (Passenger)	1	
19	101823201	Package, Brake Shoe, Self-Adjusting	1	
20	101823801	Plate, Washer, Brake, Self-Adjusting	1	
21	101823901	Washer, Brake, Self-Adjusting	1	
22	103483101	Backing Plate, Passenger-side	1	
23	103483201	Kit, Shoe Retainer (includes items 24 and 25)	1	
24	N/A	Pin	2	
25	N/A	Spring, Shoe, Clamp	2	
26	103483401	Package Brake Spring Self Adj	1	
27	103483601	Cover, Dust	1	
28	103483701	Brake Block	1	
29	47542195001	Bolt, Brake Cluster Mnt	8	
		Note: Driver-side brake cluster (items 4 -16) not shown. Components have a similar appearance to passenger-side brake cluster components.		

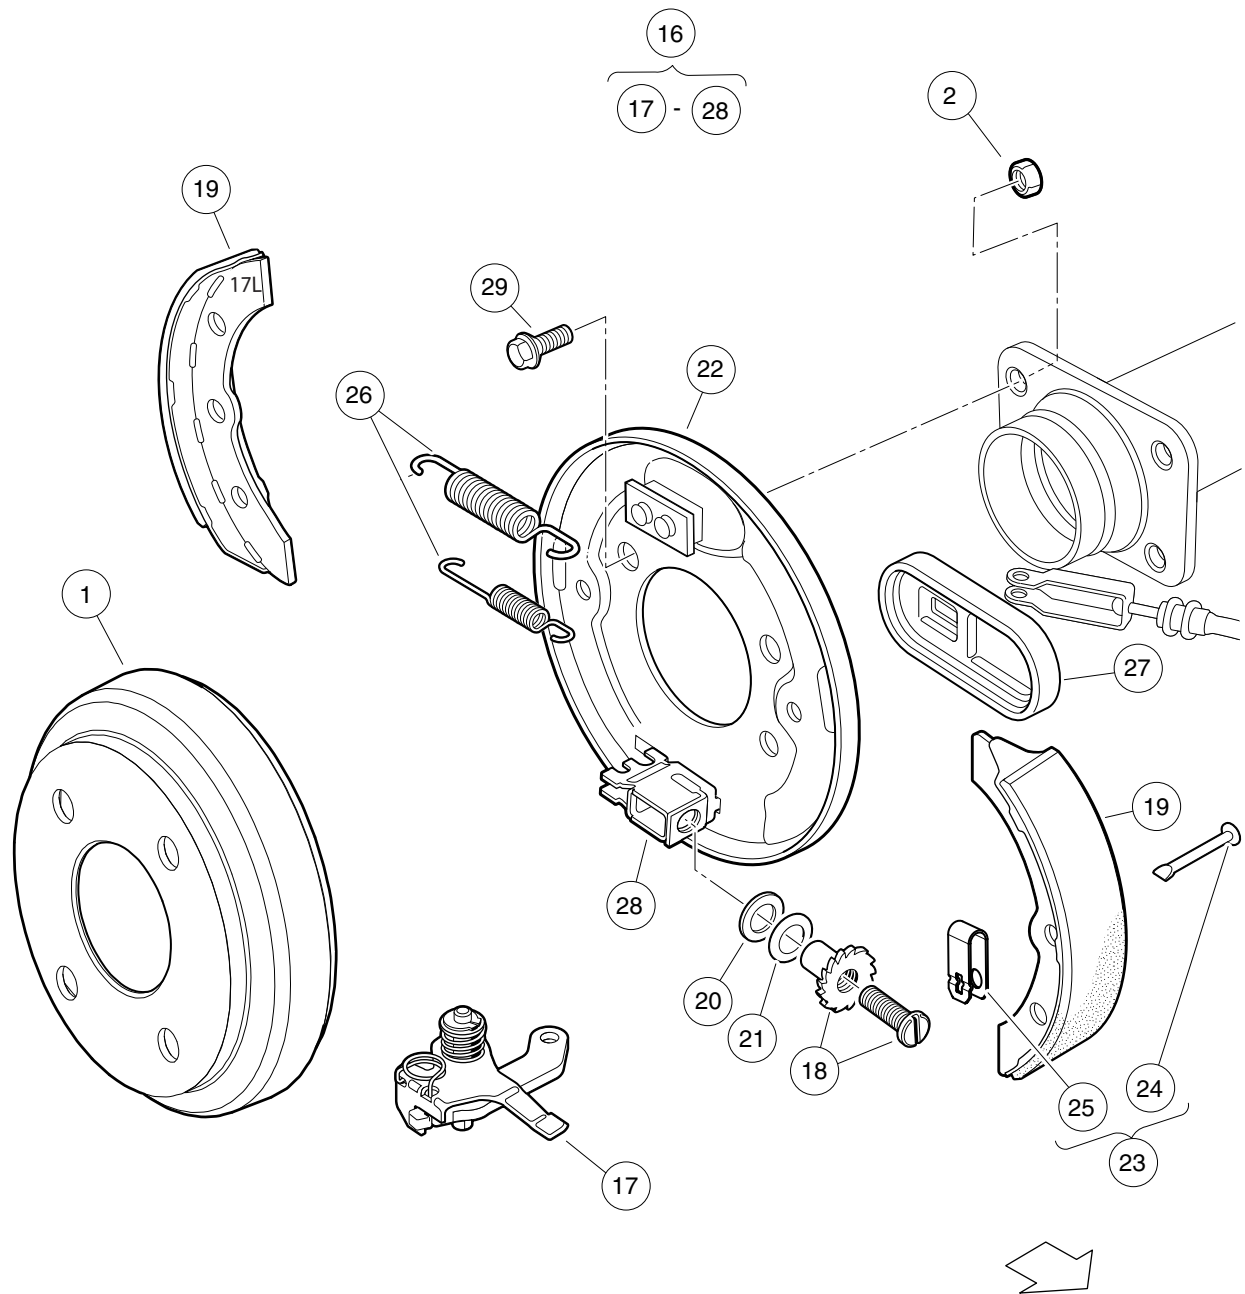

000186-007

REAR BRAKES, SELF-ADJUSTING – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	1011137	Drum, Brake	2	
2	1013924	Nut, 5/16-24, Hex Head Cone	8	
3	103380201	Asm, Brake Cluster, Mech, Drvr (includes items 4 through 15)	1	
4	101815502	Lever Assembly, Self-Adjusting Brake, Left	1	
5	101816502	Adjusting Mechanism, Self-Adjusting Brake, Left	1	
6	101823201	Package, Brake Shoe, Self-Adjusting	1	
7	101823801	Plate, Washer, Brake, Self-Adjusting	1	
8	101823901	Washer, Brake, Self-Adjusting	1	
9	103483102	Backing Plate, Driver-side	1	
10	103483201	Kit, Shoe Retainer (includes items 11 and 12)	1	
11	N/A	Pin	2	
12	N/A	Spring, Shoe, Clamp	2	
13	103483401	Package Brake Spring Self Adj	1	
14	103483601	Cover, Dust	1	
15	103483701	Brake Block	1	
16	103380202	Asm, Brake Cluster, Mech, Pass (includes items 17 through 28)	1	
17	101815501	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	1	
18	101816501	Adj Mechanism, S.A. Brakes, Right (Passenger)	1	
19	101823201	Package, Brake Shoe, Self-Adjusting	1	
20	101823801	Plate, Washer, Brake, Self-Adjusting	1	
21	101823901	Washer, Brake, Self-Adjusting	1	
22	103483101	Backing Plate, Passenger-side	1	
23	103483201	Kit, Shoe Retainer (includes items 24 and 25)	1	
24	N/A	Pin	2	
25	N/A	Spring, Shoe, Clamp	2	
26	103483401	Package Brake Spring Self Adj	1	
27	103483601	Cover, Dust	1	
28	103483701	Brake Block	1	
29	47542195001	Bolt, Brake Cluster Mnt	8	
		Note: Driver-side brake cluster (items 4 -16) not shown. Components have a similar appearance to passenger-side brake cluster components.		

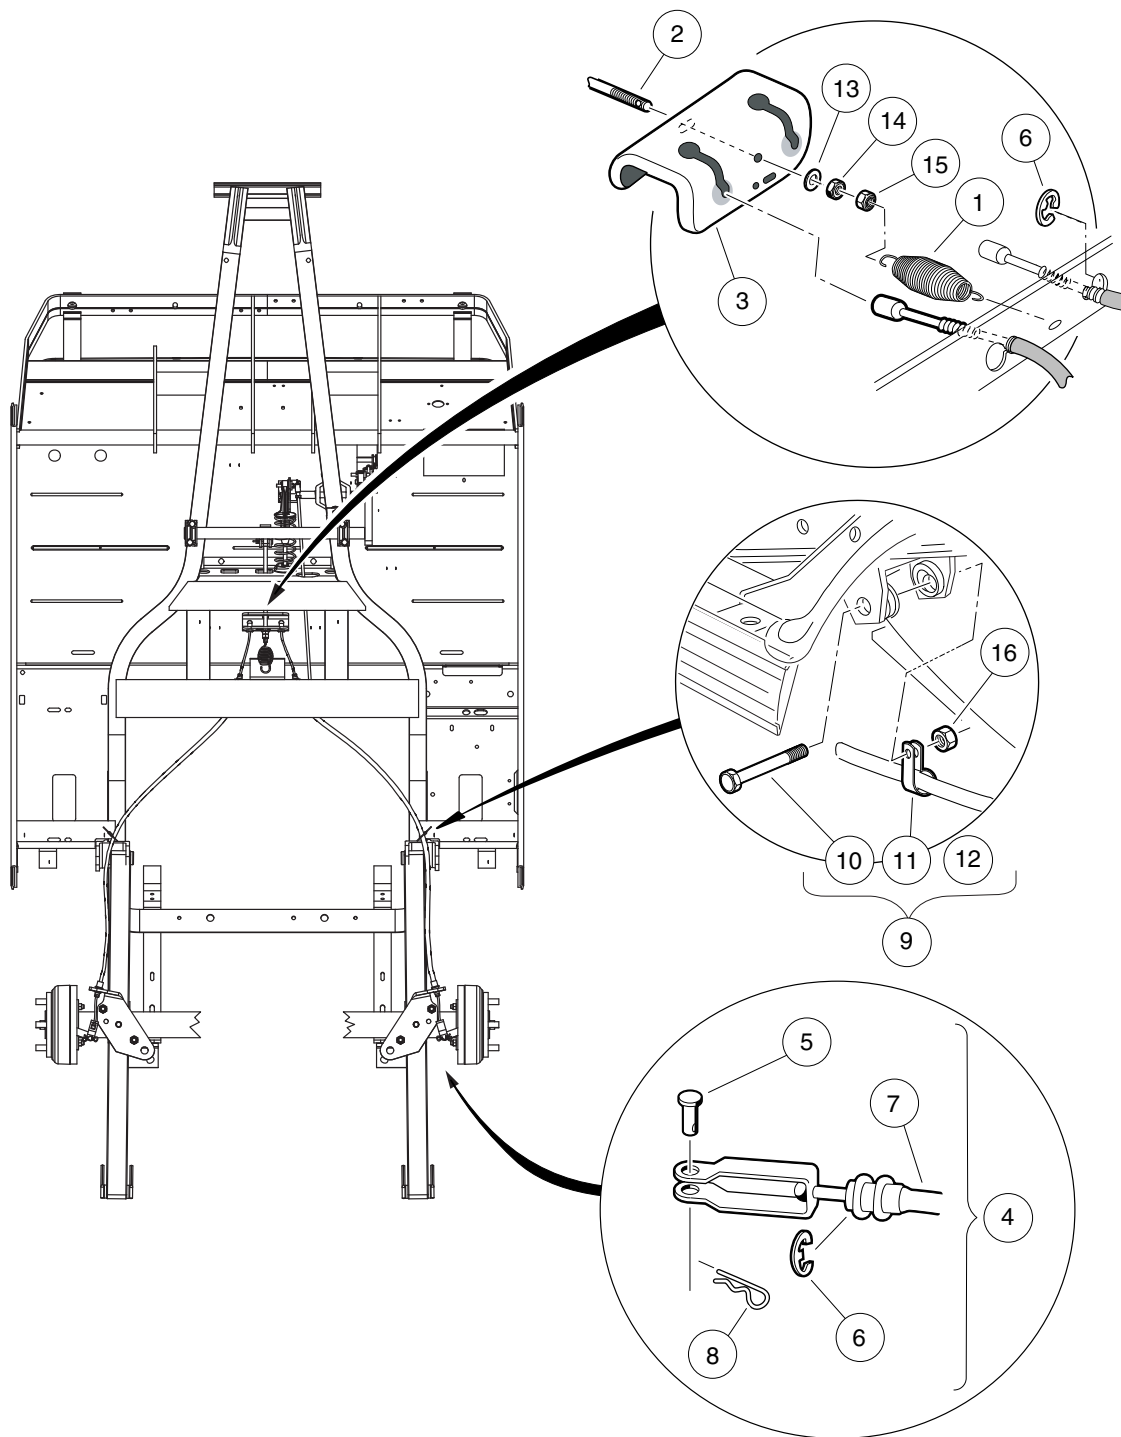

000245-002

BRAKE CABLES AND EQUALIZER

ITEM	PART NO.	DESCRIPTION	QTY	5 G E
		1 2 3 4		
1	1013531	Spring, Brake Return	1	
2	101953101	Rod, Equalizer, 8.91"	1	
3	101990801	Equalizer Bracket	1	
4	102022101	Brake Cable Kit (includes items 5 through 8)	2	
5	1010829	Pin, Clevis, 5/16 X 3/4	1	
6	1011779	E-Clip, 1/2	2	
7	N/A	Cable, Brake, 41"	1	
8	102292801	Pin, Bow Tie Locking - .072	1	
9	103377301	Kit, Field P-clamp, Brake Line (includes items 10 through 12)	1	
10	102066201	Screw, 3/8-16 X 3.50 Hex Cap	2	
11	103377201	P-clamp, Brake Line	2	
12	N/A	Instr Fd. P-clamp, Brake Line	1	
13	1241	Washer, 5/16 Type A Flat	5	
14	1242	Nut, 5/16-18 Hex	1	
15	7473	Locknut, 5/16-18 Nylon Insert	5	
16	8754	Locknut, 3/8-16 Hex	2	

5

G


E

STEERING AND SUSPENSIONS

6

G


E

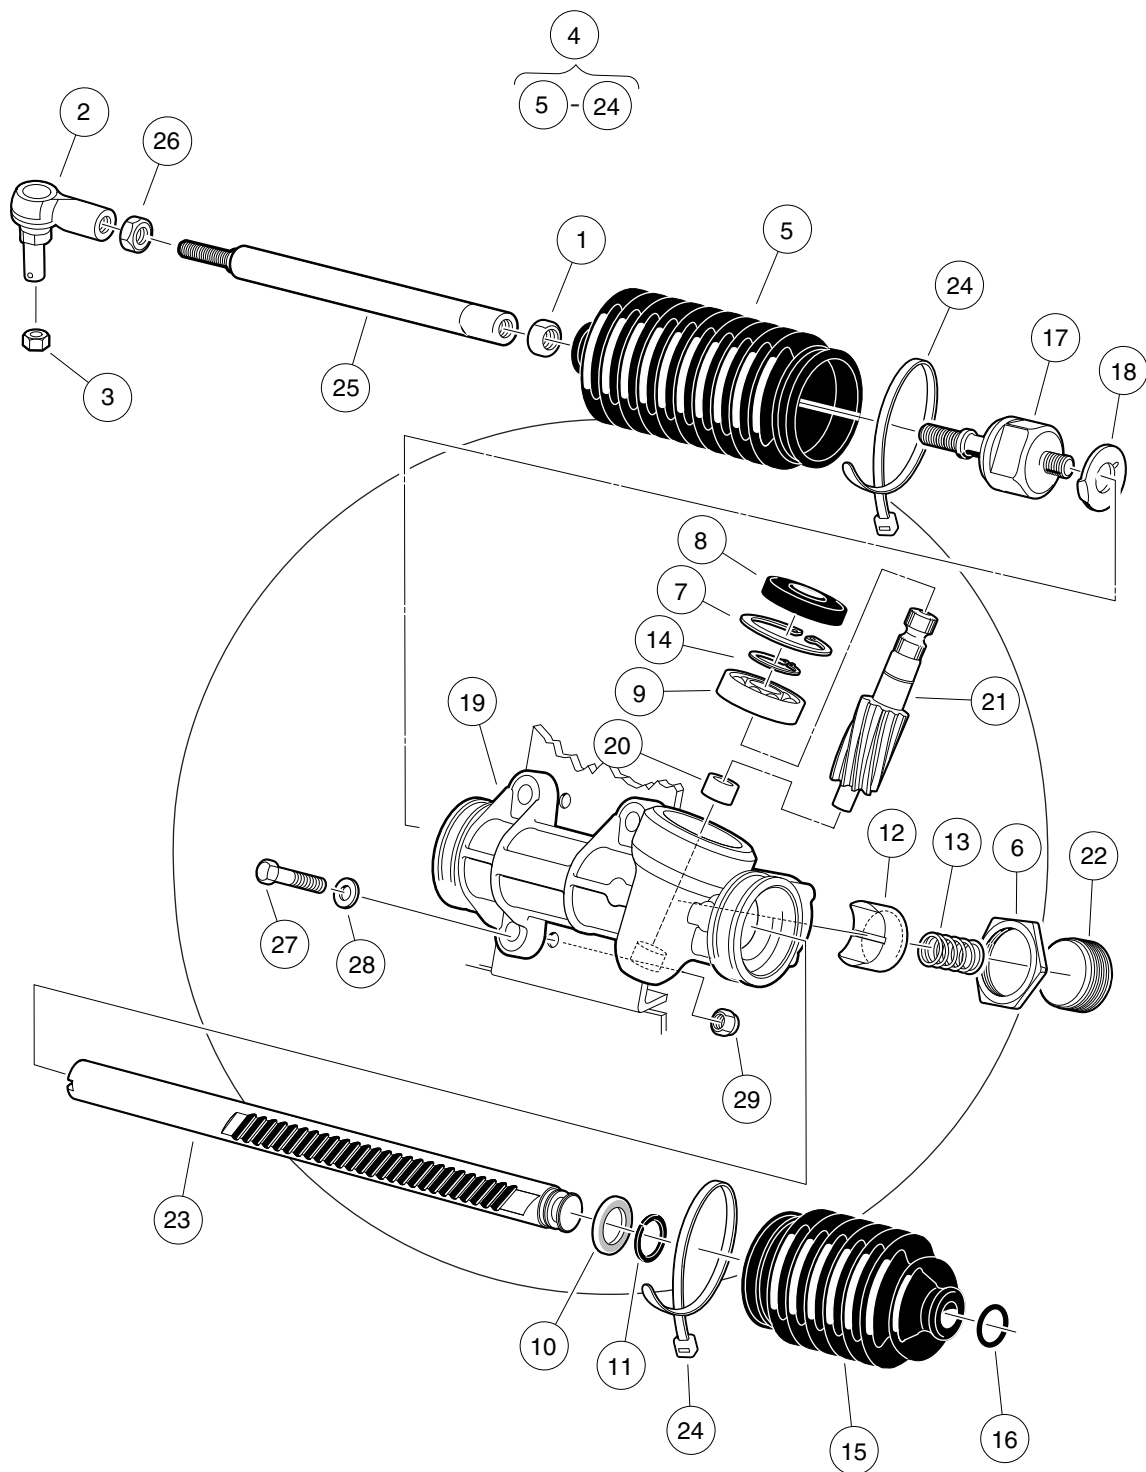

001500-002

STEERING GEAR ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	1013042	Nut, 12mm Hex	1	E
2	102022602	End, Tie Rod, M12 X 1.25, Lh	1	
3	102289201	Nut - Hex Locking, M12 X 1.25	1	
4	103601501	Asm, Steering Rack And Pinion (includes items 5 through 24)	1	
5	1013035	Bellows, Long	1	
6	1013044	Rack Screw Locknut	1	
7	N/A	Snap Ring	1	
8	1013052	Seal, Steering Pinion Dust	1	
9	101879401	Bearing, Ball	1	
10	101879501	Stop Washer	1	
11	101879601	Stop Ring, C-Type	1	
12	101879701	Support Yoke	1	
13	101879801	Rack Guide Pressure Spring	1	
14	101879901	Ring, Stop, C-Type	1	
15	101880001	Bellows, Short	1	
16	101880101	Dust Seal Retaining Ring	1	
17	101880201	Inner Ball Joint Asm	1	
18	101880301	Washer, Tab	1	
19	N/A	Box, Steering Gear	1	
20	N/A	Bearing, Lower Pinion	1	
21	N/A	Pinion, Steering	1	
22	N/A	Screw, Rack Guide	1	
23	N/A	Rack, Steering	1	
24	8990	Tie Wrap, 8" Nylon	2	
25	103653401	Link, Drag, Male Thd	1	
26	103653501	Nut, Jam, M12-1.25, Lh	1	
27	1624	Screw, 3/8-16 X 1.50, Hex-Head Cap	3	
28	334	Washer, 3/8, Type A, Flat	3	
29	8754	Locknut, 3/8-16 Hex	3	

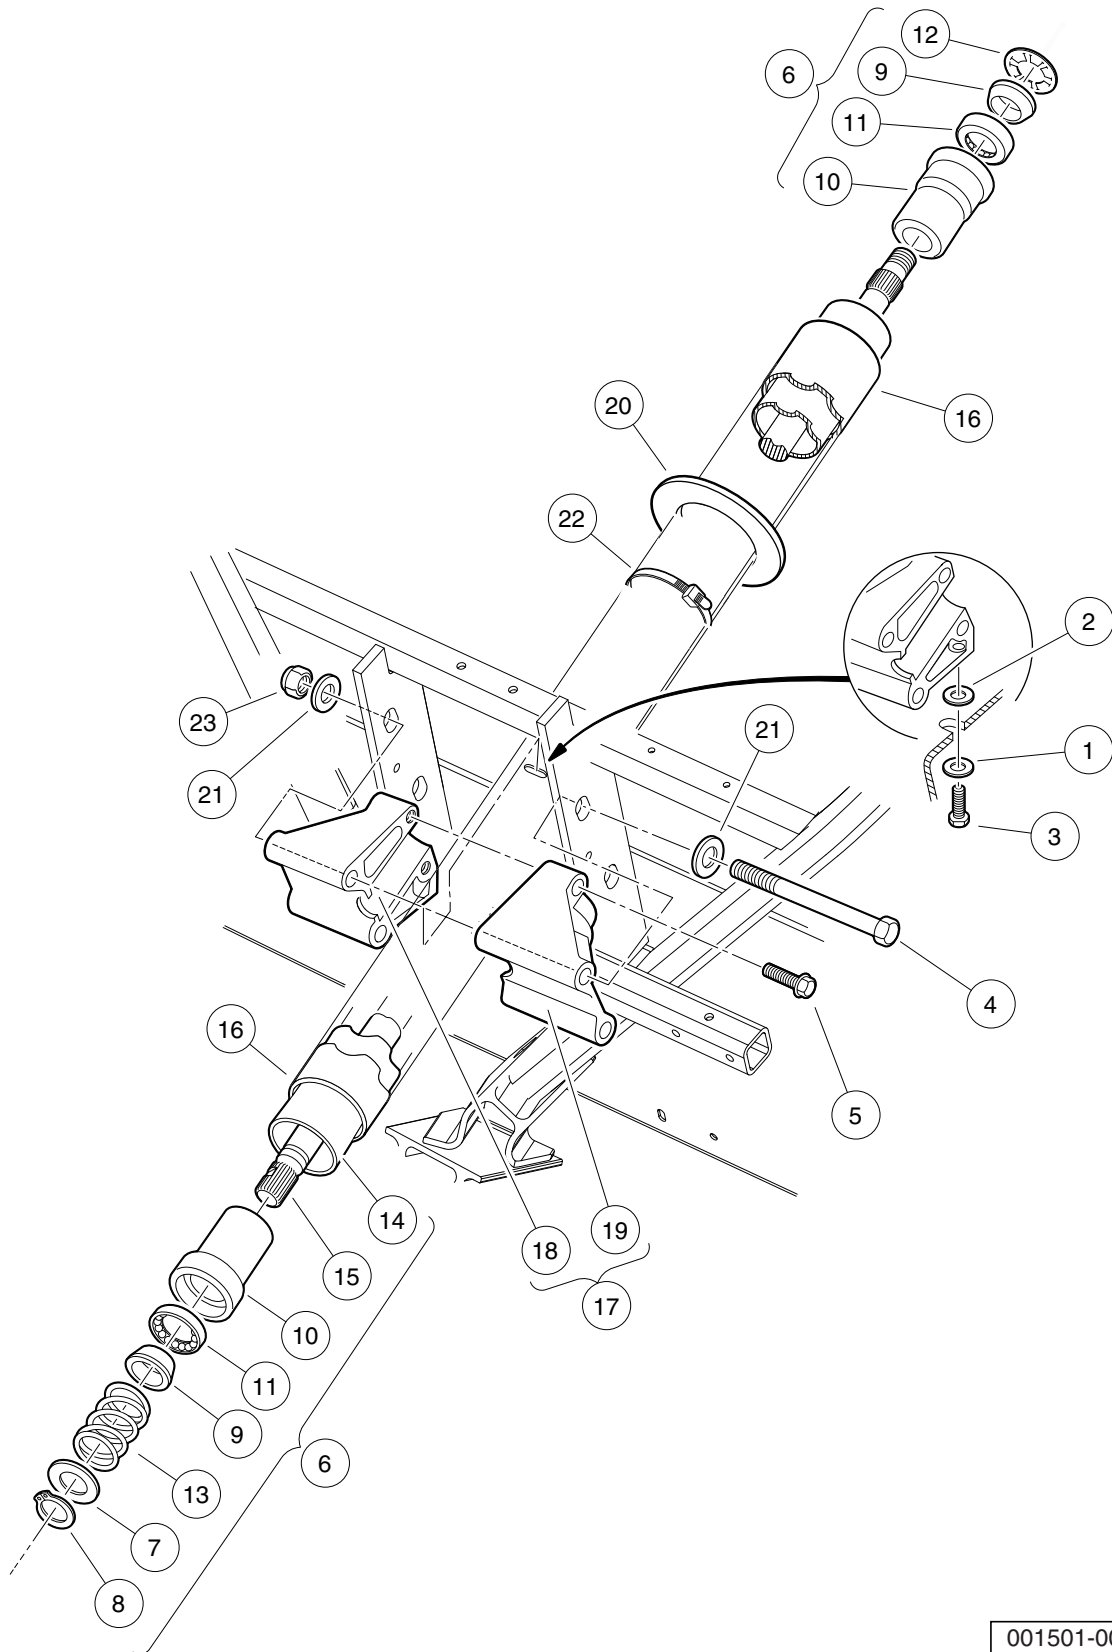

001501-001

STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	1011697	Washer, 5/16 Flat	1	E
2	1012571	Washer, 5/16 Extra Thick Flat	1	
3	1014288	Screw, 5/16-18 X 0.75, Thread-Forming	1	
4	1016183	Screw, 3/8-16 X 7.00 Hex Cap	2	
5	1016269	Screw, 5/16-18 Thrd Forming	2	
6	1017313	Steering Shaft Assembly (includes items 7 through 15)	1	
7	1012604	Washer, 0.675 ID X 1.19 OD	1	
8	1012605	Ring, 0.579 Internal Retaining	1	
9	1014125	Wedge, Molded	2	
10	1014126	Seat, Plastic Bearing	2	
11	1014213	Bearing, Ball	2	
12	1014214	Ring, Retaining	1	
13	1014217	Spring, Steering Shaft	1	
14	1017314	Column, Aluminum Steering	1	
15	1017315	Shaft Steering Column	1	
16	1017317	Tube Cover, Steering Column	1	
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1	
18	N/A	Bracket, RH Steering Column Mount	1	
19	N/A	Bracket, LH Steering column mount	1	
20	102278001	Boot, Steering Column Round	1	
21	334	Washer, 3/8, Type A, Flat	4	
22	8639	Tie Wrap, 11" Nylon	1	
23	8754	Locknut, 3/8-16 Hex	2	

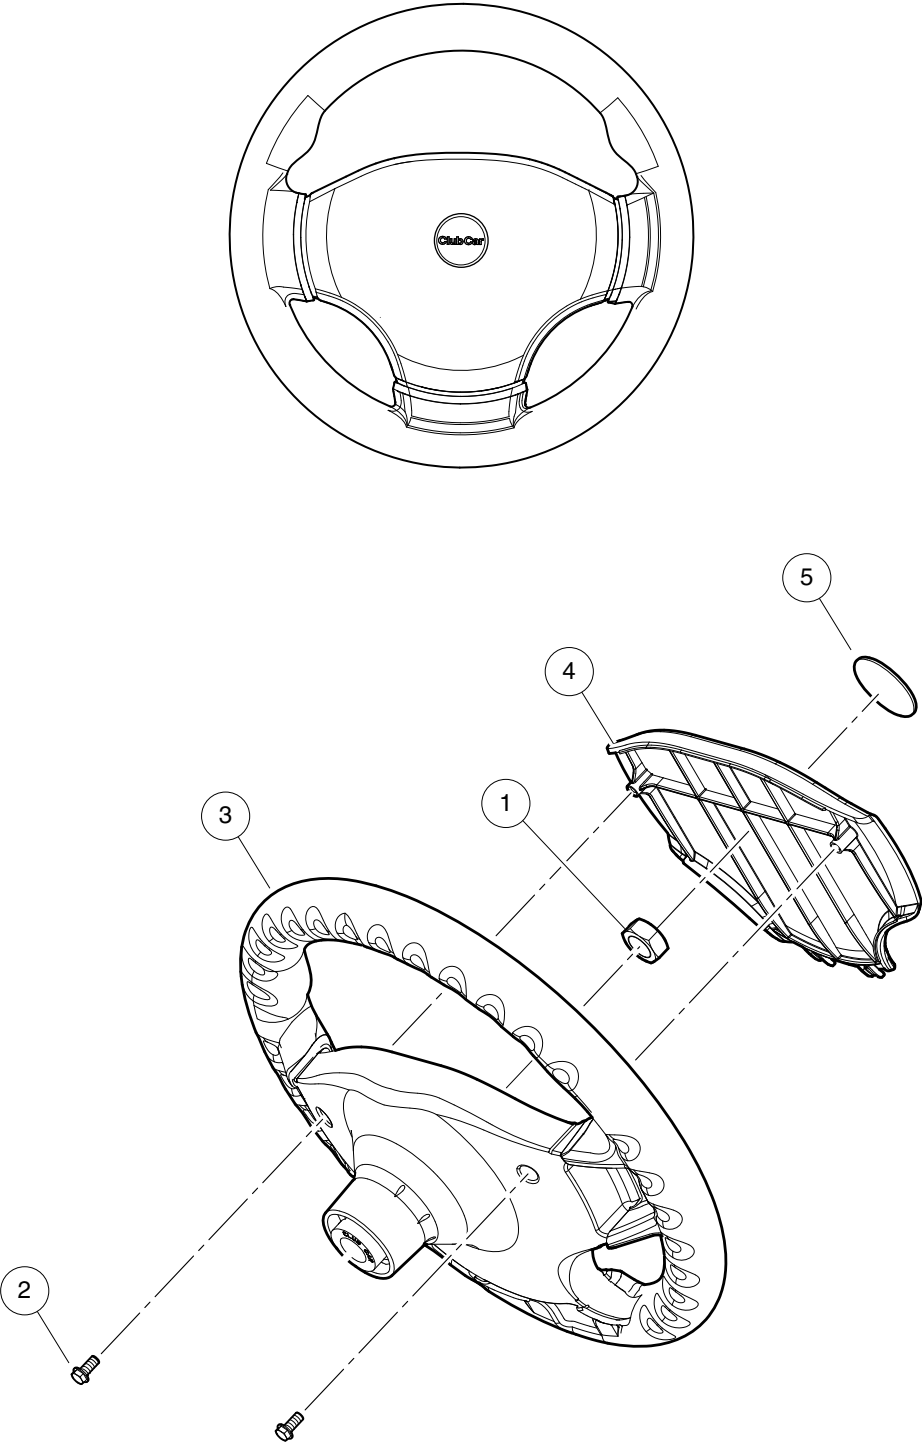

001503-001


STEERING WHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017273	Nut, 5/8-18 Nylon Insert Jam	1
2	101850301	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	2
3	103724504	Steering Wheel, Soft Spl	1
4	103724602	Cover, Steering Wheel, Generic	1
5	103829401	Logo, Cci, Steer Wheel	1

6

G


E

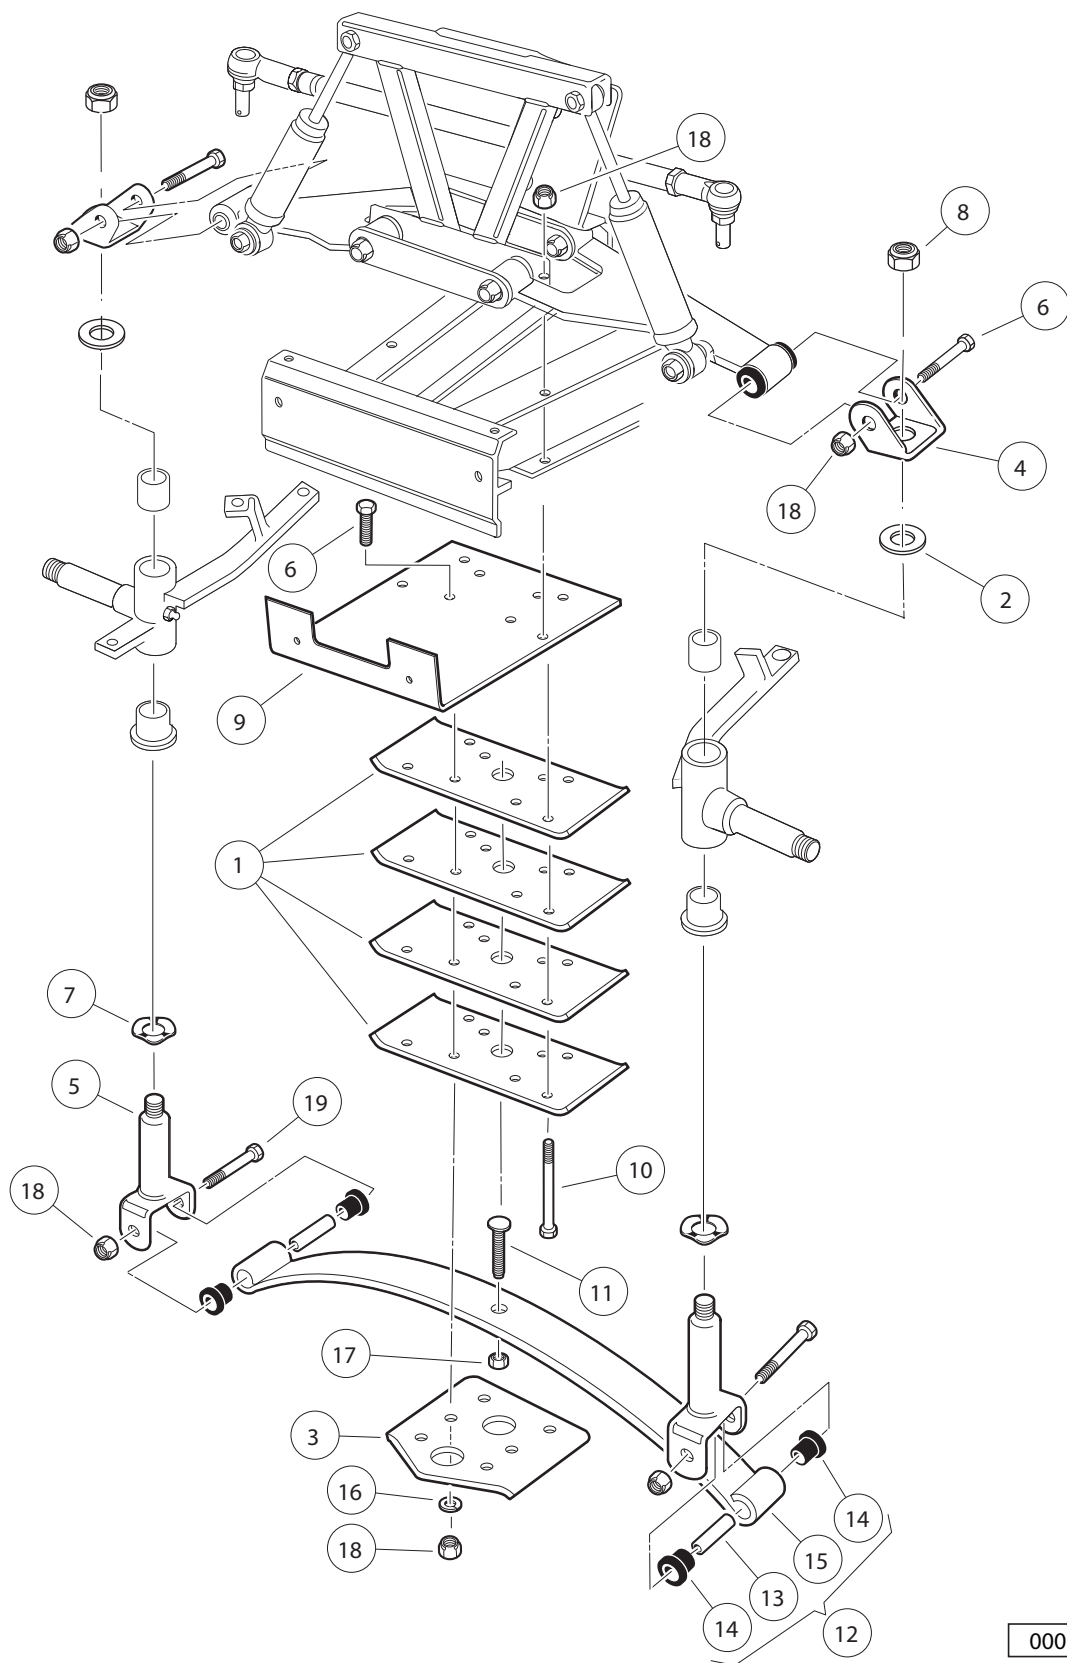

000191-005

FRONT SUSPENSION, LOWER – VEHICLES WITH TWO-WHEEL BRAKES


ITEM	PART NO.	DESCRIPTION	QTY	6 G E
		1 2 3 4		
1	1010124	Plate, Spring Mount	4	
2	1010150	Bearing, Thrust	2	
3	1014276	Plate, Front Spring Retainer	1	
4	1016384	Clevis, Delta Upper	2	
5	1016386	King Pin Assembly	2	
6	1016387	Screw, 3/8-16 X 2.75 Hx Hd Cap	6	
7	1016389	Washer, 1.125 Od Wave	2	
8	101903101	Locknut, 1/2-20 Nylon Insert	2	
9	102830401	Support, Brush Guard	1	
10	102913601	Screw, 3/8-16 X 5.50 Hx Hd Cap	4	
11	103507001	Eccentric Bolt Common	1	
12	103628701	Spring Asm, Front, 1 Leaf (includes items 13 through 15)	1	
13	1012303	Bushing, Steel	2	
14	101558302	Bushing, Urethane, Soft	4	
15	103502601	Spring, Front, 1 Leaf	1	
16	357	Lockwasher, 3/8 Split	4	
17	706	Nut, Hex 3/8-16	1	
18	8754	Locknut, 3/8-16 Hex	8	
19	8755	Screw, 3/8-16 X 3.375 Hex Cap	2	

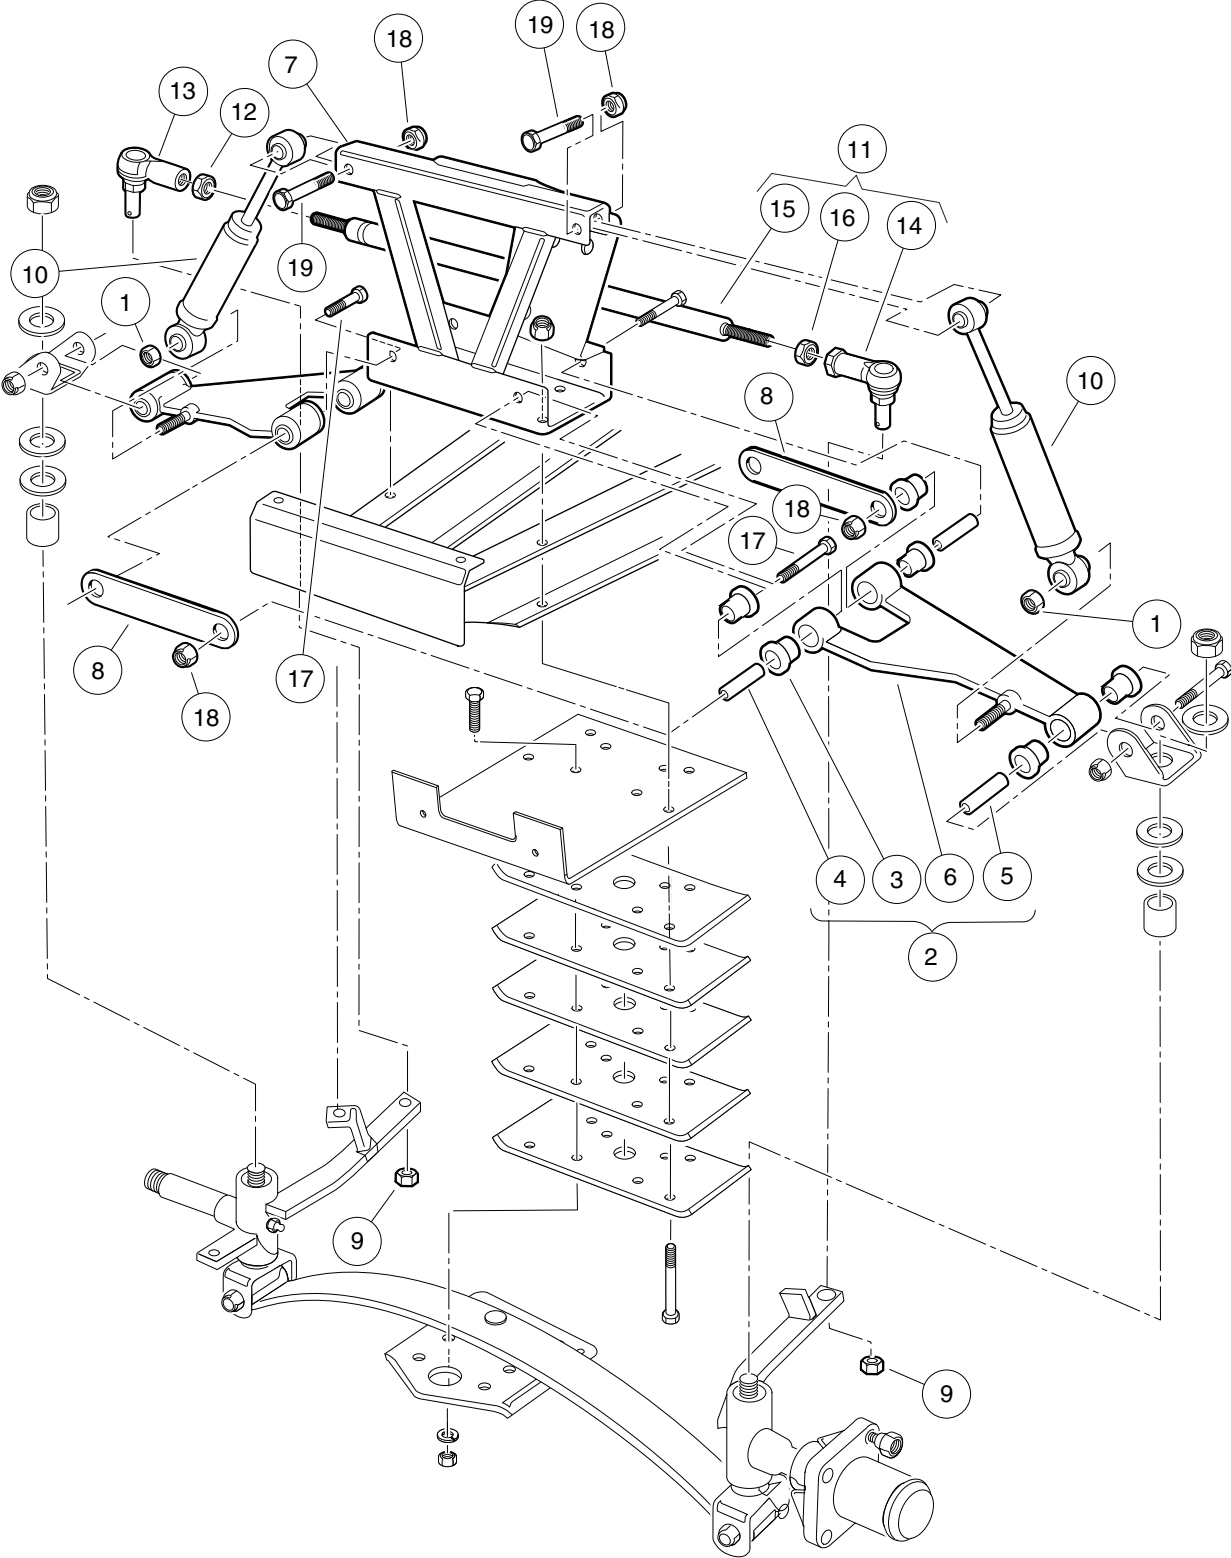

000190-002

FRONT SUSPENSION, UPPER

ITEM	PART NO.	DESCRIPTION	QTY	6
		1 2 3 4		G
1	1010138	Locknut, 3/8-16 Dimpled	2	E
2	1016353	Sub-Assembly, Delta A-Plate (includes items 3 through 6)	2	
3	1016346	Bushing, Urethane	6	
4	1016349	Sleeve, Delta Inner	2	
5	1016350	Sleeve, Delta Outer	1	
6	1016351	Delta A-Plate	1	
7	1016385	Delta Shock and Gear Support Assembly	1	
8	1017266	A-Plate Strap	2	
9	102289201	Nut - Hex Locking, M12 X 1.25	3	
10	103351001	Shock Absorber, Front, Common	2	
11	103653601	Asm, Tie Rod (includes items 12 through 16)	1	
12	1013042	Nut, 12mm Hex	1	
13	102022601	End, Tie Rod M12 X 1.25 Rh	1	
14	102022602	End, Tie Rod, M12 X 1.25, Lh	1	
15	103354701	Rod, Tie, Male Thd	1	
16	103653501	Nut, Jam, M12-1.25, Lh	1	
17	2402	Screw, 3/8-16 X 2.25 Hx Hd Cap	4	
18	8754	Locknut, 3/8-16 Hex	13	
19	8861	Bolt, 3/8-16 X 1.75 Hex	2	

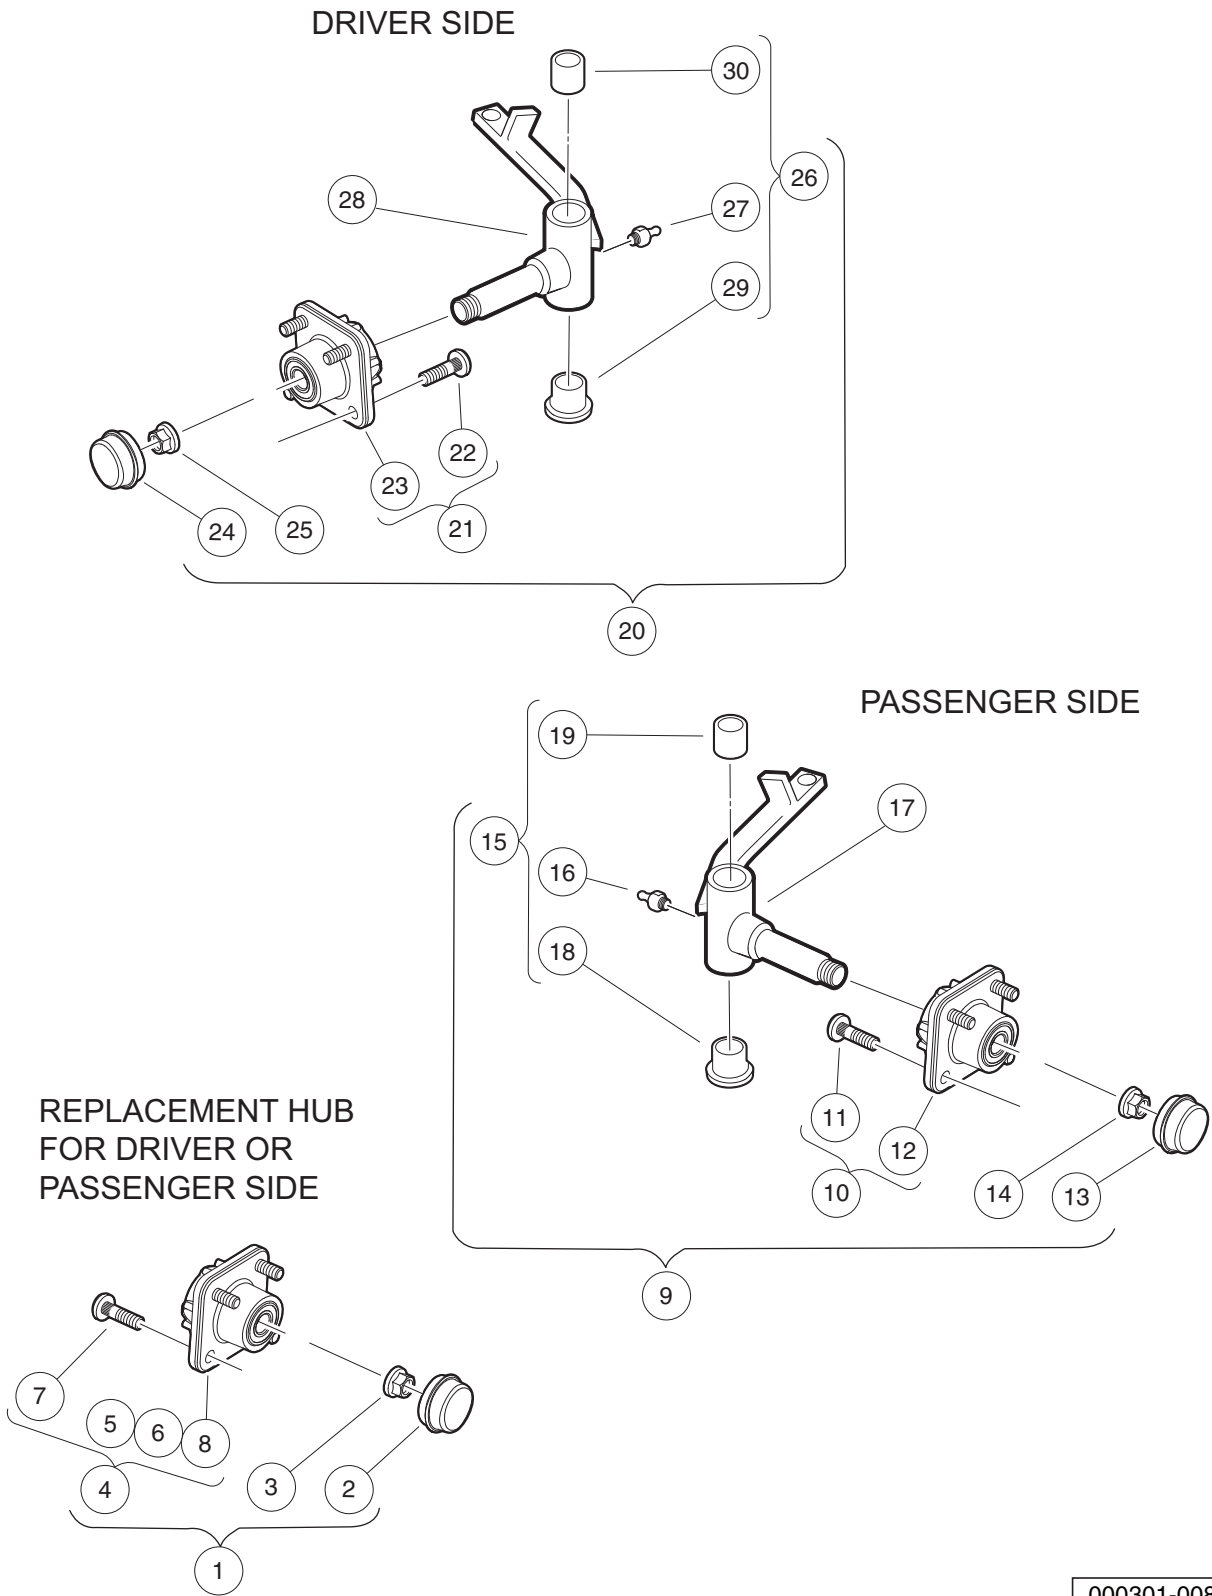


000301-008

FRONT SPINDLES AND HUBS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102357701	Replacement Kit, Front Hub (includes items 2 through 4)	1
2	102353201	Cap, Front Hub	1
3	102353301	Hex Nut, Locking Flange, M14x2	1
4	N/A	Asm, Front Hub, Bb, Long Stud (includes items 5 through 8)	1
5	N/A	Bearing, Ball, 6204	2
6	N/A	Spacer, Bearing, Front Hub, Pm	1
7	103477901	Lug Stud, 1/2-20 Unf, 4037	4
8	N/A	Front Hub, Ball Brg, Long Stud	1
9	N/A	Asm, Hub And Spindle, Left-Hand Ext (includes items 10 through 15)	1
10	N/A	Front Hub Assembly, Ball Bearing (includes items 11 and 12)	1
11	102353401	Lug Stud, 1/2-20 UNF, 4037 Stl	4
12	N/A	Hub, Front	1
13	102353201	Cap, Front Hub	1
14	102353301	Hex Nut, Locking Flange, M14x2	1
15	102354204	Asm, Spindle, LH, Ext (includes items 16 through 19)	1
16	1015597	Fitting, 1/4-28 Thread-Forming Grease	1
17	N/A	Subasm, Spindle, LH, Ext	1
18	7048	Bushing, Flanged Bronze	1
19	8067	Bushing, Bronze Spindle	1
20	N/A	Asm, Hub And Spindle, Right-Hand Ext (includes items 21 through 26)	1
21	N/A	Front Hub Assembly, Ball Bearing (includes items 22 and 23)	1
22	102353401	Lug Stud, 1/2-20 UNF, 4037 Stl	4
23	N/A	Hub, Front	1
24	102353201	Cap, Front Hub	1
25	102353301	Hex Nut, Locking Flange, M14x2	1
26	102354104	Asm, Spindle, RH, Ext (includes items 27 through 30)	1
27	1015597	Fitting, 1/4-28 Thread-Forming Grease	1
28	N/A	Subasm, Spindle, RH, Ext	1
29	7048	Bushing, Flanged Bronze	1
30	8067	Bushing, Bronze Spindle	1

6
G
E

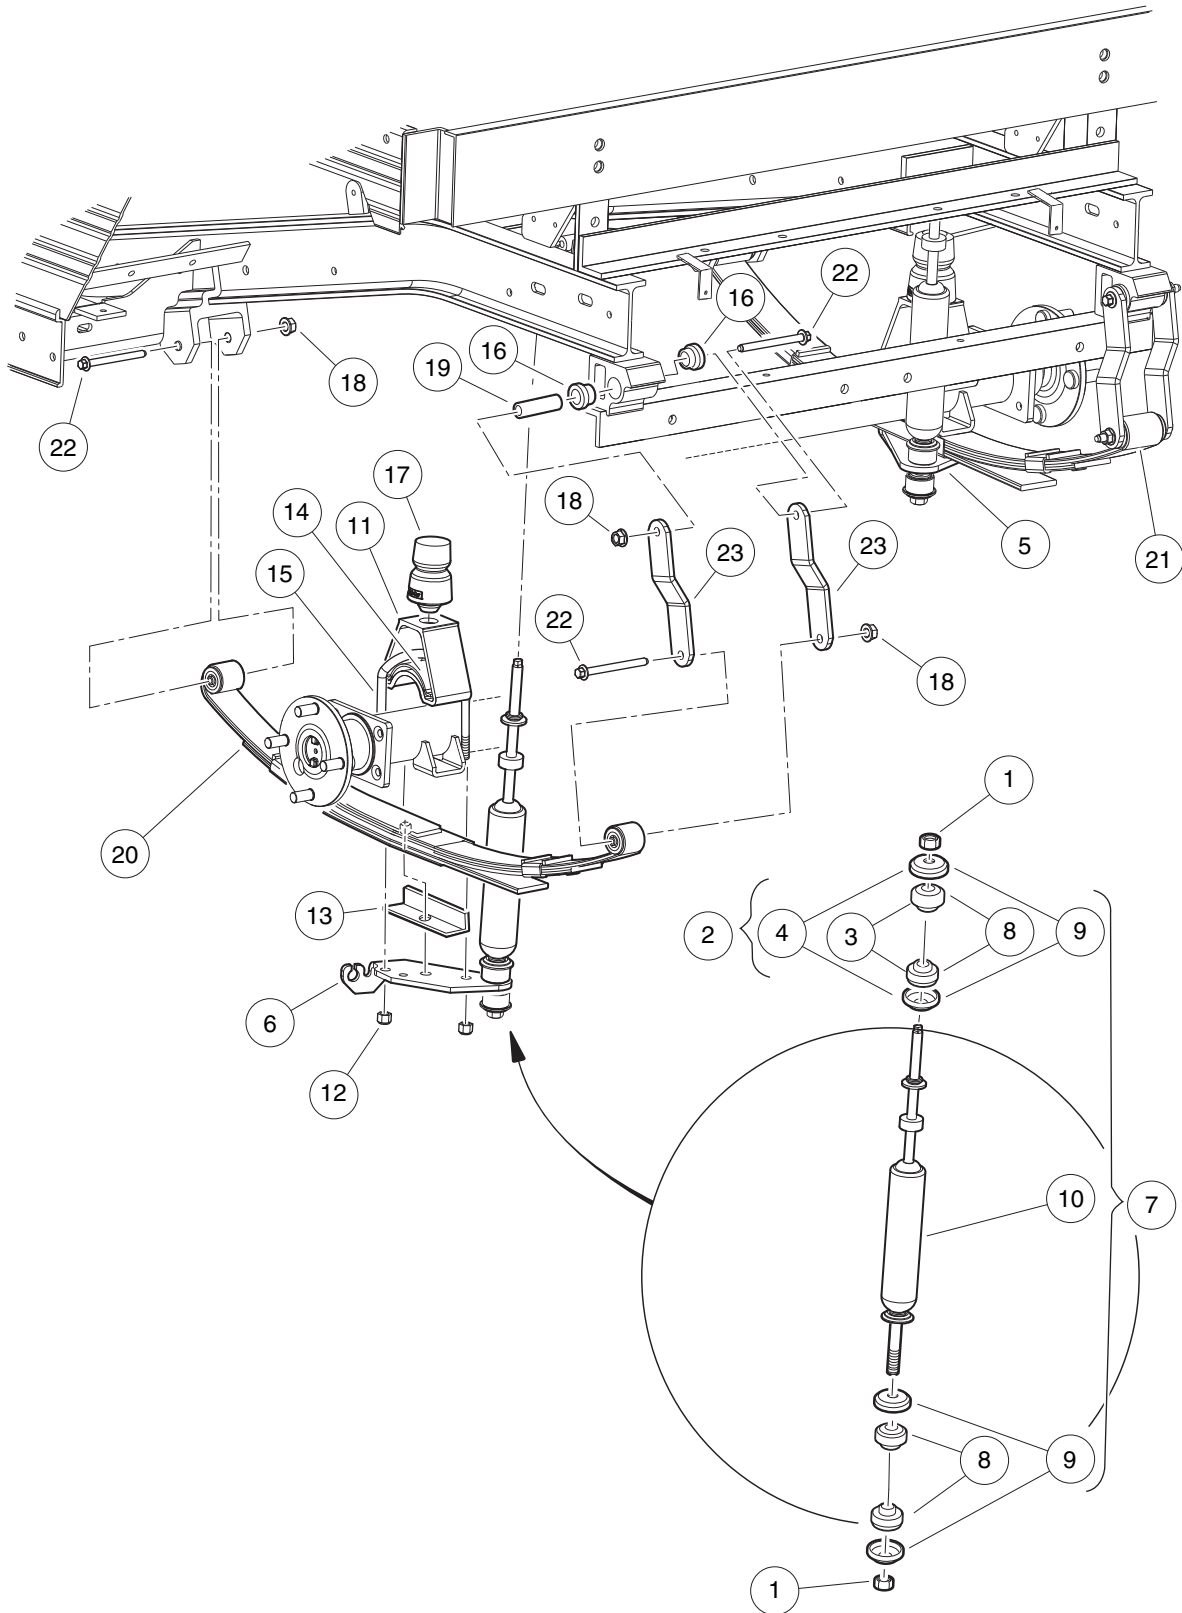6**G****E**

001522-001

REAR SUSPENSION COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010145	Nut, 3/8-24 Hex	4
2	1011415	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	N/A	Retainer, Shock Absorber Cushion	2
4	47579096001	Isolator, Shock Damper	2
5	1012181	Bracket, Shock Mounting, Right (Passenger)	1
6	1012182	Bracket, Shock Mounting, Left (Driver)	1
7	1013164	Shock Absorber Kit (includes items 8 through 10)	1
8	N/A	Cushion, Shock Absorber	8
9	N/A	Retainer, Shock Absorber Cushion	8
10	102706401	Shock Absorber Rear	2
11	101454602	Bumper Mount	2
12	1014555	Locknut, 7/16-14 Nylon Hex	4
13	1014573	Spring Retainer	2
14	1014901	Spacer, Overload Bumper	2
15	1014902	U-Bolt	2
16	101558302	Bushing, Urethane, Soft	4
17	1017235	Bumper, Jounce	2
18	102298401	Nut,m8,all Metal Lock	6
19	102506401	Sleeve - Spring Eye Mounts	2
20	105186001	Asm, Spring 260lb Nr Light, Lh	1
21	105186002	Asm, Spring 260lb Nr Light, Rh	1
22	105188185	Bolt, M8x85mm,10.9 Grade	6
23	105188201	Shackle,Steel Standard,M8	4
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the shock mounting bracket (RH-1012181 and LH-1012182).			

6
G
E

6

G

E


ELECTRICAL SYSTEM – GASOLINE VEHICLES

7

G

7

G

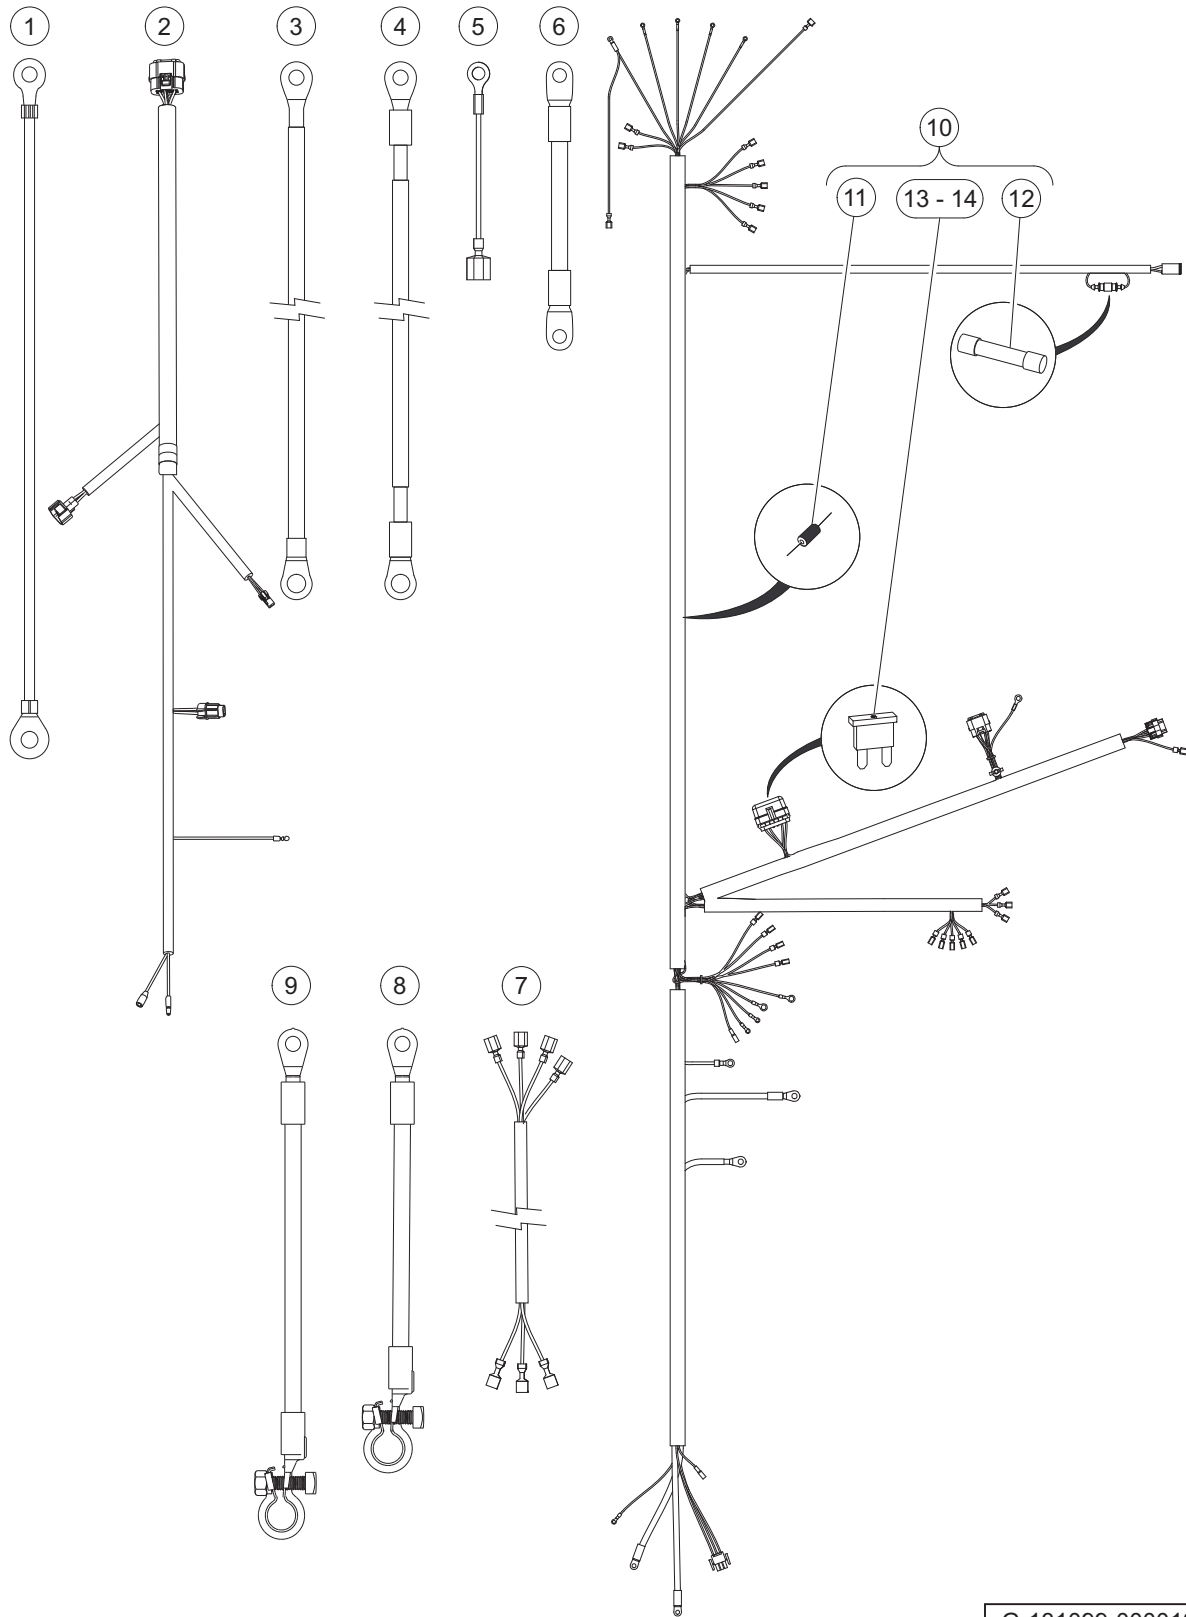


G-131099-000019

WIRING, FUSES, AND DIODES, PEDAL-START – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1015332	Wire, Ground, #10, Uninsulated	1
2	105008101	Harness, Wire, ECU/Engine	1
3	105135901	Wire, Battery (side-post), B-, Gas	1
4	105136001	Wire, Battery (side-post), B+, Gas	1
5	105143301	Wire, Ground, Fuel Tank	1
6	105161701	Wire, 4-Ga, Green, Starter/Generator	1
7	105245701	Jumper, Run/maint, Sw	1
8	105256701	Wire Assy, 4ga, Battery, (top-post) B-, Gas	1
9	105256801	Wire Assy, 4ga, Battery, (top-post) B+, Gas	1
10	47612539001	Harness, Main, Gas, Ca100, Ps (includes items 11 through 14)	1
11	1014789	Diode, General Purpose, 3.0-Amp	1
12	103924801	Fuse, Glass, 2-Amp	1
13	105081501	Fuse, ATM, 5-Amp	1
14	105081601	Fuse, ATM, 10-Amp	1
Note: For ECU, see Throttle Body in Fuel System section.			

7


G

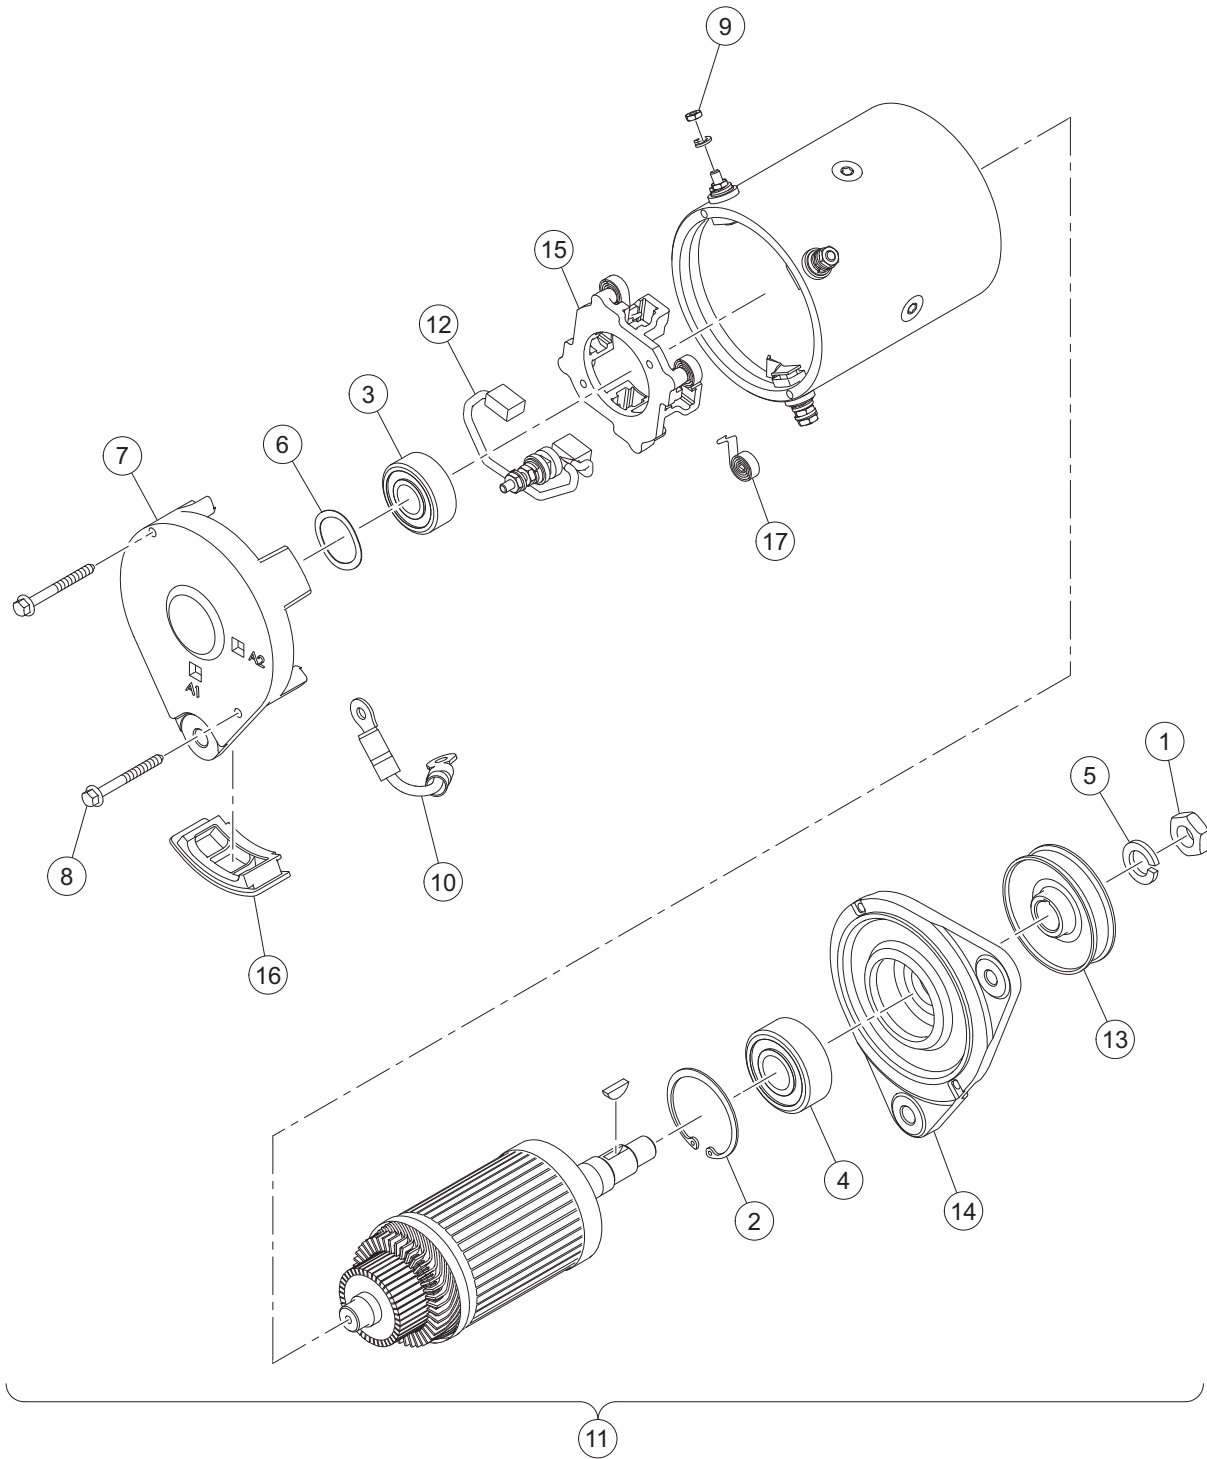

G-130199-000005

STARTER/GENERATOR (MODEL 114-05-4001) – EFI

ITEM	PART NO.	DESCRIPTION	QTY	7	G
		1 2 3 4			
1	102838701	Nut, Hex, M14x2, S/G	1		
2	102838801	Retainer, Front, S/G	1		
3	102838901	Bearing, Ball, Rear, S-g	1		
4	102839001	Bearing, Ball, Front, S-g	1		
5	102839301	Washer, Lock M14x2, S-g	1		
6	102841101	Washer, Wave, S-g	1		
7	103347601	Head, Comm End, S-g	1		
8	103347701	Set, Fast, Ceh Deh, S-g	1		
9	103347801	Set, Term Hardware, S/G	1		
10	105161701	Wire, 4-Ga, Green, Starter/Generator	1		
11	47559475001	Starter Generator, Ps	1		
12	47583000001	Set, Brush Term, S-g	1		
13	47583790001	Pulley, Starter-generator	1		
14	47583791001	Head, Drive End, S-g	1		
15	47583794001	Kit, Brush And Brush Holder	1		
16	47584178001	Kit, Cover, Brush Insp, S-g	1		
17	47584179001	Kit, Spring Brush, S-g	1		
		Note: Item 16 contains four (4) brush covers. Item 17 contains four (4) spring brushes.			

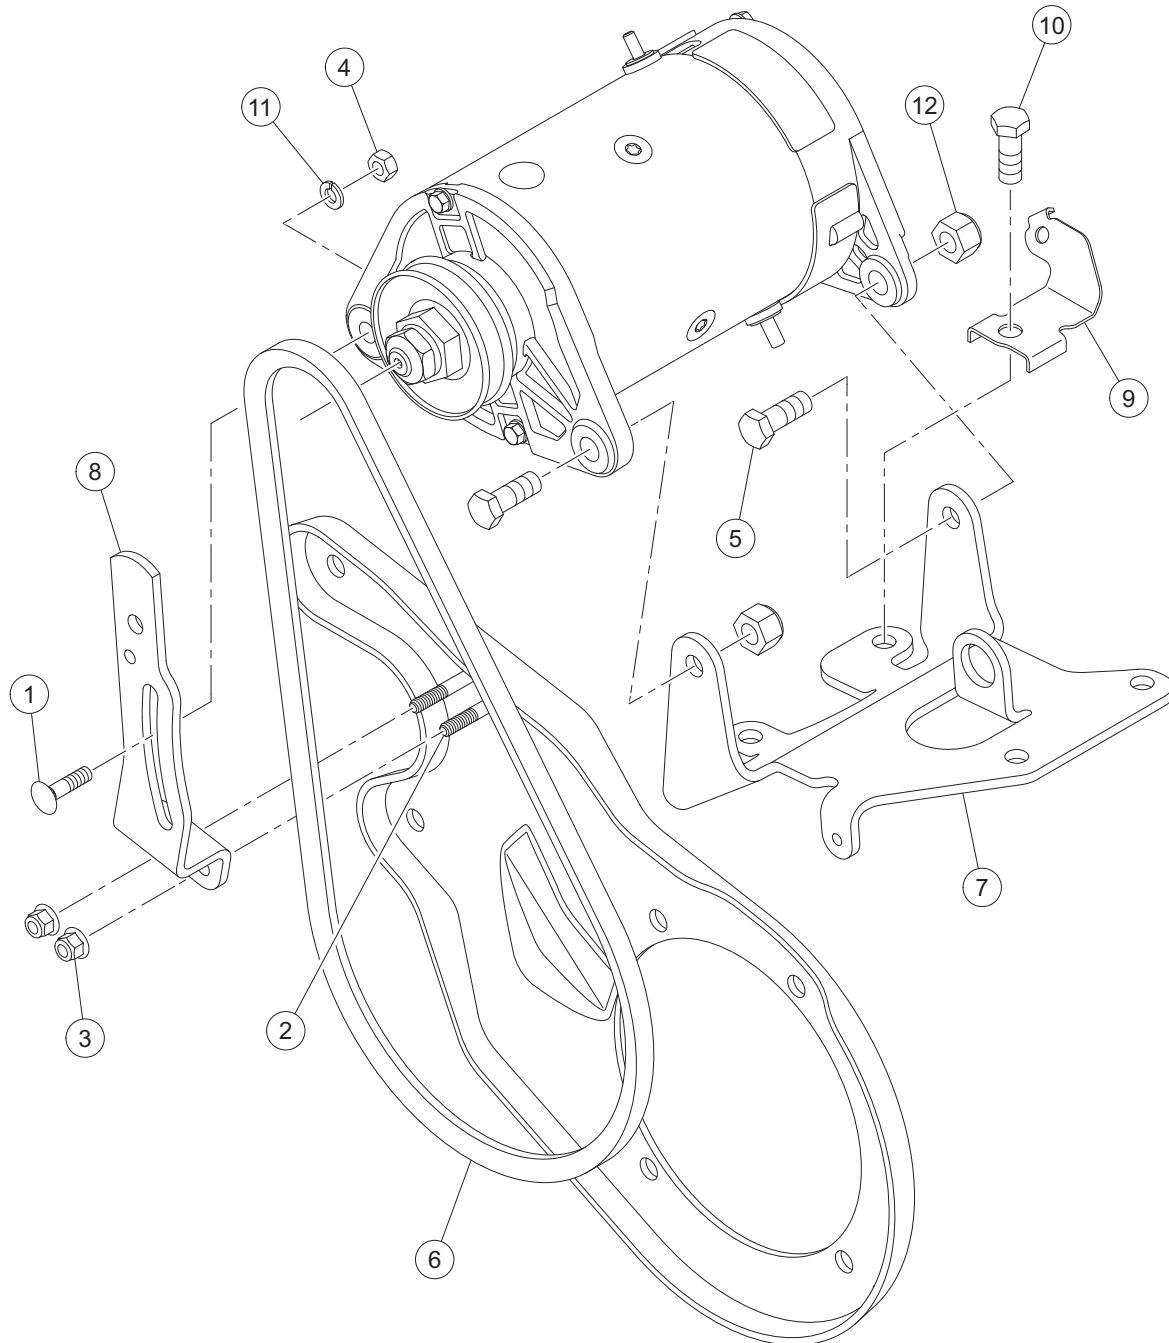


G-130199-000002

STARTER/GENERATOR MOUNTING – ECH440

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1015932	Bolt, Carriage, 5/16-18	1
2	102541401	Bolt-m6x1.0x20 Hex Flhd Blk-I	2
3	102621501	Nut, Flange, M6 X 1.0, Nylon	2
4	1242	Nut, 5/16-18 Hex	1
5	1624	Screw, 3/8-16 X 1.50, Hex-Head Cap	2
6	47539338002	Belt, Sg, Ech440, #5a	1
7	47611868001	Bracket, Mounting, S/g	1
8	47611869001	Bracket, Tensioner, S/g	1
9	47611870001	Bracket, Mtg, Gov Cable Clip	1
10	47617345001	Screw, M8-1.25x20, Hex Hd Flg	4
11	7174	Lockwasher, 5/16 Split	1
12	8754	Locknut, 3/8-16 Hex	2

7

G

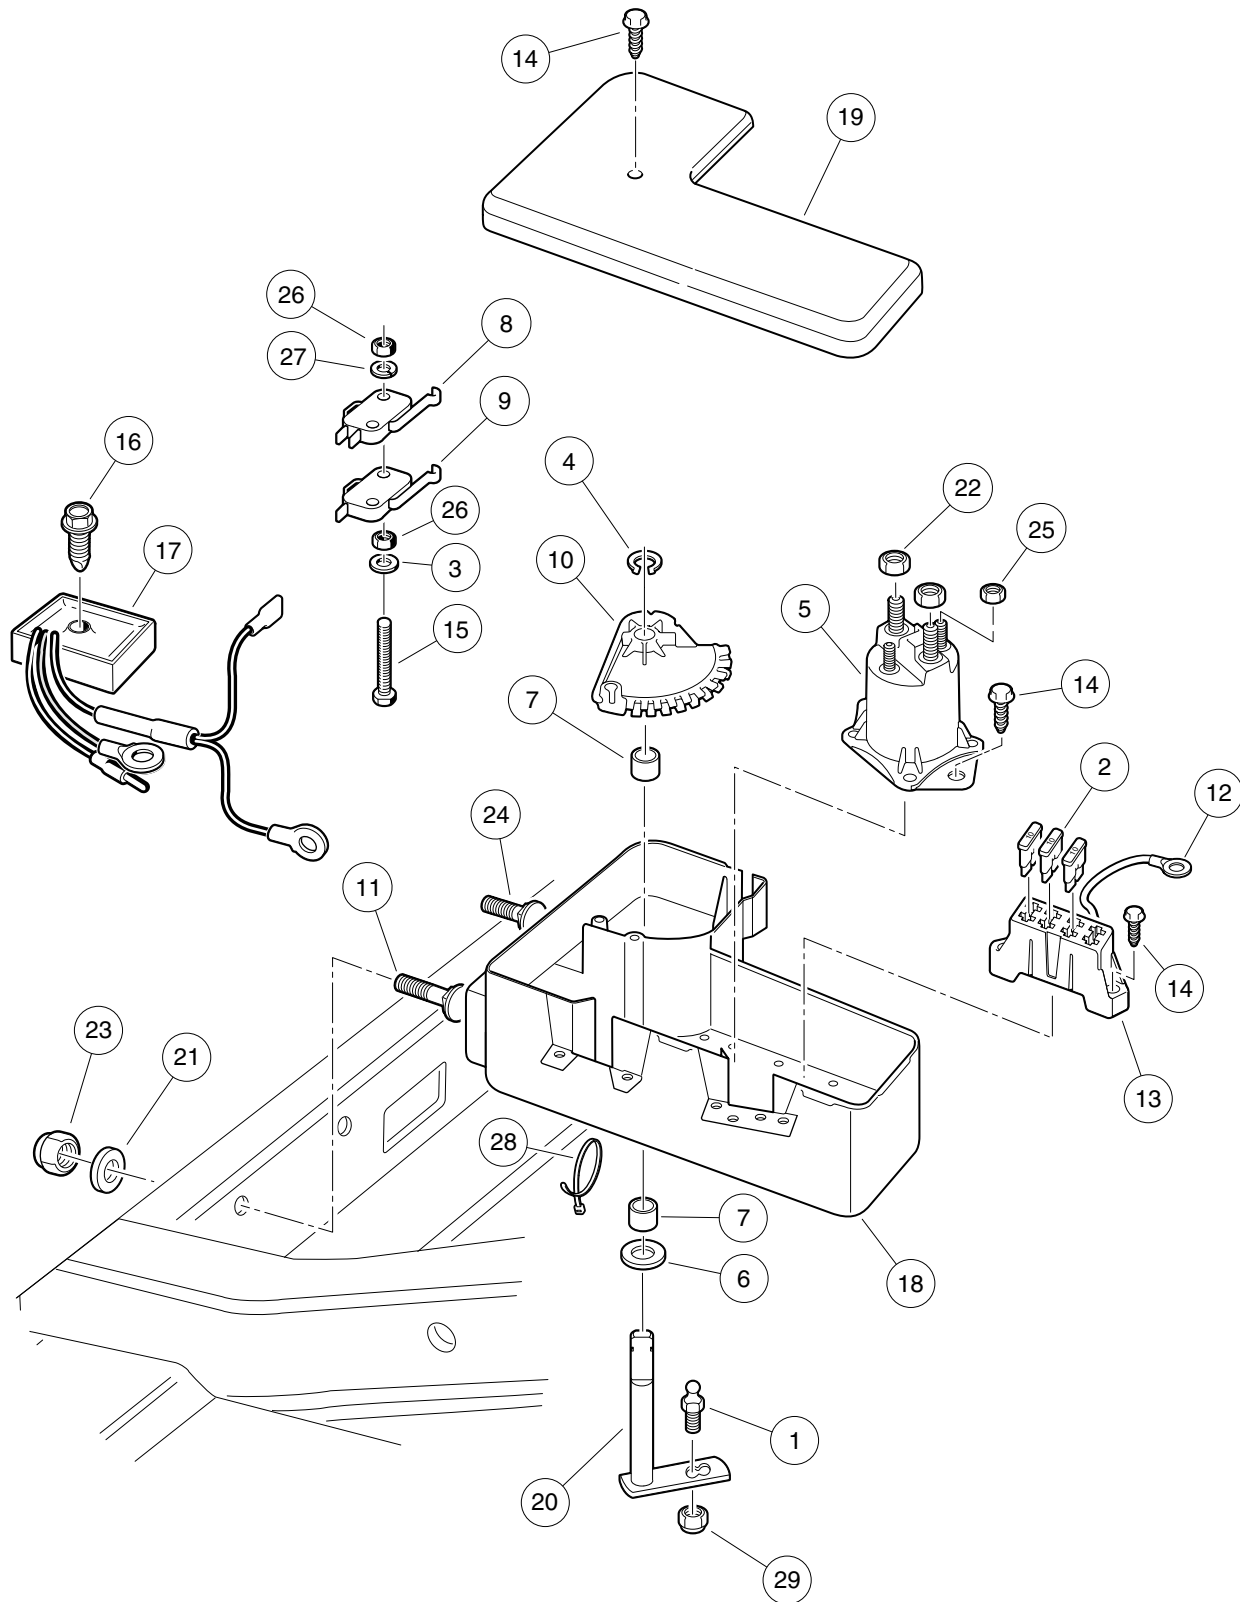

001014-001

ELECTRICAL COMPONENT BOX, PEDAL-START



ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010954	Stud, Ball, 1/4-28 X 0.560	1
2	1012295	Fuse, 10-Amp	3
3	1012431	Washer, #4 Flat	2
4	1013589	Ring, Retaining, 0.338" Internal	1
5	1013609	Solenoid, 12-Volt	1
6	1014065	Washer, Flat, 0.38" ID, Delrin	1
7	1014145	Bushing, Secondary Weight, Split	2
8	1014807	Switch, Limit	1
9	1014808	Switch, Limit	1
10	1015373	Cam, Electric Box	1
11	1015405	Bolt, Carriage, 5/16-18 X 2.0	1
12	1015737	Wire Assy, #10 Red	1
13	1015741	Fuse Block	1
14	1015752	Screw, #12-16 X 0.625, Hi-Lo	5
15	1015878	Screw, #4-40 Hex Head Machine	2
16	101856102	Screw, 1/4-15 X 1.50, Hi-lo, Hex	1
17	102711201	Voltage Regulator	1
18	105000301	Box, Component, Electrical	1
19	105000401	Cover, Box, Component, Elec	1
20	105037401	Weldment, Bellcrank, Comp Box	1
21	1241	Washer, 5/16 Type A Flat	2
22	1242	Nut, 5/16-18 Hex	2
23	7473	Locknut, 5/16-18 Nylon Insert	2
24	7818	Bolt, Carriage, 5/16-18 X 1.5	1
25	7893	Nut, #10-32 Hex	2
26	8057	Nut, #4-40 Hex Machine	4
27	8058	Lockwasher, #4 Split	2
28	8639	Tie Wrap, 11" Nylon	6
29	8717	Locknut, Nylon Insert, 1/4-28	1

7

G

7

G

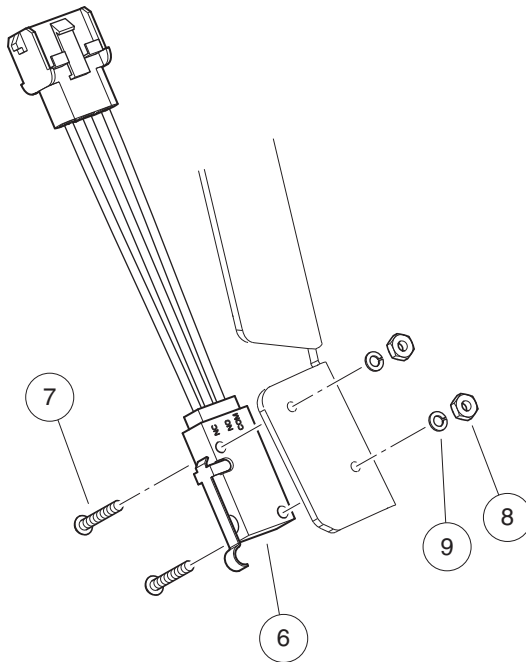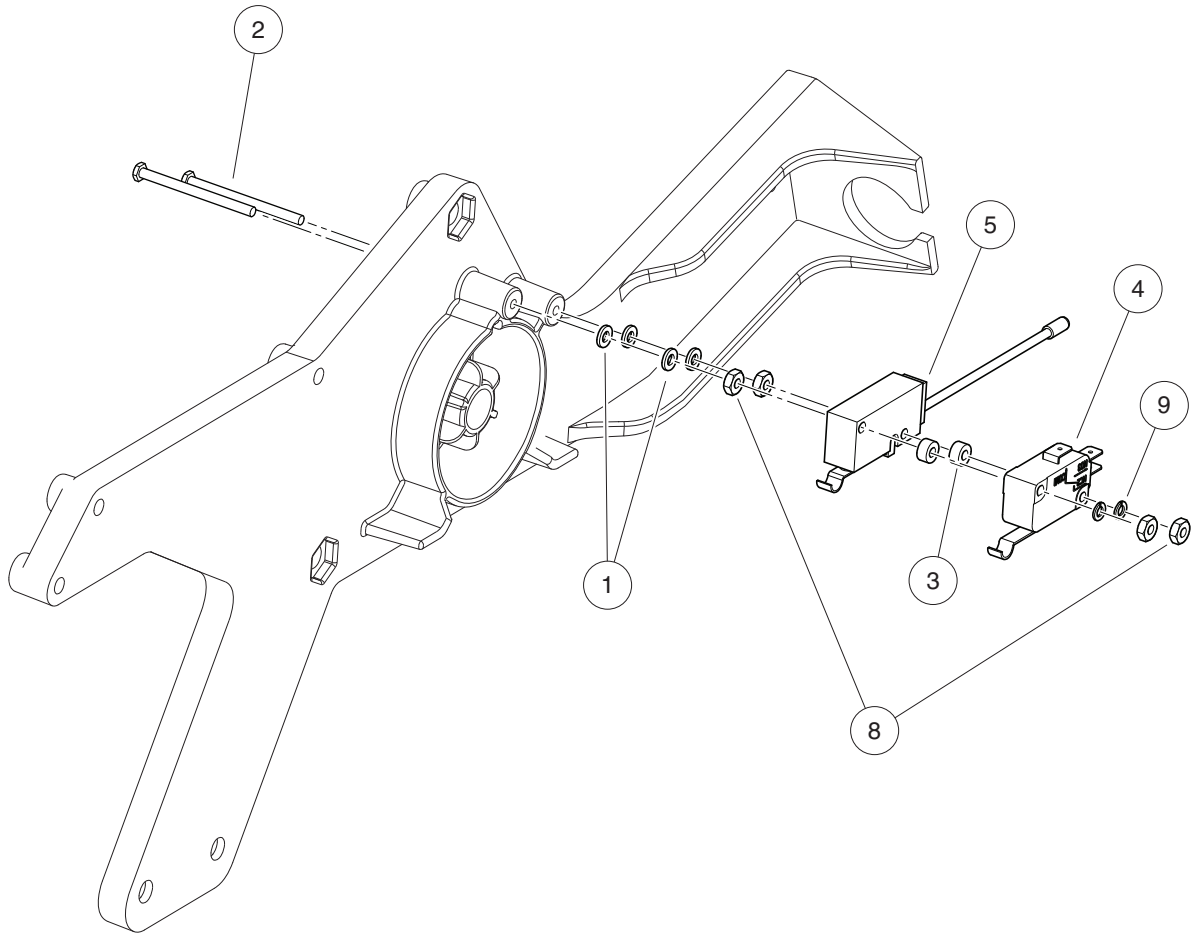


001013-001

FORWARD/REVERSE SHIFTER SWITCHES, PEDAL-START – EFI,
CA100

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012431	Washer, #4 Flat	4
2	1012594	Screw, #4-40 Machine	2
3	1014727	Washer, Flat, #4, Nylon	2
4	1014807	Switch, Limit	1
5	101979101	Switch, Limit, Assembly, Sealed	1
6	105102601	Switch, Limit, Sealed, with 3-Wire Lead	1
7	8056	Screw, #4-40 X 0.75 Round-Head Machine	2
8	8057	Nut, #4-40 Hex Machine	6
9	8058	Lockwasher, #4 Split	4

7

G

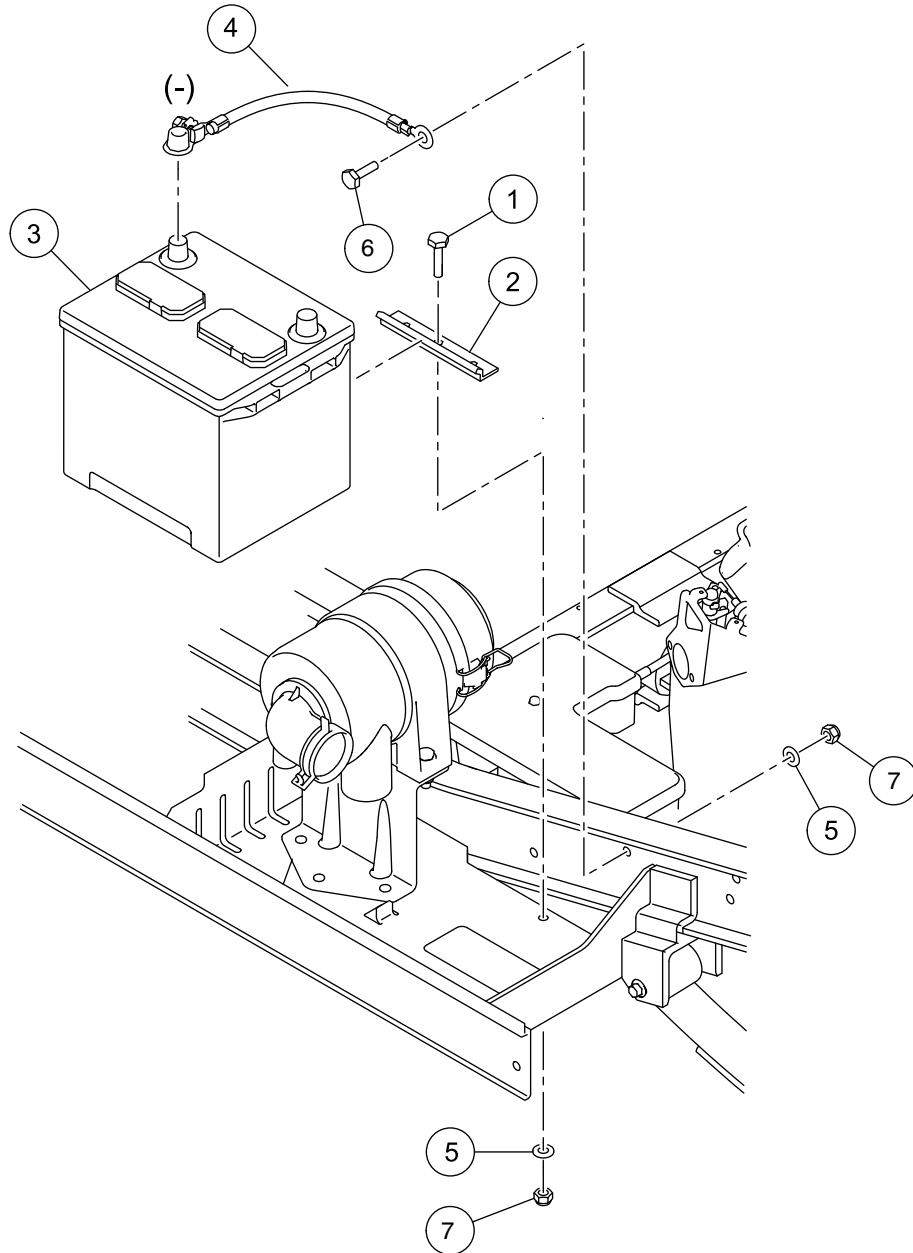

000250-001

TOP-POST BATTERY – GASOLINE UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010934	Screw, 5/16-18 X 1.00 Hex Cap	1
2	101898001	Clamp, Battery	1
3	105237399	Battery, Start, 12v, G 26, Sp	1
4	105256701	Wire Assy, 4ga, Battery, (top-post) B-, Gas	1
5	1241	Washer, 5/16 Type A Flat	2
6	7173	Screw, 5/16-18 X 0.75, Hex-Head Cap	1
7	7473	Locknut, 5/16-18 Nylon Insert	2

7

G


7

G


ENGINE (KOHLER ECH440)

8

G

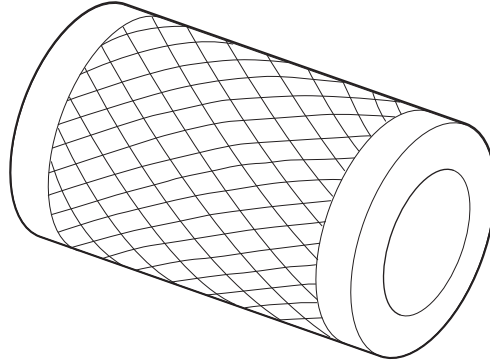

1




2

000992-003

8
G

8
G

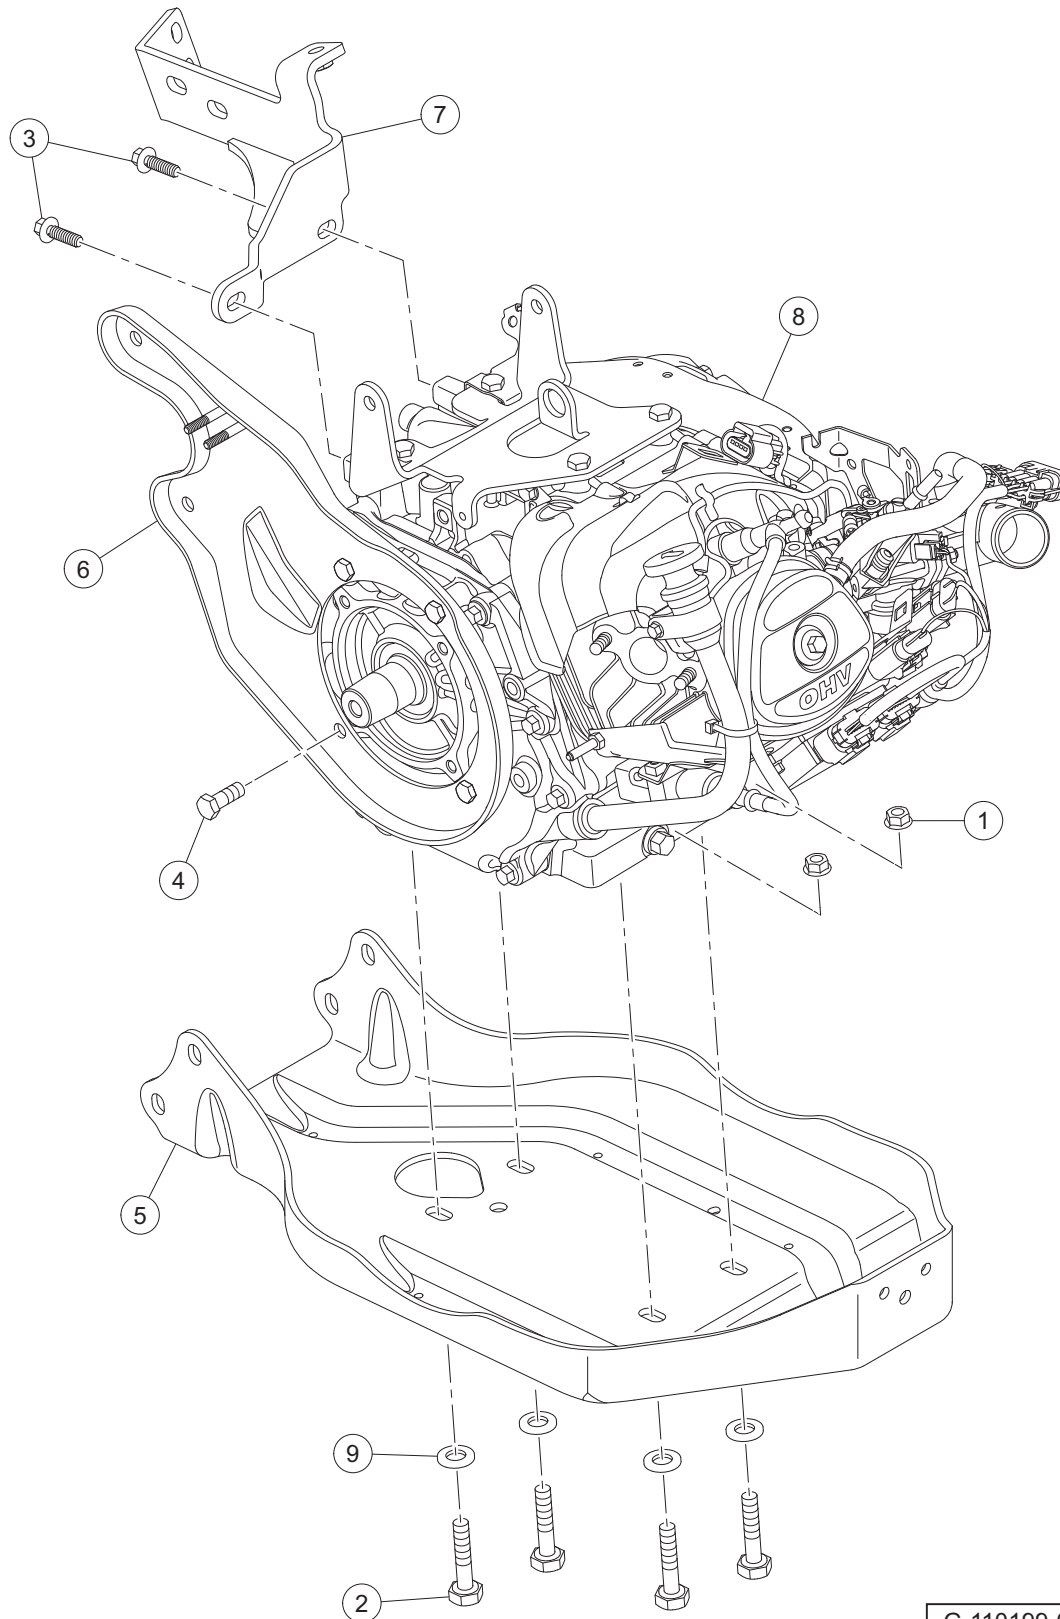


G-110199-000004

ENGINE AND ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102617201	Nut, Flanged, M10 X 1.5, Mechanically Deformed	4
2	102732401	Bolt, M10 X 45, Zn-Ni (Black)	4
3	103262201	Bolt Flg Blk, M8 X 25, Loctite	2
4	103508101	Bolt, 3/8-16 X .75 Lock Patch	4
5	47611483001	Plate, Mtg, Engine/axle, Pan	1
6	47611484001	Plate, Mtg, Engine/axle, Cvt	1
7	47611648001	Weldment, Mtg, Exhaust	1
8	47695923001	Engine, Gas, Kohler Ech440	1
9	96741046	Washer, M10, Hard	4

8


G

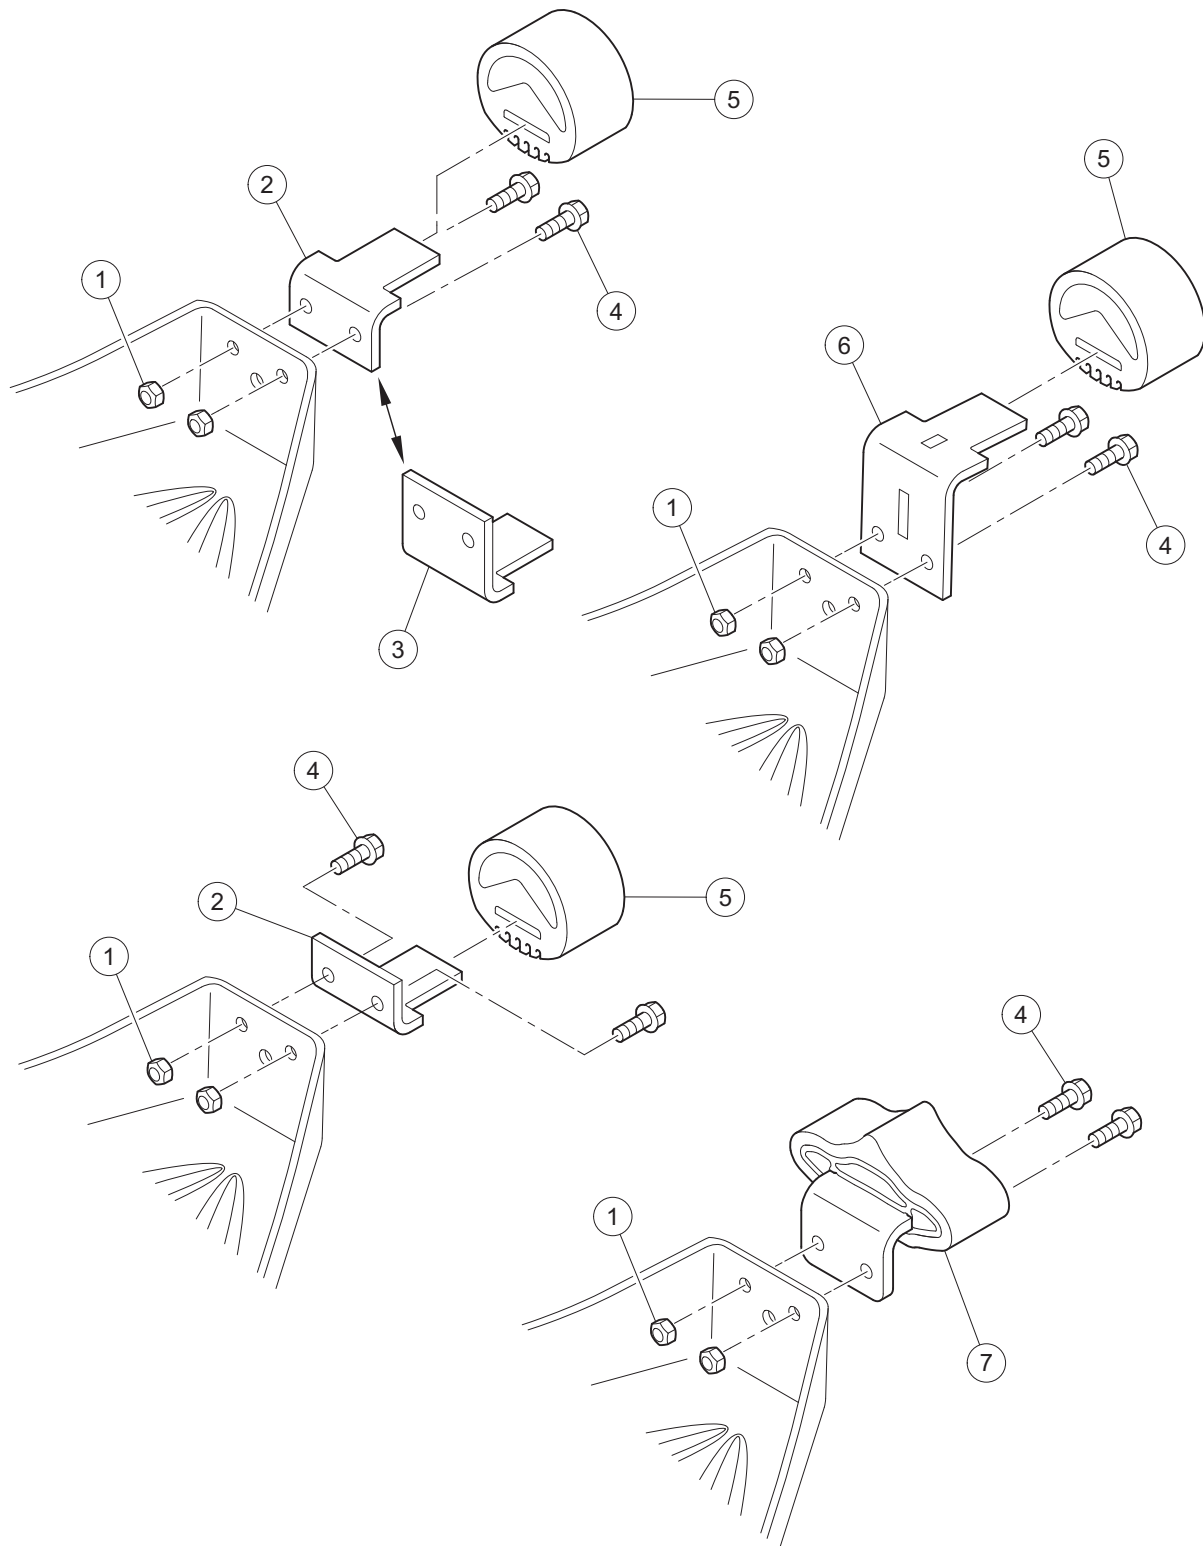

G-010299-000001

ENGINE PAN AND SNUBBER MOUNTING


ITEM	PART NO.	DESCRIPTION	QTY	8	G
		1 2 3 4			
1	1013924	Nut, 5/16-24, Hex Head Cone	2		
2	101834601	Bracket, Snubber	1		
3	101834602	Bracket, Snubber, Tall	1		
4	101884801	Screw, 5/16-24 X 0.875, Grade-8	2		
5	102540301	Snubber, Inner Frame	1		
6	47564890001	Bracket, Snubber, Csmr, Lifted	1		
7	47587701001	Asm, Dual Snubber (includes items 8 and 9)	1		
8	47583795001	Bracket, Dual Snubber	1		
9	47584184001	Snubber, Dual	1		
Note: Items 8 and 9 are not illustrated.					

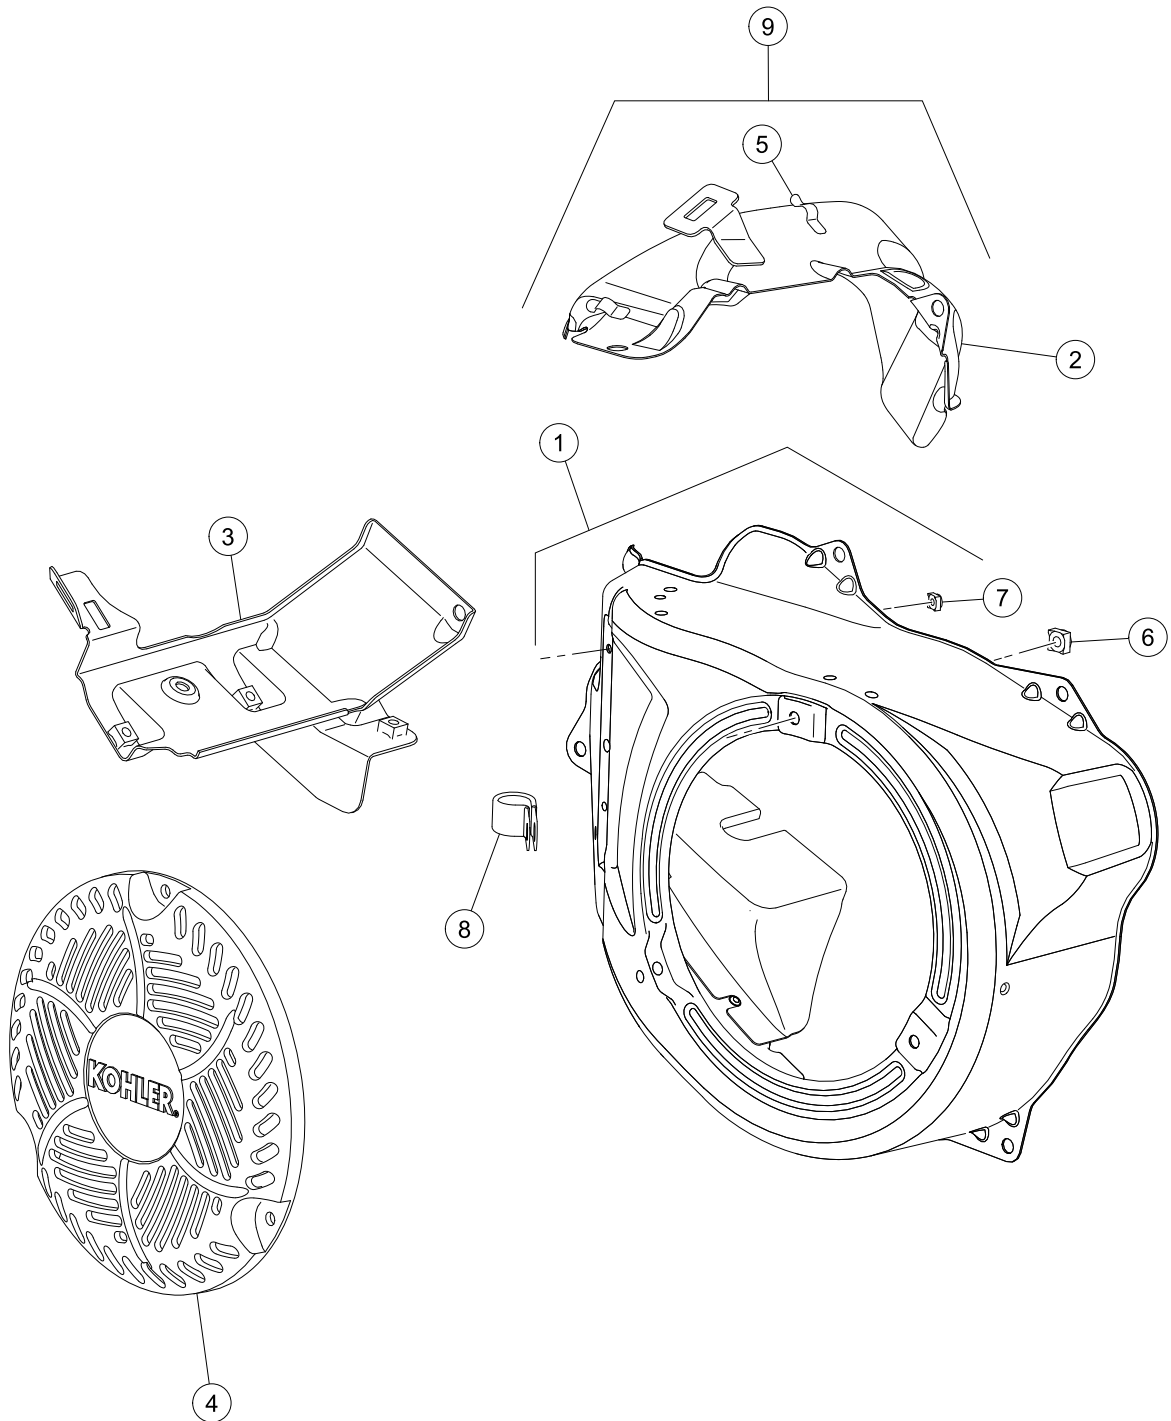

G-040899-000001

BLOWER HOUSING AND HEAT SHIELD – ECH440

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	47629844001	Kit, Blower Housing, Kohler	1
2	47629845001	Shield, Upper Heater, Kohler	1
3	47629846001	Shield Assembly, Cylinder, Koh	1
4	47629847001	Screen, Blower Housing, Kohler	1
5	47629848001	Clip, Wire, Kohler	2
6	47629851001	Nut, Blower Housing (cky), Koh	1
7	47629853001	Nut, Blower Housing (cky), Koh	1
8	47629855001	Clamp, Insulator, Kohler	1
9	47629856001	Assembly, Heat Shield, Kohler	1

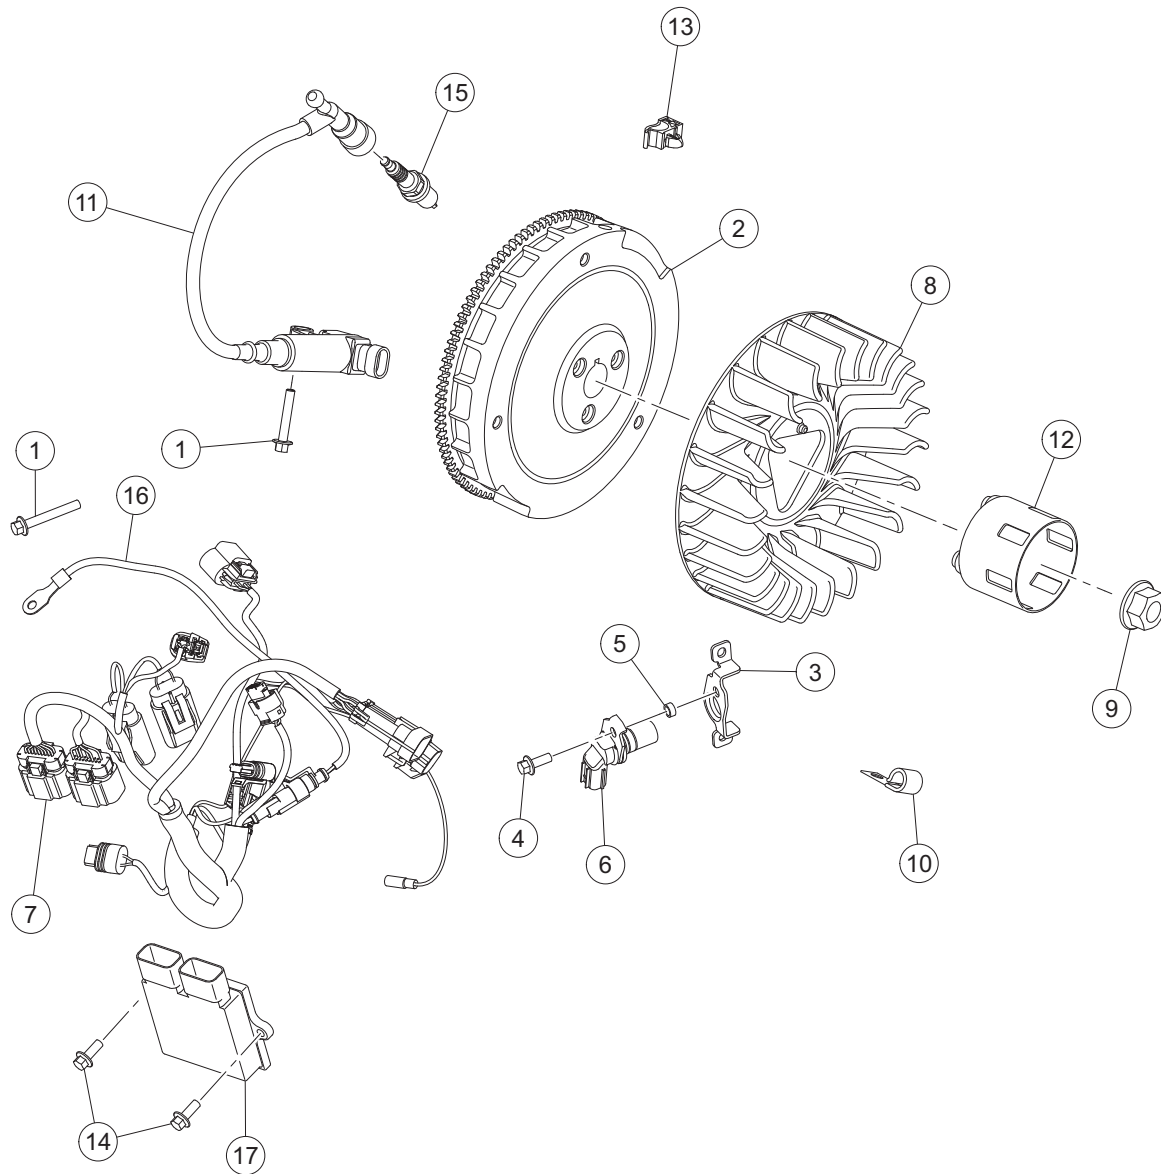


G-040799-000004

IGNITION COMPONENTS AND FLYWHEEL – ECH440

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	47629702001	Screw, Hex Flange (m6), Kohler	3
2	47629702001	Screw, Hex Flange (m6), Kohler	1
3	47629826001	Flywheel Assy, Electric Start	1
4	47629828001	Bracket, Crank Sensor, Kohler	1
5	47629831001	Screw, Hex Flange, Kohler	1
6	47629832001	Spacer, Kohler	1
7	47629833001	Sensor, Speed, Kohler	1
8	47629834001	Harness, Wiring Assy, Kohler	1
9	47629835001	Fan, Flywheel, Kohler	1
10	47629836001	Nut, Flywheel, Kohler	1
11	47629837001	Clip, Cable, Kohler	1
12	47629838001	Coil, Ignition-efi, Kohler	1
13	47629841001	Cup, Starter Drive, Kohler	1
14	47629843001	Clip, Wiring Harness, Kohler	1
15	47640021001	Screw, M6x16, Kohler	2
16	47640281001	Plug, Spark, Kohler	1
17	47650647001	Sensor, Temperature	1
18	47676897001	Module, ECU, Kohler	1

8


G

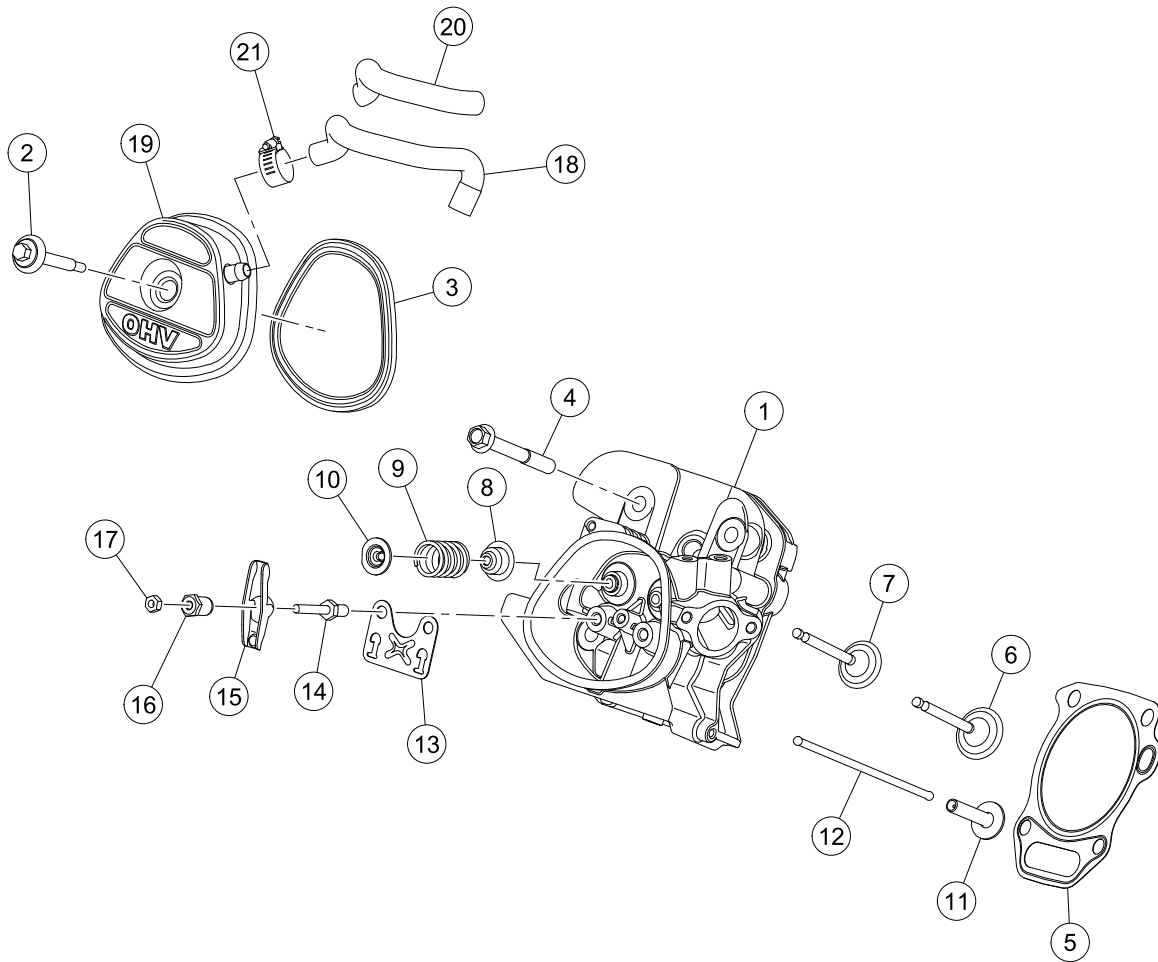

G-040599-000001

CYLINDER HEAD AND VALVE – ECH440

ITEM	PART NO.	DESCRIPTION	QTY	8	G
		1 2 3 4			
1	47629711001	Assembly, Cylinder Head, Kohle	1		
2	47629714001	Screw, Valve Cover Seal Assy,	1		
3	47629716001	Gasket, Valve Cover, Kohler	1		
4	47629717001	Screw, Hex Flange Cylinder Hea	4		
5	47629718001	Kit, Head Gasket, Kohler	1		
6	47629719001	Valve, Intake, Kohler	1		
7	47629720001	Valve, Exhaust, Kohler	1		
8	47629722001	Seal, Valve Stem, Kohler	2		
9	47629723001	Spring, Valve, Kohler	2		
10	47629724001	Retainer, Valve Spring, Kohler	2		
11	47629725001	Lifter, Valve, Kohler	2		
12	47629726001	Rod, Push, Kohler	2		
13	47629727001	Plate, Pushrod Guide, Kohler	1		
14	47629728001	Stud, Rocker, Kohler	2		
15	47629729001	Arm, Rocker, Kohler	2		
16	47629730001	Pivot, Rocker Arm, Kohler	2		
17	47629768001	Nut, Hex Jam, Kohler	2		
18	47629822001	Hose, Breather, Kohler	1		
19	47629823001	Valve Cover Assembly, Kohler	1		
20	47629824001	Sleeve, Anti Abrasion, Kohler	1		
21	47629825001	Clamp, Hose, Kohler	1		

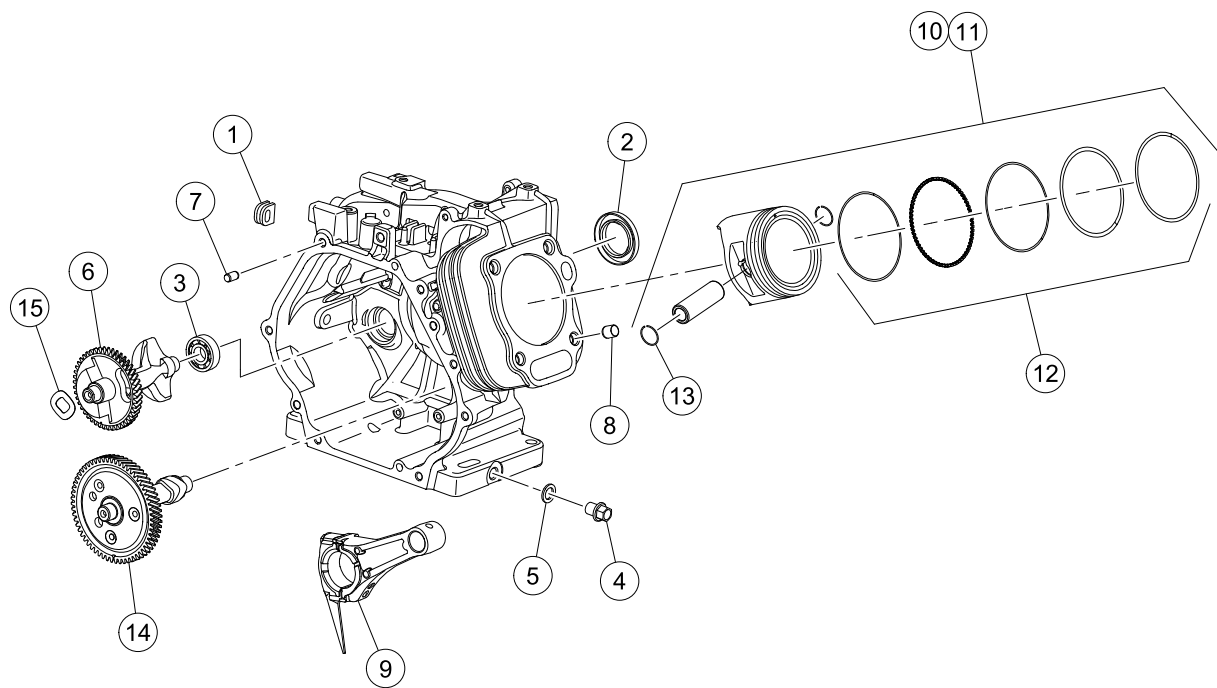


G-040399-000001

CRANKCASE AND PISTON – ECH440

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	47629677001	Grommet, Crankcase,kohler	1
2	47629680001	Seal, Crankcase, Kohler	2
3	47629682001	Bearing, Balancing Shaft, Kohl	2
4	47629685001	Kit, Drain Plug, Kohler	2
5	47629686001	Washer, Drain Plug, Kohler	2
6	47629687001	Shaft, Balance, Kohler	1
7	47629688001	Pin, Dowel, Kohler	2
8	47629689001	Pin, Dowel Cylinder Head, Kohl	2
9	47629690001	Rod, Connecting Assembly,kohle	1
10	47629691001	Kit, Piston Wing Set (std), Ko	1
11	47629693001	Kit, Piston (0.25 O.s.), Kohle	1
12	47629694001	Ring Set, Kohler	2
13	47629696001	Retainer, Piston, Kohler	2
14	47629697001	Camshaft Assembly, Kohler	1
15	47629698001	Spring, Wave, Kohler	1

8

G

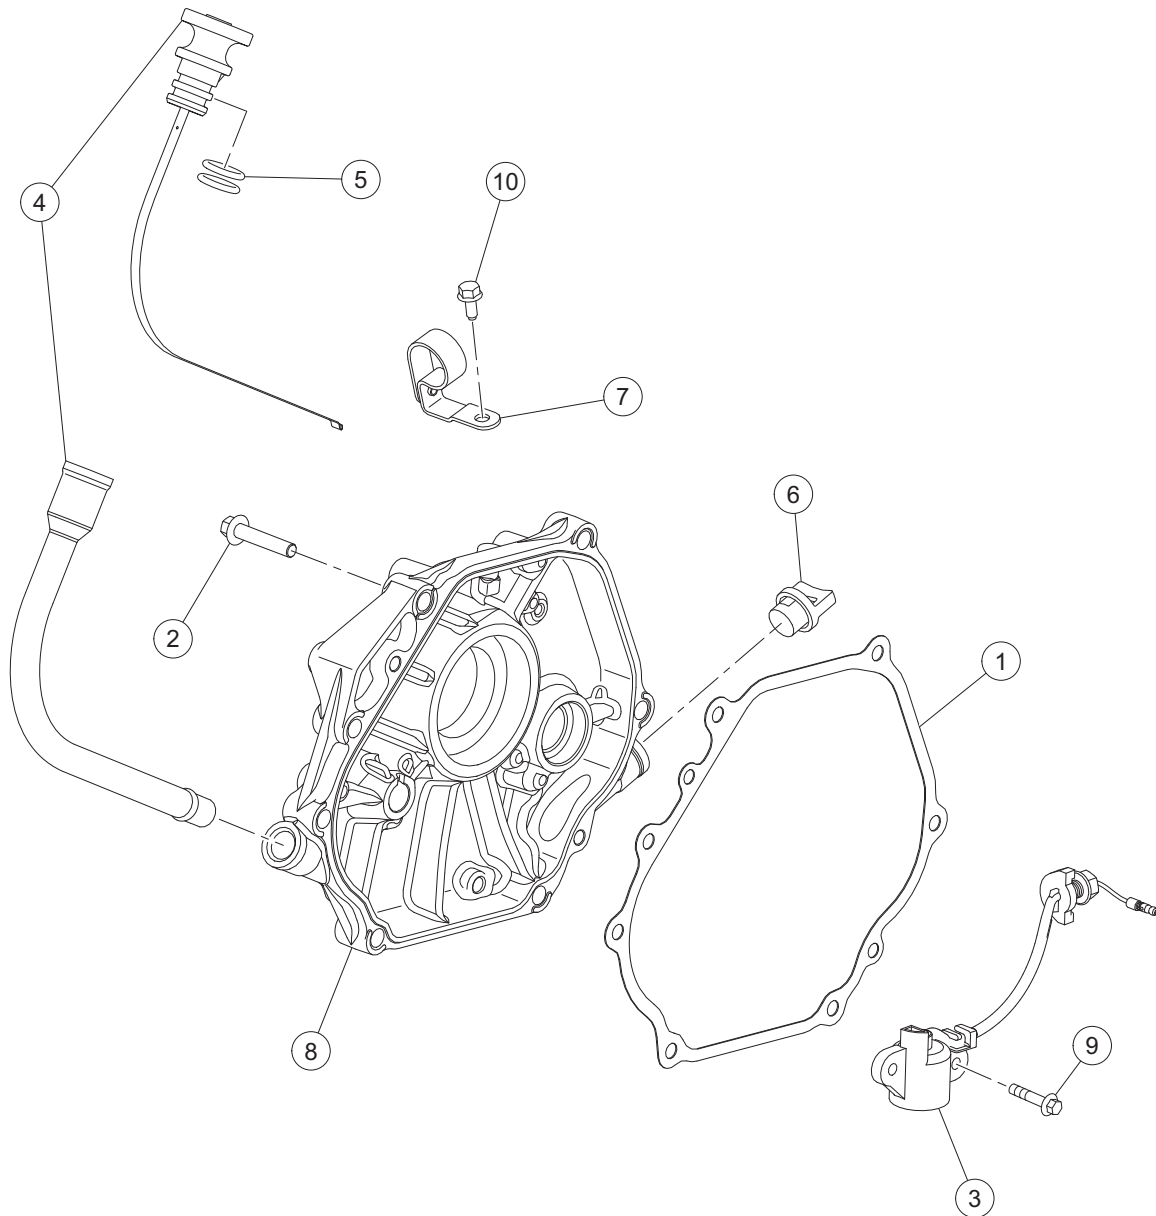


G-040699-000002

OIL SENSOR AND LUBRICATION – ECH440

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	47629699001	Gasket, Closure Plate, Kohler	1
2	47629700001	Screw, Closure Plate, Kohler	7
3	47629701001	Switch, Oil Sensor Assembly, K	1
4	47629703001	Dipstick, Assembly, Kohler	1
5	47629705001	O-ring, Dipstick Cap, Kohler	2
6	47629707001	Cap Assy, Oil Fill, Kohler	1
7	47629709001	Bracket, Dipstick Tub, Kohler	1
8	47640020001	Plate, Closure, Kohler	1
9	47640021001	Screw, M6x16, Kohler	2
10	47640022001	Screw, M5 X8, Kohler	1

8

G

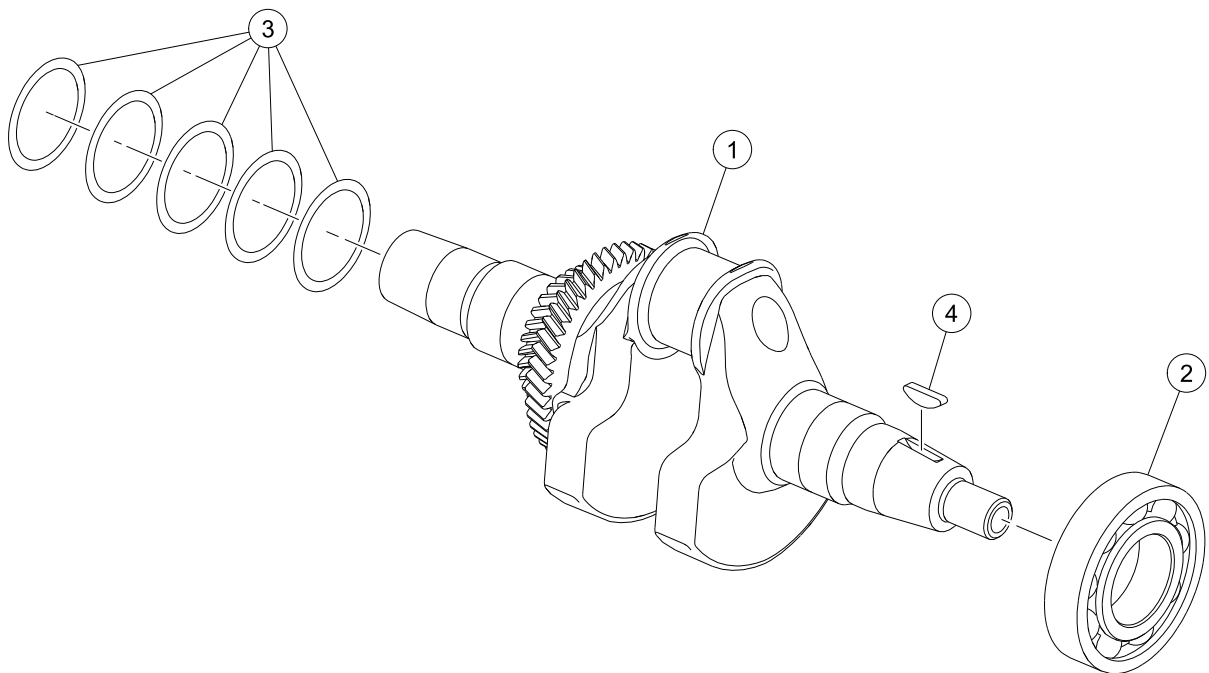

G-040299-000001

CRANKSHAFT – ECH440

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	47629583001	Crankshaft Assembly, Kohler	1
2	47629585001	Bearing, Crankshaft, Kohler	2
3	47629588001	Kit, Shims, Kohler	5
4	47629589001	Key, Flywheel, Kohler	1


8

G

FUEL SYSTEM – EFI

9


G

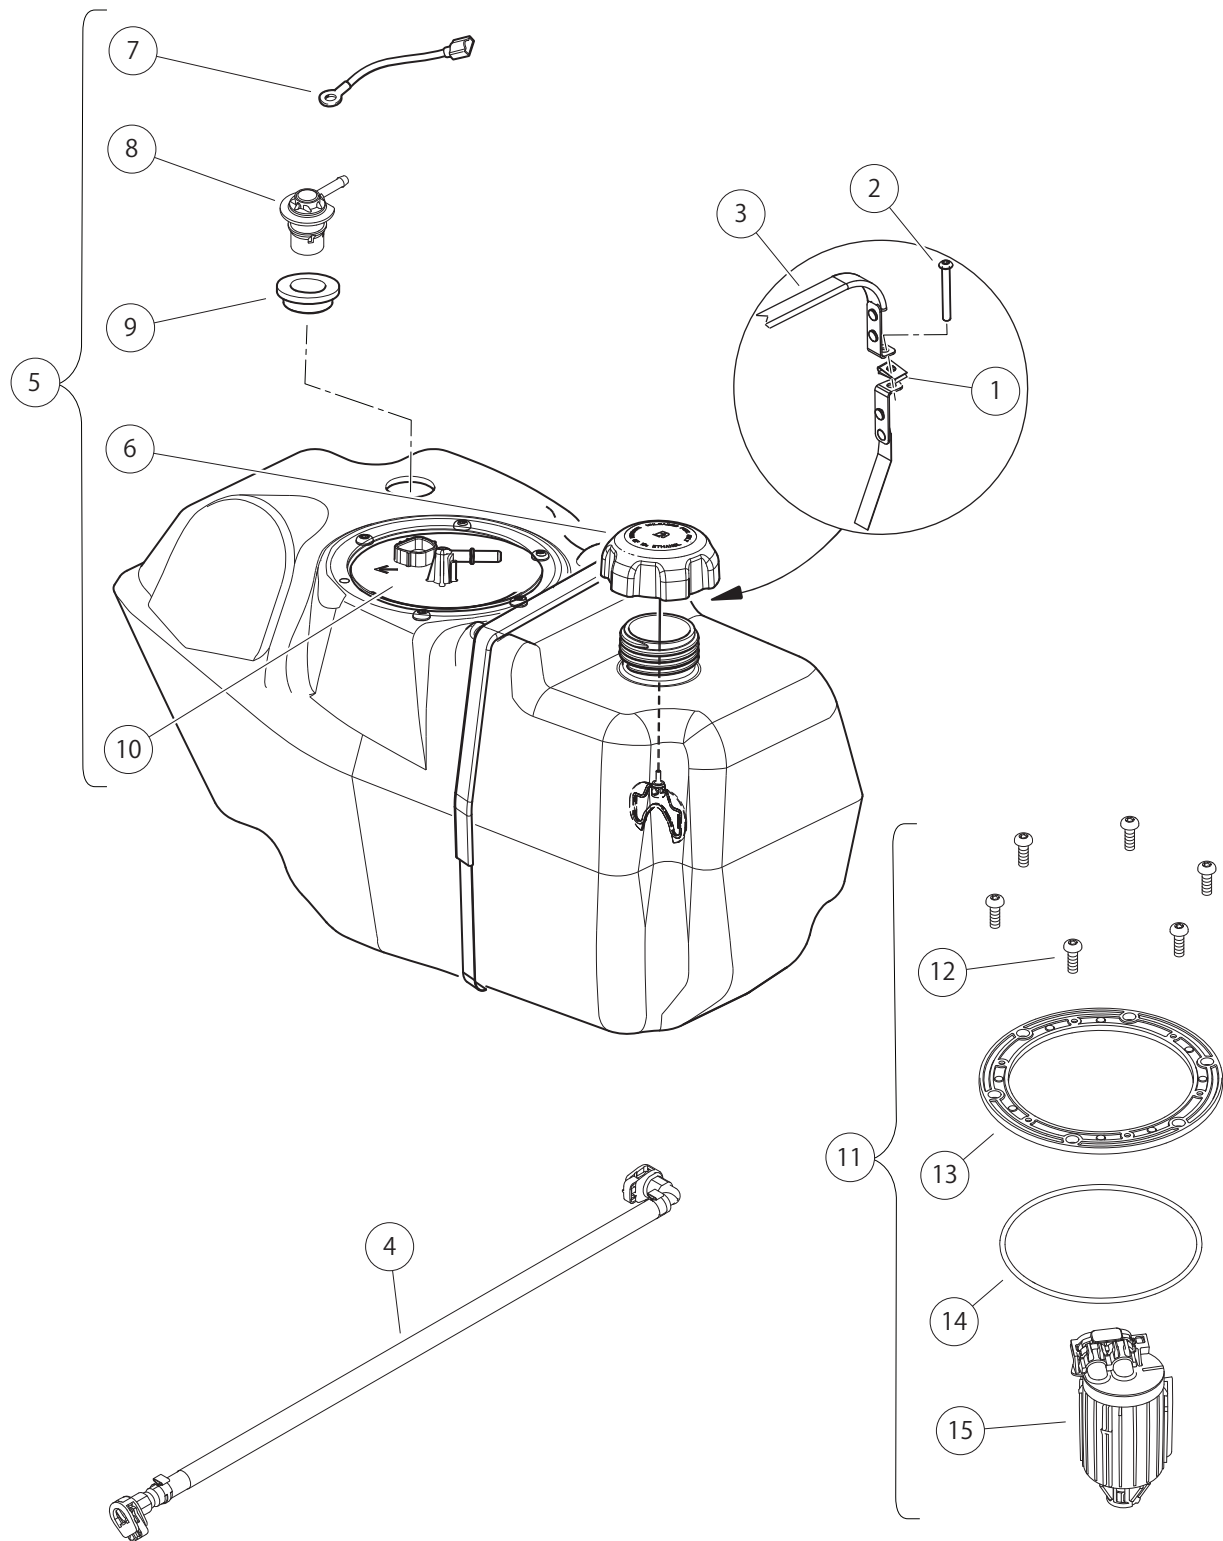

000975-006


FUEL TANK WITH PUMP, TOP FILL – EFI

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	1014116	Nut, 1/4-20 Speed	1	
2	105194101	1/4-20 X 2.5, Bhcs, 6-lobe	1	
3	105245401	Strap, Tank, Utility	1	
4	47606233003	Asm, Fuel Line, Util, Sb	1	
5	47664038001	Asm, Tank, Fuel, Top, Su (includes items 6 through 11)	1	
6	103372101	Cap, Fuel Tank, Gas, Ratchet	1	
7	105143301	Wire, Ground, Fuel Tank	1	
8	47611876001	Vent Rov, Fuel Tank, Precedent	1	
9	47611877001	Grommet, Fuel Tank, Vent	1	
10	N/A	Fuel Pump Module Su 50psi	1	
11	47623339001	Kit, Fuel Filter, 50 Psi (includes items 12 through 15)	1	
12	102025801	Screw, 1/4-20 X .75 Torx Pn Hd	6	
13	105043801	Fuel Module, Hold Down Ring	1	
14	105043901	O-Ring, Fuel Module	1	
15	N/A	Fuel Filter, 50psi	1	



CARBON CANISTER – EFI


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	1012649	Clamp, 0.460 Red Hose	2	
2	1013746	Clamp, 0.301 ID Hose	2	
3	101587714	Hose, Fuel, Vent, 34" Long	1	
4	102025801	Screw, 1/4-20 X .75 Torx Pn Hd	2	
5	103372401	Canister, Carbon	1	
6	103452001	Brkt, Mtg, Carbon Canister	1	
7	103756401	Asm, Vent Line, Carbon Canister (includes items 8 and 9)	1	
8	N/A	Hose, Vent, 5/16 I.D., Bulk	1	
9	N/A	Vent, Barb, 5/16 I.D. Hose	1	
10	103896604	Hose, Vent, 1/4 Id, 17 In (SWB and Utility)	1	
11	103896605	Hose, Vent, 1/4 Id, 23.5 In	1	
12	47606257001	Brkt, Mtg, Carbon Canister	1	
13	47619701001	Clip, Purge Line, Util	2	
14	47637087001	Bracket, fuel line routing	1	
Note: Items 6 and 14 apply to short wheel base vehicles only. Item 12 applies to utility and long wheel base vehicles only.				

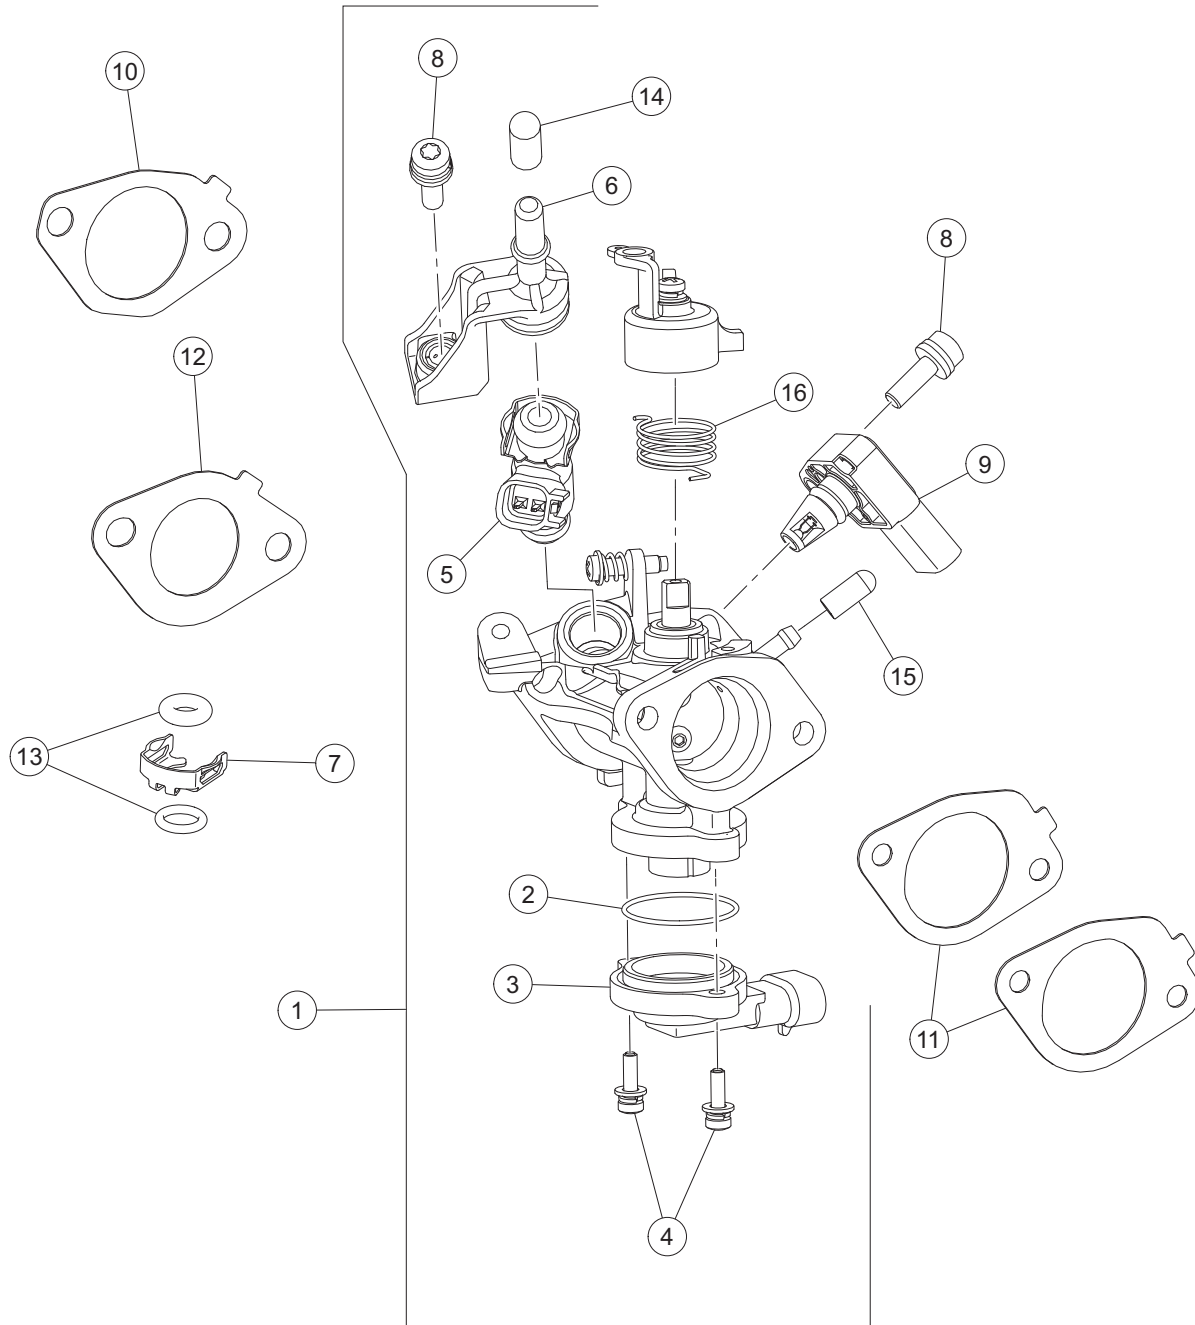

G-100199-000001


THROTTLE BODY AND MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	47629857001	Throttle Body, Assembly, Kohle	1	
2	47629858001	O-ring, Kohler	1	
3	47629859001	Kit, Tps, Kohler	1	
4	47629860001	Screw, Hexalobular, M4 X 0.7 X	2	
5	47629861001	Injector, Fuel, Kohler	1	
6	47629862001	Cap, Fuel Inector, Kohler	1	
7	47629864001	Clip, Retainer, Kohler	1	
8	47629865001	Screw, Hexalobular, M6 X 1 Sem	2	
9	47629866001	Sensor, T-map, Kohler	1	
10	47629867001	Kit, Gasket Intake, Kohler	1	
11	47629868001	Gasket, Throttle Body, Kohler	2	
12	47629869001	Gasket, Insulator To T-body, K	1	
13	47629870001	Kit, Fuel Injector O-ring, Koh	1	
14	47629871001	Cap, Masking, Kohler	1	
15	47629872001	Cap, Masking, Kohler	1	
16	47629874001	Spring, Return, Kohler	1	

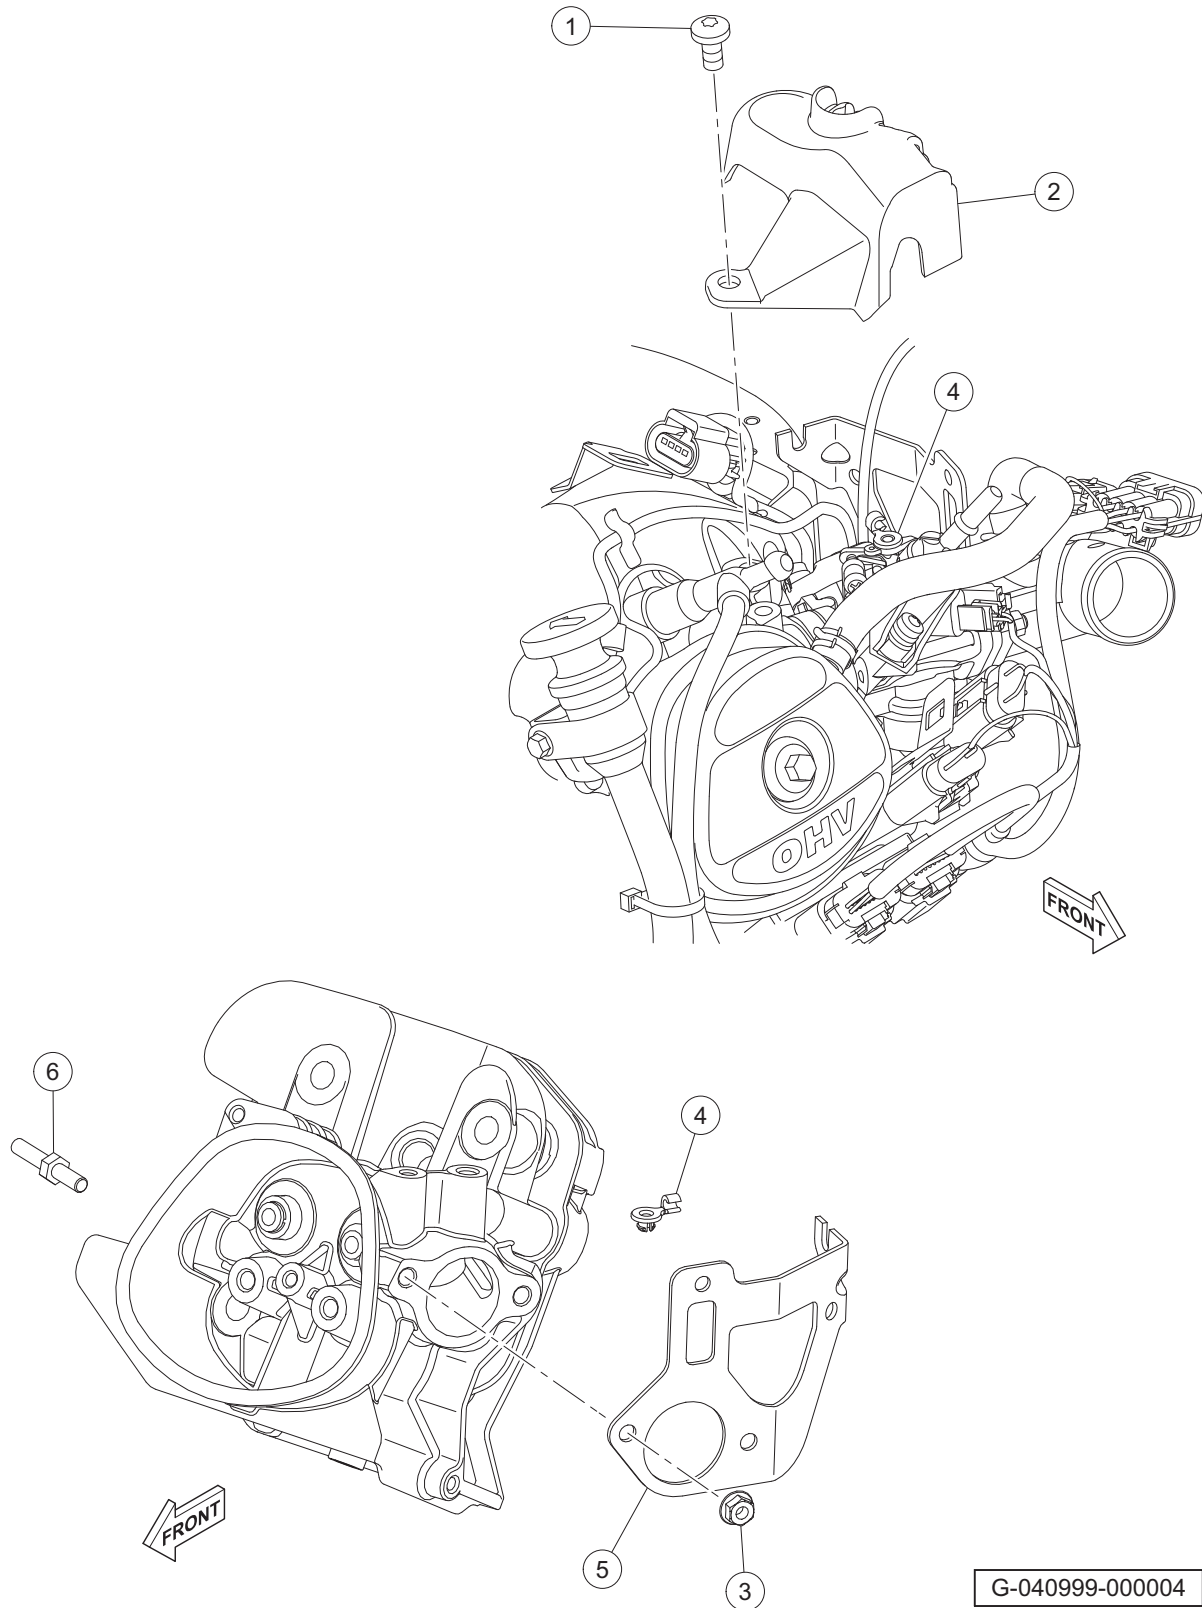

GOVERNOR BRACKET AND COVER – EFI


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	102298116	Bolt, Flanged Head, M8 X 16.0	1	
2	47612352001	Cover, Governor, Ech 440	1	
3	47629875001	Nut, Hex Flange Lock (m6), Koh	2	
4	47629876001	Bushing, Linkage Retainer, Koh	1	
5	47629877001	Bracket, Governor, Kohler	1	
6	47629878001	Stud, Ground, Kohler	1	

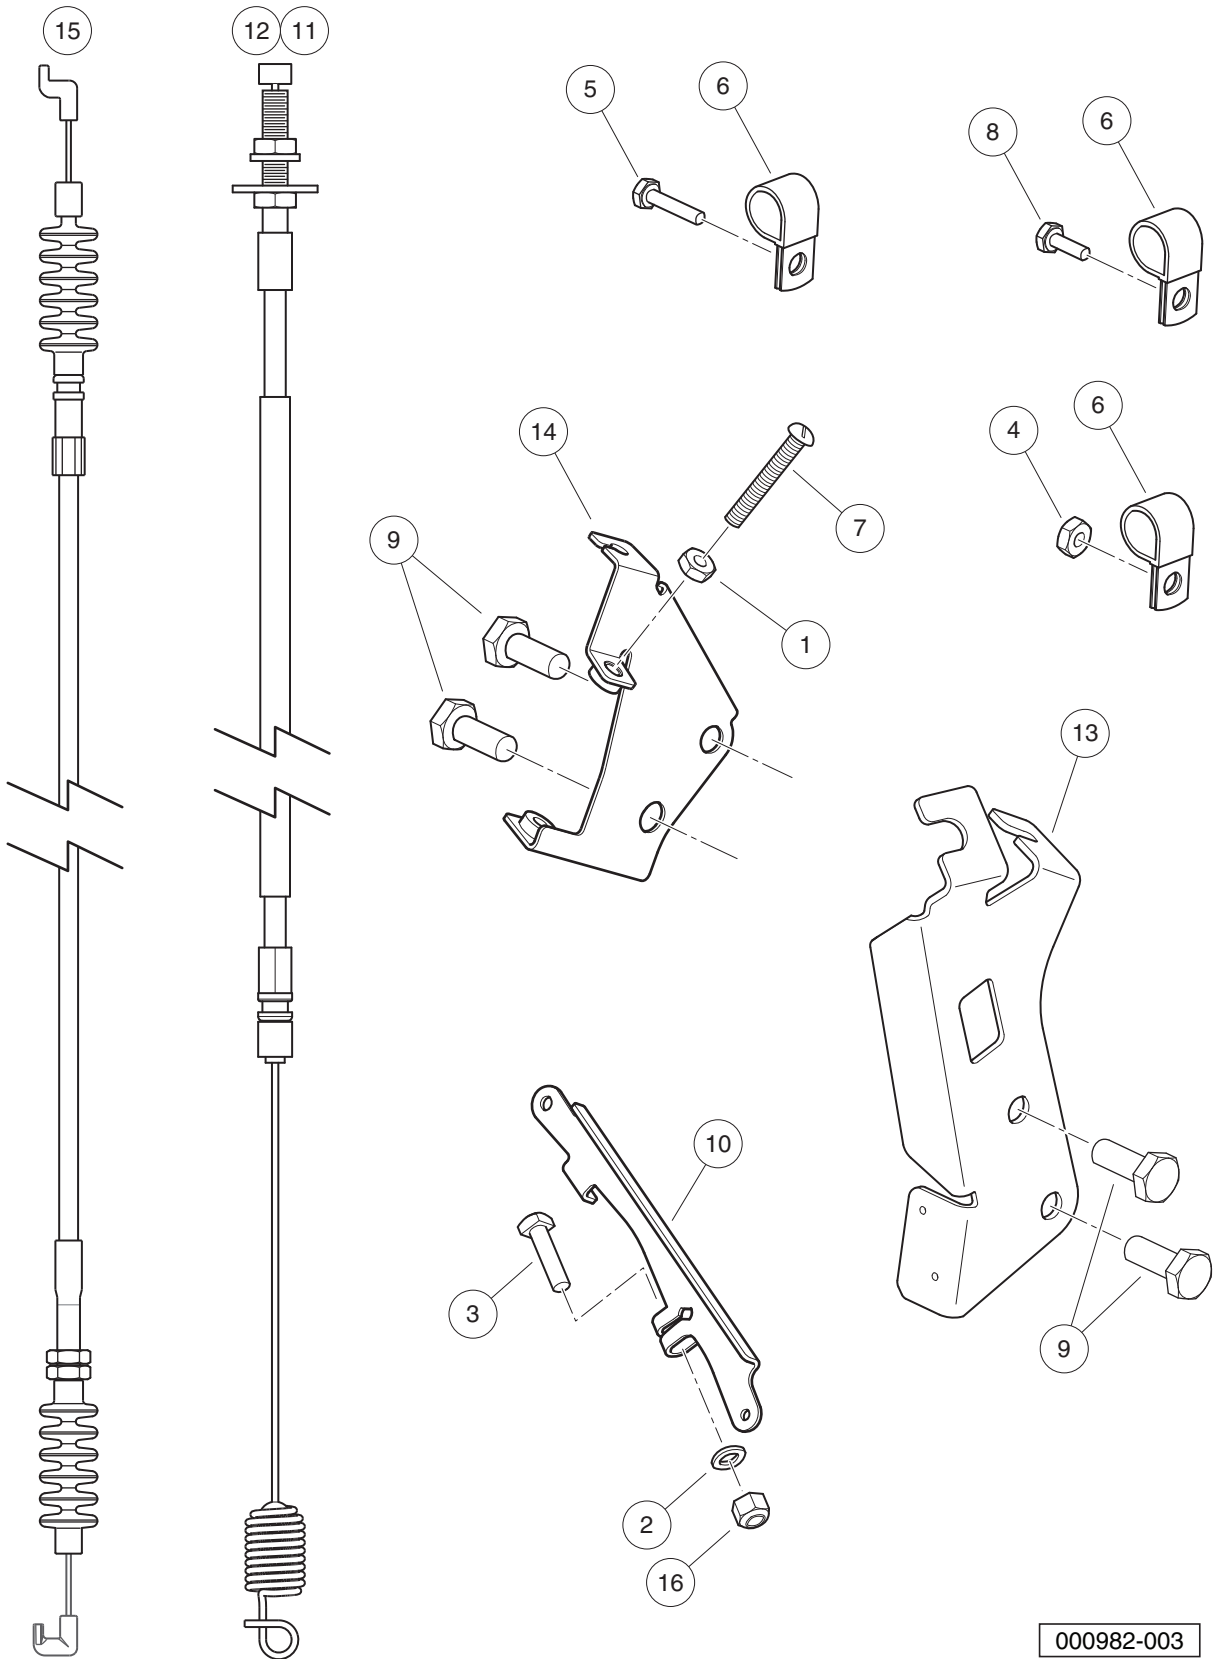

000982-003

GOVERNOR AND ACCELERATOR CABLES – EFI


ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	1011114	Nut, M6-1.00 Hex	2	
2	1014007	Washer, 1/4, Flat	1	
3	101886101	Screw, 1/4-20 X 1.00, Square-Head	1	
4	101887601	Locknut, M6-1.00 Nylon Insert	1	
5	102296716	Screw, M6 X 16 Tt Hx Fl Hd	1	
6	102410604	P-clamp, Insulated, 0.625 Inch	3	
7	102476401	Bolt, Stop, Pedal	1	
8	102490301	Bolt, M6 X 1 X 16, Loctite	1	
9	102498201	Bolt, M10 X 1.25 X 25, Loctite	2	
10	104023501	Arm, Governor, ED65	1	
11	105007402	Cable, Accelerator, Utility, Low-Speed	1	
12	105007403	Cable, Accelerator, Utility, Std-Speed	1	
13	105135101	Bracket, Cable, FNR/Accelerator, ED65	1	
14	105144401	Weldment, Governor Bracket	1	
15	47601355001	Cable, Governor, Z Fit 90 Fit	1	
16	8233	Locknut, 1/4-20, Nylon Insert	1	

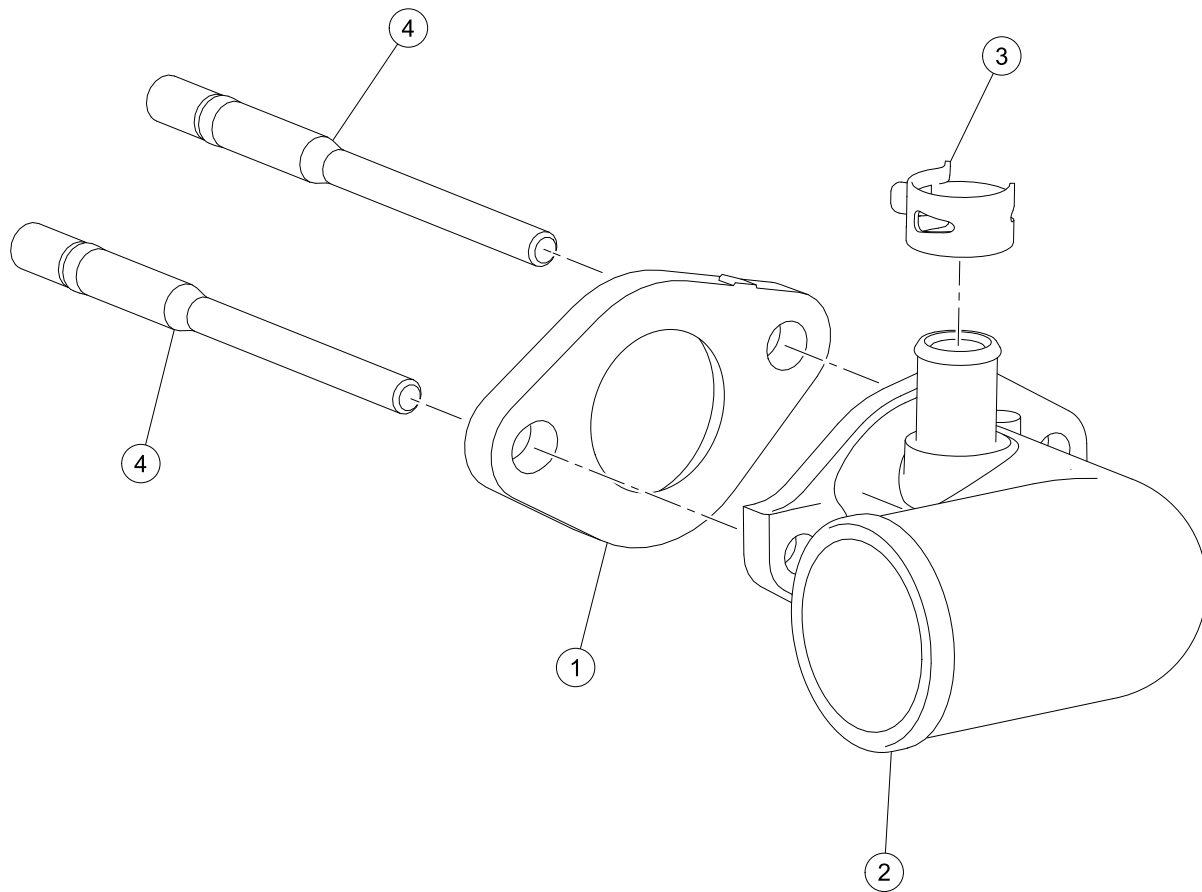

G-040999-000003

AIR INTAKE ELBOW – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	47629879001	Insulator Throttle Body, Kohle	1
2	47629880001	Elbow, Air Inlet, Kohler	1
3	47629881001	Clamp, Breather Hose, Kohler	1
4	47629882001	Stud, Intake, Kohler	2

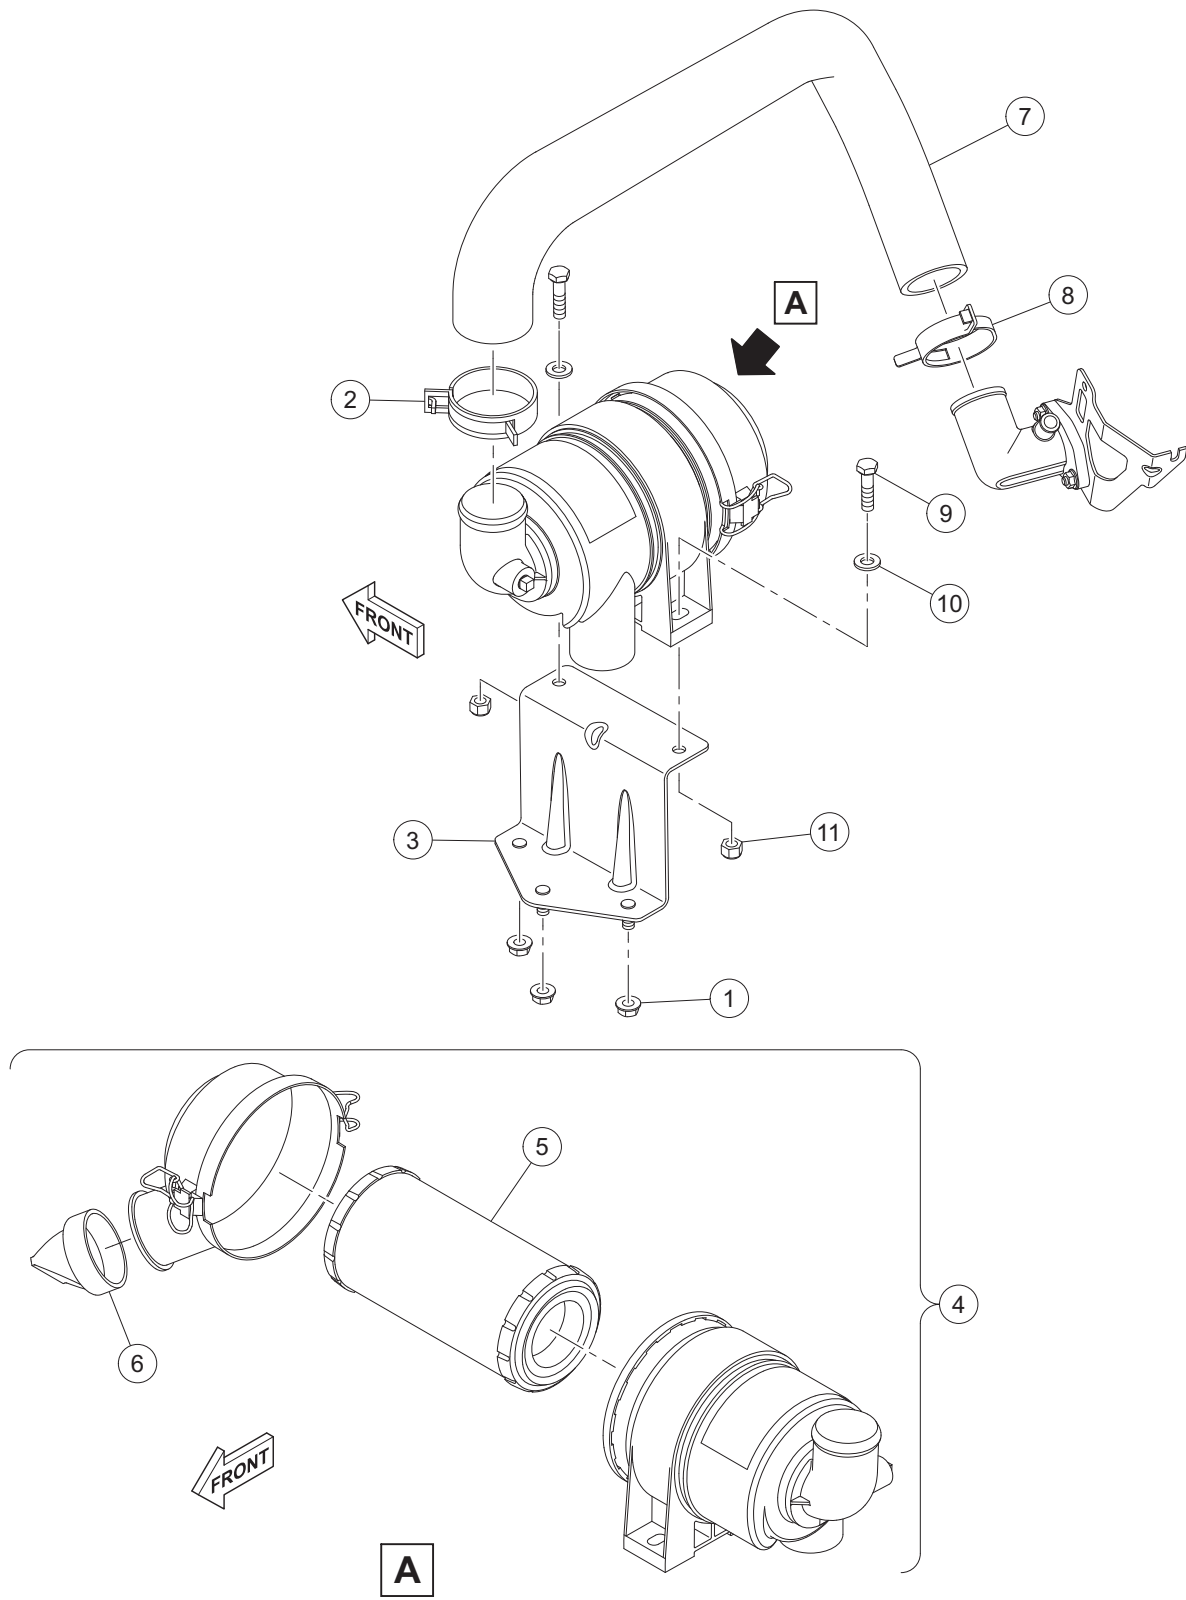

G-040999-000005

AIR FILTER SYSTEM AND INTAKE HOSE – EFI

ITEM	PART NO.	DESCRIPTION	QTY	9
		1 2 3 4		G
1	101963401	Locknut, 5/16-18 Hex Flange	3	
2	102411209	Clamp, Hose, Ctb 55mm Dia.	1	
3	105003401	Asm, Bracket, Mtg, Air Cleaner	1	
4	105009101	Air Cleaner, Utility with EFI (includes items 5 and 6)	1	
5	102558201	Air Filter, 4 Inch	1	
6	102725501	Valve, Evacuator, Filter Air	1	
7	105009401	Hose, Air Intake, LWB Utility with EFI	1	
8	105088501	Clamp, Ctb, 49mm Dia, W/clip	1	
9	1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	2	
10	1241	Washer, 5/16 Type A Flat	2	
11	7473	Locknut, 5/16-18 Nylon Insert	2	
Note: Item 4 conatins items 5 and 6. All items can be ordered seperately.				


9

G

EXHAUST SYSTEMS – ECH440

10

G

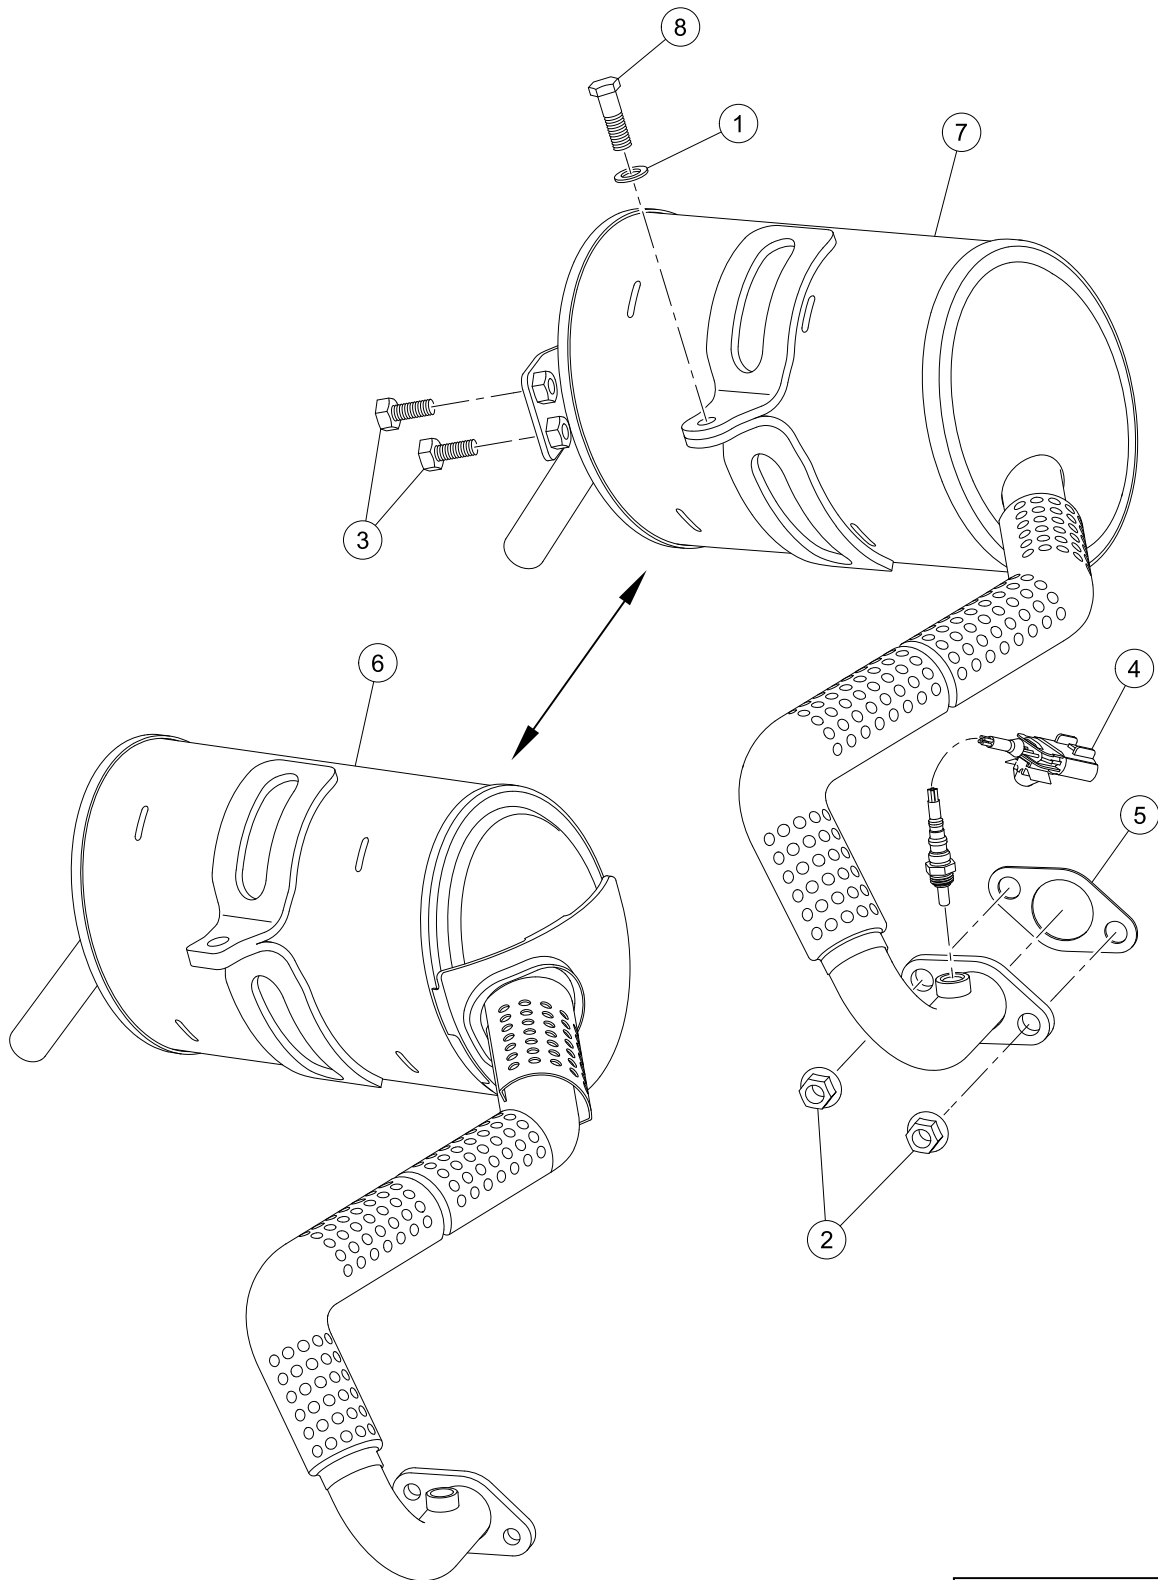

G-110199-000003

EXHAUST SYSTEMS

ITEM	PART NO.	DESCRIPTION	QTY	10
		1 2 3 4		G
1	1011697	Washer, 5/16 Flat	1	
2	102298401	Nut, M8, All Metal Lock	2	
3	102922701	Bolt, Flanged Head, M8x1.25x20 Lock Patch	2	
4	47611209001	Asm, Sensor, Oxygen, Heated	1	
5	47611210001	Gasket, Exhaust, Grpht, Ech440	1	
6	47649808001	Exhaust, LTFF, ECH440	1	
7	47649808002	Exhaust, Utility, ECH440	1	
8	96705587	Bolt, M8 X 1.25 X 30	1	


10

G

DRIVE BELT AND CLUTCHES – EFI GASOLINE VEHICLES

11

G

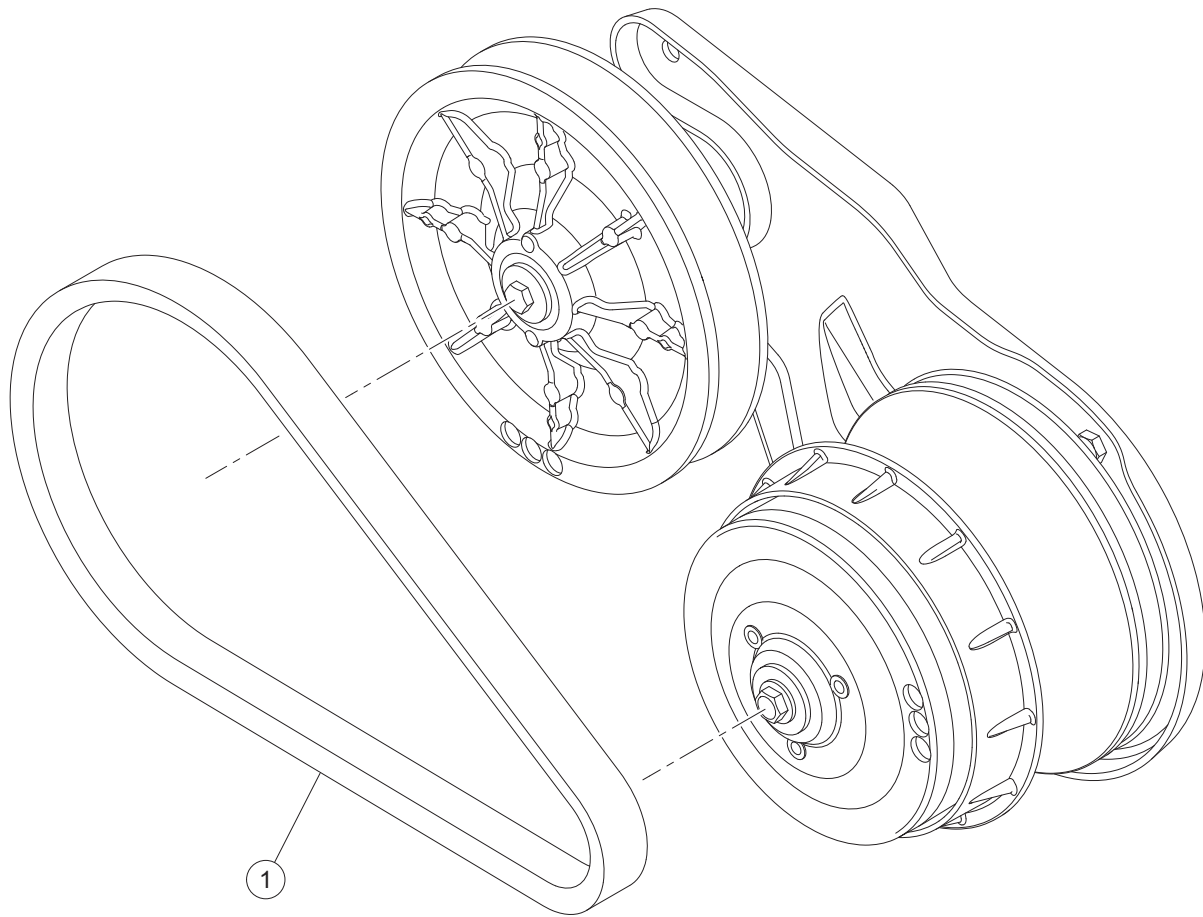


G-060099-000003

DRIVE BELT – EFI

ITEM	PART NO.	DESCRIPTION	QTY
1	105245801	1 2 3 4 Belt, Drive, Pedal-Start	1

11

G

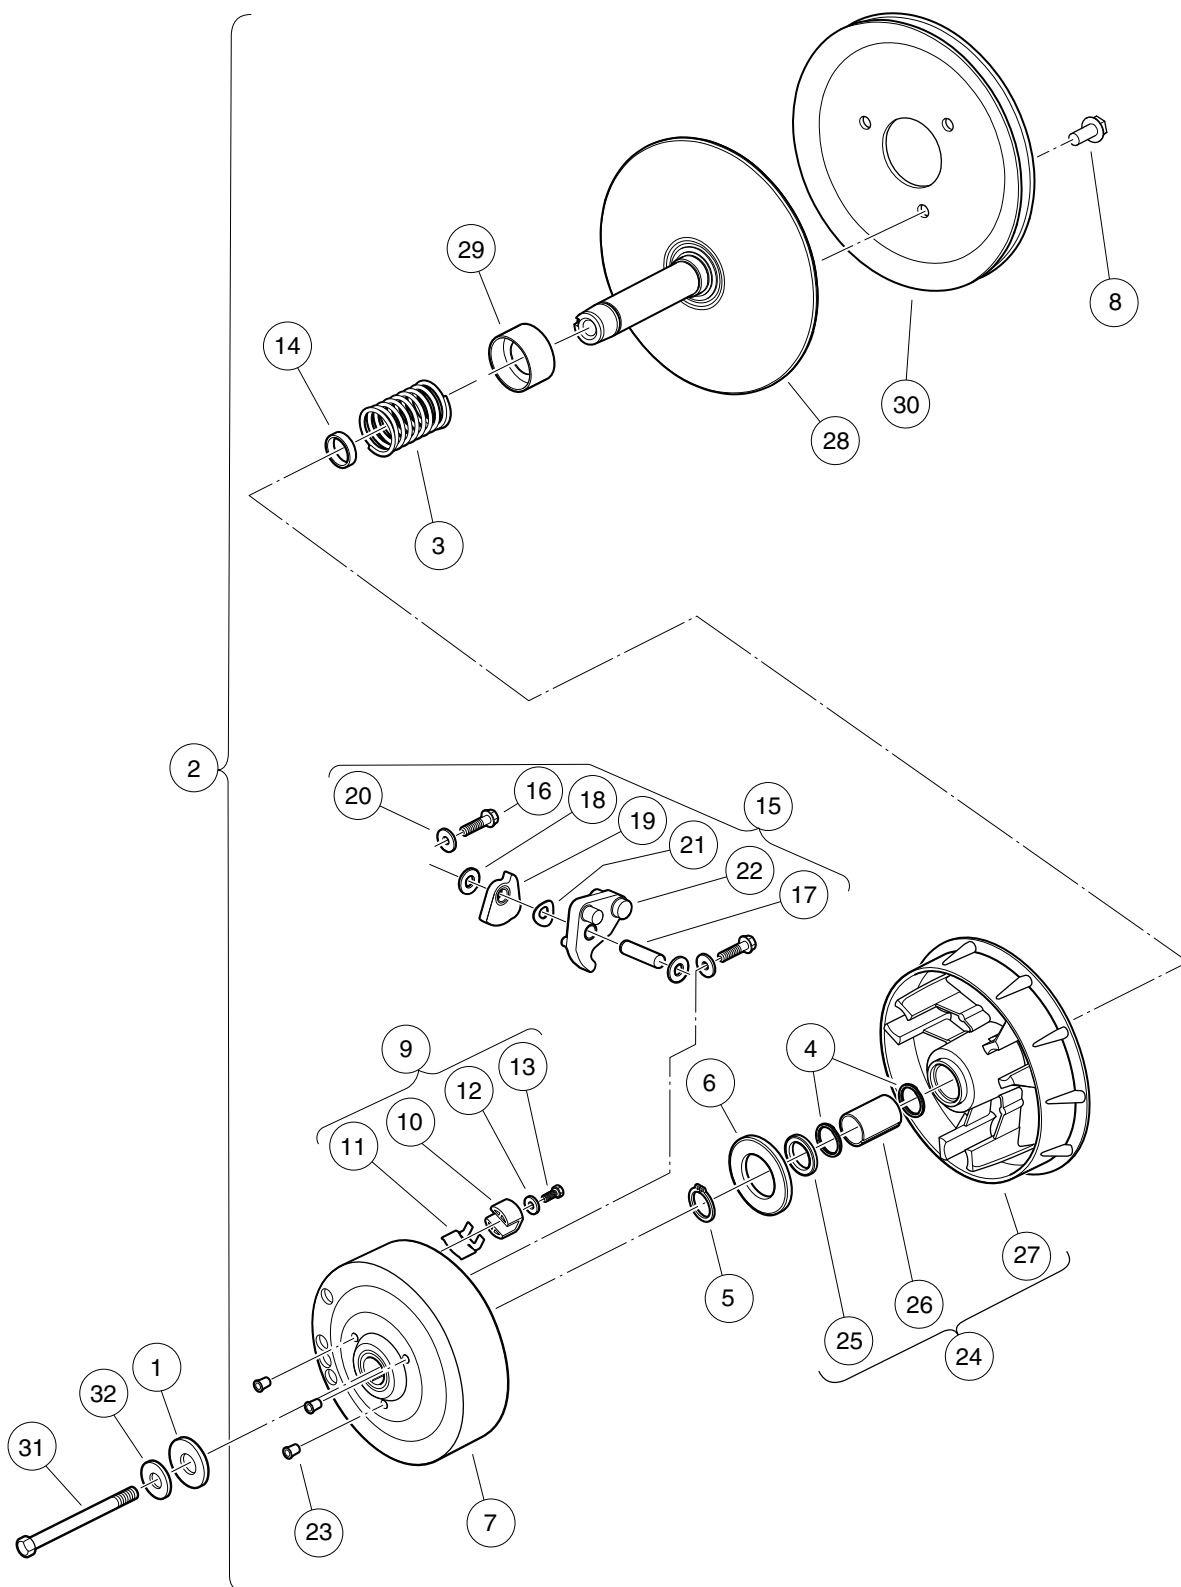


000958-001

DRIVE CLUTCH – PEDAL-START VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102491501	Washer, Hard, M10	1
2	103973901	Clutch, Drive, Pedal-Start (includes items 3 through 30)	1
3	1014051	Spring, Drive Clutch	1
4	1014056	Ring, Spiral Backup	2
5	1014057	Ring, 0.810" Internal Retaining	1
6	1014058	Thrust Washer	1
7	1014059	Drive Hub Assy, Drive Clutch	1
8	1014288	Screw, 5/16-18 X 0.75, Thread-Forming	3
9	1014453	Kit, Drive Clutch Button (includes items 10 through 13)	1
10	1014062	Driver, Drive Clutch	3
11	1014287	Spring, Drive Button	3
12	183	Washer, #10, Type A, Flat	3
13	8450	Screw, #10-24 X 0.50, Hex-Head	3
14	1016289	Spacer, Fixed Face Shaft	1
15	1016801	Kit, Drive Clutch Weight (includes items 16 through 22)	1
16	1014063	Screw, 1/4-20 X 1.00, Hex Head	6
17	N/A	Pin, Dowel, 0.3752 x 1.50	3
18	1014065	Washer, Flat, 0.38" ID, Delrin	6
19	N/A	Clutch Weight, Secondary	3
20	N/A	Washer	6
21	1016201	Washer, Wave	3
22	N/A	Weight, Primary	3
23	N/A	Cap Plug	3
24	103974201	Asm, Sheave, Moveable, Drive, Wr (includes items 25 through 27)	1
25	1014055	Retainer	1
26	N/A	Bushing, Split, Drive Clutch	1
27	N/A	Sheave, Moveable, Drive, Wr	1
28	103974401	Sheave, Fixed, Drive, Wr	1
29	103984601	Spacer, Idler, Drive	1
30	105096101	Pulley, 7.3 Inch Effective Dia	1
31	103976101	Screw, 3/8-24x5.75, Patch	1
32	334	Washer, 3/8, Type A, Flat	1

11

G

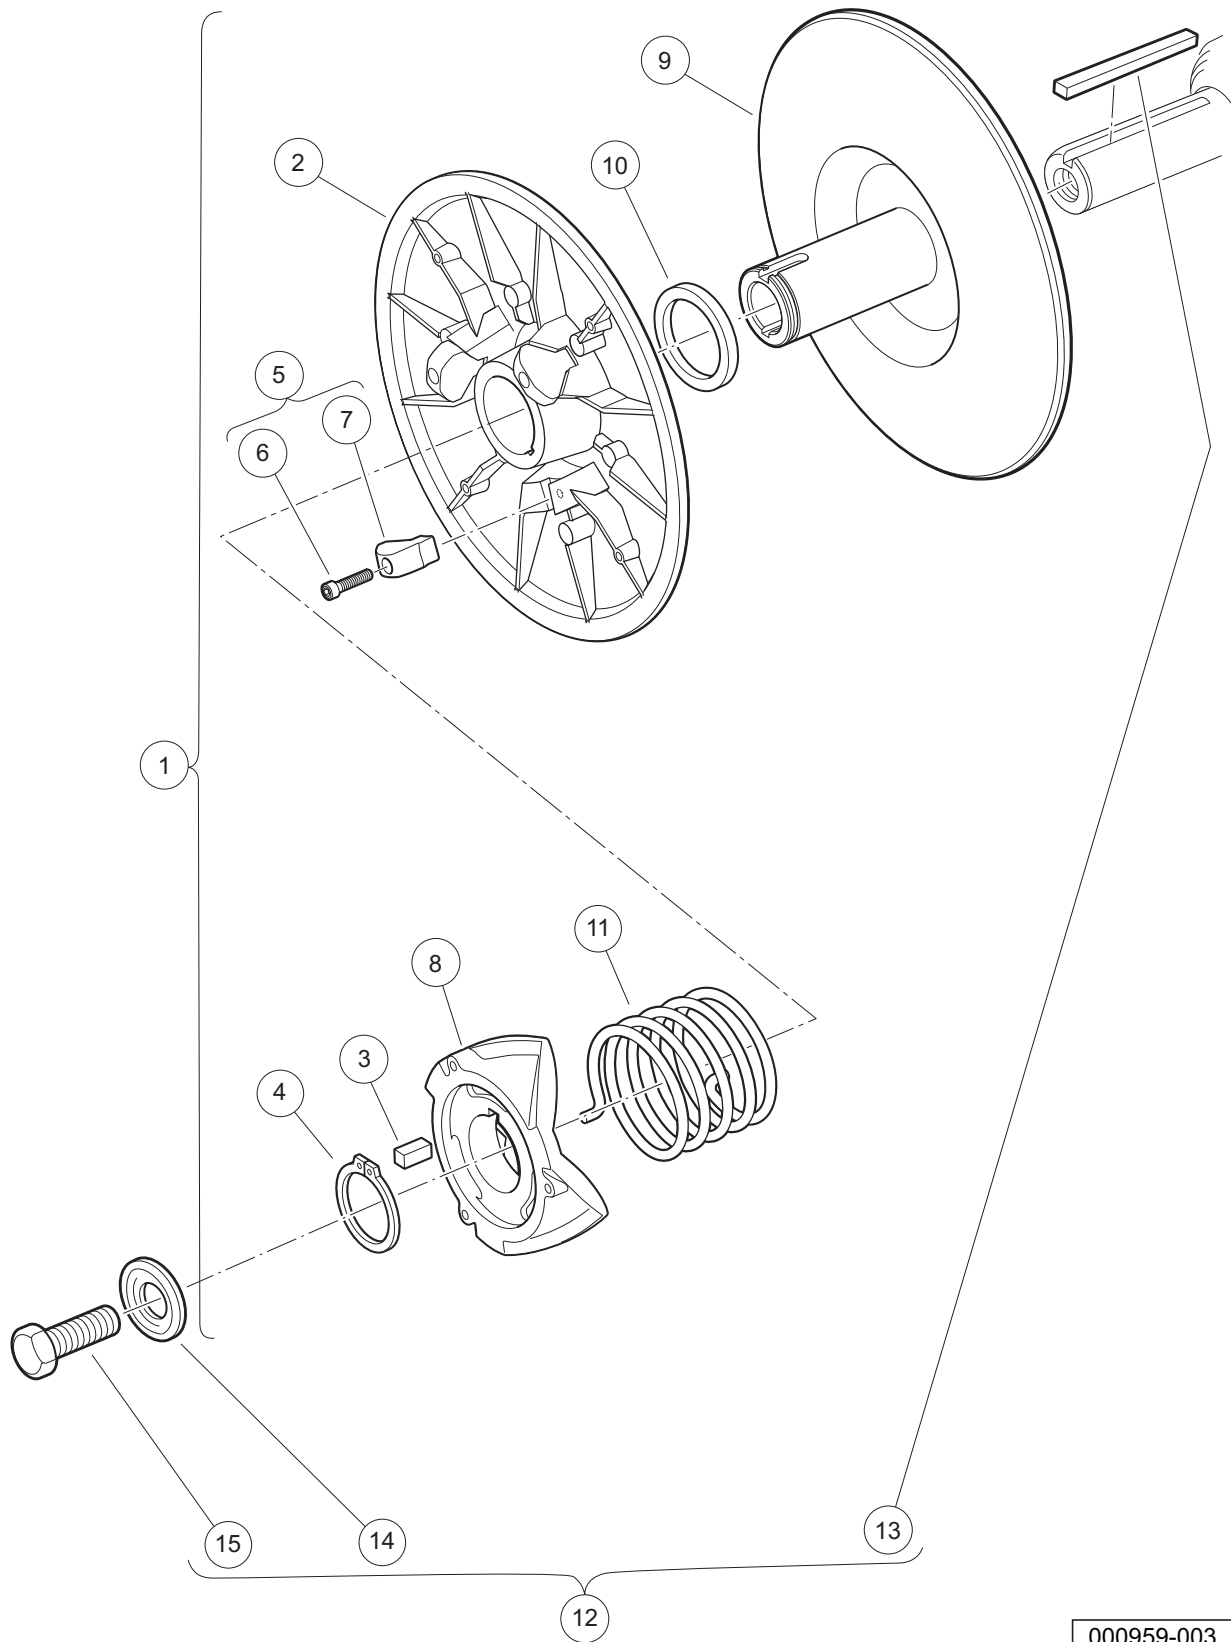

000959-003

DRIVEN CLUTCH – PEDAL START

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	47601767002	Asm, Clutch, Driven, Ccw, Red (includes items 2 through 11)	1
2	1014072	Movable-Face Assembly with Bushing	1
3	1014078	Key, Driven Clutch	1
4	1014080	Ring, Retaining	1
5	1014454	Kit, Driven Clutch Button (includes items 6 and 7)	1
6	1012836	Screw, #8-32 X 3/4, Socket-Head Cap	3
7	N/A	Button, Drive	3
8	1017686	Cam, Driven Clutch	1
9	103975301	Sheave, Fixed, Driven, Wr	1
10	104025101	Washer, Acetal, Driven Clutch	1
11	47601832001	Spring, Drvn Clutch, Ccw, Red	1
12	AM10419	Kit, Clutch Repair (includes items 13 through 15)	1
13	101833401	Key, 3/16 Sq X 1.50"	1
14	102155801	Washer, Driven Clutch	1
15	102242101	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1

11

G


11

G

TRANSAXLE (FUJI ED65)

12

G

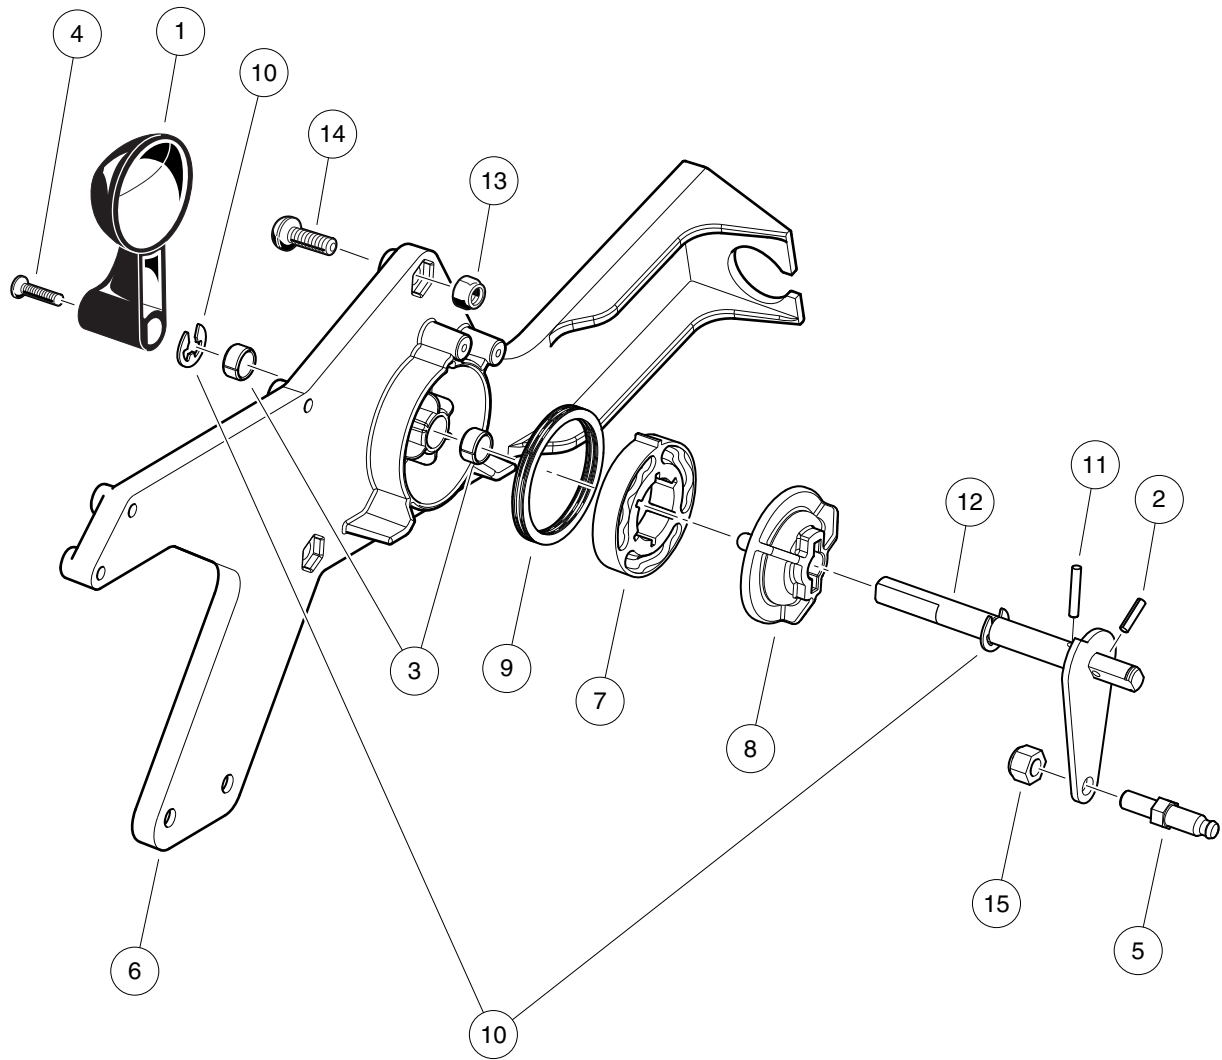

001012-001


FORWARD/REVERSE SHIFTER – EFI

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012987	Handle, FNR	1
2	1013591	Pin, Roll, 1/8 X 1/2	1
3	1014145	Bushing, Secondary Weight, Split	2
4	1015064	Screw, #8-32 X 0.63 Machine	1
5	102526201	Stud, Thread, 1/4-28	1
6	105037501	Housing, Gas FNR Body Shift	1
7	105037601	Cam, FNR Detent, 45 Degree	1
8	105037701	Follower, FNR Detent	1
9	105038501	Spring, Wave, Gas FNR Shifter	1
10	105039801	E-Clip, External, 8mm Groove	2
11	105040401	Pin, Round, 0.125 Dia x 0.625	1
12	105041201	Weldment, Shaft, FNR, Dash	1
13	8233	Locknut, 1/4-20, Nylon Insert	3
14	8248	Screw, 1/4-20 X 0.75, Truss-Head Machine	3
15	8717	Locknut, Nylon Insert, 1/4-28	1

12
G

12


G

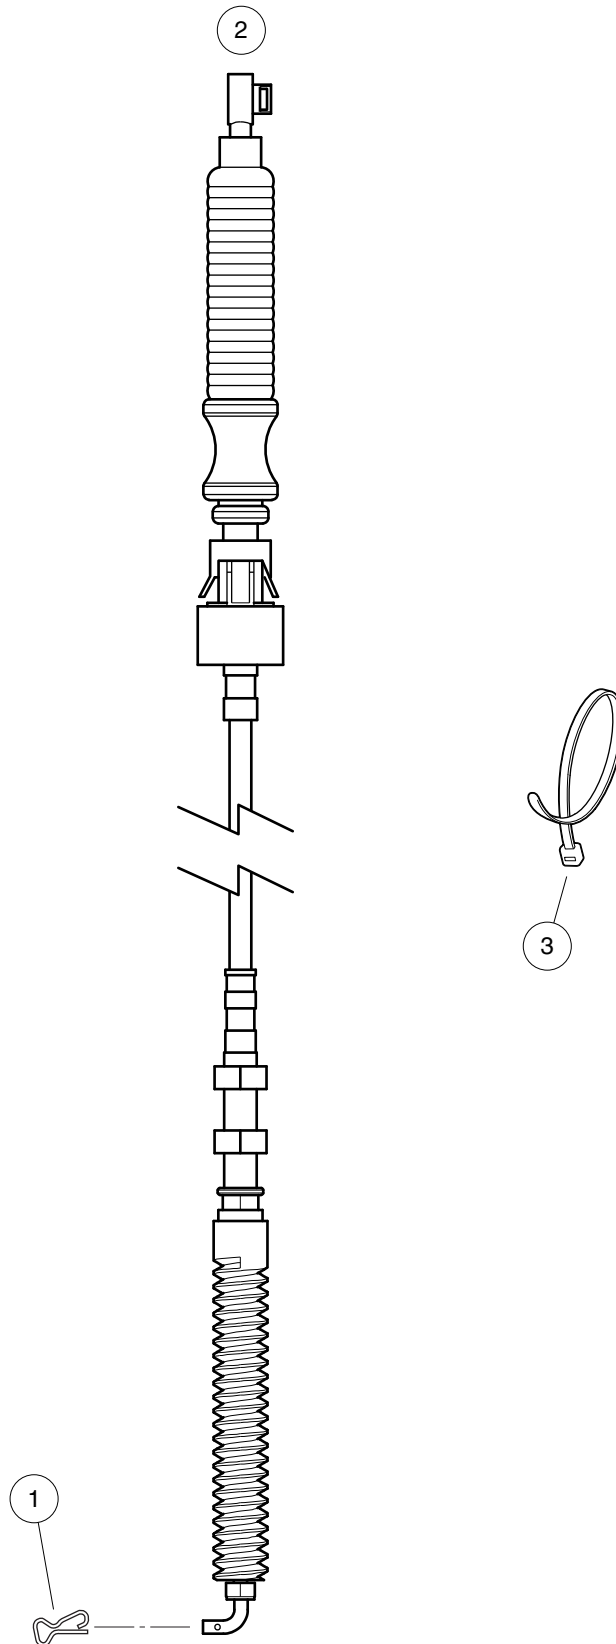

000988-001

SHIFTER CABLE

ITEM	PART NO.	DESCRIPTION	QTY
1	103886601	Clip, Bowtie	1
2	105038801	Cable, Shifter	1
3	8990	Tie Wrap, 8" Nylon	A/R

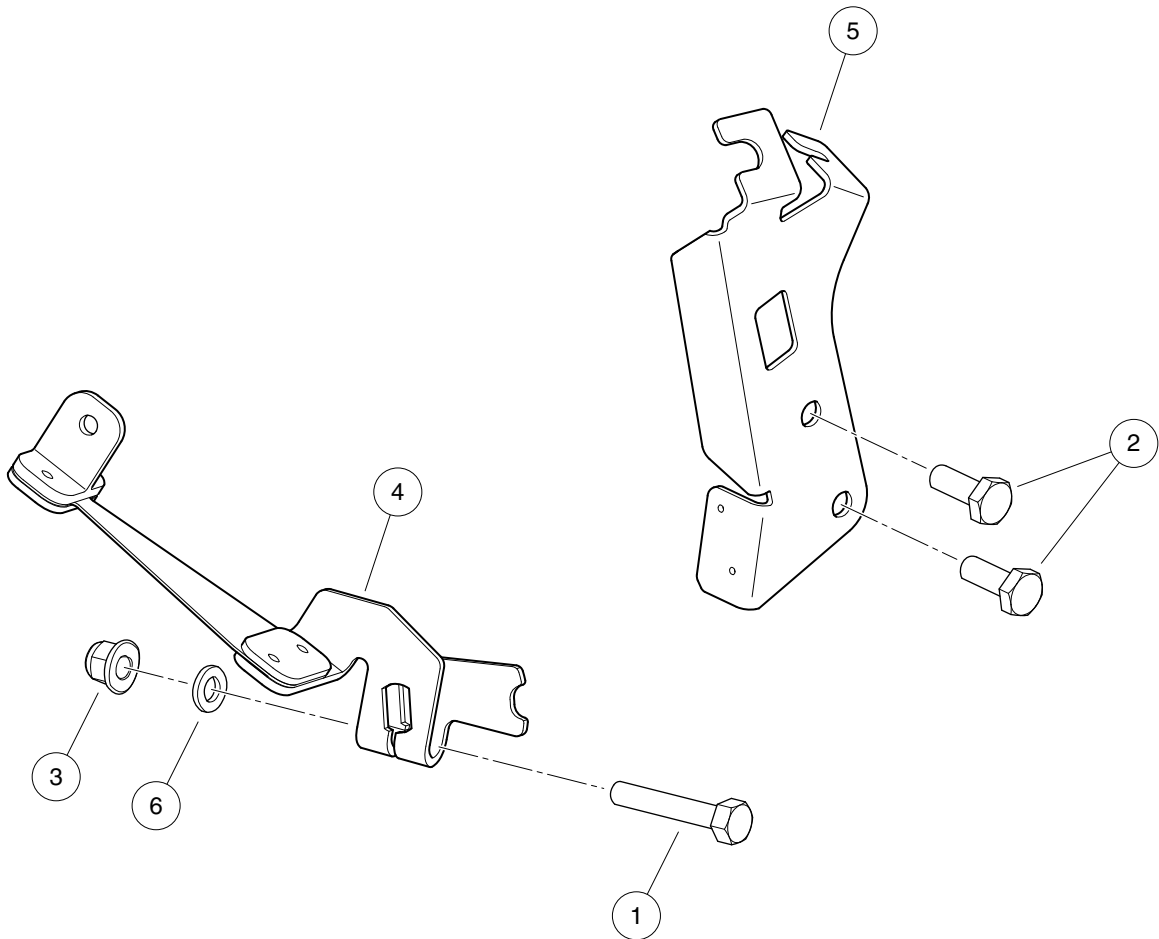



000965-001

SHIFT LEVER AND BRACKET – PEDAL-START ENGINES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102059501	Screw, 6M-1.00 X 35mm, Hex Head	1
2	102498201	Bolt, M10 X 1.25 X 25, Loctite	2
3	102621501	Nut, Flange, M6 X 1.0, Nylon	1
4	105040901	Lever, Shift, Flex, Transaxle, Pedal-Start	1
5	105135101	Bracket, Cable, FNR/Accelerator, ED65	1
6	96705199	Washer, M6	1

12

G

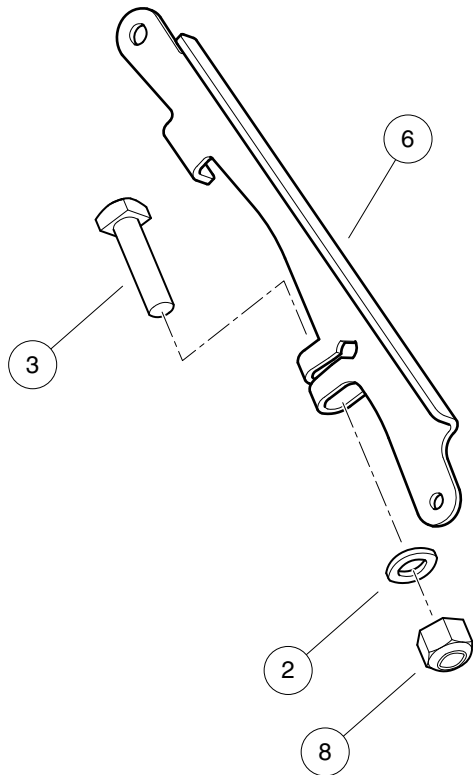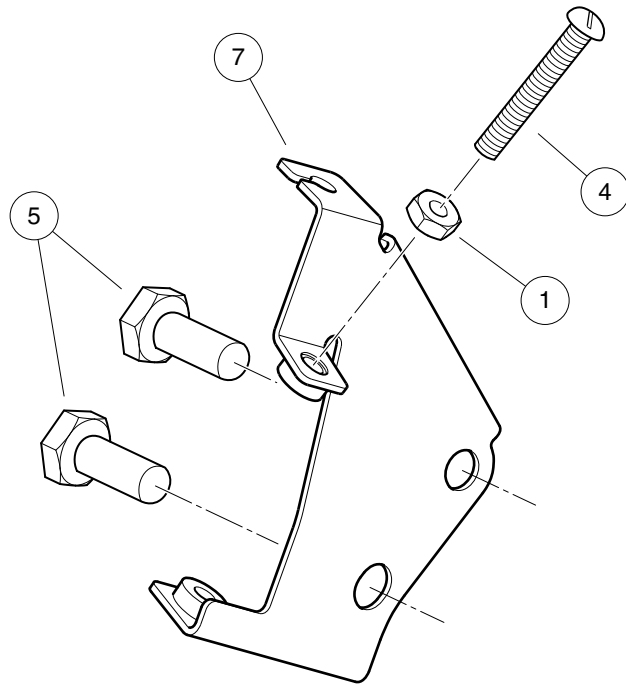


000966-002

GOVERNOR ARM AND BRACKETS – UTILITY VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011114	Nut, M6-1.00 Hex	1
2	1014007	Washer, 1/4, Flat	1
3	101886101	Screw, 1/4-20 X 1.00, Square-Head	1
4	102476401	Bolt, Stop, Pedal	1
5	102498201	Bolt, M10 X 1.25 X 25, Loctite	2
6	104023501	Arm, Governor, ED65	1
7	105144401	Weldment, Governor Bracket	1
8	8233	Locknut, 1/4-20, Nylon Insert	1

12

G

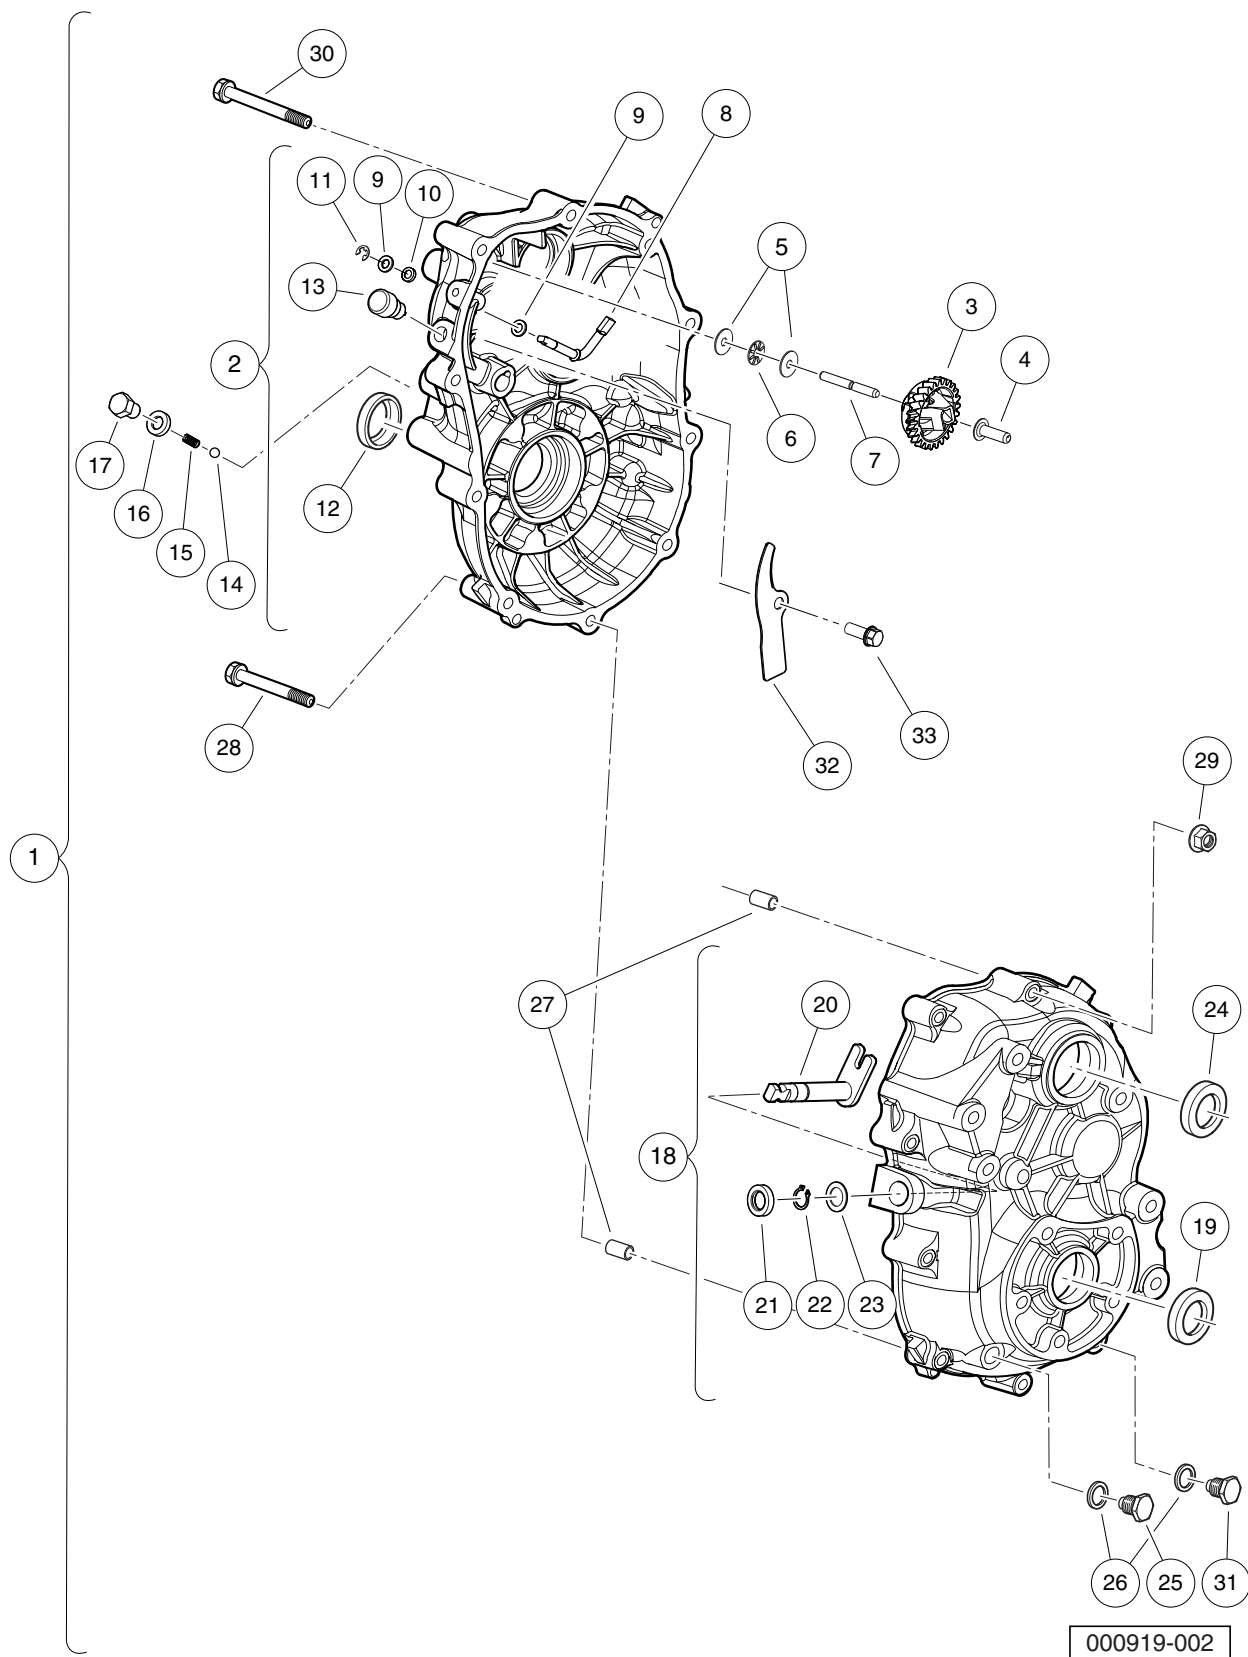


TRANSAXLE (ED65), LIMITED SLIP – PAGE 1 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	103879702	Transaxle, ED65, Limited-Slip Differential (includes items 2 through 33)	1
2	105025001	Case, Transaxle, Left, Complete, ED65 (includes items 3 through 13)	1
3	105025101	Gear, Governor, Complete, ED65	1
4	105025201	Sleeve, Governor, ED65	1
5	105025301	Washer, ED65	2
6	105025401	Bearing, Thrust, ED65	1
7	105025501	Shaft, Governor Gear, ED65	1
8	105025601	Shaft, Governor, ED65	1
9	105025701	Washer, 6mm, ED65	2
10	105025801	Seal, Oil, 6x10x2.5, ED65	1
11	105025901	Retaining Ring, E5, ED65	1
12	105026001	Seal, Oil, 24x40x9, ED65	1
13	105027101	Vent, Breather, ED65	1
14	105026101	Ball, Steel, ED65	1
15	105026201	Spring, ED65	1
16	105026301	Gasket, 10, ED65	1
17	105026401	Bolt, M10-1.25x12mm Lg, ED65	1
18	105026501	Case, Transaxle, Right, Complete, ED65 (includes items 19 through 24)	1
19	105026001	Seal, Oil, 24x40x9, ED65	1
20	105026601	Shaft, Select, ED65	1
21	105026701	Seal, Oil, 13x22x5, ED65	1
22	105026801	Snap Ring, 13mm, ED65	1
23	105026901	Spacer, 13x1, ED65	1
24	105027001	Seal, Oil, 25x45x7, ED65	1
25	105027201	Plug, Oil Drain, ED65	1
26	105027301	Gasket, 14, ED65	2
27	105028301	Pin, Guide, ED65	2
28	105028501	Bolt, Flange, M8-1.25x65mm, ED65	1
29	105030001	Nut, Flange, M8-1.25, ED65	10
30	105030701	Bolt, Flanged, M8-1.25x80mm, ED65	9
31	105063501	Plug, Oil Drain, Magnetic, ED65	1
32	105234801	Plate, Ed65 Splash	1
33	105234901	Bolt, M6-1 X 12mm Lg, Ed65	1
Note: Fuji transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

12

G

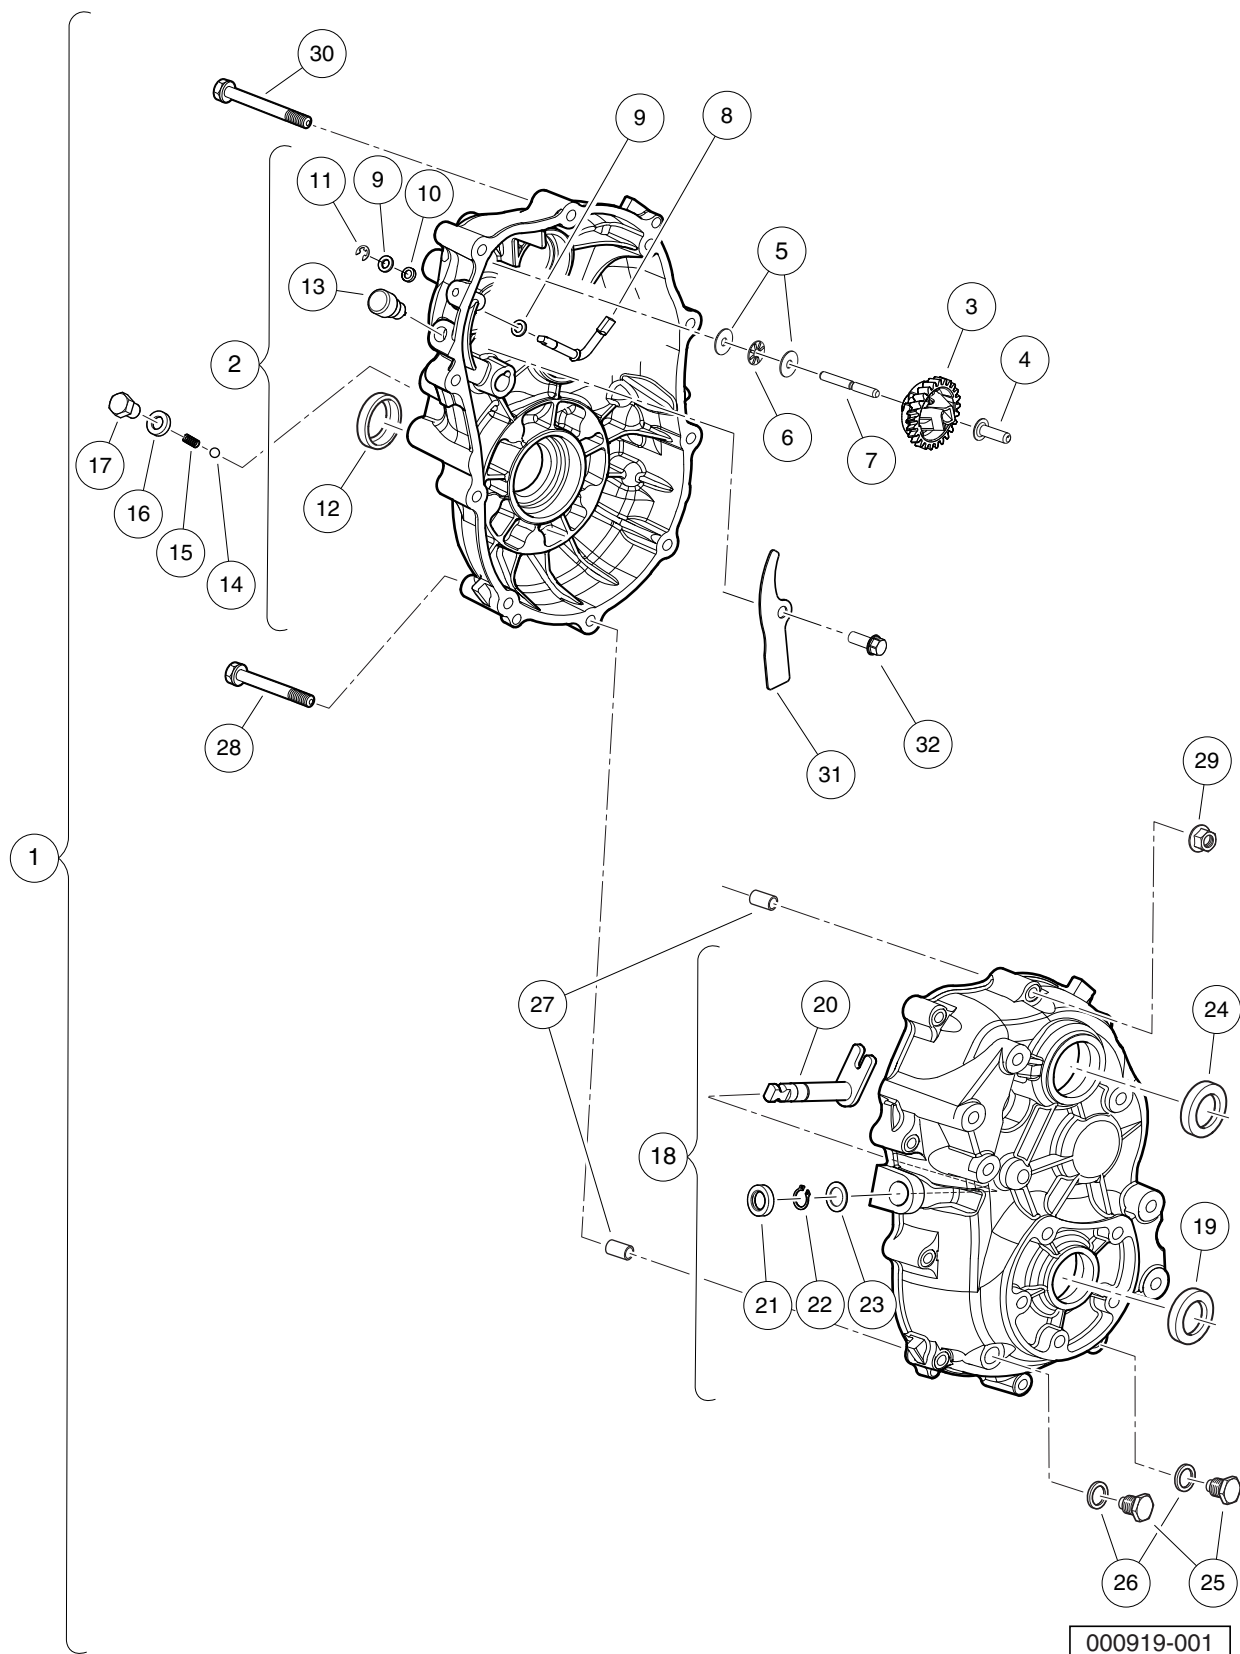


TRANSAXLE (ED65), OPEN – PAGE 1 OF 3

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	103879701	Transaxle, ED65, Open Differential (includes items 2 through 32)	1
2	105025001	Case, Transaxle, Left, Complete, ED65 (includes items 3 through 13)	1
3	105025101	Gear, Governor, Complete, ED65	1
4	105025201	Sleeve, Governor, ED65	1
5	105025301	Washer, ED65	2
6	105025401	Bearing, Thrust, ED65	1
7	105025501	Shaft, Governor Gear, ED65	1
8	105025601	Shaft, Governor, ED65	1
9	105025701	Washer, 6mm, ED65	2
10	105025801	Seal, Oil, 6x10x2.5, ED65	1
11	105025901	Retaining Ring, E5, ED65	1
12	105026001	Seal, Oil, 24x40x9, ED65	1
13	105027101	Vent, Breather, ED65	1
14	105026101	Ball, Steel, ED65	1
15	105026201	Spring, ED65	1
16	105026301	Gasket, 10, ED65	1
17	105026401	Bolt, M10-1.25x12mm Lg, ED65	1
18	105026501	Case, Transaxle, Right, Complete, ED65 (includes items 19 through 24)	1
19	105026001	Seal, Oil, 24x40x9, ED65	1
20	105026601	Shaft, Select, ED65	1
21	105026701	Seal, Oil, 13x22x5, ED65	1
22	105026801	Snap Ring, 13mm, ED65	1
23	105026901	Spacer, 13x1, ED65	1
24	105027001	Seal, Oil, 25x45x7, ED65	1
25	105027201	Plug, Oil Drain, ED65	2
26	105027301	Gasket, 14, ED65	2
27	105028301	Pin, Guide, ED65	2
28	105028501	Bolt, Flange, M8-1.25x65mm, ED65	1
29	105030001	Nut, Flange, M8-1.25, ED65	10
30	105030701	Bolt, Flanged, M8-1.25x80mm, ED65	9
31	105234801	Plate, Ed65 Splash	1
32	105234901	Bolt, M6-1 X 12mm Lg, Ed65	1
Note: Fuji transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube.			

12


G

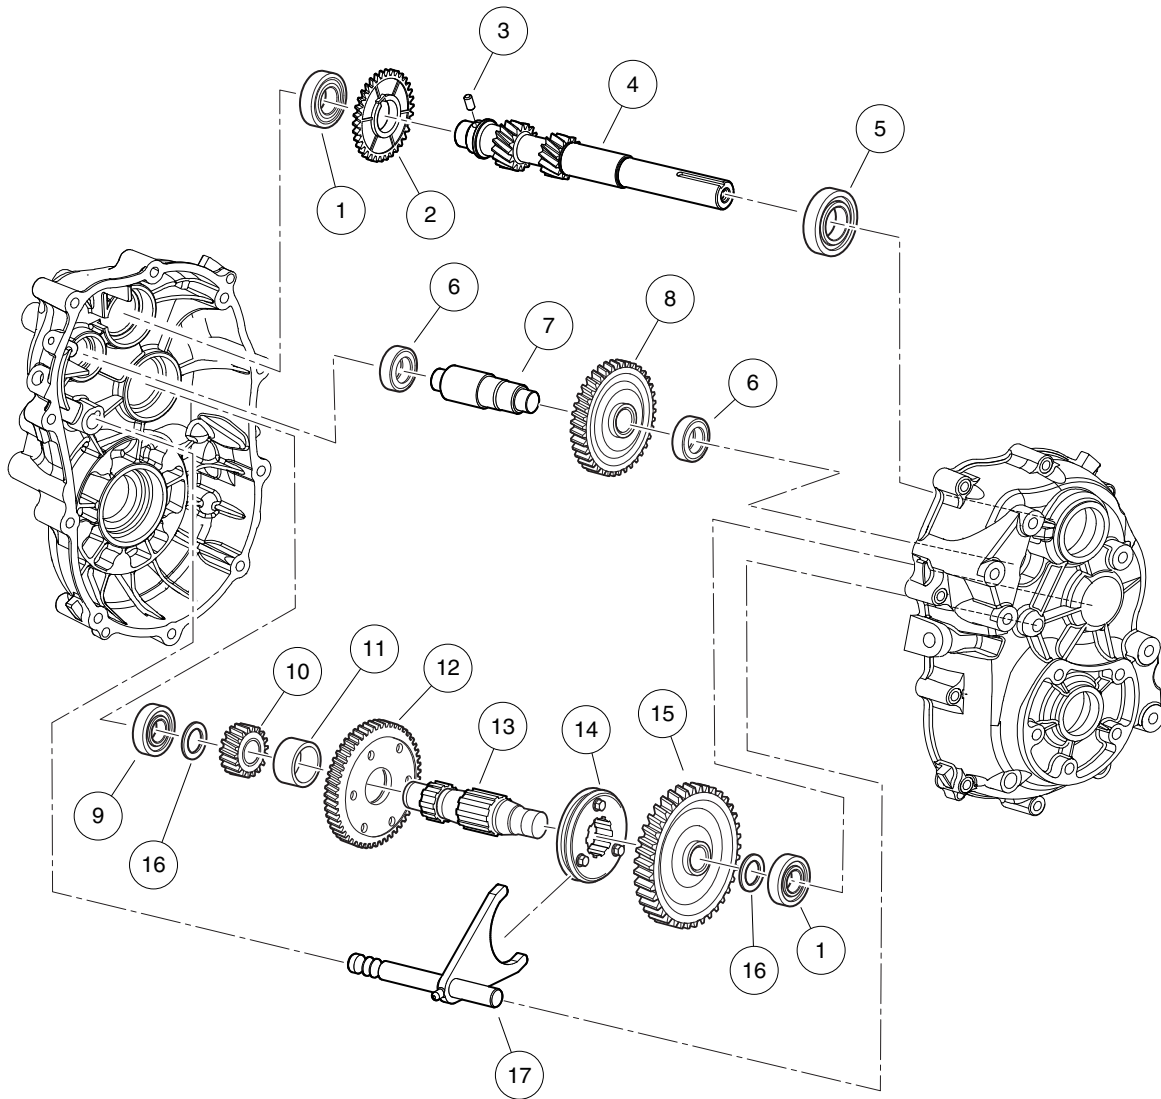

000919-003

TRANSAXLE (ED65), LIMITED SLIP AND OPEN – PAGE 2 OF 3


ITEM	PART NO.	DESCRIPTION	QTY	12	G
		1 2 3 4			
1	105027401	Bearing, Ball (6204)	2		
2	105027501	Gear, Governor, 34 Tooth, ED65	1		
3	105027601	Pin, 6x12 Long, ED65	1		
4	105027701	Shaft, Input, ED65	1		
5	105027801	Bearing, Ball (6205 seal)	1		
6	105027901	Bearing, Ball (6202)	2		
7	105028001	Shaft, Counter, ED65	1		
8	105028201	Gear, 34 Tooth, ED65	1		
9	105028401	Bearing, Ball (6304)	1		
10	105028601	Gear, 17 Tooth, ED65	1		
11	105028701	Collar, 24 x 12, ED65	1		
12	105028801	Gear, 52 Tooth, ED65	1		
13	105028901	Shaft, Center, ED65	1		
14	105029001	Clutch, Pin, ED65	1		
15	105029101	Gear, 62 Tooth, ED65	1		
16	105029201	Spacer, 20x2, ED65	2		
17	105030901	Shaft, Shift, ED65	1		
		Note: To identify your transaxle, locate the serial number decal on the axle tube.			

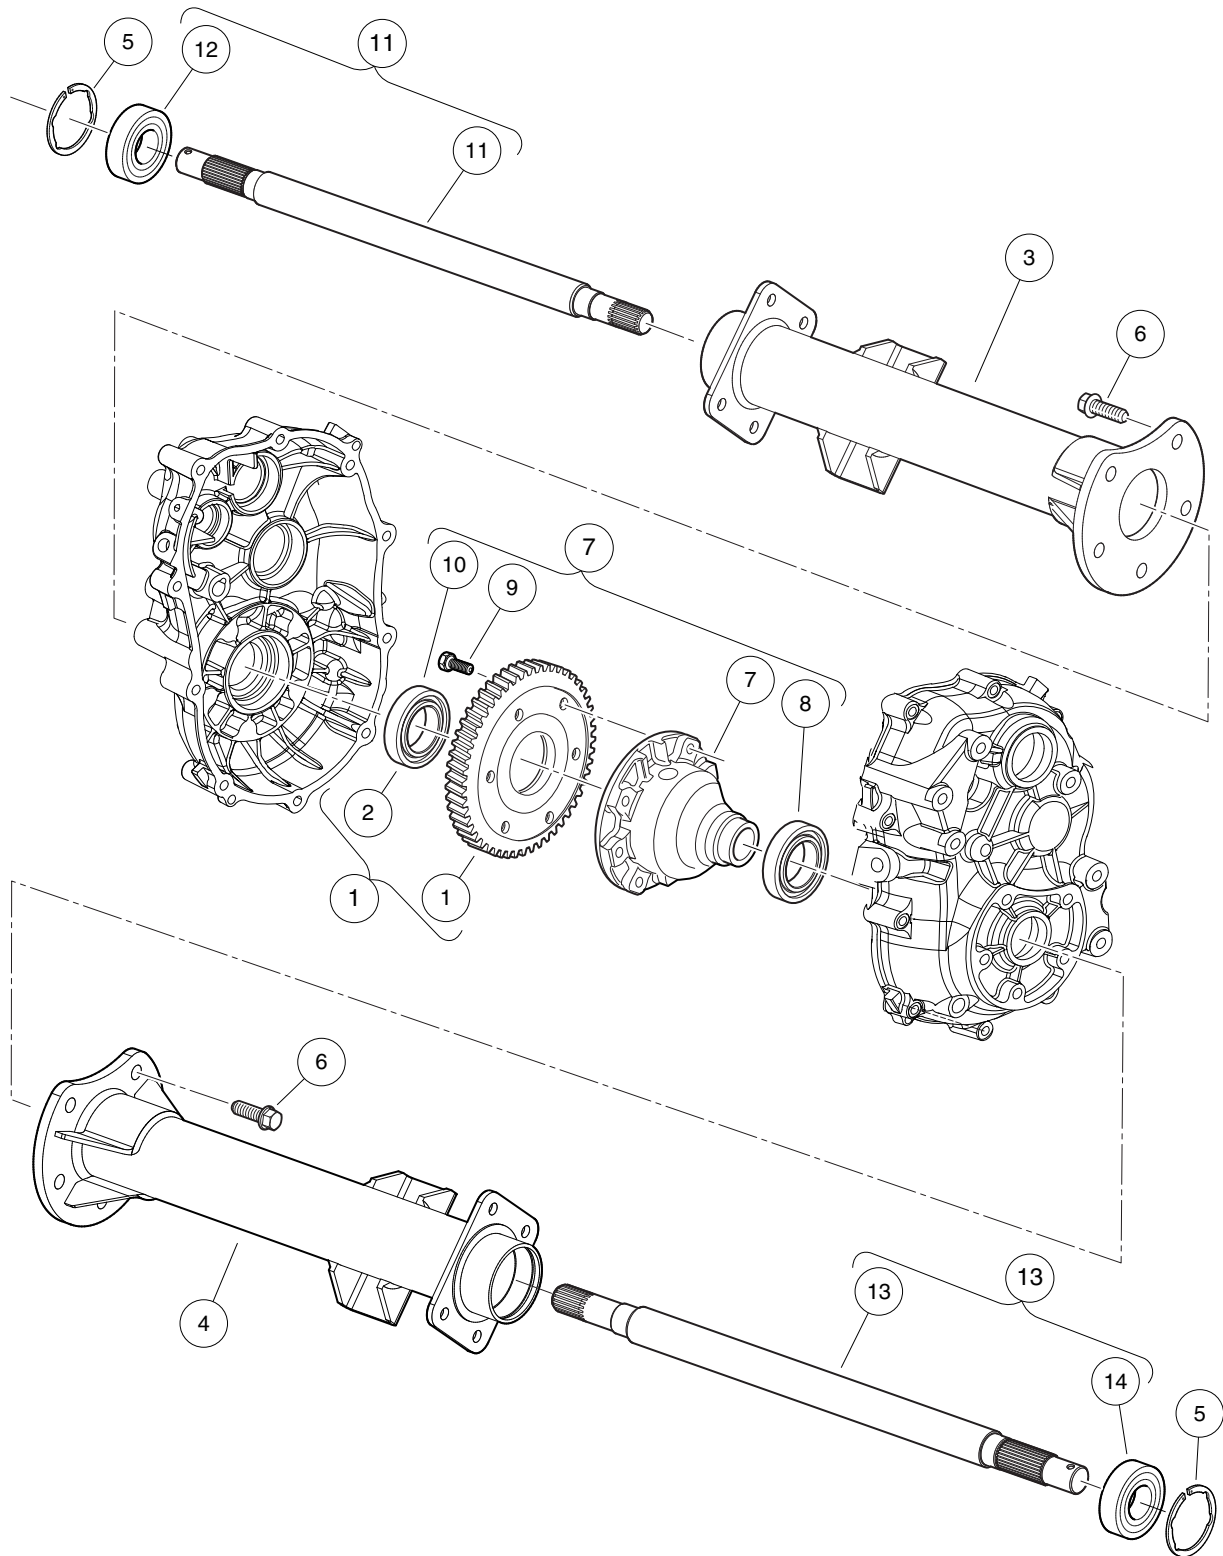

000919-005

TRANSAXLE (ED65), LIMITED SLIP – PAGE 3 OF 3


ITEM	PART NO.	DESCRIPTION	QTY	12	G
		1 2 3 4			
1	105029901	Gear, 60 Tooth, Complete, ED65 (includes item 2)	1		
2	105029801	Bearing, Ball (6007)	1		
3	105030401	Axle Tube, Driver-Side, ED65	1		
4	105030501	Axle Tube, Passenger-Side, ED65	1		
5	105030601	Snap Ring, 52mm, ED65	2		
6	105030801	Bolt, Flange, M10-1.25x25, ED65	10		
7	105063601	Differential, Limited-Slip, ED65 (includes items 8 through 10)	1		
8	105028101	Bearing, Ball (6006)	1		
9	105029501	Bolt, M10-1.25x26mm Lg, ED65	6		
10	105029801	Bearing, Ball (6007)	1		
11	105066001	Axle Shaft, Driver-Side, Complete, ED65 (includes item 12)	1		
12	105030301	Bearing, Ball (6205DD)	1		
13	105066101	Axle Shaft, Passenger-Side, Complete, ED65 (includes item 14)	1		
14	105030301	Bearing, Ball (6205DD)	1		
Note: To identify your transaxle, locate the serial number decal on the axle tube.					

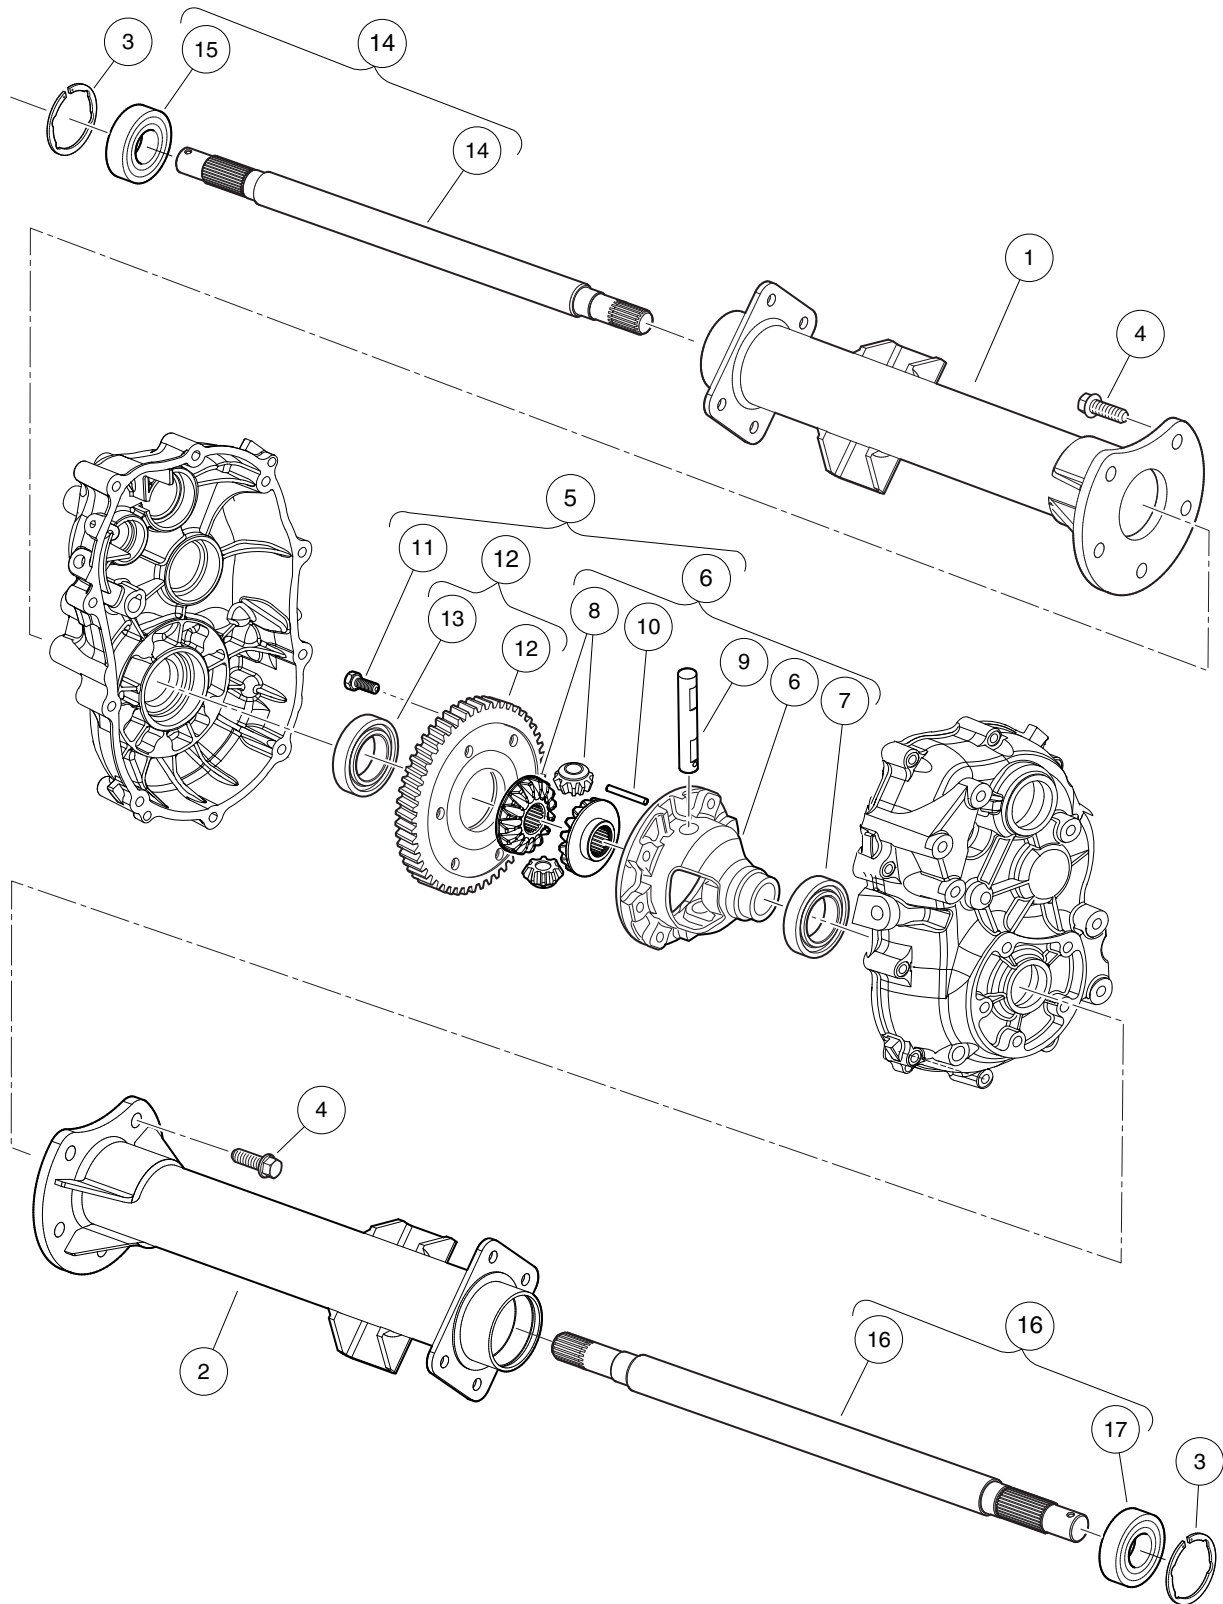

000919-004

TRANSAXLE (ED65), OPEN – PAGE 3 OF 3

ITEM	PART NO.	DESCRIPTION	QTY	12	G
		1 2 3 4			
1	105030401	Axle Tube, Driver-Side, ED65	1		
2	105030501	Axle Tube, Passenger-Side, ED65	1		
3	105030601	Snap Ring, 52mm, ED65	2		
4	105030801	Bolt, Flange, M10-1.25x25, ED65	10		
5	105031001	Differential, Open, ED65 (includes items 6 through 12)	1		
6	105029301	Case, Differential, Complete, ED65 (includes items 7 through 10)	1		
7	105028101	Bearing, Ball (6006)	1		
8	105029401	Gear Set, Differential, ED65	1		
9	105029601	Shaft, Differential, ED65	1		
10	105029701	Pin, 4x40 Long, ED65	1		
11	105029501	Bolt, M10-1.25x26mm Lg, ED65	6		
12	105029901	Gear, 60 Tooth, Complete, ED65 (includes item 13)	1		
13	105029801	Bearing, Ball (6007)	1		
14	105066001	Axle Shaft, Driver-Side, Complete, ED65 (includes item 15)	1		
15	105030301	Bearing, Ball (6205DD)	1		
16	105066101	Axle Shaft, Passenger-Side, Complete, ED65 (includes item 17)	1		
17	105030301	Bearing, Ball (6205DD)	1		
		Note: To identify your transaxle, locate the serial number decal on the axle tube.			

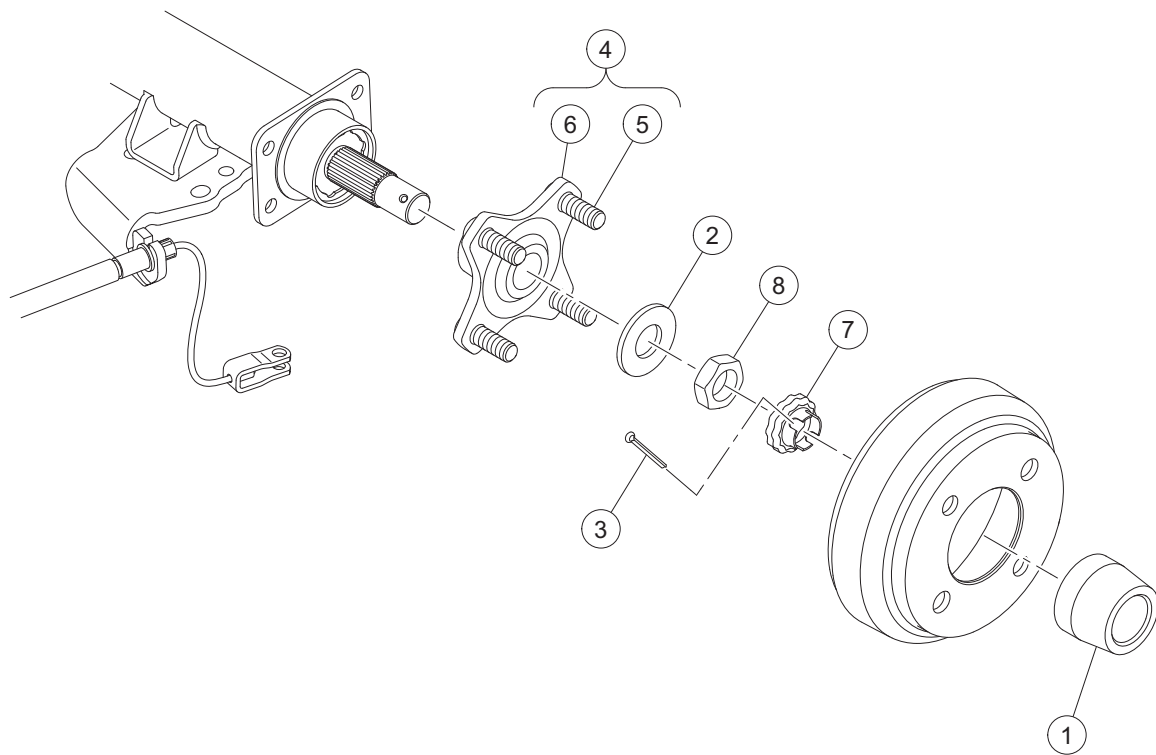


G-070199-000003

HUB, REAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102274101	Center Cap, Rubber	2
2	102617801	Washer, Hard, M22	2
3	103989501	Pin, Cotter, 9/64 X 1.75"	2
4	103995001	Asm, Hub, Machined (includes items 5 and 6)	2
5	103951501	Lug Stud, 1/2-20 UNF, SAE J1102	4
6	103979301	Hub, Machined	1
7	104021701	Retaining Ring, Hex Nut, M22	2
8	104027101	Nut, Hex, M22x1.5, Thin	2

12

G

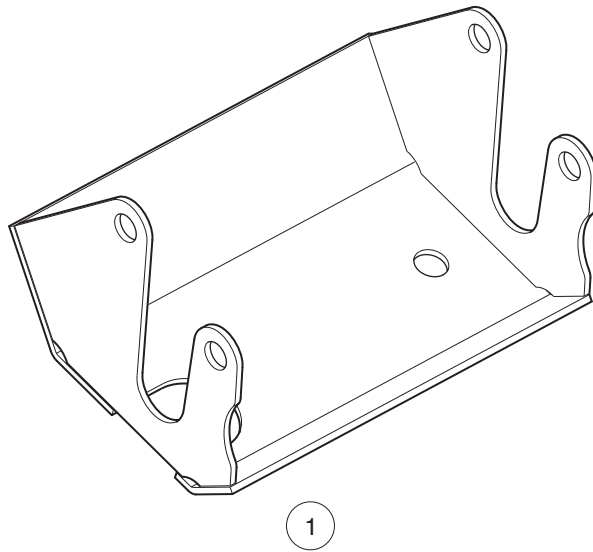

001436-001

DIFFERENTIAL GUARD, ED65 – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
1	47662588001	1 2 3 4 Guard, Differential	1

12

G


12

G

ELECTRICAL SYSTEM – ELECTRIC VEHICLES

13

E

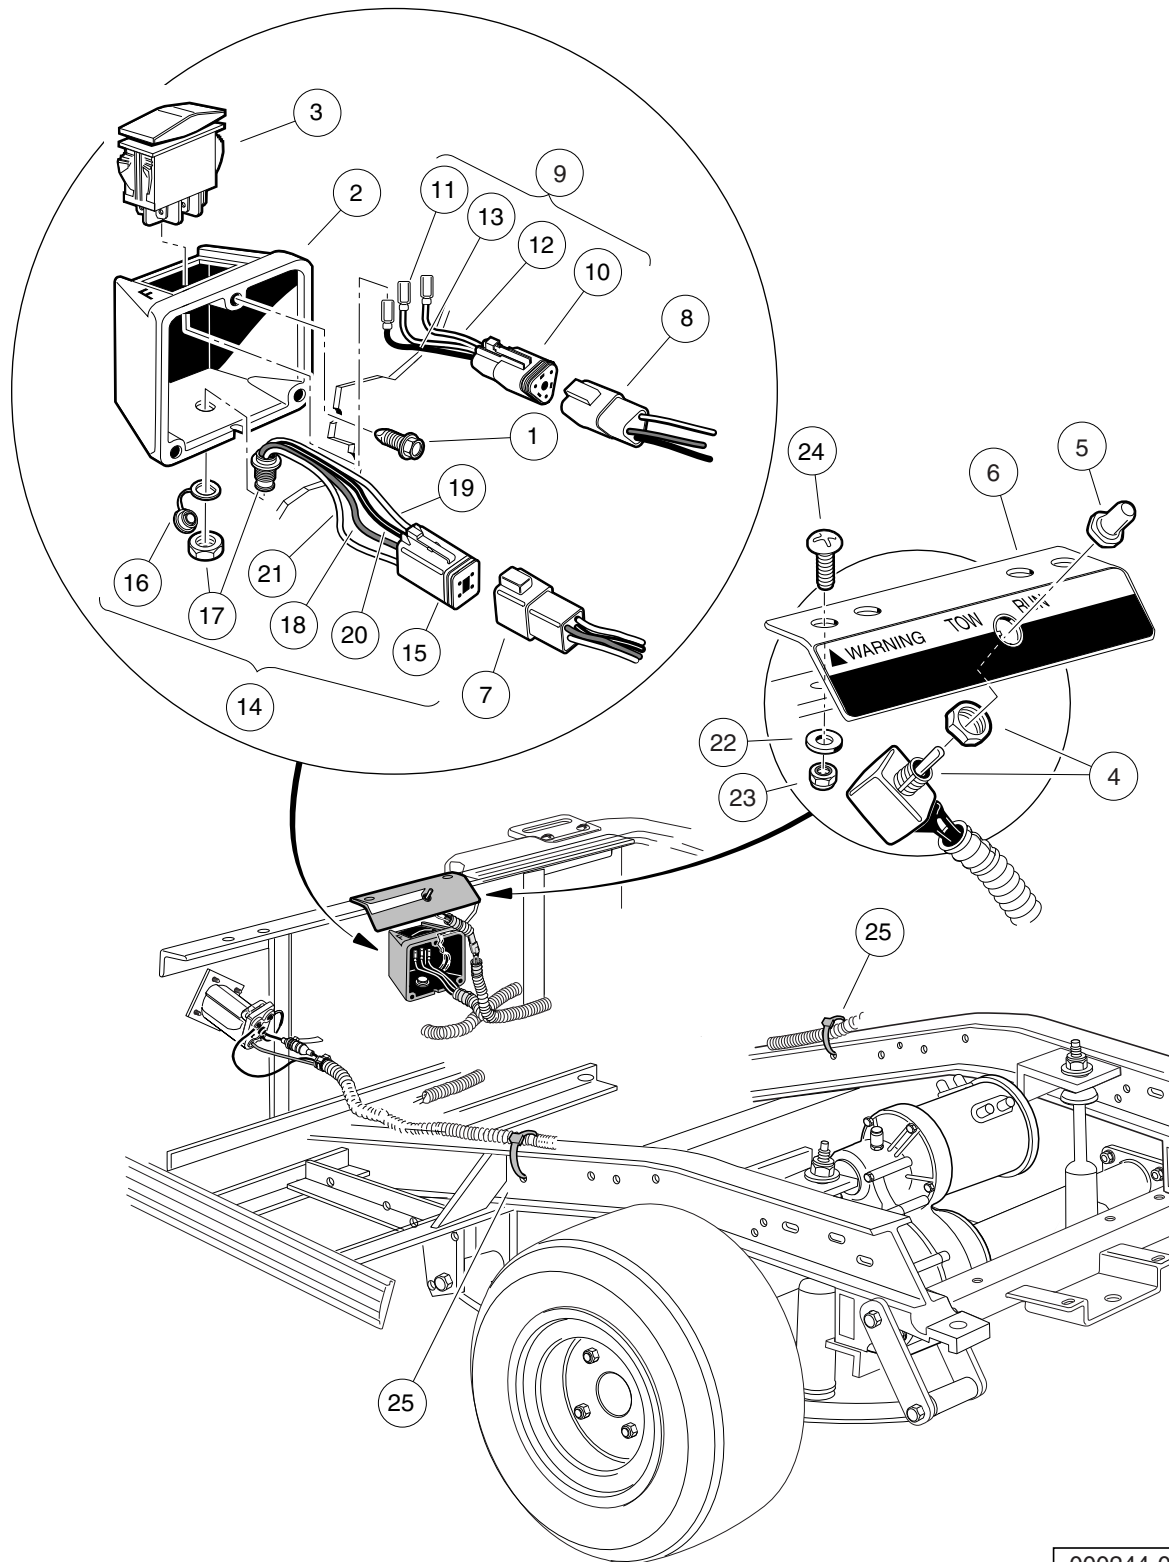


000244-001

FORWARD/REVERSE SWITCH, TOW/RUN SWITCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012285	Screw, 1/4 X 0.625 Hex-Head	3
2	101855002	Case, FNR Switch	1
3	101856002	Switch, Rocker, Single-Pole	1
4	101908101	Switch Assembly, Tow/Run	1
5	101908401	Boot, Switch	1
6	101922501	Bracket, Tow/Run Switch Mounting	1
7	101932401	Kit, 4-Pin Receptacle and Wedge Lock	1
8	101942301	Kit, 3-Pin Wedge Lock	1
9	102266601	Wire Assembly, FNR Switch (includes items 10 through 13)	1
10	101920101	Kit, 3-Pin Wedge Lock	1
11	N/A	Wire Assembly, #18 Blue	1
12	N/A	Wire Assembly, #18 Orange	1
13	N/A	Wire Assembly, #18 Brown	1
14	102266701	Wire Assembly, IQDM Port (includes items 15 through 21)	1
15	101932501	Kit, 4-Pin Wedge Lock	1
16	102196901	Dust Cap	1
17	N/A	Connector Mount, Four-Pin	1
18	N/A	Wire Assembly, #18 Red/Yellow	1
19	N/A	Wire Assembly, #18 Black/Yellow	1
20	N/A	Wire Assembly, #18 Blue/Yellow	1
21	N/A	Wire Assembly, #18 Green/Yellow	1
22	332	Washer, 1/4 Type A Narrow Flat	2
23	8233	Locknut, 1/4-20, Nylon Insert	2
24	8248	Screw, 1/4-20 X 0.75, Truss-Head Machine	2
25	8990	Tie Wrap, 8" Nylon	1

13

E

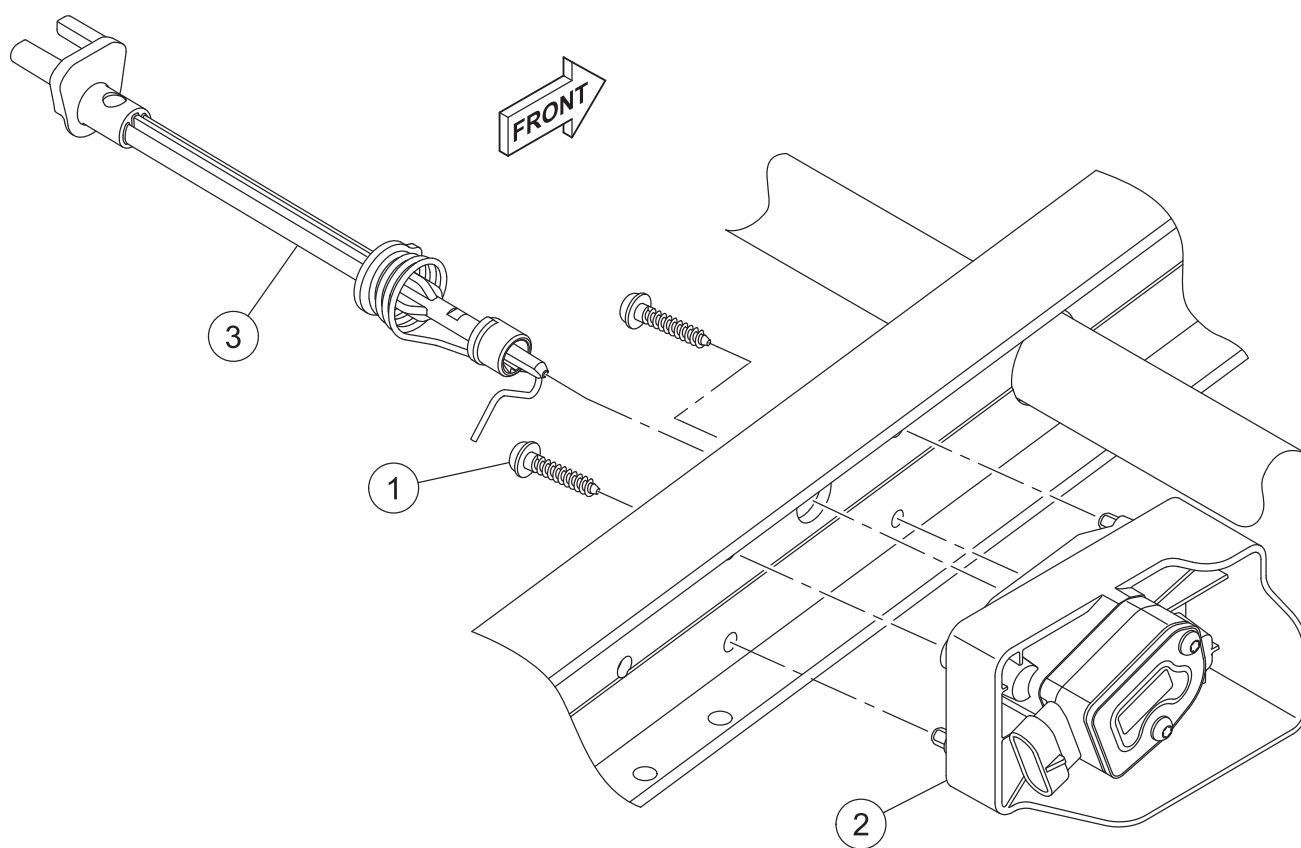


G-131198-000020

ACCELERATOR PEDAL POSITION SENSOR (APPS)

ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	102297230	Screw, M6, Torx, Interlock Thread	1	
2	47763037001	Accelerator Pedal Position Sensor (APPS) w/Housing.....	1	E
3	103902101	Bar, Drive, Cast	1	
-4	47708372001	Harness, APPS Jumper	1	
-5	103902401	Spring, Torsion	1	
Note: Items -4 and -5: Not shown.				

13

E

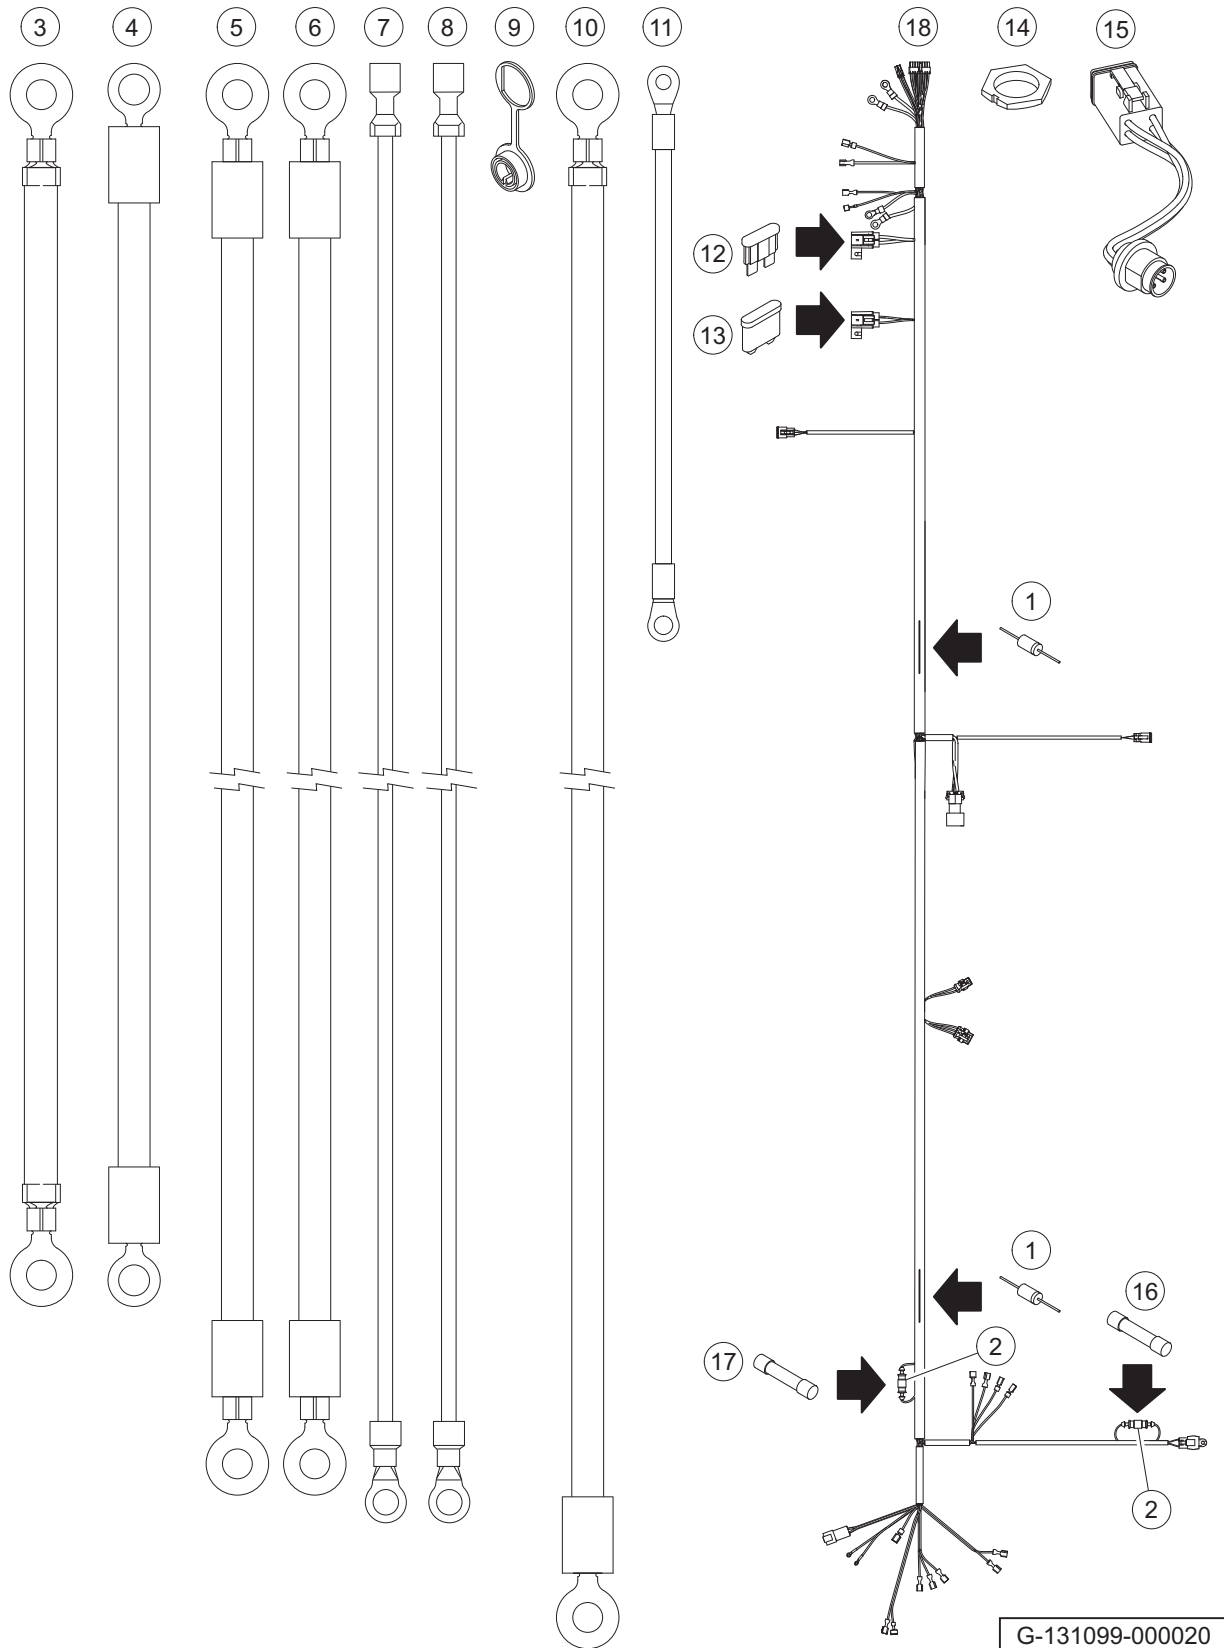

WIRING – ELECTRIC VEHICLE



ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1014789	Diode, General Purpose, 3.0-Amp	1
2	1015360	In-line Fuse Holder	2
3	101795701	Asm, Wire, #6blk, 15 In	3
4	101903001	Wire Assembly #6 Yellow	1
5	101968701	Wire Assy, #6 White	1
6	101978001	Wire Assy, #6 Green	1
7	101978101	Asm, Wire, #10 Orange 5/16	1
8	101978201	Asm, Wire, #10 Blue 5/16	1
9	102196901	Dust Cap	1
10	102199601	Wire Asm, #6 Red, 37.7	1
11	102263601	Wire Assy, #10 Black	1
12	102492301	Fuse, 30-Amp	1
13	102538601	15 Amp Fuse	1
14	102572401	Nut, Diagnostic Port	1
15	103218601	Harness, Diagnostic Port	1
16	103924801	Fuse, Glass, 2-Amp	1
17	105173901	Fuse, Agc, 1 Amp	1
18	47563434001	Harness, Main, Sb, Hfc	1
		Note: Items 1, 2, 12, 13, 16 and 17 are supplied with and part of item 18 main wire harness assy.	

13

E

13

E

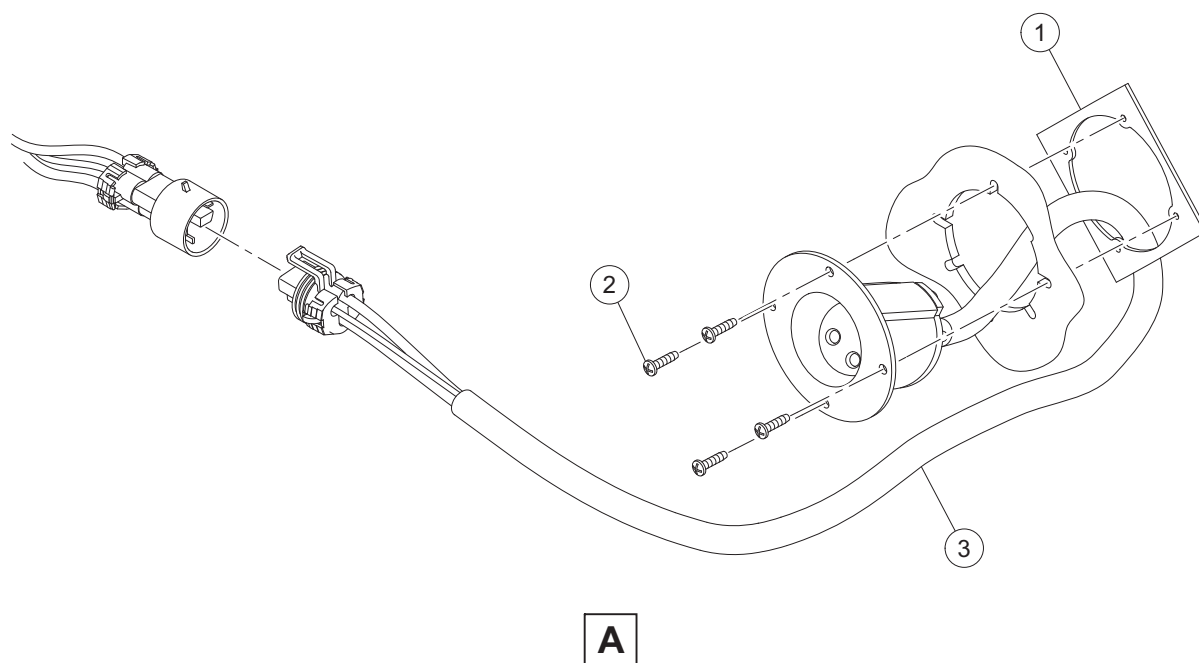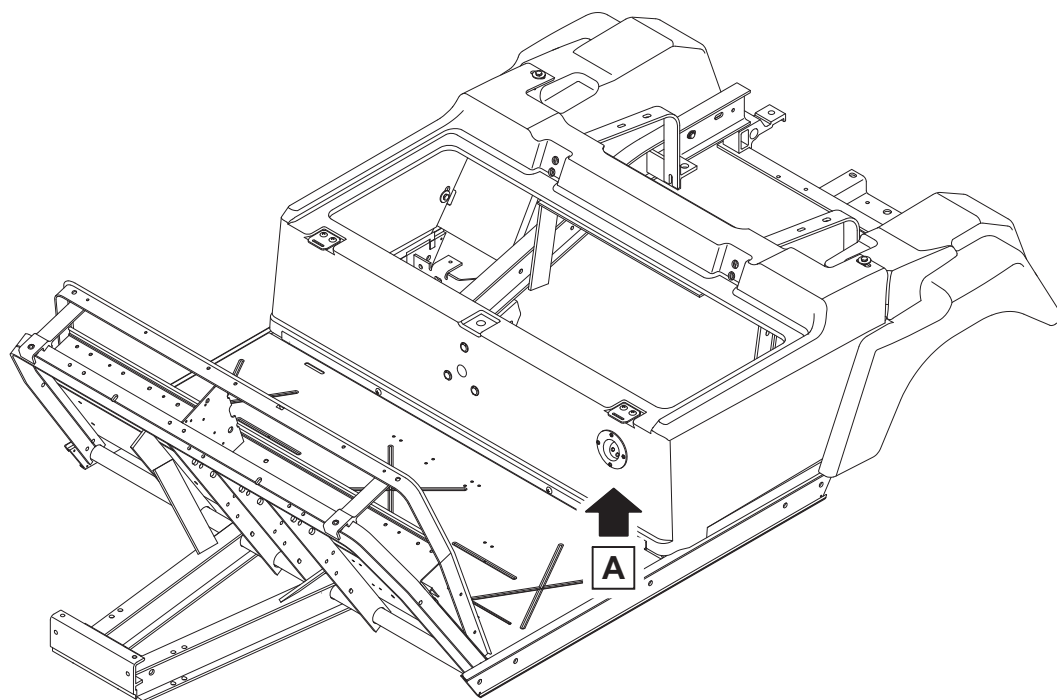


G-130899-000021

BATTERY CHARGER RECEPTACLE

ITEM	PART NO.	DESCRIPTION	QTY
1	101801001	Plate, Receptacle Backing	1
2	101832001	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4
3	47564781001	Receptacle, Body Mnt, Hfc	1

13

E

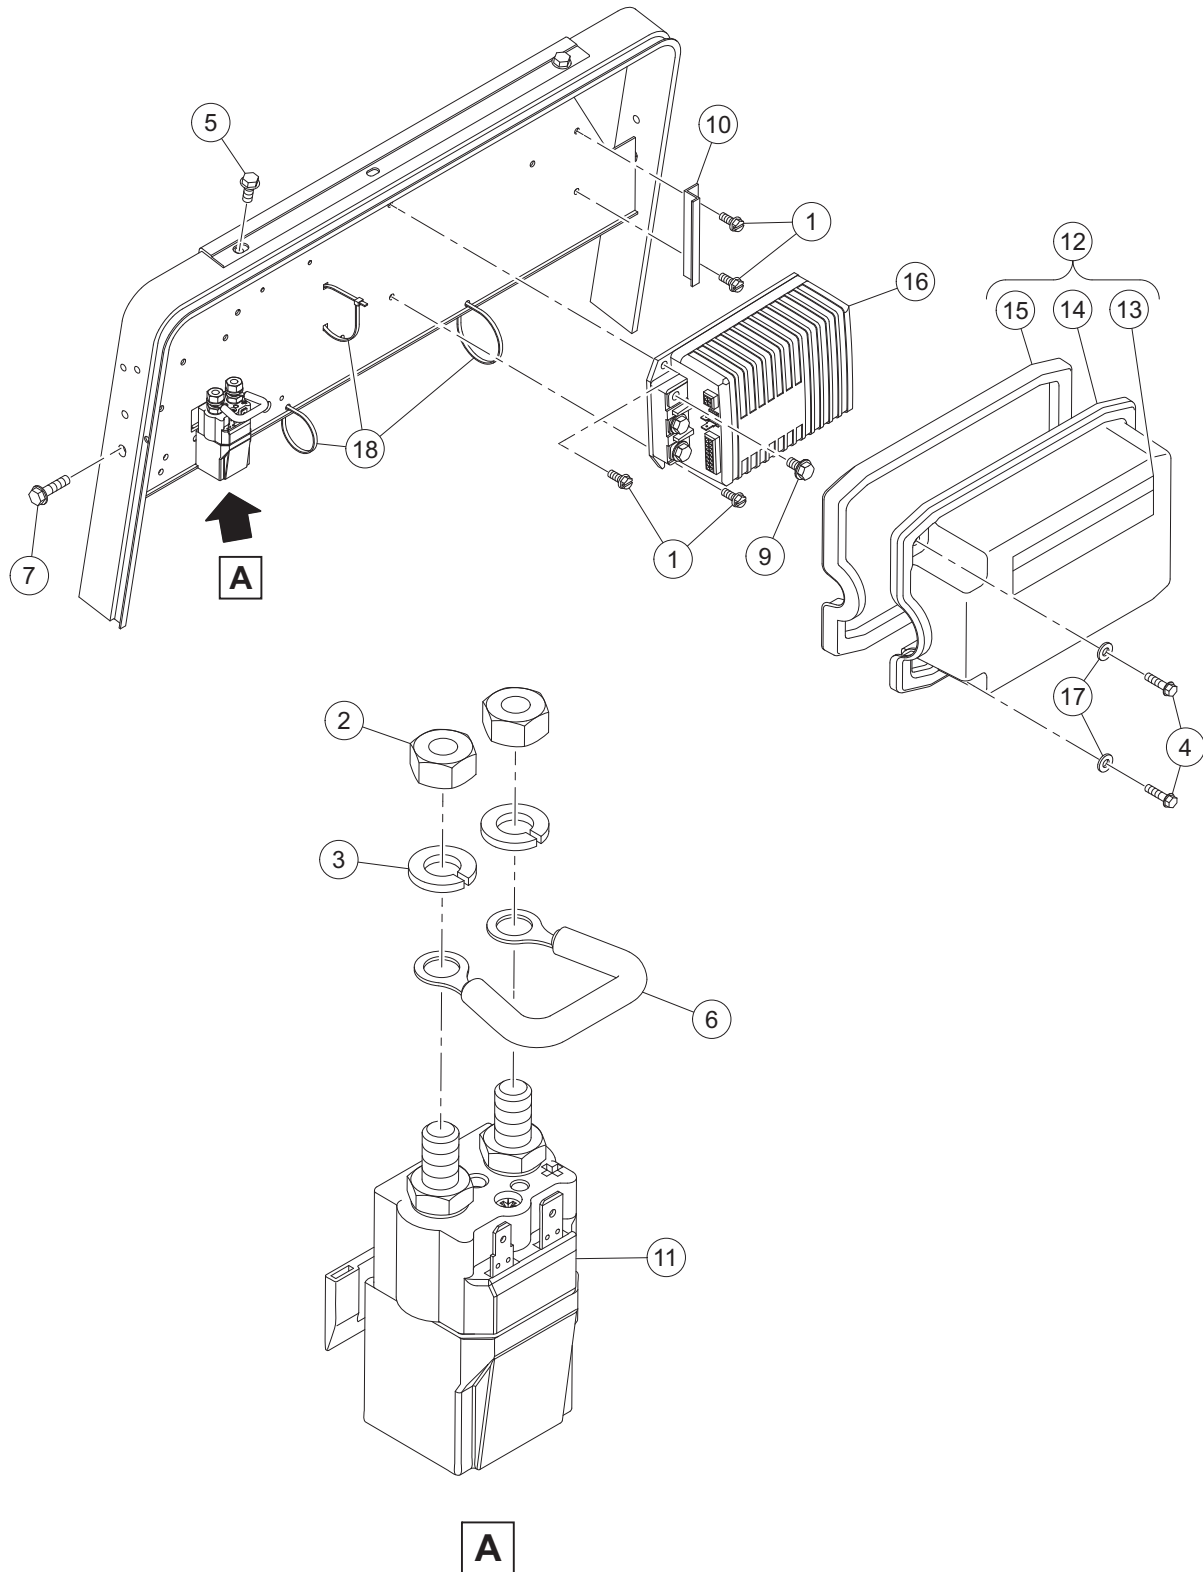

G-130499-000026

COMPUTER, CONTROLLER, AND SOLENOID


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012285	Screw, 1/4 X 0.625 Hex-Head	14
2	1012528	Nut, M8-1.25 Hex	2
3	1013734	Lockwasher, 8mm Split	2
4	1014063	Screw, 1/4-20 X 1.00, Hex Head	2
5	1014288	Screw, 5/16-18 X 0.75, Thread-Forming	2
6	1014947	Resistor Assembly	1
7	101910401	Screw, 5/16-18 X 1.25 Thrd Frm	2
8	101965205	Plate, Component Mounting	1
9	102240501	Bolt, Controller, Terminal	3
10	102243101	Extrusion, Cover Support	1
11	102865901	Solenoid 48v Slot Mt No Diode	1
12	103316901	Cover Asm - Controller (includes items 13 through 15)	1
13	101931501	Decal, Component Cover	1
14	103316701	Cover - Controller, Deep	1
15	103316801	Gasket - Controller Cover	1
16	47712994001	Controller, 1515-5207, 250A,	1
17	332	Washer, 1/4 Type A Narrow Flat	2
18	8990	Tie Wrap, 8" Nylon	2

13

E

13

E

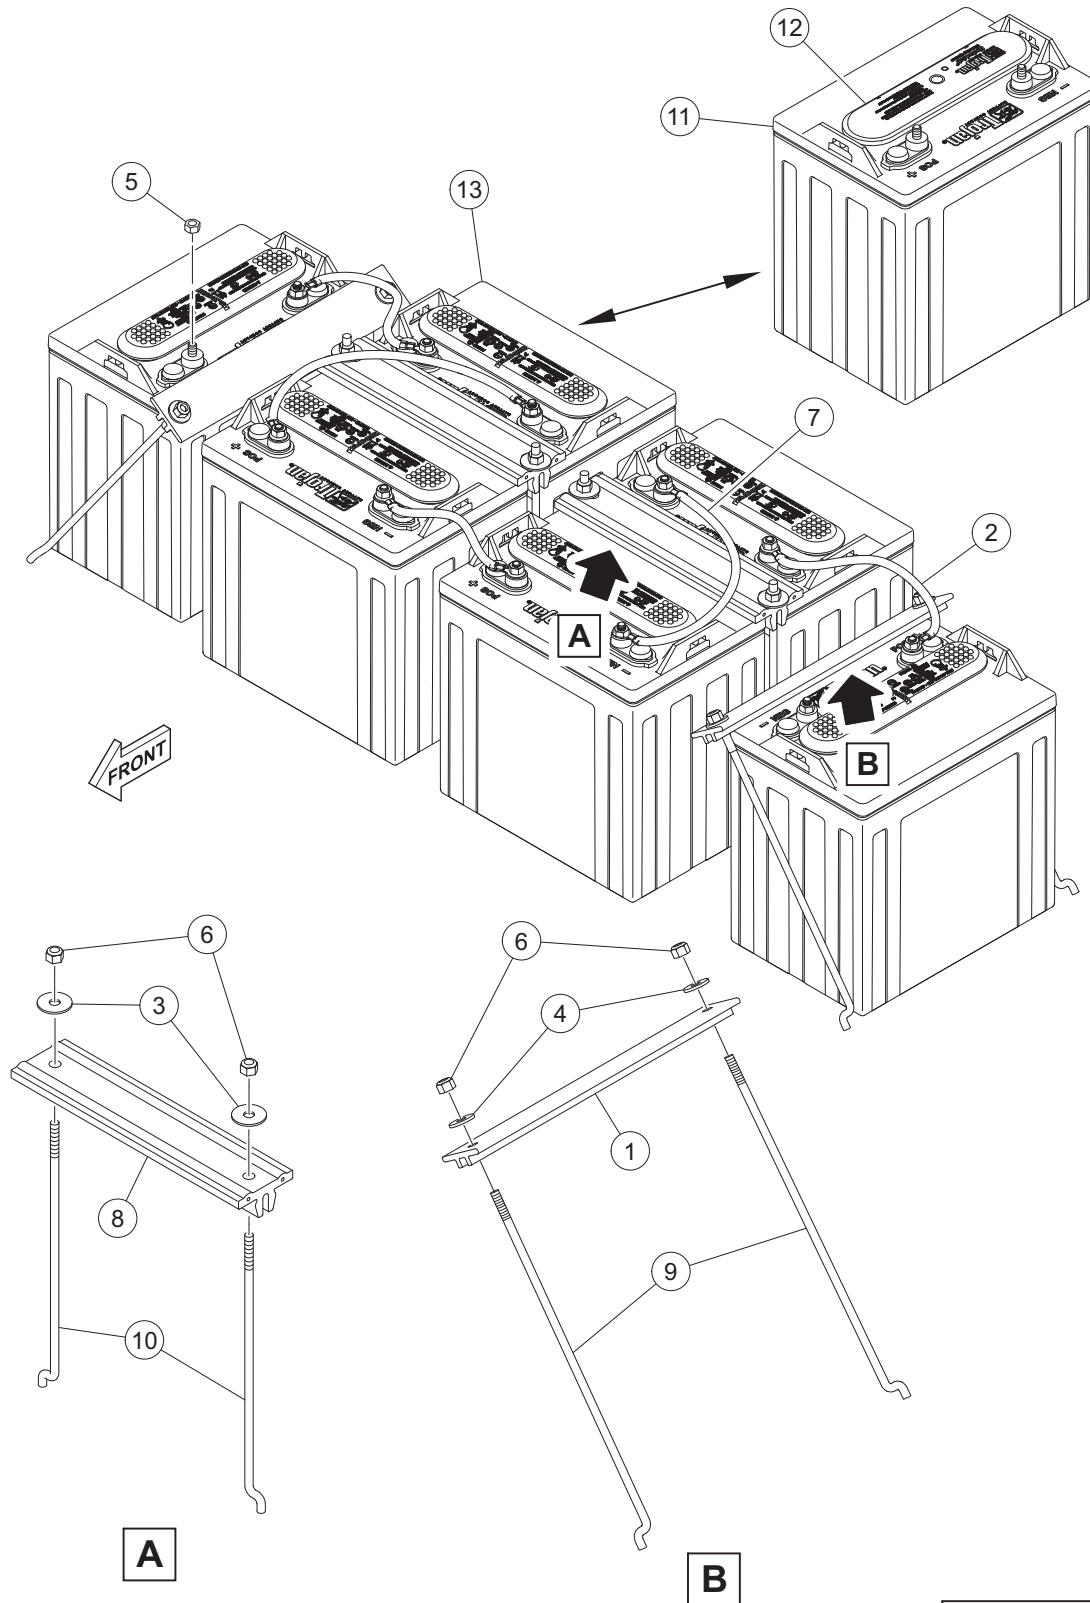


G-130799-000010

BATTERIES 8-VOLT,HEAVY DUTY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101090802	Hold-Down, Battery	2
2	1010958	Asm, Wire, #6blk 8in	3
3	1011578	Washer, 5/16 Type B Flat	4
4	1011697	Washer, 5/16 Flat	4
5	1014304	Nut, 5/16-18 Stainless-Steel Hex	12
6	1015072	Locknut, 5/16-18 Nylon Insert	8
7	101795701	Asm, Wire, #6blk, 15 In	2
8	103504301	Tee, Batt Ret Ctr Short	2
9	103696801	J Bolt, Batt Hold Down 12"	4
10	103958101	J-bolt 10.75"	4
11	103971798	Battery,8v Trojan T875,spws,sp (includes item 12)	6
12	47689303001	Cap,hydrolink,trojan,8v,svc	1
13	103971799	Battery,8v Trojan T875, Wet,sp	6
Note: Item 11 is for use in vehicles with Single Point Watering System (SPWS) only.			

13

E

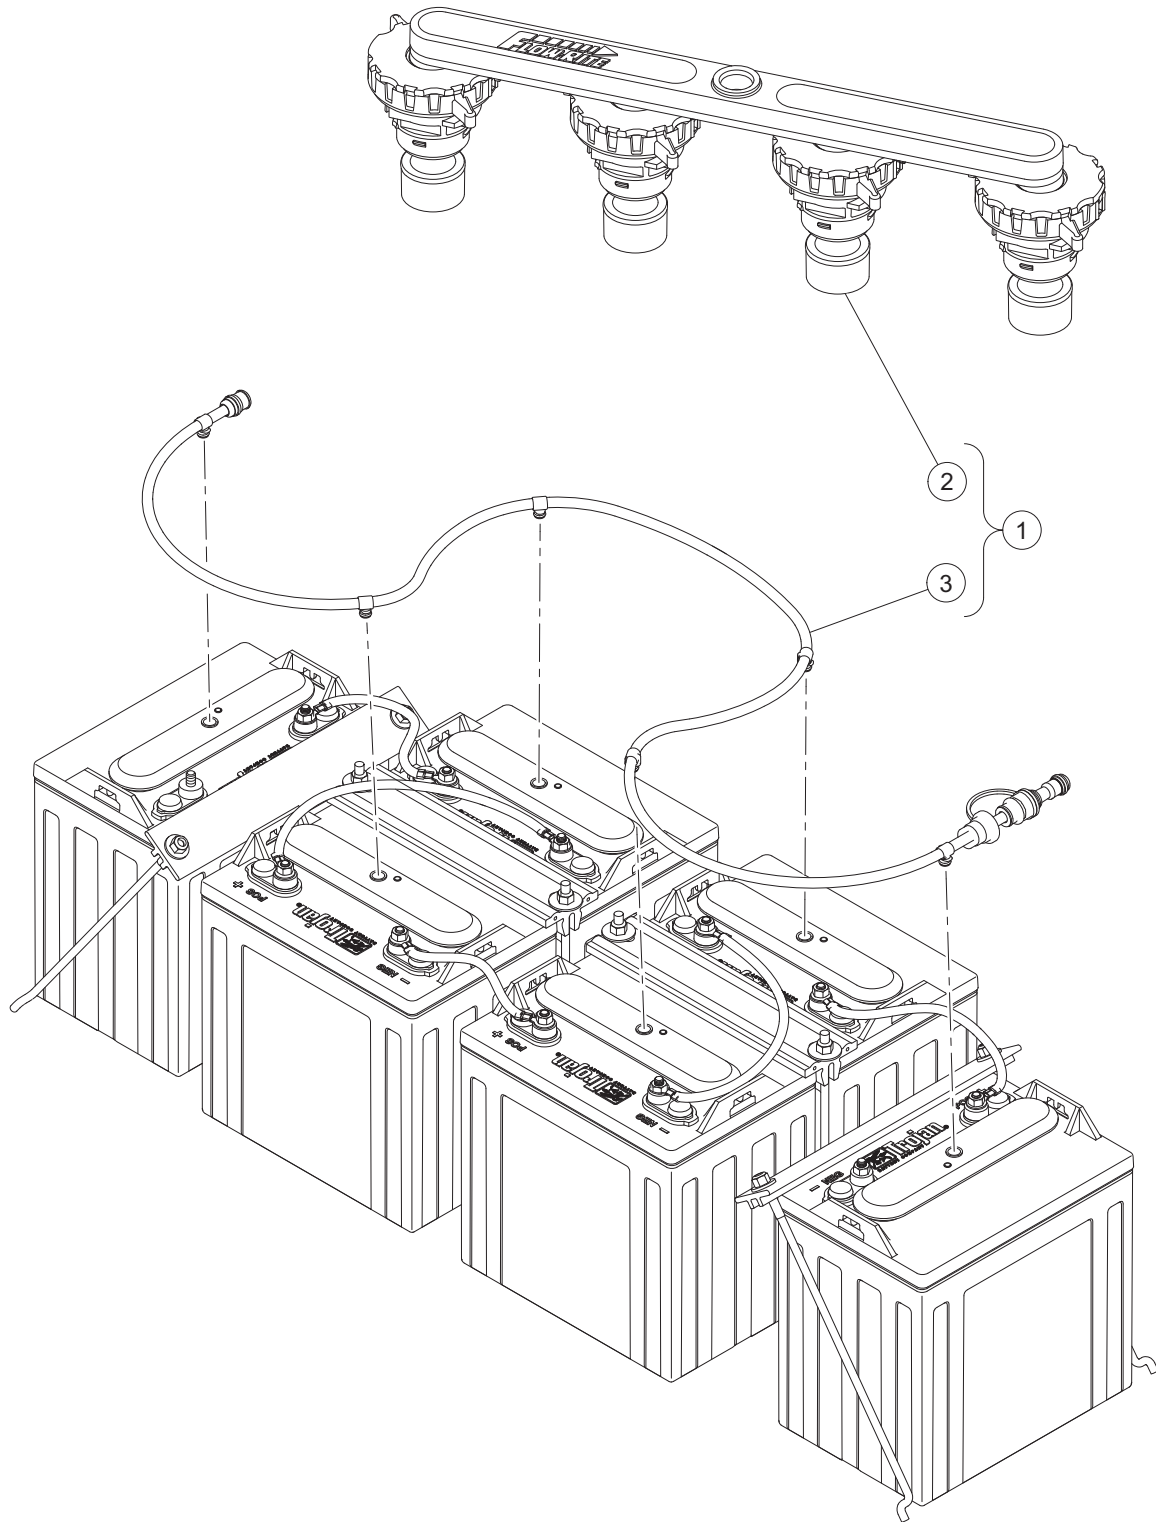


G-130799-000020

SINGLE POINT WATERING SYSTEM (SPWS)

ITEM	PART NO.	DESCRIPTION	QTY
1	103711301	Kit, SPWS, Trojan, 8V (includes items 2 and 3)	1
2	103510601	Spws, Manifold Asm, Tr 8 Volt	6
3	103864601	Asm, Hose, Spws, Ds 8v	1

13

E

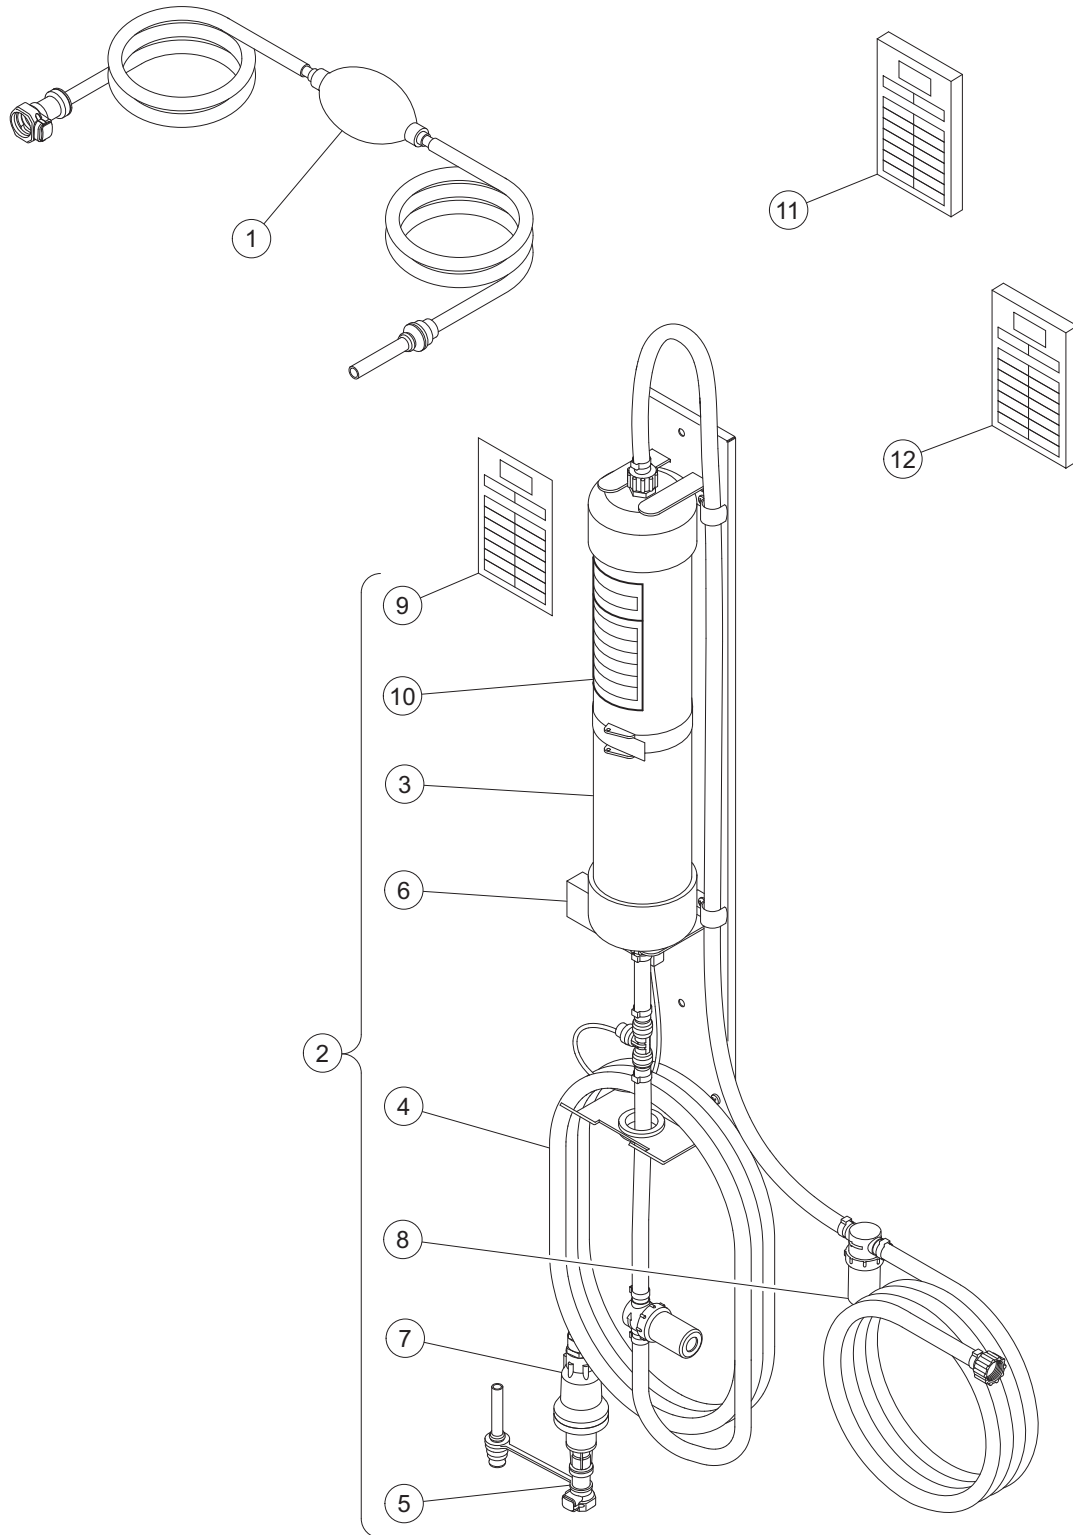

002523-003


HAND PUMP AND DEIONIZER (BATTERY-POWERED QUALITY LIGHT)

ITEM	PART NO.	DESCRIPTION	QTY	13
		1 2 3 4		
1	104006101	Kit, Hand Pump, Spws	1	
2	105166801	Deionizer, w/Battery-Powered Water Quality Light (includes items 3 through 10)	1	E
3	104005901	Cartridge, Deionizer	1	
4	105166901	Hose,outlet,deionizer	1	
5	105167001	Flow Ind, W/coupler, Deionizer	1	
6	105167101	Light, Quality, Battery-Powered, w/T-Fitting	1	
7	105168501	Regulator, Pressure, Deionizer	1	
8	105168601	Strainer, In-line, Deionizer	1	
9	AM1300001	Decal, Filter Log, Blue	1	
10	AM1300201	Decal, Inspect Log, Yellow	1	
11	AM1300101	Decal, Filter Log, Blue, Pack of 100	A/R	
12	AM1300301	Decal, Inspect Log, Yellow, Pack of 100	A/R	

ELECTRIC MOTOR

14

E

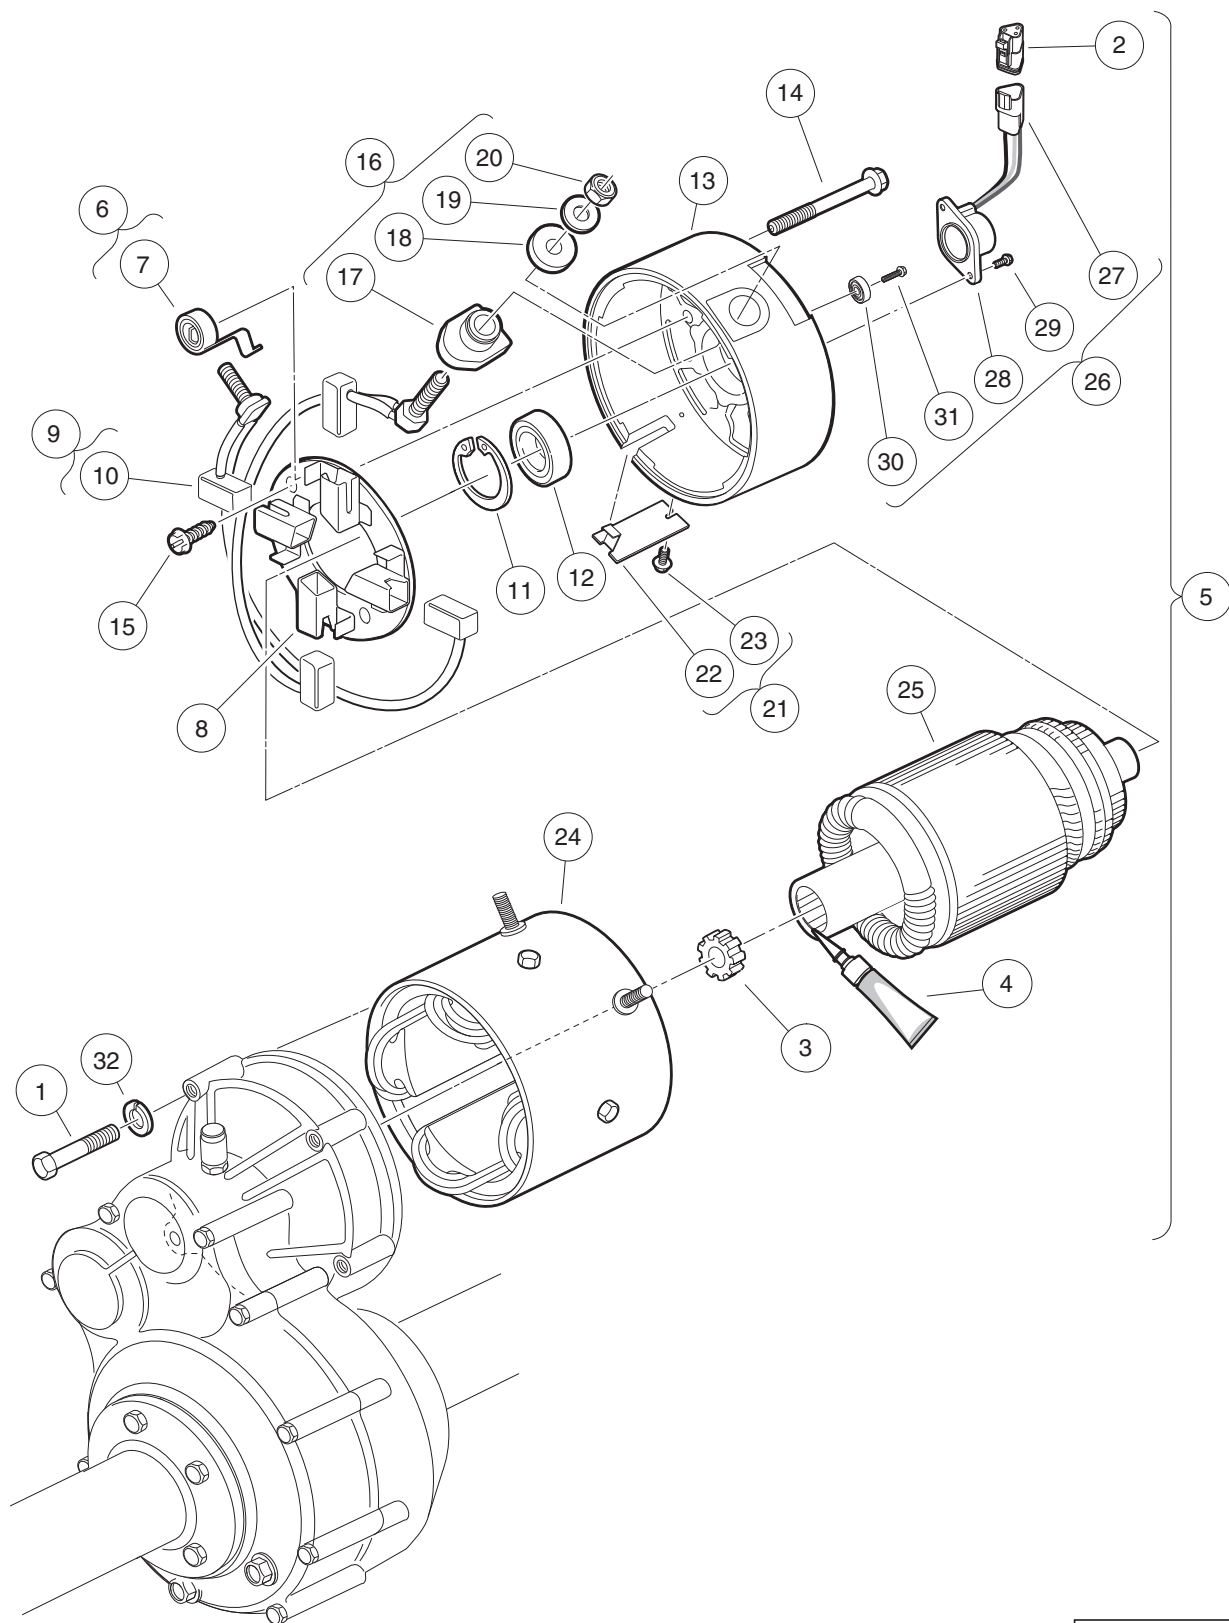

000185-002

MOTOR (MODEL EJ8-4001A) – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1014201	Screw, 1/4-20 X 2.25 Hex Cap	3
2	101920101	Kit, 3-Pin Wedge Lock	1
3	102235201	Bumper, Drive Unit	1
4	102243403	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	103572501	IQ Electric Motor, 48-VDC 3.3 hp (includes items 6 through 26)	1
6	102186001	Spring Kit, Motor Brush (includes item 7)	1
7	N/A	Spring, Brush, S-g	4
8	102186101	Brush Box Assembly	1
9	102186201	Brush Kit, Motor (includes item 10)	1
10	N/A	Assembly, Brush and Terminal	2
11	N/A	Ring, 2.24" Internal Retaining	1
12	102186401	Bearing, Ball	1
13	102186701	End Cap, Motor	1
14	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
15	102186901	Screw, #8-32 X .5 Hex-Head	2
16	102187101	Hardware Kit, Motor Terminal (includes items 17 through 20)	2
17	N/A	Insulator	2
18	N/A	Washer, Nylon Flat	2
19	N/A	Washer, Flat, 5/16 Steel	2
20	N/A	Nut, Brass Hex, 5/16 - 18	2
21	102187201	Plate Kit, Motor Cover (includes items 22 and 23)	1
22	N/A	Assembly, Cover Plate	1
23	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
24	102704701	Frame and Field Assembly	1
25	102704801	Armature Assembly	1
26	102704901	Kit, Speed Sensor (includes items 27 through 31)	1
27	101942301	Kit, 3-Pin Wedge Lock	1
28	N/A	Sensor, Motor Speed, ADC	1
29	N/A	Screw, #8-32, Taptite Thread	2
30	N/A	Magnet, ADC Motor	1
31	N/A	Screw, 1/4-20 x 0.5	1
32	451	Lockwasher, 1/4 Split	3
Note: The F1 and F2 terminal posts on the EJ8-4001A motor have 1/4 - 20			


14

E

TRANSAXLE – ELECTRIC VEHICLES

15

E

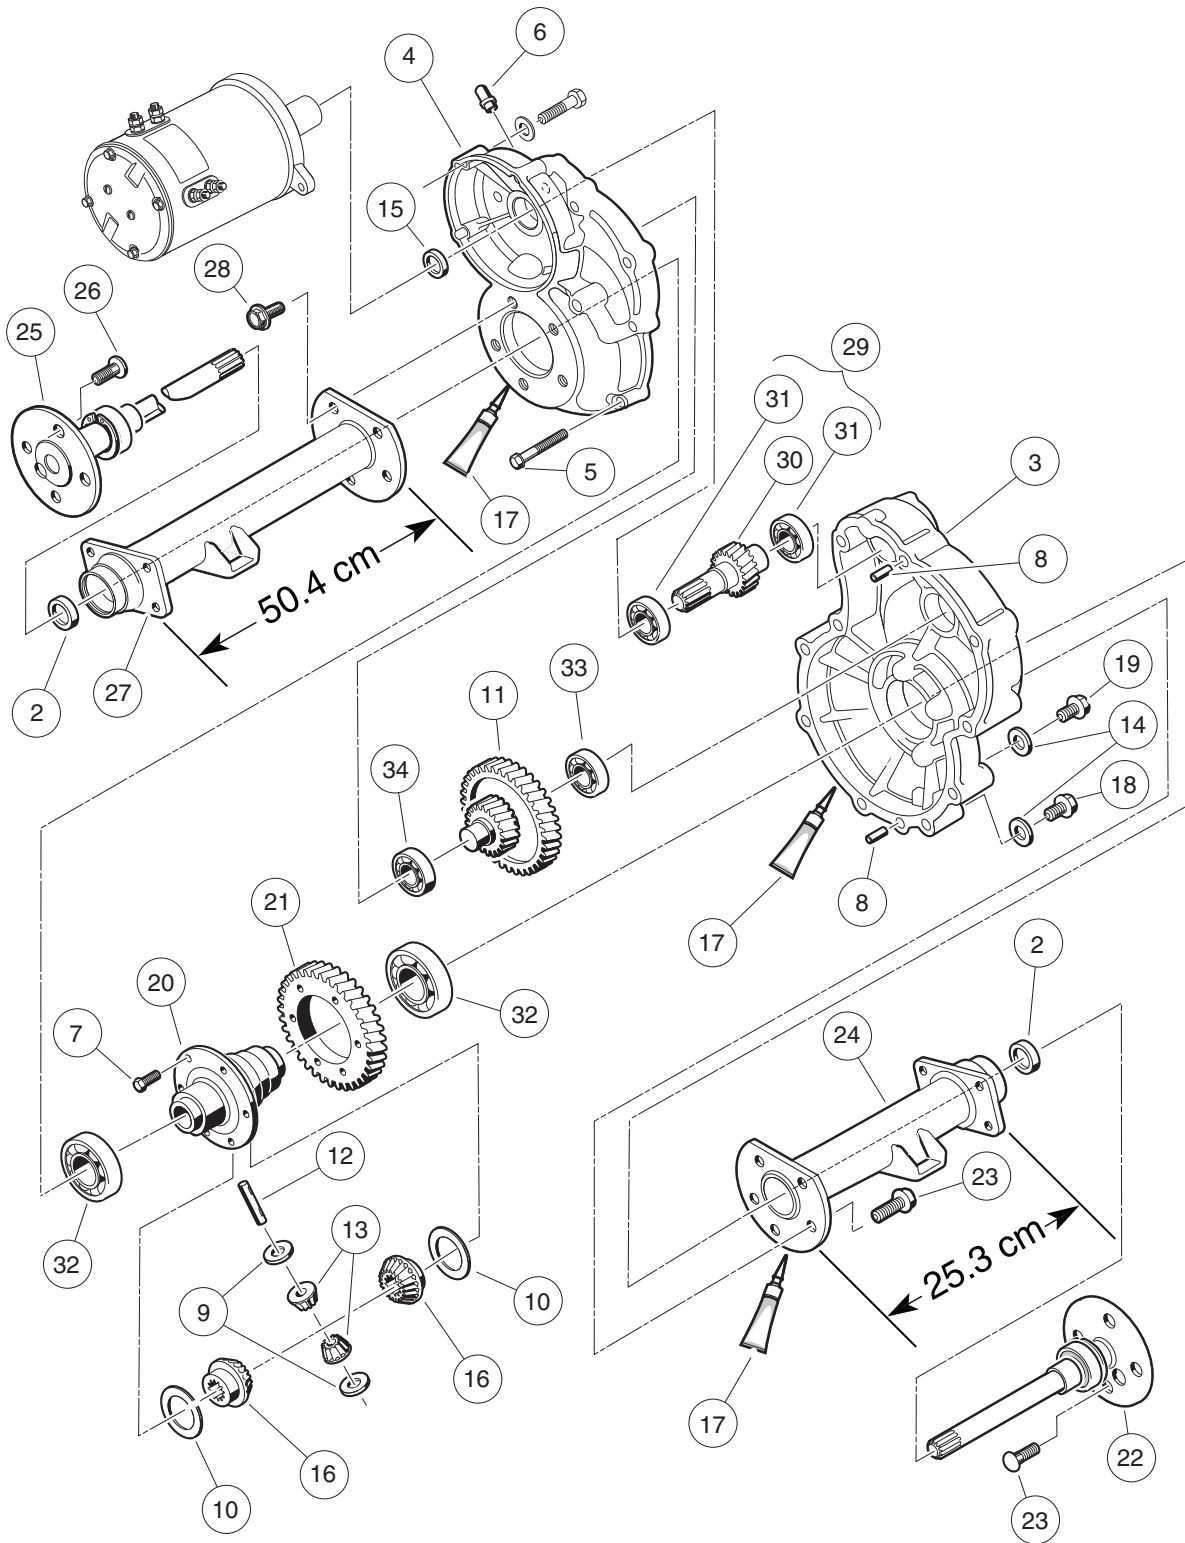


000223-005

TRANSAXLE – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102771701	Transaxle, Electric (includes items 2 through 34)	1
2	1013794	Axle Shaft Oil Seal	2
3	101895401	Gear Case, Driver-Side	1
4	101895501	Gear Case, Passenger-Side	1
5	101897001	Screw, M8-1.25 X 60mm Hex-Head	11
6	101897201	Breather	1
7	101897401	Screw, M10-1.25 X 25mm	6
8	101897601	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	101903601	Washer, Thrust	2
10	101903701	Washer, Thrust	2
11	101906901	Intermediate Shaft Assembly	1
12	101922101	Pin, 15.99mm X 88.7mm Dowel	1
13	101923001	Gear, Differential Idler	2
14	101923201	Gasket	2
15	101923501	Seal, Lip	1
16	101923901	Gear, Differential	2
17	101928701	Liquid Gasket (Transaxle case)	1
18	101972101	Plug, M14-1.5 X 12mm Magnetic	1
19	101972201	Plug, M14-1.5 X 12mm Hex	1
20	102356601	Housing, Differential, 6 Bolt	6
21	102356801	Gear, Differential Output, 6-Bolt	6
22	102886301	Axle Assembly, Driver-Side (includes item 23)	1
23	101922201	Lug Stud	4
24	102886401	Tube, Axle, Driver-Side	1
25	102886501	Axle Assembly, Passenger-Side (includes item 26)	1
26	101922201	Lug Stud	4
27	102886601	Tube, Axle, Passenger-Side	1
28	102902801	Screw, M10 X 30	10
29	103582801	Asm, E Trans Shaft/bearing (includes items 30 and 31)	1
30	N/A	Shaft, Input	1
31	7335	Bearing	2
32	7330	Inner Axle Tube Bearing	2
33	7335	Bearing	1
34	7336	Bearing	1

15

E

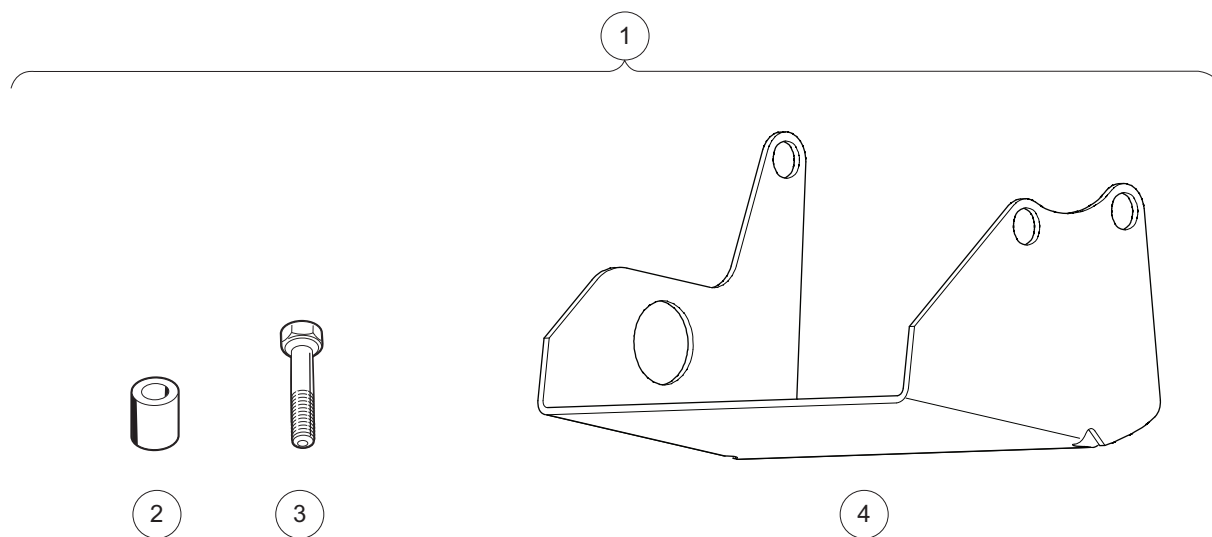

000365-002

DIFFERENTIAL GUARD – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY	15
		1 2 3 4		
1	101611402	Kit, Differential Guard, Elec Vehicles (includes items 2 through 4)	1	
2	101914001	Spacer, Steel	2	E
3	101936101	Screw, M10-1.50 X 60mm Hex Cap	2	
4	101978601	Guard, Differential, Electric Vehicle Transaxle	1	


15

E

BATTERY CHARGERS

16

E

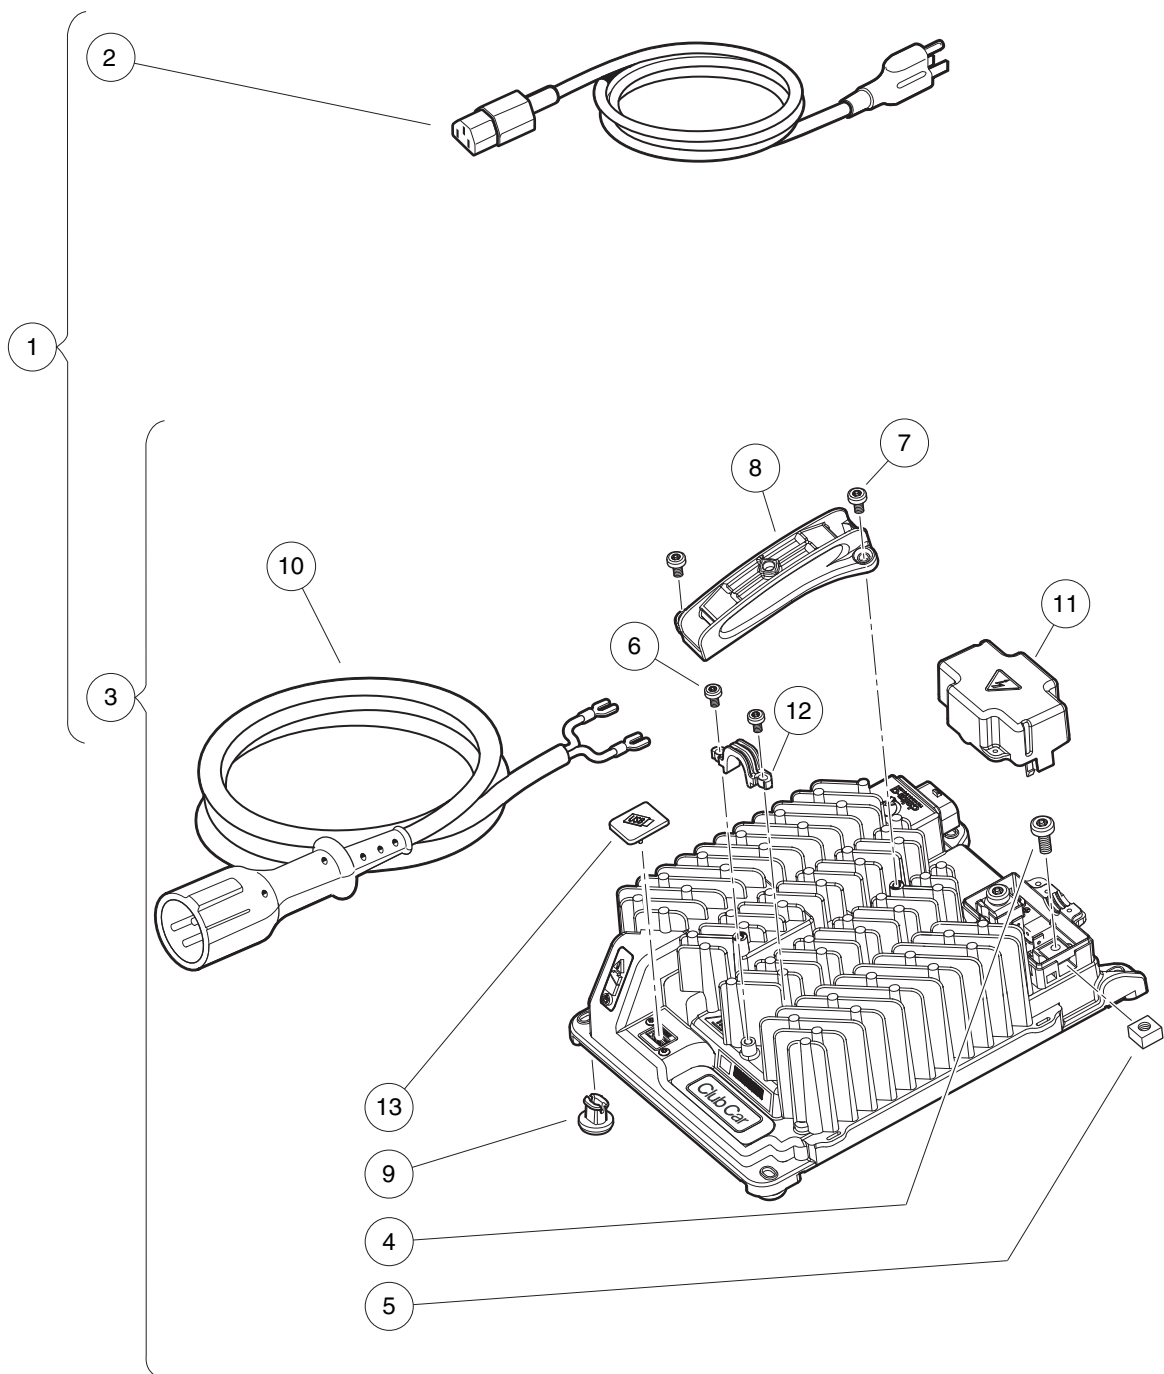


000610-002

BATTERY CHARGER, HIGH-FREQUENCY – U.S./CANADA

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	105095201	Charger, High-Freq, Service, 9ft Yel DC, 6ft AC, US/Canada (includes items 2 and 3)	1
2	104024201	Cord, AC, Nema To Iec320, 6ft (1.83 m), U.S./Canada	1
3	104029601	Charger, Asm, High-Freq, 9ft (2.74 m) Yellow DC Cord (includes items 4 through 13)	1
4	104024501	Screw, M6, Torx Head	2
5	104024601	Nut, M6, Square, Captured	2
6	104028901	Screw, M4 X .70, Pan Hd, Torx	2
7	104029001	Screw, M5 X .80, Pan Hd, Torx	2
8	105003601	Handle, Charger, High-Freq	1
9	105003701	Foot, Charger, High-Freq	4
10	105070101	Cord, DC, Yellow, 9ft (2.74 m)	1
11	105092301	Cover, DC Terminal Block, High-Freq Charger	1
12	105093101	Strain Relief, High-Freq, External, Charger	1
13	105123801	Cover, USB	1
Note: This charger includes both an AC cord and DC cord. For additional cord lengths that may be used with this charger, see the Battery Charger Cords page.			

16

E

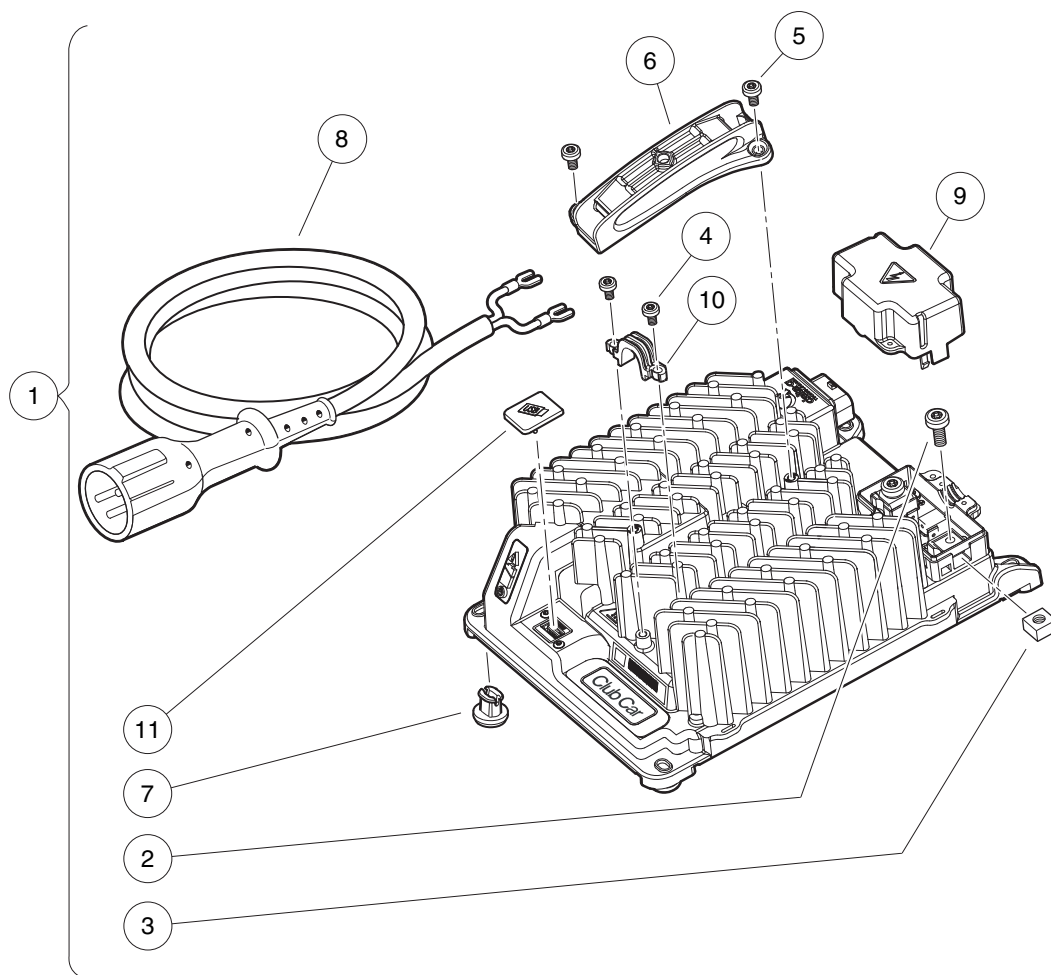


000610-003

BATTERY CHARGER, HIGH-FREQ., 2.74 M DC CORD – GLOBAL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	104029601	Charger, Asm, High-Freq, 9ft (2.74 m) Yellow DC Cord (includes items 2 through 11)	1
2	104024501	Screw, M6, Torx Head	2
3	104024601	Nut, M6, Square, Captured	2
4	104028901	Screw, M4 X .70, Pan Hd, Torx	2
5	104029001	Screw, M5 X .80, Pan Hd, Torx	2
6	105003601	Handle, Charger, High-Freq	1
7	105003701	Foot, Charger, High-Freq	4
8	105070101	Cord, DC, Yellow, 9ft (2.74 m)	1
9	105092301	Cover, DC Terminal Block, High-Freq Charger	1
10	105093101	Strain Relief, High-Freq, External, Charger	1
11	105123801	Cover, USB	1
Note: This charger does not include the AC cord. To complete the charger, choose the appropriate type and length of AC cord found on the Battery Charger Cords page.			

16

E

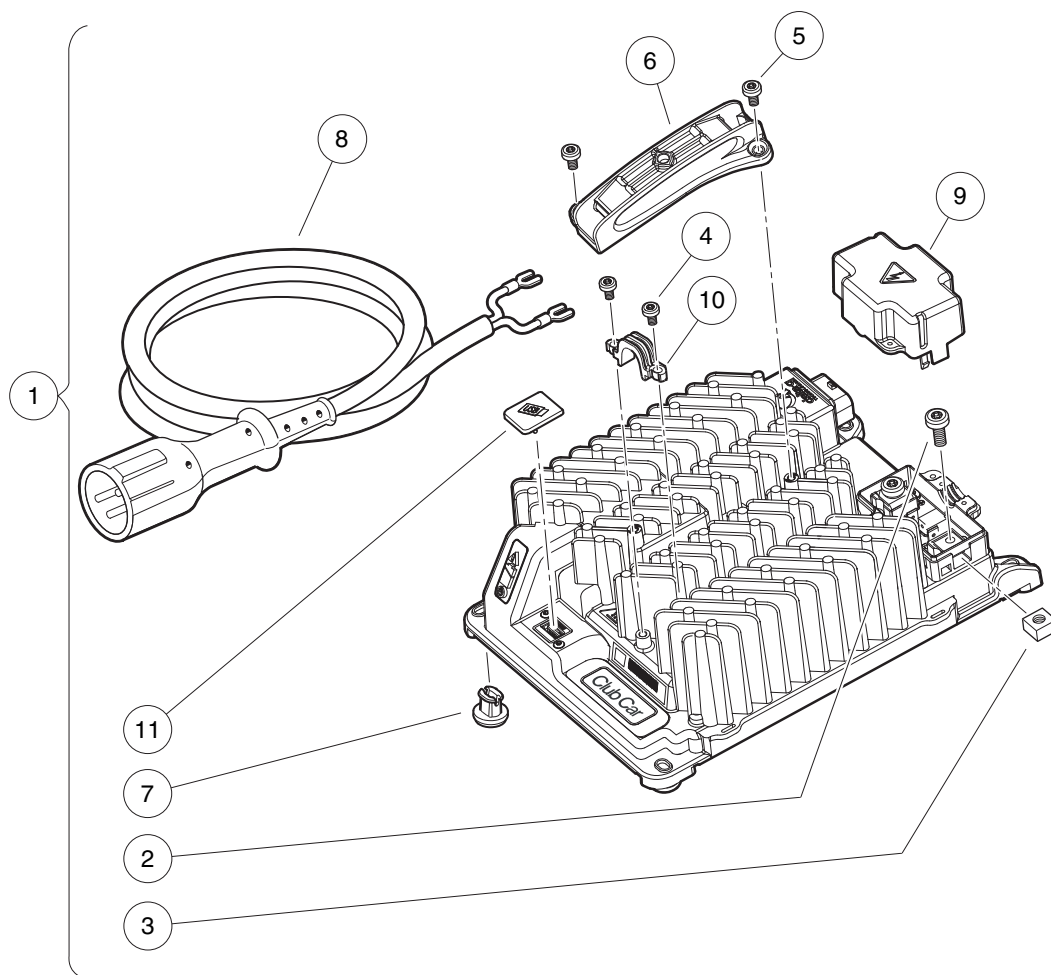


000610-003

BATTERY CHARGER, HIGH-FREQ., 3.66 M DC CORD – GLOBAL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	104029602	Charger, Asm, High-Freq, 12ft (3.66 m) Yellow DC Cord (includes items 2 through 11) ..	1
2	104024501	Screw, M6, Torx Head	2
3	104024601	Nut, M6, Square, Captured	2
4	104028901	Screw, M4 X .70, Pan Hd, Torx	2
5	104029001	Screw, M5 X .80, Pan Hd, Torx	2
6	105003601	Handle, Charger, High-Freq	1
7	105003701	Foot, Charger, High-Freq	4
8	105070102	Cord, DC, Yellow, 12ft (3.66 m)	1
9	105092301	Cover, DC Terminal Block, High-Freq Charger	1
10	105093101	Strain Relief, High-Freq, External, Charger	1
11	105123801	Cover, USB	1
Note: This charger does not include the AC cord. To complete the charger, choose the appropriate type and length of AC cord found on the Battery Charger Cords page.			

16

E

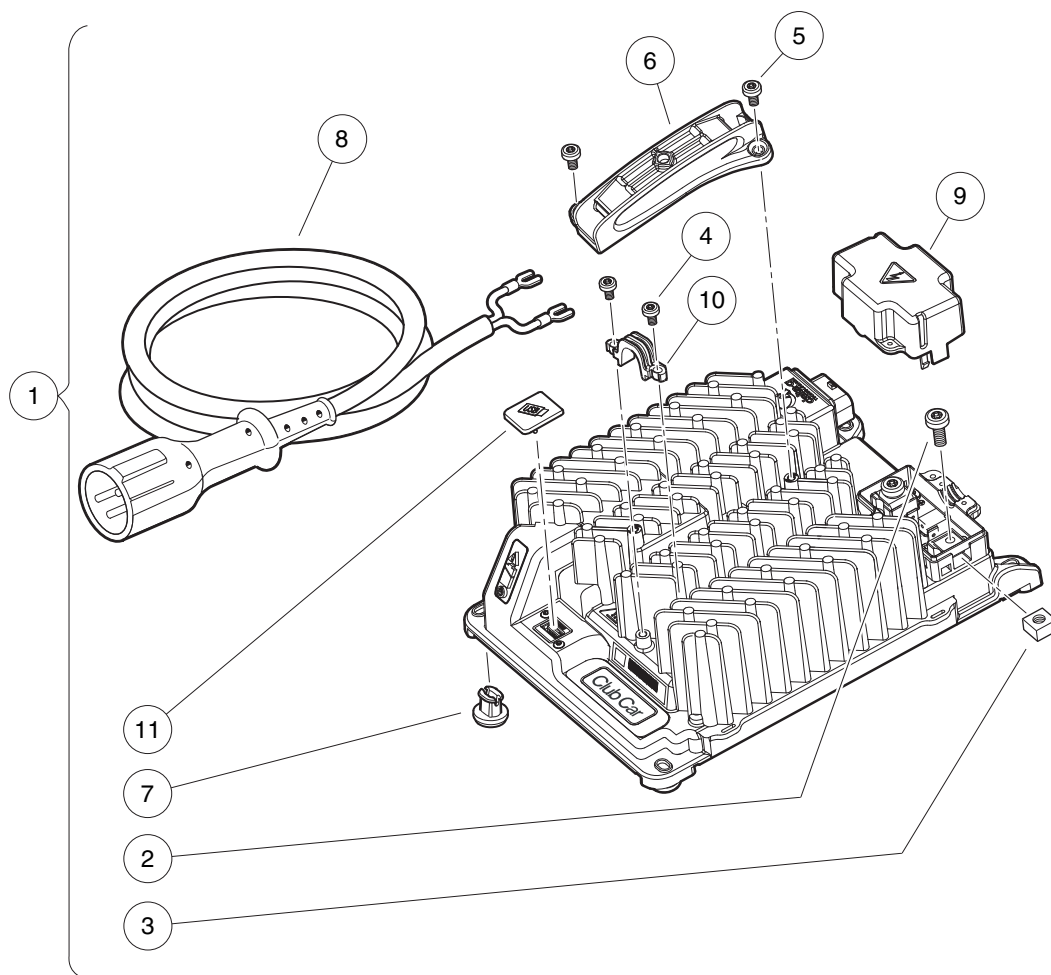

000610-003

BATTERY CHARGER, HIGH-FREQ., 6.1 M DC CORD – GLOBAL









ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	104029603	Charger, Asm, High-Freq, 20ft (6.1 m) Yellow DC Cord (includes items 2 through 11)	1
2	104024501	Screw, M6, Torx Head	2
3	104024601	Nut, M6, Square, Captured	2
4	104028901	Screw, M4 X .70, Pan Hd, Torx	2
5	104029001	Screw, M5 X .80, Pan Hd, Torx	2
6	105003601	Handle, Charger, High-Freq	1
7	105003701	Foot, Charger, High-Freq	4
8	105070103	Cord, DC, Yellow, 20ft (6.1 m)	1
9	105092301	Cover, DC Terminal Block, High-Freq Charger	1
10	105093101	Strain Relief, High-Freq, External, Charger	1
11	105123801	Cover, USB	1
Note: This charger does not include the AC cord. To complete the charger, choose the appropriate type and length of AC cord found on the Battery Charger Cords page.			

16

E

16

E

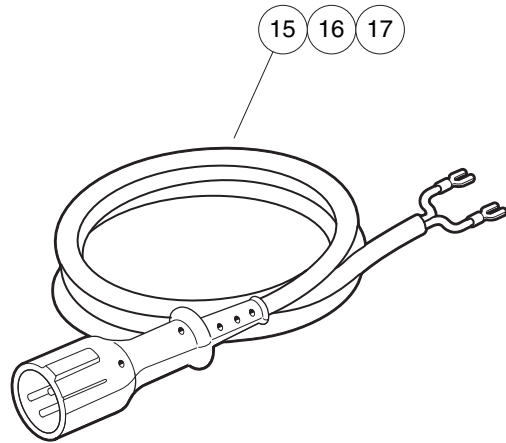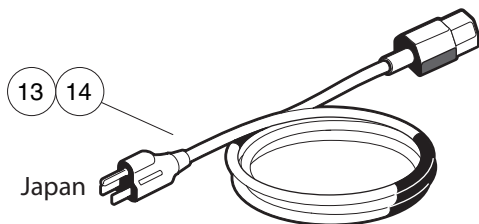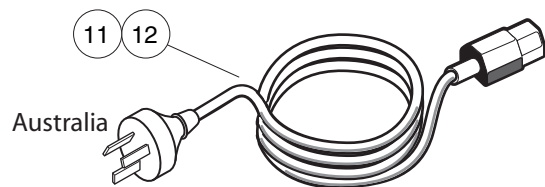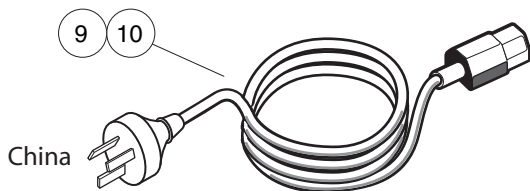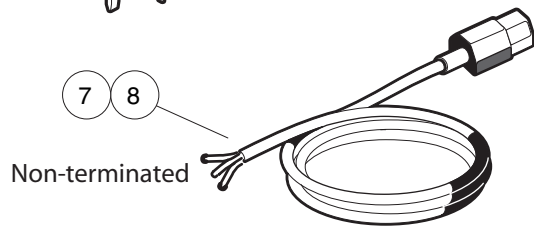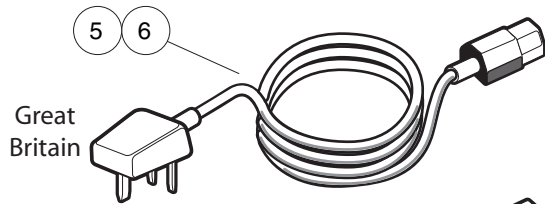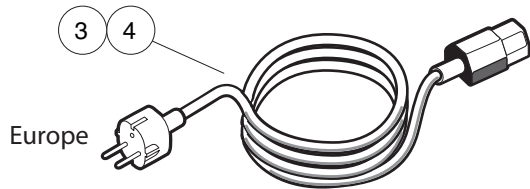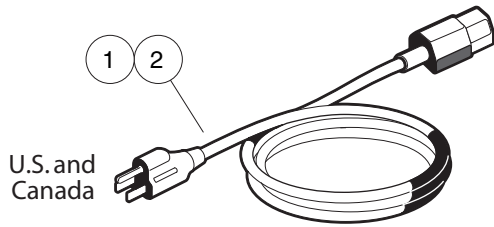

000610-004

CORDS – BATTERY CHARGER, HIGH-FREQUENCY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	104024201	Cord, AC, Nema To lec320, 6ft (1.83 m), U.S./Canada	A/R
2	104024202	Cord, AC, Nema To lec320, 9ft (2.74 m), U.S./Canada	A/R
3	104024401	Cord, AC, lec320, 6ft (1.83 m), Europe	A/R
4	104024402	Cord, AC, lec320, 9ft (2.74 m), Europe	A/R
5	104028501	Cord, AC, lec320, 6ft (1.83 m), Great Britain	A/R
6	104028502	Cord, AC, lec320, 9ft (2.74 m), Great Britain	A/R
7	104028601	Cord, AC, lec320, 6ft (1.83 m), Non-terminated	A/R
8	104028602	Cord, AC, lec320, 9ft (2.74 m), Non-terminated	A/R
9	105068201	Cord, AC, lec320, 6ft (1.83 m), China	A/R
10	105068202	Cord, AC, lec320, 9ft (2.74 m), China	A/R
11	105068301	Cord, AC, lec320, 6ft (1.83 m), Australia	A/R
12	105068302	Cord, AC, lec320, 9ft (2.74 m), Australia	A/R
13	105068401	Cord, AC, lec320, 6ft (1.83 m), Japan	A/R
14	105068402	Cord, AC, lec320, 9ft (2.74 m), Japan	A/R
15	105070101	Cord, DC, Yellow, 9ft (2.74 m)	A/R
16	105070102	Cord, DC, Yellow, 12ft (3.66 m)	A/R
17	105070103	Cord, DC, Yellow, 20ft (6.1 m)	A/R

16
E

MAINTENANCE AND SERVICE TOOLS

17


G

E

17

G

E

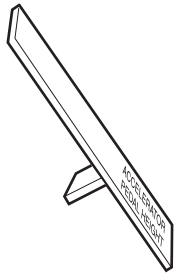


1



2



3

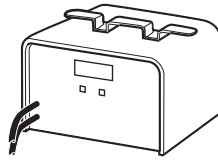


4




5



6

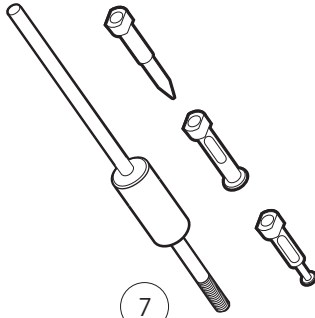


7

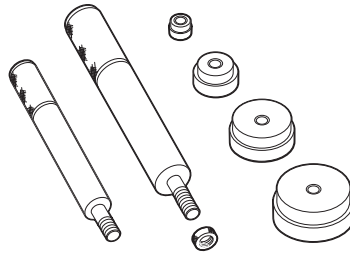


8




9

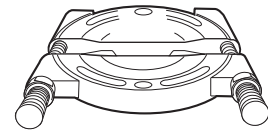


10

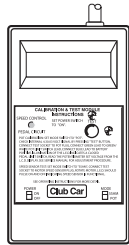


11




12

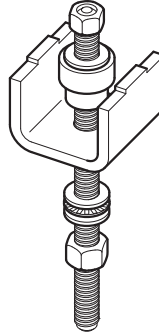


13

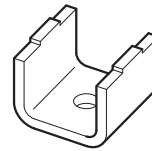

14

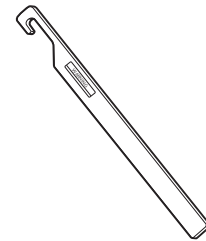


15

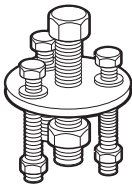

16



17

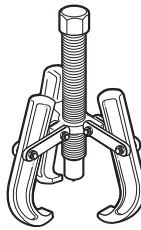

18



19

001060-003








MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	17 G E
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline and electric golf and utility vehicles. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.			
1	101871001	Accelerator Pedal Adjustment Tool (Utility Vehicles).....	1	1	
2	101813202	Adhesive, Guide Ring, 3-Gram Tube		1	
3	101641202	Arbor	1		
4	101831901	Battery Discharge Machine, 36/48 Volt		1	
5	1014305	Battery Terminal Protector Spray	1	1	
6	1011767	Battery Thermometer	1	1	
7	1016417	Bearing and Oil Seal Remover Assembly	1	1	
8	1016416	Bearing Driver Set	1	1	
9	1012811	Bearing Puller	1	1	
10	1012812	Bearing Puller Wedge Attachment	1	1	
11	101887101	Calibration Test Module		1	
12	102562401	Charger Bezel Tool		1	
		Clutch Tools (items 13 - 19)	1		
13	47568549001	Driven Clutch Tool	1		
14	47568246001	Plate, Cam Press (supplied with item 13).....	1		
15	105072501	Drive Clutch Holder Tool Assembly	1		
16	1014497	Drive Clutch Hub Puller	1		
17	1014496	Drive Clutch Puller	1		
18	1014508	Driven Clutch Cam Puller	1		
19	1014507	Driven Clutch Puller Plug	1		
		Please refer to the maintenance and service manual for proper tool application.			

17

G

E

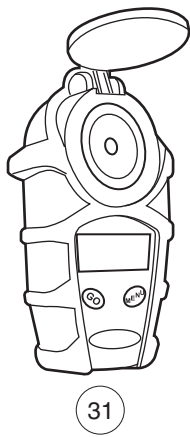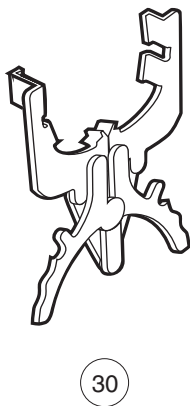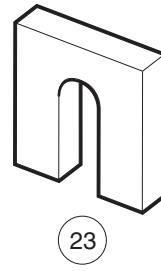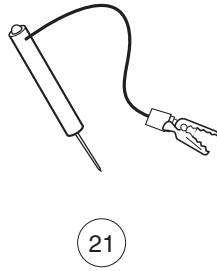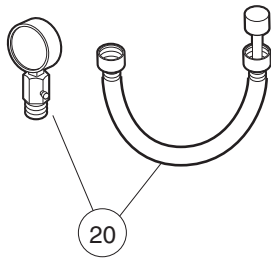

001061-003

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	17 G E
		1 2 3 4			
20	101641002	Compression Gauge and Adapter	1		
21	1011273	Continuity Tester	1	1	
22	1012151	Dry Moly Lubricant	1	1	
23	1016418	Gear Yoke	1	1	
24	1011478	Hydrometer	1	1	
25	1013593	Internal Retaining Ring Pliers	1	1	
26	101928701	Liquid Gasket (transaxle case)	1	1	
27	102243402	Moly-Teflon Lubricant (4-oz. (113-gram) tube)		1	
28	102587201	Paint Pen, Touch-Up, Underbody ,Black	1	1	
29	1016414	Piston Ring Compressor Kit	1		
30	1016415	Piston Ring Pliers	1		
31	AM1285701	Refractometer	1	1	
32	1012549	Retaining Ring Pliers, 45 External	1	1	
33	1012560	Retaining Ring Pliers, 90 Internal	1	1	
34	101823101	Safety First Card (50 per pack)	1	1	
35	1012809	Seal Puller	1	1	
Please refer to the maintenance and service manual for proper tool application.					

17

G


E




36




37

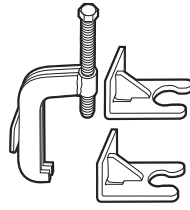


38




39




40




41

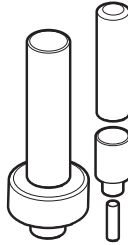

42

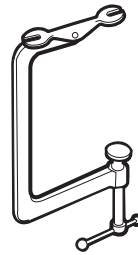

43

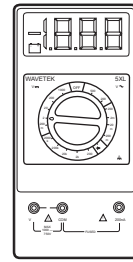

44



45



46



47

001062-002

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	17 G E
		1 2 3 4			
36	1014264	Steering Column Bearing Press Tool	1	1	
37	1014259	Steering Column Retaining Ring Tool	1	1	
38	102061201	Steering Wheel Puller Tool	1	1	
39	102570401	Tool, Tensioning, Starter Generator	1		
40	1014162	Transaxle Axle Seal Tool		1	
41	1014161	Transaxle Pinion Seal Tool		1	
42	1014115	Transmission Tool Kit		1	
43	101641101	Valve Spring Compressor	1		
44	1011480	Volt Ohm Meter	1	1	
45	47631025001	Kit, EFI Diagnostics	1		
46	47631026001	Kit, Bluetooth EFI Diagnostics	1		
47	47631075001	Kit, EFI Tool	1		
Please refer to the maintenance and service manual for proper tool application.					

INDEX

Part Number and Page

AM10419	11-7	8067	6-13	1011652	1-39
AM1243501	4-27	8104	4-9	1011659	1-5
AM1243701	4-23, 4-25, 4-27	8233	1-5, 1-7, 1-11, 1-29, 1-31, 1-33, 1-35, 1-37, 1-41, 1-45, 4-23, 4-25, 4-29, 4-31, 5-5, 5-7, 9-11, 12-3, 12-9, 13-3	1011694	5-5, 5-7
AM1243801	4-23, 4-25, 4-27	8248	1-29, 1-33, 12-3, 13-3	1011697	1-49, 6-5, 10-3, 13-13
AM1300001	13-17	8251	1-29, 1-31, 1-33, 1-35	1011734	5-9
AM1300101	13-17	8450	11-5	1011767	17-3
AM1300201	13-17	8639	4-27, 6-5, 7-9	1011779	5-15
AM1300301	13-17	8717	5-7, 7-9, 12-3	1011825	4-29
SVP370601	1-49, 3-5, 3-7	8754	1-27, 5-5, 5-7, 5-15, 6-3, 6-5, 6-9, 6-11, 7-7	1011852	1-11
SVP370701	1-49, 3-5, 3-7	8755	1-45, 6-9	101187702	5-3
SVP370801	1-49, 3-5, 3-7	8861	6-11	1011931	1-37, 1-41, 1-49, 5-5, 5-7
SVP370901	1-49, 3-5, 3-7	8990	4-9, 4-25, 6-3, 12-5, 13-3, 13-11	1011942	1-11
183	4-5, 4-7, 4-9, 4-21, 4-27, 11-5	1010124	6-9	1011963	1-9, 1-11
304	1-9, 1-11, 1-43, 4-29	1010138	1-43, 6-11	1011964	1-9
320	1-27, 1-43, 1-45, 1-47	1010145	6-15	1011990	1-27
324	1-7, 1-11, 4-23, 4-25	1010150	6-9	1012008	1-11
332	1-5, 1-7, 1-9, 1-11, 1-29, 1-31, 1-33, 1-35, 1-39, 1-45, 1-47, 4-23, 4-25, 4-29, 13-3, 13-11	1010237	1-9	1012151	17-5
334	1-45, 1-47, 5-5, 5-7, 6-3, 6-5, 11-5	1010434	1-29, 1-31, 1-33, 1-35	1012181	6-15
357	6-9	1010517	1-5, 1-9, 1-11	1012182	6-15
451	14-3	1010805	5-3	1012285	13-3, 13-11
706	6-9	1010829	5-15	1012295	7-9
1016	4-5, 4-9, 4-21	1010877	5-3	1012303	1-45, 6-9
1017	4-3	1010878	1-45, 5-3	1012412	1-29, 1-31, 1-33, 1-35
1028	5-3	101090802	13-13	1012431	4-11, 7-9, 7-11
1032	5-3	1010909	4-5, 4-21	1012438	4-7, 4-27
1218	9-15	1010921	5-3	1012462	1-7
1241	1-5, 1-37, 1-41, 4-5, 4-7, 5-3, 5-5, 5-7, 5-15, 7-9, 7-13, 9-15	1010927	5-3	1012528	13-11
1242	1-23, 5-15, 7-7, 7-9	1010932	5-3	1012549	17-5
1606	1-5	1010933	5-3	1012560	17-5
1620	1-21	1010934	7-13	1012571	6-5
1624	5-5, 5-7, 6-3, 7-7	1010954	7-9	1012594	7-11
2402	6-11	1010958	13-13	1012604	6-5
7048	6-13	1010984	2-3	1012605	6-5
7173	4-5, 4-7, 7-13	1010993	1-29, 1-31, 1-33, 1-35	1012649	9-5
7174	1-23, 7-7	1011017	1-5	1012809	17-5
7251	1-17	1011019	1-21	1012811	17-3
7310	2-3	1011084	5-9	1012812	17-3
7311	1-11, 1-37, 1-41	1011114	9-11, 12-9	1012836	11-7
7330	15-3	1011137	5-13	1012986	4-13
7335	15-3	1011229	4-5, 4-7	1012987	12-3
7336	15-3	1011273	17-5	1013032	1-29, 1-33
7473	1-17, 4-5, 4-7, 5-3, 5-5, 5-7, 5-15, 7-9, 7-13, 9-15	1011280	4-5, 4-7	1013035	6-3
7591	4-5, 4-7	1011382	1-21	1013042	6-3, 6-11
7716	5-3, 5-5, 5-7	1011402	5-3	1013044	6-3
7818	1-23, 7-9	1011415	6-15	1013052	6-3
7820	4-29	1011418	5-3	1013164	6-15
7847	1-31, 1-35, 1-37, 1-45, 1-47, 4-31, 4-33	1011439	4-5, 4-7	1013343	1-21
7893	4-5, 4-9, 4-21, 7-9	1011478	17-5	1013344	1-21
7973	1-21	1011480	17-7	1013357	4-5, 4-7
8056	4-11, 7-11	101155301	3-5, 3-7	1013461	4-3
8057	4-11, 7-9, 7-11	1011557	4-5, 4-7	1013494	1-21
8058	7-9, 7-11	1011578	1-49, 13-13	1013509	1-7, 4-23, 4-25
		1011582	4-33	1013531	5-15
		1011590	4-9	1013589	7-9
				1013591	12-3
				1013593	17-5

INDEX

1013609	7-9	1014807	7-9, 7-11	1016363	4-7
1013734	13-11	1014808	7-9	1016366	4-7
1013746	9-5	1014901	6-15	1016384	6-9
1013794	15-3	1014902	6-15	1016385	6-11
1013857	4-13, 4-15	1014947	13-11	1016386	6-9
1013869	5-3	1015010	4-27	1016387	6-9
1013870	5-3	101503202	1-25	1016389	6-9
1013871	5-5, 5-7	1015064	12-3	101641002	17-5
1013876	1-43, 5-3	1015072	13-13	101641101	17-7
1013884	1-9	1015091	1-9, 1-11, 1-49	101641202	17-3
1013924	5-11, 5-13, 8-7	1015153	4-23	1016414	17-5
1013983	1-25	1015154	4-23	1016415	17-5
1014007	5-5, 5-7, 9-11, 12-9	1015156	4-23, 4-25, 4-27	1016416	17-3
1014051	11-5	1015157	4-23, 4-25	1016417	17-3
1014055	11-5	1015160	4-23, 4-25	1016418	17-5
1014056	11-5	1015162	4-23	1016423	4-5, 4-7
1014057	11-5	1015167	4-27	1016630	4-13
1014058	11-5	1015170	4-27	1016717	4-33
1014059	11-5	1015172	4-23, 4-25	1016801	11-5
1014062	11-5	1015187	4-23, 4-25, 4-27	1016837	4-23, 4-25
1014063	11-5, 13-11	1015332	7-3	1016851	4-11
1014065	7-9, 11-5	1015360	13-7	1016868	1-17
1014072	11-7	1015373	7-9	1016879	4-3
1014078	11-7	1015391	1-43	1016880	4-3
1014080	11-7	1015405	7-9	1016916	1-39
1014115	17-7	1015484	1-23	1016929	4-23, 4-25, 4-27
1014116	9-3	1015524	17-3	1016952	1-29, 1-31, 1-33, 1-35
1014125	6-5	1015525	1-29, 1-33	1017029	5-3
1014126	6-5	1015526	4-23, 4-25, 4-27	1017062	4-3
1014145	7-9, 12-3	1015583	1-45	1017064	4-3
1014161	17-7	101558302	6-9, 6-15	1017065	4-3
1014162	17-7	1015597	6-13	101707402	4-9
1014201	14-3	1015737	7-9	1017075	4-9
1014213	6-5	1015741	4-5, 4-7, 7-9	1017141	1-29, 1-31, 1-33, 1-35
1014214	6-5	1015752	4-33, 7-9, 13-5	1017235	6-15
1014217	6-5	1015765	4-23	1017266	6-11
1014259	17-7	1015768	4-27	1017271	1-9
1014264	17-7	1015770	4-27	1017273	6-7
1014276	6-9	101587714	9-5	1017313	6-5
1014287	11-5	1015878	7-9	1017314	6-5
1014288	6-5, 11-5, 13-11	1015932	7-7	1017315	6-5
1014304	13-13	101609401	1-49, 3-5, 3-7	1017317	6-5
1014305	17-3	101611402	15-5	1017378	5-5, 5-7
1014306	1-29, 1-31, 1-33, 1-35	1016183	6-5	1017380	5-5, 5-7
1014453	11-5	1016201	11-5	1017424	5-5, 5-7
1014454	11-7	1016230	4-27	1017686	11-7
1014496	17-3	1016267	4-27	1017696	5-5, 5-7
1014497	17-3	1016269	6-5	1017724	4-9
1014507	17-3	1016287	4-27	1017774	1-37, 1-41
1014508	17-3	1016289	11-5	1017853	4-5, 4-7
1014530	4-29	1016346	6-11	101791101	5-11
101454602	6-15	1016349	6-11	101795701	13-7, 13-13
1014555	6-15	1016350	6-11	101796201	5-5, 5-7
1014573	6-15	1016351	6-11	101801001	13-9
1014727	7-11	1016353	6-11	101808401	17-3
1014789	7-3, 13-7	1016356	4-5, 4-7	101810501	4-7

INDEX

101813202	17-3	101908401	13-3	102025901	4-13
101814601	4-25	101908601	3-7	102026001	5-5, 5-7
101815501	5-11, 5-13	101910401	1-37, 1-41, 13-11	102044702	4-13
101815502	5-11, 5-13	101912401	5-9	102044801	4-13
101816501	5-11, 5-13	101914001	15-5	102045001	1-5
101816502	5-11, 5-13	101914401	4-5	102048401	1-5
101817401	5-5, 5-7	101915201	3-5	102051601	4-13
101818801	5-7	101918501	5-3	102051701	4-13, 4-15
101821601	4-27	101919801	5-5, 5-7	102051901	4-13, 4-15
101823101	17-5	101920101	13-3, 14-3	102059501	12-7
101823201	5-11, 5-13	101922101	15-3	102061201	17-7
101823801	5-11, 5-13	101922201	15-3	102065901	1-45, 1-47
101823901	5-11, 5-13	101922501	13-3	102066201	5-15
101830701	4-15	101923001	15-3	102075801	3-5, 3-7
101831901	17-3	101923201	15-3	102076702	1-9
101832001	13-9	101923501	15-3	102155801	11-7
101833401	11-7	101923901	15-3	102158901	5-5, 5-7
101834601	8-7	101928701	15-3, 17-5	102163001	1-13
101834602	8-7	101931501	3-7, 13-11	102163101	1-13
101835601	1-45, 1-47, 4-33	101932201	4-5, 4-7	102174208	1-39
101850301	6-7	101932401	13-3	102186001	14-3
101855002	13-3	101932501	13-3	102186101	14-3
101855801	1-31, 1-35	101936101	15-5	102186201	14-3
101856002	13-3	101942301	13-3, 14-3	102186401	14-3
101856102	7-9	101953101	5-15	102186701	14-3
101861901	5-5, 5-7	101954301	1-5, 1-39	102186901	14-3
101862001	5-5	101955101	4-29	102187101	14-3
101871001	17-3	101957101	4-5, 4-7	102187201	14-3
101878201	5-3	101960501	3-5	102196901	13-3, 13-7
101879401	6-3	101963401	9-15	102198001	4-13, 4-15
101879501	6-3	101965205	13-11	102198701	4-5
101879601	6-3	101968701	13-7	102199001	4-5
101879701	6-3	101972001	1-49, 3-5, 3-7	102199201	4-5
101879801	6-3	101972101	15-3	102199301	4-5
101879901	6-3	101972201	15-3	102199401	4-5
101880001	6-3	101978001	13-7	102199601	13-7
101880101	6-3	101978101	13-7	102221201	1-31, 1-35
101880201	6-3	101978201	13-7	102235201	14-3
101880301	6-3	101978601	15-5	102240501	13-11
101884801	8-7	101979101	7-11	102242101	1-5, 11-7
101886101	9-11, 12-9	101984801	6-5	102242401	1-9
101887101	17-3	101987901	4-3	102243101	13-11
101887601	9-11	101988001	4-3	102243402	17-5
101895401	15-3	101988002	4-3	102243403	14-3
101895501	15-3	101988101	4-3	102263601	13-7
101897001	15-3	101988201	4-3	102266601	13-3
101897201	15-3	101990703	4-13	102266701	13-3
101897401	15-3	101990801	5-15	102274101	12-21
101897601	15-3	101991101	4-13	102278001	1-21, 6-5
101898001	7-13	101998011	1-39	102278802	1-49, 3-5, 3-7
101903001	13-7	101998501	1-39	102289001	1-45
101903101	6-9	102005701	1-13	102289002	1-15, 1-19
101903601	15-3	102022101	5-15	102289201	6-3, 6-11
101903701	15-3	102022601	6-11	102289301	1-45
101906901	15-3	102022602	6-3, 6-11	102292801	5-15
101908101	13-3	102025801	1-5, 9-3, 9-5	102296530	1-41

INDEX

102296716	9-11	102778601	1-5	102909901	4-33
102297230	13-5	102778901	1-43	102911601	4-33
102298116	9-9	102779001	1-43	102913101	1-37
102298240	1-15, 1-19	102779201	1-43	102913102	1-37
102298401	6-15, 10-3	102779301	1-43	102913601	6-9
102298720	1-49	102779401	1-43	102914501	1-11
102310701	1-25	102779501	1-43	102914502	1-11
102323101	5-3	102779601	1-43	102922701	10-3
102323201	5-3	102796101	1-37	102967901	4-13, 4-15
102353201	6-13	102796301	1-37	103189901	1-43
102353301	6-13	102796302	1-37	103200701	4-15
102353401	6-13	102797201	1-45	103205501	3-5
102354104	6-13	102804501	4-13	103218601	13-7
102354204	6-13	102804502	4-13	103234303	3-3
102355102	1-27	102804503	4-15	103245301	1-49
102356601	15-3	102804504	4-15	103246701	1-39
102356801	15-3	102815801	2-3	103246801	1-39
102357701	6-13	102815901	2-3	103255601	4-5
102410604	9-11	102816201	1-37	103256901	4-5
102411209	9-15	102819101	2-3	103257603	4-17
102458901	3-5	102820301	1-45, 1-47	103257701	4-17
102476401	9-11, 12-9	102820501	1-45, 1-47	103257801	4-17
102490301	9-11	102821101	1-45	103262201	8-5
102491501	11-5	102823201	1-45	103295301	4-29
102492301	13-7	102824001	1-11	103313301	1-5
102498201	9-11, 12-7, 12-9	102828701	1-49	103316701	13-11
102499001	4-15	102829703	1-27	103316801	13-11
102506401	6-15	102829704	1-27	103316901	13-11
102508601	4-15	102829802	1-27	103347601	7-5
102508701	4-15	102830201	1-19	103347701	7-5
102517601	4-29	102830401	1-19, 6-9	103347801	7-5
102526201	12-3	102830501	1-15	103348202	4-17
102529201	4-9	102830701	1-43	103351001	6-11
102529202	4-29	102830801	4-15	103354401	4-17
102538601	13-7	102831901	3-5, 3-7	103354701	6-11
102540301	8-7	102832001	3-5, 3-7	103364101	1-5
102541401	7-7	102833301	3-5, 3-7	103364201	1-5
102558201	8-3, 9-15	102838701	7-5	103365521	1-33
102562401	17-3	102838801	7-5	103365522	1-33
102570401	17-7	102838901	7-5	103365524	1-33
102572401	13-7	102839001	7-5	103365525	1-33
102587201	17-5	102839301	7-5	103365530	1-33
102617201	8-5	102840301	1-37	103365531	1-33
102617801	12-21	102841101	7-5	103365532	1-33
102618601	1-15, 1-19	102852401	1-19	103372101	9-3
102621501	7-7, 12-7	102852501	4-33	103372401	9-5
102704701	14-3	102854301	1-9, 1-11	103377201	5-15
102704801	14-3	102854302	1-9, 1-11	103377301	5-15
102704901	14-3	102861401	2-5	103378301	1-41
102706401	6-15	102865901	13-11	103378302	1-41
102711201	7-9	102869401	4-5, 4-7	103380201	5-11, 5-13
102725501	9-15	102886301	15-3	103380202	5-11, 5-13
102732401	8-5	102886401	15-3	103395101	1-5
102771701	15-3	102886501	15-3	103397901	4-7
102777601	1-31, 1-35	102886601	15-3	103411101	1-9
102777602	1-31, 1-35	102902801	15-3	103411201	1-9

INDEX

103414901	4-7	103958101	13-13	105008101	7-3
103452001	9-5	103961601	3-5, 3-7	105009101	9-15
103477901	6-13	103971798	13-13	105009401	9-15
103483101	5-11, 5-13	103971799	13-13	105025001	12-11, 12-13
103483102	5-11, 5-13	103973901	11-5	105025101	12-11, 12-13
103483201	5-11, 5-13	103974201	11-5	105025201	12-11, 12-13
103483401	5-11, 5-13	103974401	11-5	105025301	12-11, 12-13
103483601	5-11, 5-13	103975301	11-7	105025401	12-11, 12-13
103483701	5-11, 5-13	103976101	11-5	105025501	12-11, 12-13
103502601	6-9	103979301	12-21	105025601	12-11, 12-13
103504301	13-13	103982301	13-11	105025701	12-11, 12-13
103507001	6-9	103984401	1-3	105025801	12-11, 12-13
103508101	8-5	103984402	1-3	105025901	12-11, 12-13
103510601	13-15	103984404	1-3	105026001	12-11, 12-13
103572501	14-3	103984405	1-3	105026101	12-11, 12-13
103582801	15-3	103984410	1-3	105026201	12-11, 12-13
103601501	6-3	103984411	1-3	105026301	12-11, 12-13
103628701	6-9	103984412	1-3	105026401	12-11, 12-13
103653401	6-3	103984601	11-5	105026501	12-11, 12-13
103653501	6-3, 6-11	103989501	12-21	105026601	12-11, 12-13
103653601	6-11	103995001	12-21	105026701	12-11, 12-13
103677101	1-13	104005901	13-17	105026801	12-11, 12-13
103696801	13-13	104006101	13-17	105026901	12-11, 12-13
103698901	1-35	104021701	12-21	105027001	12-11, 12-13
103698903	1-35	104023501	9-11, 12-9	105027101	12-11, 12-13
103698904	1-35	104024201	16-3, 16-11	105027201	12-11, 12-13
103698906	1-35	104024202	16-11	105027301	12-11, 12-13
103698907	1-35	104024401	16-11	105027401	12-15
103698908	1-35	104024402	16-11	105027501	12-15
103698909	1-35	104024501	16-3, 16-5, 16-7, 16-9	105027601	12-15
103711301	13-15	104024601	16-3, 16-5, 16-7, 16-9	105027701	12-15
103724504	6-7	104025101	11-7	105027801	12-15
103724602	6-7	104027101	12-21	105027901	12-15
103754901	1-13	104028501	16-11	105028001	12-15
103756401	9-5	104028502	16-11	105028101	12-17, 12-19
103783001	3-7	104028601	16-11	105028201	12-15
103783002	3-5	104028602	16-11	105028301	12-11, 12-13
103787302	1-11	104028901	16-3, 16-5, 16-7, 16-9	105028401	12-15
103787304	1-9	104029001	16-3, 16-5, 16-7, 16-9	105028501	12-11, 12-13
103795502	1-11	104029601	16-3, 16-5	105028601	12-15
103804004	1-11	104029602	16-7	105028701	12-15
103829401	6-7	104029603	16-9	105028801	12-15
103852901	1-37, 1-41	105000301	7-9	105028901	12-15
103864601	13-15	105000401	7-9	105029001	12-15
103879701	12-13	105003401	9-15	105029101	12-15
103879702	12-11	105003601	16-3, 16-5, 16-7, 16-9	105029201	12-15
103886601	12-5	105003701	16-3, 16-5, 16-7, 16-9	105029301	12-19
103890801	13-5	105005201	1-31	105029401	12-19
103896604	9-5	105005203	1-31	105029501	12-17, 12-19
103896605	9-5	105005204	1-31	105029601	12-19
103902101	13-5	105005206	1-31	105029701	12-19
103902301	13-5	105005207	1-31	105029801	12-17, 12-19
103902401	13-5	105005208	1-31	105029901	12-17, 12-19
103924801	7-3, 13-7	105005209	1-31	105030001	12-11, 12-13
103943401	13-5	105007402	9-11	105030301	12-17, 12-19
103951501	12-21	105007403	9-11	105030401	12-17, 12-19

INDEX

105030501	12-17, 12-19	105166901	13-17	47594727001	4-19
105030601	12-17, 12-19	105167001	13-17	47595292001	1-7
105030701	12-11, 12-13	105167101	13-17	47601355001	9-11
105030801	12-17, 12-19	105168501	13-17	47601767002	11-7
105030901	12-15	105168601	13-17	47601832001	11-7
105031001	12-19	105173901	13-7	47604303001	4-5, 4-21
105037401	7-9	105186001	6-15	47606233003	9-3
105037501	12-3	105186002	6-15	47606257001	9-5
105037601	12-3	105188185	6-15	47607758001	4-31
105037701	12-3	105188201	6-15	47611209001	10-3
105038501	12-3	105190601	4-31	47611210001	10-3
105038801	12-5	105190701	4-31	47611483001	8-5
105039801	12-3	105194101	9-3	47611484001	8-5
105040401	12-3	105199601	3-3	47611648001	8-5
105040901	12-7	105234801	12-11, 12-13	47611868001	7-7
105041201	12-3	105234901	12-11, 12-13	47611869001	7-7
105043801	9-3	105237399	7-13	47611870001	7-7
105043901	9-3	105245401	9-3	47611876001	9-3
105063501	12-11	105245701	7-3	47611877001	9-3
105063601	12-17	105245801	11-3	47612352001	9-9
105066001	12-17, 12-19	105256701	7-3, 7-13	47612539001	7-3
105066101	12-17, 12-19	105256801	7-3	47613326001	4-31
105068201	16-11	47539338002	7-7	47617345001	7-7
105068202	16-11	47542195001	5-11, 5-13	47619701001	9-5
105068301	16-11	47557674001	1-7	47623339001	9-3
105068302	16-11	47559475001	7-5	47623450001	1-29
105068401	16-11	47563307001	1-49	47623450002	1-29
105068402	16-11	47563434001	13-7	47623450003	1-29
105070101	16-3, 16-5, 16-11	47564770001	4-7	47623450005	1-29
105070102	16-7, 16-11	47564777001	4-7	47623450006	1-29
105070103	16-9, 16-11	47564778001	4-19	47623450007	1-29
105077701	1-13	47564781001	13-9	47623450008	1-29
105081501	7-3	47564782001	1-49	47629583001	8-19
105081601	7-3	47564783001	1-49	47629585001	8-19
105082301	3-5	47564784001	1-49	47629588001	8-19
105088501	9-15	47564887024	1-49	47629589001	8-19
105092301	16-3, 16-5, 16-7, 16-9	47564890001	8-7	47629677001	8-15
105093101	16-3, 16-5, 16-7, 16-9	47568672001	1-49	47629680001	8-15
105095201	16-3	47568673001	1-49	47629682001	8-15
105096101	11-5	47568674001	1-49	47629685001	8-15
105102601	7-11	47568674002	1-49	47629686001	8-15
105116301	13-5	47568675001	1-49	47629687001	8-15
105123801	16-3, 16-5, 16-7, 16-9	47568676001	1-49	47629688001	8-15
105135101	9-11, 12-7	47568677001	1-49	47629689001	8-15
105135901	7-3	47579096001	6-15	47629690001	8-15
105136001	7-3	47581051001	1-49	47629691001	8-15
105137107	3-5, 3-7	47582894002	1-49	47629693001	8-15
105143301	7-3, 9-3	47583000001	7-5	47629694001	8-15
105144401	9-11, 12-9	47583790001	7-5	47629696001	8-15
105153201	3-7	47583791001	7-5	47629697001	8-15
105153202	3-7	47583794001	7-5	47629698001	8-15
105153301	3-5	47583795001	8-7	47629699001	8-17
105153302	3-5	47584178001	7-5	47629700001	8-17
105161701	7-3, 7-5	47584179001	7-5	47629701001	8-17
105165801	4-31	47584184001	8-7	47629702001	8-11
105166801	13-17	47587701001	8-7	47629703001	8-17

INDEX

47629705001 8-17
 47629707001 8-17
 47629709001 8-17
 47629711001 8-13
 47629714001 8-13
 47629716001 8-13
 47629717001 8-13
 47629718001 8-13
 47629719001 8-13
 47629720001 8-13
 47629722001 8-13
 47629723001 8-13
 47629724001 8-13
 47629725001 8-13
 47629726001 8-13
 47629727001 8-13
 47629728001 8-13
 47629729001 8-13
 47629730001 8-13
 47629768001 8-13
 47629822001 8-13
 47629823001 8-13
 47629824001 8-13
 47629825001 8-13
 47629826001 8-11
 47629828001 8-11
 47629831001 8-11
 47629832001 8-11
 47629833001 8-11
 47629834001 8-11
 47629835001 8-11
 47629836001 8-11
 47629837001 8-11
 47629838001 8-11
 47629841001 8-11
 47629843001 8-11
 47629844001 8-9
 47629845001 8-9
 47629846001 8-9
 47629847001 8-9
 47629848001 8-9
 47629851001 8-9
 47629853001 8-9
 47629855001 8-9
 47629856001 8-9
 47629857001 9-7
 47629858001 9-7
 47629859001 9-7
 47629860001 9-7
 47629861001 9-7
 47629862001 9-7
 47629864001 9-7
 47629865001 9-7
 47629866001 9-7
 47629867001 9-7
 47629868001 9-7

47629869001 9-7
 47629870001 9-7
 47629871001 9-7
 47629872001 9-7
 47629874001 9-7
 47629875001 9-9
 47629876001 9-9
 47629877001 9-9
 47629878001 9-9
 47629879001 9-13
 47629880001 9-13
 47629881001 9-13
 47629882001 9-13
 47637087001 9-5
 47640020001 8-17
 47640021001 8-11, 8-17
 47640022001 8-17
 47640281001 8-3, 8-11
 47649808001 10-3
 47649808002 10-3
 47650647001 8-11
 47662588001 12-23
 47664038001 9-3
 47676897001 8-11
 47689303001 13-13
 47695923001 8-5
 47720336009 1-37
 47720336010 1-41
 47729995001 1-37, 1-41
 96704176 4-19
 96705199 12-7
 96705587 10-3
 96741046 8-5

A

AC cord 16-3, 16-11
 accelerator bracket and bearing assembly 5-5,
 5-7
 accelerator cable 9-11
 accelerator pedal 5-5, 5-7
 accelerator pedal adjustment tool 17-3
 accelerator pivot rod 5-5, 5-7
 accelerator return spring 5-5, 5-7
 accelerator rod 5-9
 accessory receptacle 4-13, 4-15
 adhesive, guide ring 17-3
 air cleaner assembly 9-15
 air filter 8-3, 9-15
 air filter evacuator 9-15
 air intake hose 9-15
 AM1285701 17-5
 A-plate strap 6-11
 A-plate, delta 6-11
 arbor 17-3
 arm
 governor 9-11, 12-9

armature 14-3
 assembly
 accelerator bracket and bearing 5-5, 5-7
 accelerator pivot rod 5-5, 5-7
 bearing, steering shaft 6-5
 brake lever 5-11, 5-13
 delta A-plate 6-11
 delta shock and gear support 6-11
 drive hub 11-5
 frame and field (motor) 14-3
 fuel cap 9-3
 headlight 4-3
 headlight harness 4-3
 inner ball joint 6-3
 kingpin 6-9
 moveable-face 11-5, 11-7
 ratchet 5-3
 secondary clutch weight 11-5
 steering shaft 6-5
 turn signal lens 4-3
 axle 15-3
 axle guard 15-5
 axle shaft 12-17, 12-19
 axle shaft oil seal 15-3
 axle tube 12-17, 12-19, 15-3

B

backing plate, brake 5-11, 5-13
 ball bearing 7-5, 12-15, 12-17, 12-19
 ball joint 5-3, 5-9
 ball stud 7-9
 ball, bearing 6-13
 barrel, plastic 1-29, 1-31, 1-33, 1-35
 battery charger 16-3, 16-5, 16-7, 16-9
 battery clamp 7-13
 battery condition indicator 4-17
 battery condition indicator kit 4-17
 battery condition indicator, 48-volt 4-15
 battery discharge machine 17-3
 battery hold-down 13-13
 battery light 4-15
 battery terminal protector spray 17-3
 battery thermometer 17-3
 battery, 12-volt, top-post 7-13
 battery, top-post, wire, 4ga, B+ 7-3
 battery, top-post, wire, B- 4ga, 7-3, 7-13
 bearing 15-3
 ball 6-13, 7-5, 12-15, 12-17, 12-19
 ball (motor) 14-3
 ball (steering pinion) 6-3
 inner axle tube 15-3
 lower pinion (steering) 6-3
 pivot support 5-5, 5-7
 steering shaft 6-5
 thrust 6-9, 12-11, 12-13
 bearing and oil seal remover 17-3

INDEX

- bearing driver set 17-3
 - bearing puller 17-3
 - bearing puller wedge 17-3
 - bearing seat 6-5
 - bed support 1-37
 - bed support stiffener 1-45, 1-47
 - bed, cargo 1-43
 - bellows 6-3
 - belt, drive 11-3
 - bezel, headlight 4-3
 - block, brake-mounting 5-3
 - block, fuse 4-5, 4-7, 7-9
 - block, terminal 4-5, 4-7
 - body kick plate 1-29, 1-31, 1-33, 1-35
 - bolt, U- 6-15
 - boot, steering column 1-21, 6-5
 - boot, switch 13-3
 - bottom, seat 1-49
 - box
 - steering gear 6-3
 - brace, canopy 1-5
 - brace, seat support cross 1-37
 - bracket 4-13
 - accel.cable 9-11, 12-7
 - brake light switch 4-5, 4-7
 - carbon canister 9-5
 - FNR cable 9-11, 12-7
 - governor 9-11, 12-9
 - headlight mounting 4-3
 - horn 4-29
 - shock mounting, drv 6-15
 - shock mounting, pas 6-15
 - snubber 8-7
 - steering column 6-5
 - steering column mounting 6-5
 - Tow/Run switch 13-3
 - brake adjusting mechanism 5-11, 5-13
 - brake backing plate 5-11, 5-13
 - brake cable 5-15
 - brake cable equalizer 5-15
 - brake cluster 5-11, 5-13
 - brake drum 5-11, 5-13
 - brake lever 5-11, 5-13
 - brake light switch bracket 4-5, 4-7
 - brake mounting block 5-3
 - brake pedal 5-3
 - brake pedal pad 5-3
 - brake relay kit, 12-volt 4-5
 - brake return spring 5-15
 - brake self-adjusting mechanism 5-11, 5-13
 - brake shoe 5-11, 5-13
 - brake spring 5-11, 5-13
 - breather 12-11, 12-13, 15-3
 - brush 14-3
 - brush box assembly 14-3
 - brush guard 1-19
 - brush guard support 1-19, 6-9
 - brush rigging 14-3
 - brush spring 14-3
 - bulb, headlight 4-3
 - bulb, strobe light 4-23, 4-25, 4-27
 - bulb, tail light 4-33
 - bumper
 - cast 1-15
 - drive unit (motor) 14-3
 - front 1-17
 - jounce 6-15
 - rubber 1-45, 5-3
 - side trim 1-25
 - spring return 5-5, 5-7
 - bumper mount 6-15
 - bushing 7-9, 11-5, 12-3
 - bronze 6-13
 - nylon 5-3
 - spindle 6-13
 - steel 1-45, 6-9
 - urethane 1-45, 6-9, 6-11, 6-15
 - button, drive 11-7
 - buzzer, reverse 4-11
- ## C
- cable
 - accelerator 9-11
 - brake 5-15
 - FNR shifter 12-5
 - cable retainer 1-31, 1-35
 - cable, cargo bed 1-43
 - calibration test module 17-3
 - cam
 - driven clutch 11-7
 - electrical component box 7-9
 - canister, carbon, fuel tank 9-5
 - canopy 1-7, 1-11
 - canopy brace 1-5
 - canopy support 1-11
 - canopy trim plate 1-11
 - cap
 - dust 13-3, 13-7
 - front hub 6-13
 - fuel, gas, ratchet 9-3
 - rubber 12-21
 - carbon canister 9-5
 - card, safety first 17-5
 - cargo bed 1-43
 - cargo bed hinge 1-45
 - case
 - FNR switch 13-3
 - gear 15-3
 - transaxle 12-11, 12-13
 - cast bumper 1-15
 - catch, tilt bed 1-43
 - center shaft 12-15
 - charger bezel tool 17-3
 - charger, battery, Hi-Freq 16-3, 16-5, 16-7, 16-9
 - clamp
 - battery 7-13
 - hose 9-5, 9-15
 - p- (fuel filter) 9-11
 - clevis, upper delta 6-9
 - cluster, brake 5-11, 5-13
 - clutch
 - pin 12-15
 - clutch cam installation tool 17-3
 - clutch repair kit 11-7
 - clutch tool kit 17-3
 - clutch weight 11-5
 - clutch, drive 11-5
 - collar 12-15
 - column, steering 6-5
 - component mounting plate 13-11
 - compression gauge 17-5
 - compressor, piston ring 17-5
 - compressor, valve spring 17-7
 - conduit 4-27
 - connector, four-pin 13-3
 - continuity tester 17-5
 - controller cover 13-11
 - controller cover gasket 13-11
 - controller, motor speed
 - Excel w/Hi-Freq 13-11
 - cord set, DC 16-3, 16-5, 16-7, 16-9, 16-11
 - cord, AC 16-3, 16-11
 - counter shaft 12-15
 - cover
 - DC terminal block 16-3, 16-5, 16-7, 16-9
 - dust 5-11, 5-13
 - fuse block 4-7
 - screw head 1-21
 - steering column 6-5
 - USB 16-3, 16-5, 16-7, 16-9
 - cover gasket, controller 13-11
 - cover plate 14-3
 - cover, controller 13-11
 - cover, speed controller 13-11
 - cover, steering column 4-9
 - cowl support 1-5
 - cross brace, seat support 1-37
 - C-type stop ring 6-3
 - cup, spring 5-5, 5-7
 - cushion, shock absorber 6-15
- ## D
- dash closeout panel 1-5
 - dash component 1-21
 - DC cord set 16-3, 16-5, 16-7, 16-9, 16-11
 - decal
 - box bed warning 1-49, 3-5, 3-7
 - component cover 3-7, 13-11

INDEX

crush area 3-5, 3-7
crush area warning 1-49, 3-5, 3-7
crush warning 3-5, 3-7
filter log 13-17
frame ground 3-5
hot surface warning 3-5
inspect log 13-17
maintenance/operate switch 3-5
operating instructions 3-5, 3-7
owner notice 3-5, 3-7
rotating parts 3-5
Tow/Run switch warning 3-7
young driver warning 3-5, 3-7
deionizer 13-17
 cartridge 13-17
delta A-plate 6-11
delta A-plate sub-assembly 6-11
delta shock and gear support 6-11
diagnostic port 13-7
differential 12-19
 limited-slip 12-17
 open 12-19
differential drive unit 15-3
differential gear 15-3
differential gear set 12-19
differential guard 15-5
differential housing 15-3
differential shaft 12-19
diode 7-3, 13-7
door, access 1-29, 1-33
drain plug 12-11, 12-13
drive belt 11-3
drive button 11-7
drive clutch 11-5
drive clutch button 11-5
drive clutch holder tool 17-3
drive clutch hub puller 17-3
drive clutch puller 17-3
drive clutch spring 11-5
drive clutch weight 11-5
drive hub 11-5
drive unit bumper 14-3
drive unit guard 15-5
driven clutch button 11-7
driven clutch cam 11-7
driven clutch cam puller 17-3
driven clutch puller plug 17-3
driver, drive clutch 11-5
drum, brake 5-11, 5-13
dry moly lubricant 17-5
dual snubber 8-7
dust cap 13-3, 13-7
dust cover 5-11, 5-13

E

eccentric bolt 6-9

E-clip 5-15
end cap, motor 14-3
end, tie rod 6-11
engine
 air cleaner 9-15
 air filter 8-3, 9-15
 air intake hose 9-15
equalizer rod 5-15
equalizer, brake cable 5-15
Exhaust 10-3
extension, spring latch 1-43
extrusion, cover support 13-11

F

face, moveable 11-7
fender 1-31, 1-35
filter
 air 8-3, 9-15
finishing plug 1-9
fitting, thread-forming grease 6-13
floor mat 1-25
FNR handle 12-3
FNR shift lever 12-7
FNR shifter base 12-3
FNR shifter cable 12-5
FNR switch case 13-3
frame and field assembly (motor) 14-3
front body support 1-29, 1-31, 1-33, 1-35
front bumper 1-17
front hub 6-13
front spring retainer plate 6-9
fuel gauge/hour meter 4-13
Fuel Module, Hold-Down Ring 9-3
fuse
 10-amp 7-3, 7-9
 15-amp 13-7
 1-amp 13-7
 20-amp 4-5, 4-7
 2-amp 7-3, 13-7
 30-amp 13-7
 5-amp 7-3
fuse block 4-5, 4-7, 7-9
fuse block cover 4-7
fuse holder, in-line 13-7

G

gasket 12-11, 12-13
 liquid 15-3, 17-5
 plug 15-3
 seat 1-39
 taillight 4-33
gasket, controller cover 13-11
gauge, battery condition 4-17
gauge, compression 17-5
gauge, fuel/hour 4-13

gear
 17 tooth 12-15
 34 tooth 12-15
 52 tooth 12-15
 60 tooth 12-17, 12-19
 62 tooth 12-15
 differential 15-3
 differential idler 15-3
 differential output 15-3
 governor 12-11, 12-13
 governor, 34 tooth 12-15
 set, differential 12-19
gear yoke 17-5
gearcase 15-3
glove box 1-23
governor arm 9-11, 12-9
governor gear shaft 12-11, 12-13
governor shaft 12-11, 12-13
grommet 1-11
guard, brush 1-19
guard, differential 15-5
guide pin 12-11, 12-13
guide ring adhesive 17-3

H

handle, FNR 12-3
harness, headlight 4-5
harness, wire 4-23, 4-25, 4-29, 4-33
harness, wire, gas engine-ECU 7-3
headlight 4-3
headlight assembly 4-3
headlight bulb 4-3
headlight harness 4-3
headlight retainer 4-3
headlight wire harness 4-5
hill brake rod 5-3
hill brake weld assembly 5-3
hinge plate 1-29, 1-31, 1-33, 1-35, 1-39
hinge support 1-45, 1-47
hinge, cargo bed 1-45
hold-down, battery 13-13
horn 4-29
horn bracket 4-29
hose
 air intake 9-15
 vent 9-5
hour meter/fuel gauge 4-13
housing
 3-pin 13-3, 14-3
 4-pin 13-3
 differential 15-3
hub 6-13, 12-21
hub and spindle 6-13
hub cap 6-13
hub, front 6-13
hydrometer 17-5

INDEX

I

idler gear, differential 15-3
indicator, battery condition 4-17
in-line fuse holder 13-7
inner frame snubber 8-7
input shaft 12-15, 15-3
instrument panel 4-13, 4-15
intermediate shaft 15-3
internal retaining ring pliers 17-5
isolator, shock damper 6-15

J

joint
 ball 5-3, 5-9
jounce bumper 6-15
jumper harness, run/maint 7-3

K

key 4-15
 driven clutch 11-7
 square 11-7
key (pair) 4-13
key switch 4-13, 4-15
key switch spacer 4-13
keyswitch nut 4-13, 4-15
kick plate, body 1-29, 1-31, 1-33, 1-35
kingpin 6-9
kit

 3-pin housing 13-3, 14-3
 4-pin housing 13-3
 accelerator pivot rod 5-5, 5-7
 battery condition indicator 4-17
 brake cable 5-15
 brake pedal 5-3
 brake relay 4-5
 brake shoe retainer 5-11, 5-13
 clutch repair 11-7
 drive clutch button 11-5
 drive clutch weight 11-5
 driven clutch button 11-7
 front hub replacement 6-13
 hand pump, SPWS 13-17
 motor brush 14-3
 motor brush spring 14-3
 motor cover plate 14-3
 motor speed sensor 14-3
 motor terminal hardware 14-3
 park brake latch 5-3
 park brake pedal 5-3
 relay, 48V 4-7
 shock absorber 6-15
 shock absorber cushion 6-15
 shoe retainer 5-11, 5-13
 steering column mounting bracket 6-5
 strobe light 4-23, 4-25, 4-27

 turn signal 4-9
Kit, SPWS 13-15
knob, light switch 4-13, 4-15

L

lamp, strobe light 4-23, 4-25, 4-27
lamp, turn signal and socket 4-9
lamp, stop, turn, tail 4-31
latch, park brake 5-3
leaf spring, 260lb, lh 6-15
leaf spring, 260lb, rh 6-15
lens, headlight 4-3
lens, strobe light 4-23, 4-25, 4-27
lens, taillight 4-33
lever
 transaxle shift 12-7
light
 battery 4-15
 oil 4-13
 tail 4-33
 water quality 13-17
light switch 4-13, 4-15
light switch knob 4-13, 4-15
light, strobe 4-23, 4-25, 4-27
limit switch 4-5, 4-7, 7-9, 7-11
limiter
 voltage 4-7
link, rod 1-43
liquid gasket 15-3, 17-5
low oil warning light 4-13
lubricant, dry moly 17-5
lubricant, moly-teflon 14-3, 17-5
lug nut 2-3
lug stud 6-13, 12-21, 15-3

M

magnet, speed sensor 14-3
mat, floor 1-25
MCOR 13-5
mechanism, brake adjusting 5-11, 5-13
meter, volt ohm 17-7
module
 calibration test 17-3
Module, ECU 8-11
moly-teflon lubricant 17-5
motor
 48-volt IQ 14-3
 motor brush kit 14-3
 motor brush spring kit 14-3
 motor bumper 14-3
 motor end cap 14-3
 motor magnet, speed sensor 14-3
 motor speed controller
 Excel w/Hi-Freq 13-11
 motor speed sensor 14-3

 motor speed sensor kit 14-3
 motor terminal hardware kit 14-3
 mount, bumper 6-15
 mounting block, brake 5-3
 moveable-face 11-5, 11-7

N

nerf bar 1-27
non-skid tape 1-27
nut, keyswitch 4-13, 4-15
nut, lug 2-3

O

oil seal 12-11, 12-13
oil warning light, low 4-13
O-Ring, Fuel Module 9-3
overload bumper spacer 6-15

P

pad
 accelerator pedal 5-5, 5-7
 brake pedal 5-3
 park brake 5-3
 wear 1-31, 1-35
paint, underbody (black) 17-5
panel
 closeout, dash 1-5
 instrument 4-13
panel, instrument 4-13, 4-15
park brake latch 5-3
park brake pedal 5-3
park brake rod sleeve 5-3
park brake spacer 5-3
park brake torsion spring 5-3
pawl 5-3
p-clamp (fuel filter) 9-11
pedal, accelerator 5-5, 5-7
pedal, brake 5-3
pedal, park brake 5-3
pin
 bow tie locking 5-15
 clevis 5-15
 differential 12-19
 guide 12-11, 12-13
 input shaft 12-15
pinion, steering 6-3
piston ring compressor 17-5
piston ring pliers 17-5
pivot support bearing 5-5, 5-7
plate
 backing (brake) 5-11, 5-13
 body kick 1-29, 1-31, 1-33, 1-35
 component mounting 13-11
 cover 14-3
 front spring retainer 6-9

INDEX

hinge 1-29, 1-31, 1-33, 1-35, 1-39
 receptacle backing 13-9
 spring mounting 6-9
 plate, canopy trim 1-11
 Plate, Closure, Kohler 8-17
 pliers
 internal retaining ring 17-5
 piston ring 17-5
 retaining ring 17-5
 plug 1-9
 4-pin 13-3
 drain 12-11, 12-13
 driven clutch puller 17-3
 port, diagnostic 13-7
 protector spray, battery terminal 17-3
 puller
 bearing 17-3
 drive clutch 17-3
 drive clutch hub 17-3
 driven clutch cam 17-3
 seal 17-5

R

rack guide pressure spring 6-3
 rack, steering 6-3
 ratchet, park brake 5-3
 rear shock absorber 6-15
 receptacle backing plate 13-9
 receptacle, accessory 4-13, 4-15
 receptacle, charger 13-9
 refractometer 17-5
 regulator, voltage 7-9
 relay 4-7
 relay, 12-volt 4-5
 relay, 48V 4-7
 relay, brake, kit, 12-volt 4-5
 remover, bearing and oil seal 17-3
 resistor assembly 13-11
 retainer
 accelerator pedal spring 5-5, 5-7
 brake shoe 5-11, 5-13
 cable 1-31, 1-35
 headlight 4-3
 shock absorber cushion 6-15
 spring 6-15
 retaining ring 6-5
 retaining ring pliers 17-5
 return spring bumper 5-5, 5-7
 reverse buzzer 4-11
 rim, wheel 2-3
 ring
 C-type stop 6-3
 retaining 6-5, 7-9, 11-5, 11-7, 12-11, 12-13, 12-21
 snap 6-3
 spiral backup 11-5

Rivet, Removable 4-13, 4-15
 rock guard 15-5
 rocker switch 13-3
 rocker switch (lights) 4-5, 4-7
 rod
 accelerator 5-9
 accelerator pivot 5-5, 5-7
 equalizer 5-15
 hill brake 5-3
 link 1-43

S

safety first card 17-5
 seal
 lip 15-3
 oil 12-11, 12-13, 15-3
 steering pinion dust 6-3
 seal puller 17-5
 sealant 15-3
 seat bottom 1-49
 seat gasket 1-39
 seat support 1-37
 seat support cross brace 1-37
 seat, bearing 6-5
 select shaft 12-11, 12-13
 sensor, motor speed 14-3
 Sensor, Temperature 8-11
 shackle 6-15
 shaft
 axle 12-17, 12-19
 center 12-15
 counter 12-15
 differential 12-19
 governor 12-11, 12-13
 governor gear 12-11, 12-13
 input 12-15, 15-3
 intermediate 15-3
 select 12-11, 12-13
 shift 12-15
 steering column 6-5
 shift lever 12-7
 shift shaft 12-15
 shock absorber 6-11
 shock absorber cushion 6-15
 shock absorber cushion retainer 6-15
 shock absorber, rear 6-15
 shock damper isolator 6-15
 shock mounting bracket, drv 6-15
 shock mounting bracket, pas 6-15
 shoe retainer kit 5-11, 5-13
 shoe, brake 5-11, 5-13
 side bar 1-27
 signal, turn 4-9
 sleeve 6-15, 12-11, 12-13
 delta A-plate 6-11
 park brake rod 5-3
 snap ring 6-3
 snubber bracket 8-7
 snubber, dual 8-7
 snubber, inner frame 8-7
 solenoid, 12-volt 7-9
 spacer 12-11, 12-13, 12-15
 accelerator pivot rod 5-5, 5-7
 key switch 4-13
 overload bumper 6-15
 park brake 5-3
 speed controller
 Excel w/Hi-Freq 13-11
 speed controller cover 13-11
 speed sensor 14-3
 speed sensor magnet 14-3
 speed sensor, motor 14-3
 spindle 6-13
 spindle and hub 6-13
 spiral backup ring 11-5
 spray, battery terminal protector 17-3
 spring 12-11, 12-13
 accelerator return 5-5, 5-7
 brake 5-11, 5-13
 brake return 5-15
 brush 14-3
 drive button 11-5
 drive clutch 11-5
 extension 1-43
 park brake torsion 5-3
 rack guide pressure 6-3
 steering shaft compression 6-5
 spring cup 5-5, 5-7
 spring mounting plate 6-9
 spring retainer 6-15
 spring, leaf 6-9
 Spws, Manifold Asm 13-15
 steel bushing 1-45, 6-9
 steering column 6-5
 steering column bearing press tool 17-7
 steering column cover 4-9
 steering column retaining ring tool 17-7
 steering gear box 6-3
 steering pinion 6-3
 steering pinion dust seal 6-3
 steering rack 6-3
 steering shaft assembly 6-5
 steering shaft compression spring 6-5
 steering wheel puller tool 17-7
 stem, valve 2-3
 stiffener, bed support 1-45, 1-47
 strap, A-plate 6-11
 strobe light 4-23, 4-25, 4-27
 strobe light lens 4-23, 4-25, 4-27
 stud
 lug 6-13, 12-21, 15-3
 stud, ball 7-9

INDEX

support
 bed 1-37
 brush guard 1-19, 6-9
 cowl 1-5
 hinge 1-45, 1-47
 latch link 1-43
 seat 1-37
support yoke (steering) 6-3
support, front body 1-29, 1-31, 1-33, 1-35
support, seat 1-37
suppressor, voltage 4-5
switch plate cover 4-23, 4-25, 4-27
switch
 key 4-13, 4-15
 light 4-13, 4-15
 light rocker 4-5, 4-7
 limit 4-5, 4-7, 7-9, 7-11
 rocker 13-3
 Tow/Run 13-3
 turn signal 4-9
switch assembly 4-23, 4-25, 4-27
switch rubber boot 13-3

T

12-volt solenoid 7-9
tail light bulb 4-33
taillight 4-33
taillight gasket 4-33
taillight kit 4-33
taillight lens 4-33
taligate 1-43
tape, non-skid 1-27
terminal block 4-5, 4-7
tester, continuity 17-5
thermometer, battery 17-3
thread-forming grease fitting 6-13
thrust bearing 6-9
tie rod 6-11
tie rod end 6-11
tie wrap 4-9, 4-25, 4-27, 6-3, 6-5, 7-9, 12-5, 13-3, 13-11
tilt bed catch 1-43
tire 2-3
tool
 accelerator pedal adjustment 17-3
 belt tensioning, starter/generator 17-7
 charger bezel 17-3
 clutch cam installation 17-3
 drive clutch holder 17-3
 steering column bearing press 17-7
 steering column retaining ring 17-7
 steering wheel puller 17-7
 transaxle axle seal 17-7
 transaxle pinion seal 17-7
 transmission 17-7
tool kit, clutch 17-3

touch-up paint 17-5
Tow/Run switch 13-3
Tow/Run switch bracket 13-3
transaxle (Electric Vehicle) 15-3
transaxle axle seal tool 17-7
transaxle guard 15-5
transaxle pinion seal tool 17-7
transaxle, limited-slip (Gas Vehicle) 12-11
transaxle, open-diff (Gas Vehicle) 12-13
transmission tool 17-7
tube
 axle 12-17, 12-19, 15-3
Tuflok 4-13, 4-15
turn signal 4-9
turn signal conversion kit 4-9
turn signal lens 4-3
turn signal socket and lamp 4-9

U

U-bolt 6-15
upper delta clevis 6-9
urethane bushing 1-45, 6-9, 6-11, 6-15
USB
 cover 16-3, 16-5, 16-7, 16-9
USB cover 16-3, 16-5, 16-7, 16-9

V

valve 9-15
valve spring compressor 17-7
valve stem 2-3
vent
 transaxle 12-11, 12-13
vent, barb 9-5
volt ohm meter 17-7
voltage limiter 4-7
voltage regulator 7-9
voltage suppressor 4-5

W

warning light, low oil 4-13
water quality light 13-17
wear pad 1-31, 1-35
wedge, bearing puller 17-3
weight
 clutch 11-5
 secondary clutch 11-5
weldment
 governor bracket 9-11, 12-9
wheel cover 2-5
wheel rim 2-3
windshield channel 1-13
wire
 green, starter/generator 7-3, 7-5
 ground, fuel tank 7-3, 9-3
wire harness 4-23, 4-25, 4-29, 4-33, 7-3

wire harness, headlight 4-5
wrap, tie 4-9, 4-25, 4-27, 6-3, 6-5, 7-9, 12-5, 13-3, 13-11

Y

yoke, gear 17-5
yoke, support (steering) 6-3



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000 1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808